

441500 to 441599

SERVICE ENGINE



SALES MANUAL

**MODEL 441500 SERIES ENGINES REPLACED WITH
STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

NOTE 23: If the original engine is equipped with a Six Pin Wiring Harness transfer to the replacement engine.

NOTE 35: Transfer the Speed Limiter Control Assembly to the replacement engine.

NOTE 81: Transfer Governor Spring to replacement engine.

NOTE 90: Transfer Oil Sensor to the replacement engine.

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

441500 to 441599

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0113	441577		STD.								All	3350	698172	
0114	441577	699700	44K777	0027							All	3600	698172	
0117	441577	699700	44K777	0027							All	3600	698172	
0118	441577	699700	44K777	0027					23		All	3500	698172	
0119	441577	699700	44K777	0027					23 81		All	2800	698172	
0120	441577	699700	44K777	0027					23 81		All	3200	698172	
0121	441577	699700	441777	0027							All	3300	698172	
0122	441577	699700	44K777	0027							All	3400	698172	
0124	441577	699700	44K777	0027					81		All	3200	698172	
0410	441577	699700	441777	0027					35 81		All	2500	698172	
0425	441577	699700	441777	0027					81		All	2650	698172	
0442	441577	699700	441777	0027					90		All	3300	698172	