

460700 to 460799

SERVICE ENGINE



SALES MANUAL

**MODEL 460700 SERIES ENGINES REPLACED WITH
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

460700 to 460799

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1107	460707	498009	No Replacement Repair With Individual Parts.								01	3600		
1127	460777	498129	No Replacement Repair With Individual Parts.								01	3600		
1245	460777	498129	No Replacement Repair With Individual Parts.								02	3300		
1275	460707	498009	No Replacement Repair With Individual Parts.								01	3300		
1276	460777	498129	No Replacement Repair With Individual Parts.								01	3300		
1277	460777	498129	No Replacement Repair With Individual Parts.								01	3400		
1278	460707	498009	No Replacement Repair With Individual Parts.								01	3400		
1279	460777	498129	No Replacement Repair With Individual Parts.								01	3200		
1288	460777	498129	No Replacement Repair With Individual Parts.								01	3400		
1289	460777	498129	No Replacement Repair With Individual Parts.								All	3300		
1297	460777	498129	No Replacement Repair With Individual Parts.								01	3300		
1298	460777	498129	No Replacement Repair With Individual Parts.								01	3200		
1628	460707	498009	No Replacement Repair With Individual Parts.								01	3300		
1631	460707	498009	No Replacement Repair With Individual Parts.								01	3300		
1637	460707	498009	No Replacement Repair With Individual Parts.								01	3300		
1640	460707	498009	No Replacement Repair With Individual Parts.								01	3200		
1707	460707	498009	No Replacement Repair With Individual Parts.								A1	3300		
1727	460777	498129	No Replacement Repair With Individual Parts.								A1	3300		
1876	460777	498129	No Replacement Repair With Individual Parts.								A1	3300		
1888	460777	498129	No Replacement Repair With Individual Parts.								A1	3400		
2276	460777	498129	No Replacement Repair With Individual Parts.								E1	3300		
2277	460777	498129	No Replacement Repair With Individual Parts.								E1	3400		
2278	460707	498009	No Replacement Repair With Individual Parts.								E1	3400		
2289	460777	498129	No Replacement Repair With Individual Parts.								E1	3300		
2290	460777	498129	No Replacement Repair With Individual Parts.								All	3300		
2637	460707	498009	No Replacement Repair With Individual Parts.								E1	3300		
2641	460707	498009	No Replacement Repair With Individual Parts.								All	3300		