FORM MS-0967-6/99 REPLACES FORM MS-0967-2/99 FILE IN SECT. 2 OF SERVICE MANUAL

10C900 to 10C999

Illustrated Parts List Model Series 10C900 to 10C999

TYPE NUMBERS 0102, 0115, 0116, 0125, 0128 through 0134, 2002, 2028, 2029, 2030, 2032, 2034, 2035, 2036, 2037, 2038.


TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

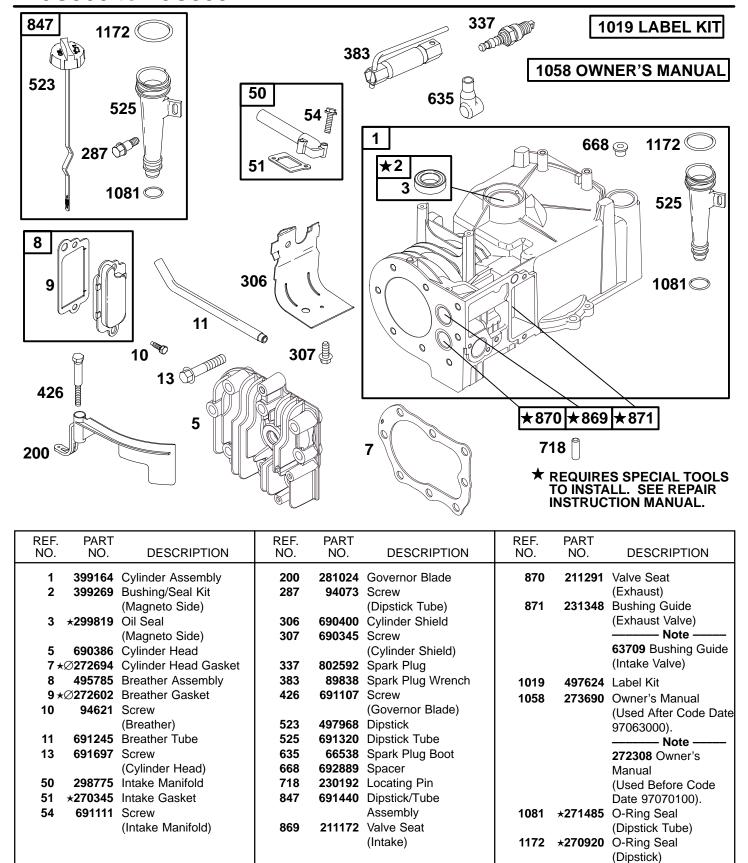

[★] Included in Engineb Gasket Set-Ref. No. 358.


Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

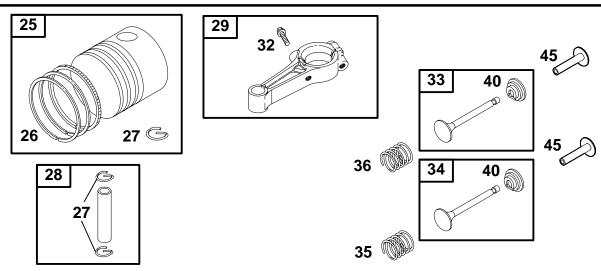

(Standard) 498671 Piston 96020500). (Used After Code Date 96020500). (.030" O.S.) (.020" O.S.) —— Note —— 298904 Piston (.96020500). (.030" O.S.) (.020" O.S.) (Used After Code Date 96020500). 96020500). Date 96020600). Assembly (Standard) (.030" O.S.) (.030" O.S.) (.030" O.S.) (Used Before Code Date 96020600). (.030" O.S.) (.030" O.S.) (.030" O.S.) (J010" O.S.) (.010" O.S.) (.030" O.S.) (.030" O.S.) (Used After Code Date 96020500). 96020500). 96020500). 96020500). 298905 Piston Assembly (.030" O.S.) (.030" O.S.) (.030" O.S.) (Used After Code Date 96020500). 96020500). 96020500). 96020500). 298905 Piston Assembly (.030" O.S.) (.030" O.S.) (.030" O.S.) (Used Before Code Date 96020500). 96020500). 27 26026 Piston Pin Lock (Standard) (.030" O.S.) (.030" O.S.) (Used Before Code Date 96020600). (.030" O.S.) (.030" O.S.) (Used Before Code Date 96020600). (.030" O.S.) (.030" O.S.) (Used Before Code Date 96020600).	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
(Used After Code Date 96020500). 298906 Piston Assembly (.020" O.S.) (Used Before Code Date 96020600). (Used Before Code Date 96020600). 498682 Ring Set (.020" O.S.) (.020" O.S.) (.020" O.S.) 498682 Ring Set (.020" O.S.) 45 230173 Valve Spring (Intake) 45 230173 Valve Tappet			(Standard) (Used After Code Date 96020500). Note ————————————————————————————————————		498680	Assembly (.030" O.S.) (Used After Code Date 96020500). 298907 Piston Assembly (.030" O.S.) (Used Before Code Date 96020600). Ring Set (Standard) (Used After Code Date 96020500).	29 32 33 34 35 36 40 45	298909 496792 94699 296676 296677 260552 260552 93312 230173	298984 Ring Set (.020" O.S.) (Used Before Code Date 96020600). 498683 Ring Set (.030" O.S.) (Used After Code Date 96020500). 298985 Ring Set (.030" O.S.) (Used Before Code Date 96020600). Piston Pin Lock Piston Pin (Standard) 298908 Piston Pin (.005" O.S.) Connecting Rod Screw (Connecting Rod) Exhaust Valve Intake Valve Valve Spring (Intake) Valve Spring (Exhaust) Valve Retainer Valve Tappet

[★] Included in Engineb Gasket Set-Ref. No. 358.


Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

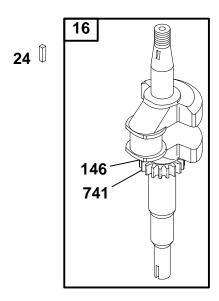

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	496838	Crankshaft — Note — 691472 Crankshaft Used on Type No(s). 2029, 2032, 2035. 691471 Crankshaft Used on Type No(s). 2002, 2028, 2030, 2034, 2037, 2038. 691406 Crankshaft Used on Type No(s). 0102, 0128, 0130, 0131, 0134 692989 Crankshaft Used on Type No(s). 2036.	24 146		Flywheel Key Timing Key	741	261533	Timing Gear

[★] Included in Engineb Gasket Set-Ref. No. 358.

Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

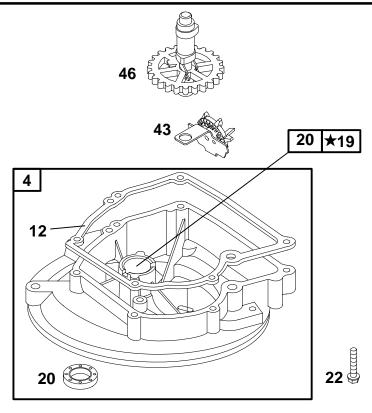


★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

1	5	
1	ว	

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
4	395384	Engine Sump Crankcase Gasket (.015" Thick, Standard) — Note — *270895 Crankcase Gasket (.005" Thick) *270896 Crankcase Gasket (.009" Thick)	15 19 20	94880 293709	Oil Drain Plug Bushing/Seal Kit (PTO Side)	43 46	94682 491688	Screw (Crankcase Cover/ Sump) Governor/Oil Slinger Camshaft

[★] Included in Engineb Gasket Set-Ref. No. 358.


Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

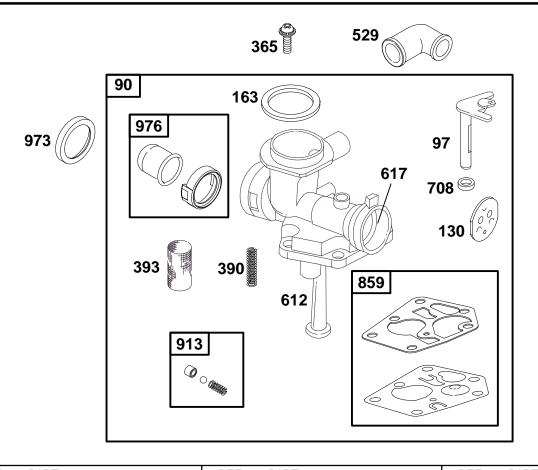

(Primer Bulb) (Used Before Code Date 99110100). 194 Carburetor Primer
(Used After Code Da 99103100). Note 494408 Carburetor Primer (Used Before Code Date 99110100).
)43

[★] Included in Engineb Gasket Set-Ref. No. 358.

Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

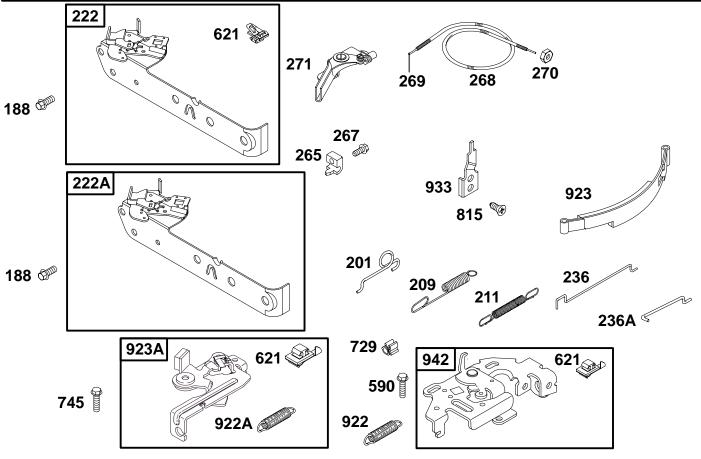


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188 201 209		Screw (Control Bracket) Air Vane Link Governor Spring ————————————————————————————————————	211 222 222A 236 236A 265 267 268	691445 263247 262461 213146 94882	Used on Type No(s). 0128, 0129, 0130, 0131, 0132, 0134, 2028, 2029, 2030, 2032, 2034, 2035, 2036, 2037. Lock Out Link Lock Out Link Casing Clamp	269 270 271 590 621 729 745 815 922 922A 923 923A	94902 396847 690586 691146 690324 261647 692135 394867 691487	(Cut to Required Length) Nut (Control Wire Casing) Control Lever Screw (Brake Bracket) Stop Switch Wire Clip Screw (Brake) Screw (Band Brake Pivot) Brake Spring Brake Spring


[★] Included in Engineb Gasket Set-Ref. No. 358.

Assemblies include all parts shown in frames. 7

Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

334

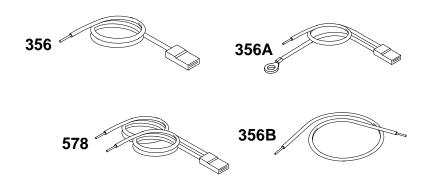


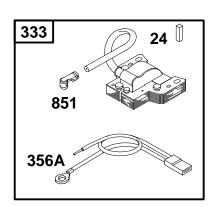

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	NO. 222698	Flywheel Key Magneto Armature	356 356A	NO. 692390	DESCRIPTION (Magneto Armature) Stop Wire Stop Wire		NO. 494250 398153	DESCRIPTION Stop Wire Wire Assembly Spark Plug Terminal

[★] Included in Engineb Gasket Set-Ref. No. 358.


Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

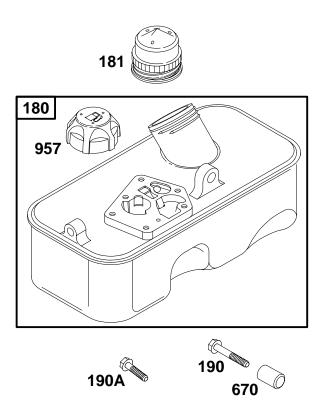

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
180	494406	Fuel Tank (Metal)	670	94047	Fuel Tank Spacer (Used After Code Date	957	497929	Fuel Tank Cap (Plastic)
181	493982	Fuel Tank Cap Used on Type No(s).			97071300). ——— Note ———			
190	691967	(Fuel Tank)			94038 Fuel Tank Spacer (Used Before Code			
190A	94786	Screw (Fuel Tank)			Date 97071400).			

[★] Included in Engineb Gasket Set-Ref. No. 358.

Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

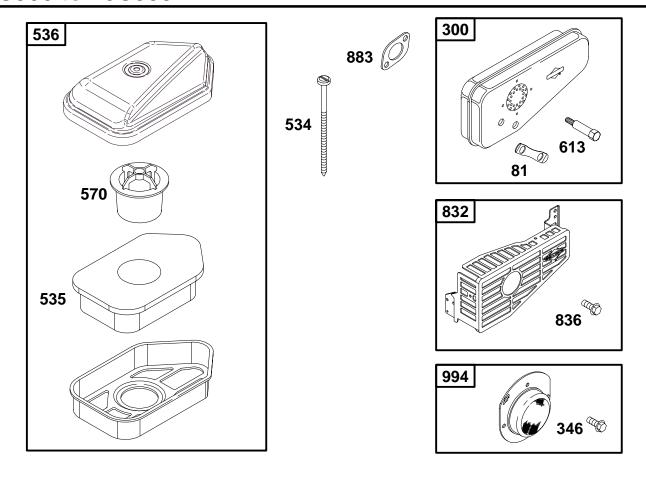




REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81 163 300	★271139	Muffler Screw Lock Air Cleaner Gasket Exhaust Muffler	535 536	272235	Air Cleaner Foam Filter Air Cleaner	832 836		Muffler Guard Screw (Muffler Guard)
346		Screw (Spark Arrester)	570 613	280972	Foam Element Support Screw	883 994		Exhaust Gasket Spark Arrestor
534	93865	Screw (Air Cleaner)			(Exhaust Muffler)			·

[★] Included in Engineb Gasket Set-Ref. No. 358.


Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

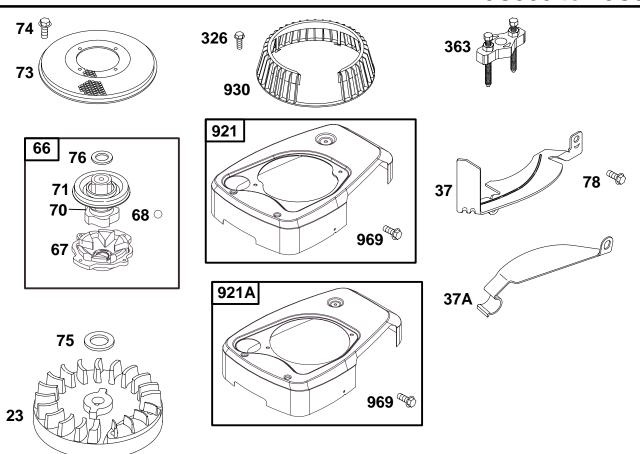


REF NO		DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	495046	Flywheel	73 74		Rotating Screen (Used Before Code Date 97061600). Screw	921A 930		Blower Housing Cover Rewind Guard ——— Note ———
		Used on Type No(s). 0131, 2036, 2037.	/4	93/30	(Rotating Screen)			691348 Rewind Guard Used on Type No(s).
37	691209		75	223047	Flywheel Washer			2002, 2028, 2029,
37 <i>A</i>		-	76		Ratchet Seal			2030, 2032, 2034,
66	399671	Starter Clutch	78	94786				2035, 2036, 2037,
		(Used Before Code	000	0.4077	(Flywheel Guard)		004444	2038.
67	394897	Date 97061600). Clutch Housing	326	94977	Screw (Rewind Guard)	969	691141	Screw
68		· ·	363	19069	Flywheel Puller			(Blower Housing Cover)
70			921		Blower Housing Cover			00101)
71	691359	Ratchet Cover			3			

[★] Included in Engineb Gasket Set-Ref. No. 358.

Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

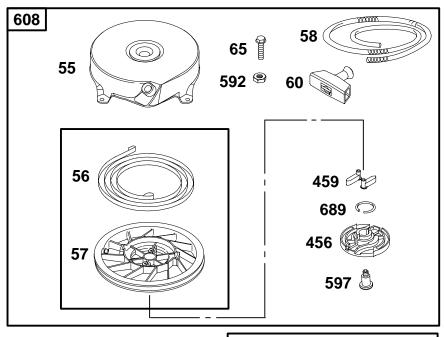

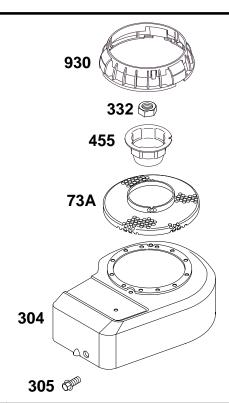


1036	EMISSIONS	LABEL
------	------------------	--------------

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	692144	Rewind Starter Housing	304	694236	Blower Housing Used on	305	94786	(Blower Housing)
		(Used After Code Date			Compliance Engines	332	94877	
56	499901	97071300). Starter Pulley			(Used After Code Date 99010300).	455	691236	(Flywheel) Cup-Flywheel
57	499901	Rewind Starter Spring			Note			(Used After Code Date
58		Starter Rope			691484 Blower			97060500).
60	281101	Starter Rope Grip			Housing	456		Pawl Friction Plate
		(Used After Code Date 97071300).			Used on Compliance Engines	459 592	281505 690800	Rachet Pawl
65	94904	•			(Used Before Code	392	090000	(Rewind Starter)
		(Rewind Starter)			Date 99010400).	597	94943	
73A	691235	Rotating Screen			Note			(Pawl Friction Plate)
		(Used After Code Date			694051 Blower	608	499706	Rewind Starter
		97060500).			Housing Used on Non			(Used After Code Date
					Compliance Engines			97060500). ——— Note ———
					(Used After Code Date			499926 Rewind Starter
					99010300).			(Used After Code Date
					Note			97060500).
					692536 Blower			Used on Type No(s).
					Housing	000	000070	0132.
					Used on Non Compliance Engines	689 930		Friction Spring Rewind Guard
					(Used Before Code	1036		Emissions Label
					Date 99010400).			(Used After Code Date
					,			97063000).

[★] Included in Engineb Gasket Set-Ref. No. 358.


Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

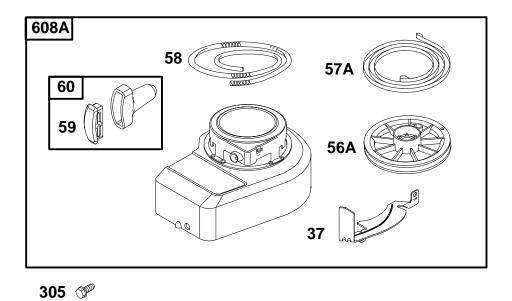


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
37 56A 57A 58	281336 490179	Flywheel Guard Starter Pulley Rewind Starter Spring Starter Rope (Cut to Required Length)	59 60 305	393152	Grip Insert Starter Rope Grip Screw (Blower Housing)	608A	497813	Rewind Starter (Used Before Code Date 97060600). Used on Compliance Engines ————————————————————————————————————

[★] Included in Engineb Gasket Set-Ref. No. 358.

Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.

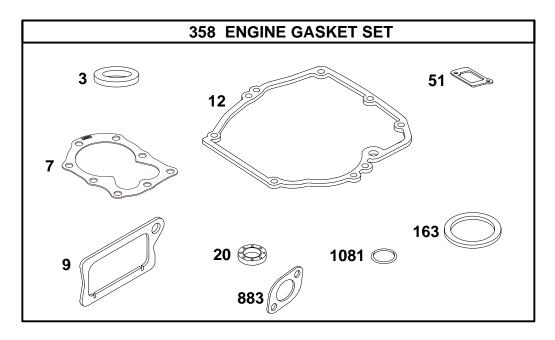

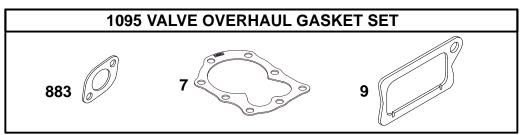

REF. PART NO. NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3 ★299819 7 ★∅272694 9 ★∅272602		20 51 163 358	*391483 *270345 *271139 298989			★271485	O-Ring Seal (Dipstick Tube Bottom) Valve Overhaul Gasket Set

[★] Included in Engineb Gasket Set-Ref. No. 358.

0967-14

Ø Included in Valve Overhaul Gasket Set-Ref. No. 1095.