

110900 to 110999

Illustrated Parts List

Model Series

110900 to 110999

TYPE NUMBERS
0010 through 0051
0109 through 0473

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed herein only as 0123. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.


PRINTED IN U.S.A.



COPYRIGHT ©



110900 to 110999

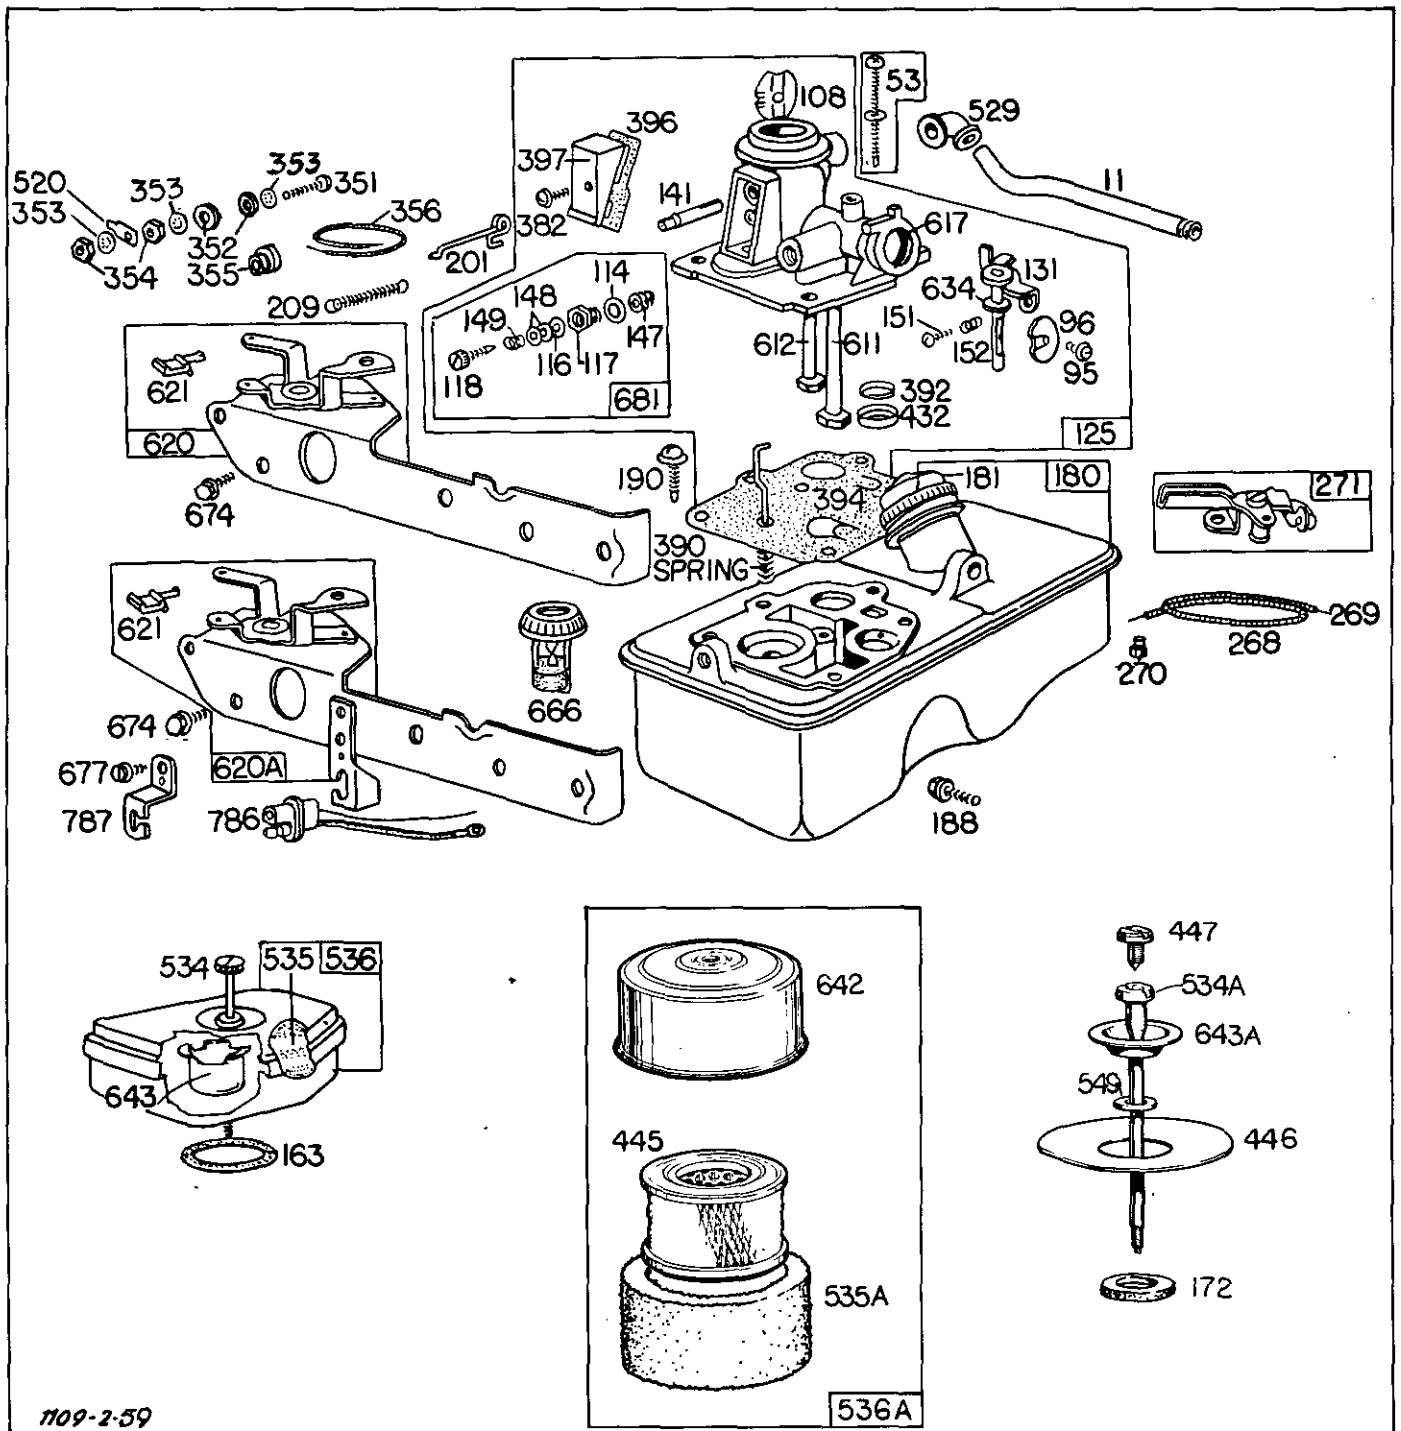

Assemblies include all parts shown in frames.

110900 to 110999

REF. NO. 1 - 16

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	391639	Cylinder Assembly		0262, 0263, 0266,			0315, 0316, 0320,	
2	293708	Bushing—Cylinder		0271, 0274, 0285,			0321, 0324, 0325,	
	Note:	Requires special tools for installation.		0292, 0300, 0306,			0327, 0335, 0337,	
3	299819	Seal—Oil		0313, 0318, 0319,			0339, 0345, 0346,	
5	211851	Head—Cylinder		0322, 0323, 0340,			0349, 0350, 0351,	
7	*270836	Gasket—Cylinder Hd.		0352, 0355, 0369,			0360, 0362, 0365,	
8	298383	Breather—Valve Chamber		0373, 0387, 0391,			0368, 0378, 0381,	
				0392, 0402, 0417,			0382, 0385, 0388,	
9	*270239	Gasket—Valve Cover		0418, 0420, 0426,			0389, 0390, 0393,	
10	93394	Screw—Breather and P.T.O. Gear Sump Cover (Ref. No. 86) Mounting Sem		0433, 0467, 0468.			0396, 0400, 0407,	
				261253 Crankshaft			0410, 0413, 0414,	
				Used on type Nos.			0423, 0427, 0443,	
				0017, 0119, 0170,			0444, 0445, 0446,	
				0175, 0223, 0225,			0447, 0449, 0450,	
11	231043	Tube—Breather		0258, 0275, 0278,			0451, 0452, 0453,	
12	*270833	Gasket—Crankcase— .015" thick (Standard)		0311, 0363, 0376.			0455, 0457, 0461,	
	*270895	Gasket—Crankcase— .005" thick		261254 Crankshaft			0462, 0464, 0466,	
	*270896	Gasket—Crankcase— .009" thick		Used on type Nos.			0468, 0469, 0470.	
				0018, 0120, 0172,			261263 Crankshaft	
				0182, 0184, 0192,			Used on type Nos.	
				0195, 0197, 0221,			0138, 0185, 0210,	
13	93111	Screw—Cylinder Hd. (1-15/16" long)		0226, 0227, 0282,			0211, 0212, 0213,	
	Note:	93772 Stud—Cylinder Head (2)		0291, 0301, 0305,			0240, 0243, 0244,	
		22963 Washer (2)		0326, 0328, 0330,			0264, 0287, 0288,	
		Used on type No. 0310.		0343, 0353, 0359,			0298, 0299, 0331,	
15	91084	Plug—Oil Drain		0364, 0366, 0421,			0347, 0348, 0377,	
	Note:	93418 Plug—Oil Drain (Socket Head)		0422, 0430, 0438,			0403, 0406, 0408,	
		Used on type Nos.		0441, 0459, 0472,			0411, 0416, 0431,	
		0172, 0178, 0180,		0473.			0435, 0436, 0454.	
		0199, 0255, 0257,		261256 Crankshaft			261264 Crankshaft	
		0258, 0265, 0275,		Uses:			Used on type Nos.	
		0277, 0278, 0279,		220708 Shim—			0139, 0171, 0235,	
		0293, 0294, 0330,		Crankshaft, Thrust			0342.	
		0341, 0346, 0355,		Used on type Nos.			261265 Crankshaft	
		0357, 0358, 0365,		0149, 0166.			Used on type Nos.	
		0371, 0372, 0420,		261262 Crankshaft			0140, 0180, 0189,	
		0433, 0434, 0443,		Used on type Nos.			0190, 0193, 0220,	
		0452, 0459, 0463,		0050, 0051, 0137,			0229, 0231, 0256,	
		0468.		0161, 0173, 0174,			0257, 0276, 0277,	
				0176, 0178, 0183,			0279, 0289, 0290,	
				0188, 0191, 0209,			0344.	
				0215, 0216, 0217,			261266 Crankshaft	
				0219, 0222, 0224,			Uses:	
16	261251	Crankshaft		0228, 0232, 0233,			220708 Shim—	
	Note:	261252 Crankshaft		0234, 0236, 0239,			Crankshaft, Thrust	
		Used on type Nos.		0245, 0249, 0265,			Used on type Nos.	
		0016, 0118, 0179,		0267, 0269, 0272,			0150, 0196, 0198,	
		0181, 0186, 0194,		0280, 0284, 0286,			0252.	
		0202, 0205, 0206,		0293, 0294, 0296,			261280 Crankshaft	
		0207, 0208, 0241,		0297, 0302, 0303,			Used on type No.	
		0246, 0250, 0260,		0308, 0310, 0314,			0199, 0357, 0358,	

* Included in Gasket Set
Part No. 391662.

[illegible]

110900 to 110999

REF. NO. 66 - 209

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
66	298310	Clutch Assy. -Rewind Starter			0390, 0393, 0413, 0466.	86	221780	Cover-Sump
67	212131	Housing-Starter Clutch			230921 Shaft-Drive Used on type Nos. 0217, 0222, 0302, 0407.	87	391484	Seal-Oil
68	63770	Ball-Clutch			230948 Shaft-Drive Used on type Nos. 0183, 0191, 0209, 0210, 0264, 0286, 0287, 0288, 0310, 0339, 0388, 0403, 0408, 0416, 0423, 0431, 0449, 0450, 0455, 0460, 0461.	88	270328	Gasket-Sump Cover
69	66874	Washer-Thrust			230952 Shaft-Drive Used on type Nos. 0219, 0224, 0231, 0232, 0327, 0400, 0406, 0443, 0446, 0453, 0469.	95	93499	Screw-Throttle Valve Mounting Sem
	Note:	68938 Washer-Thrust Used on type Nos. 0051, 0173, 0178, 0183, 0185, 0191, 0193, 0211, 0217, 0219, 0231, 0232, 0236, 0239, 0240, 0256, 0257, 0265, 0267, 0269, 0272, 0276, 0277, 0279, 0280, 0284, 0286, 0287, 0288, 0293, 0294, 0297, 0298, 0299, 0308, 0310, 0320, 0321, 0324, 0325, 0331, 0335, 0337, 0393, 0403, 0407, 0408, 0414, 0427, 0442, 0444, 0445, 0446, 0447, 0449, 0450, 0453, 0455, 0457, 0464, 0469, 0470.			230987 Shaft-Drive Used on type Nos. 0190, 0289, 0290.	96	211237	Valve-Throttle
					231213 Shaft-Drive Used on type No. 0462.	108	280178	Valve-Choke
			83A	230856	Gear-Drive	114	66594	Gasket-Needle Valve Nut
				Note:	230906 Gear-Drive Used on type Nos. 0051, 0173, 0178, 0183, 0185, 0191, 0193, 0211, 0217, 0219, 0231, 0232, 0236, 0239, 0240, 0256, 0257, 0265, 0267, 0269, 0272, 0276, 0277, 0279, 0280, 0284, 0286, 0287, 0288, 0293, 0294, 0297, 0298, 0299, 0308, 0310, 0320, 0321, 0324, 0325, 0331, 0335, 0337, 0385, 0393, 0396, 0403, 0407, 0408, 0414, 0427, 0442, 0444, 0445, 0446, 0447, 0449, 0450, 0453, 0455, 0457, 0464, 0469, 0470.	116	65978	Packing-Needle Valve
70	298436	Ratchet-Rewind Starter				117	230590	Nut-Needle Valve
71	221653	Washer-Clutch Retainer				118	23433	Valve-Needle
73	221661	Screen-Starter Pulley				120	92290	Washer-Lock-No. 10 x 1/16 x 3/64"
74	93490	Screw-Sem				125	391642	Carburetor Assembly
76	68238	Washer-Ratchet Sealing				131	299977	Shaft and Lever-Throttle
78	93758	Screw-Screen Mtg. (4)				141	68908	Shaft-Choke
81	222237	Lock-Muffler Screw				147	231049	Seat-Needle Valve
83	230831	Shaft-Drive				148	22235	Washer-Needle Valve (2)
	Note:	230860 Shaft-Drive Used on type Nos. 0171, 0180, 0297, 0320, 0337, 0342.				149	26336	Spring-Needle Valve
		230870 Shaft-Drive Used on type Nos. 0185, 0189, 0215, 0229, 0240, 0256, 0257, 0276, 0277, 0279, 0298, 0299, 0316, 0331, 0389,				151	93524	Screw-Rd. Hd. - 5-40 x 1/2
						152	260746	Spring-Throttle Adj.
						163	271139	Gasket-Air Cleaner Mounting
						172	271077	Gasket-Air Cleaner
						180	391694	Tank Assembly-Fuel
						181	298425	Cap-Fuel Tank
							Note:	391494 Cap-Fuel Tank (Chrome)
						188	93585	Screw-Fuel Tank and Starter Mounting
						190	93440	Screw-Fuel Tank Mtg.
						200	68388	Blade-Governor
						201	261027	Link-Governor
						209	260875	Spring-Governor (For 3400 to 3600 RPM Top Speed Set-No Load)
							Note:	260876 Spring-Governor (For 3900 to 4100 RPM Top Speed Set-No Load) Used on type No. 0255.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	260877	Spring— Governor (For 3200 to 3400 RPM Top Speed Set—No Load) Used on type Nos. 0173, 0174, 0188, 0192, 0196, 0198, 0210, 0213, 0225, 0228, 0233, 0234, 0241, 0242, 0252, 0253, 0258, 0261, 0262, 0270, 0275, 0278, 0282, 0283, 0285, 0295, 0301, 0314, 0315, 0319, 0326, 0328, 0340, 0342, 0347, 0357, 0358, 0366, 0373, 0374, 0376, 0399, 0400, 0404, 0411, 0430, 0431, 0453, 0456, 0463, 0467.			0324, 0325, 0327, 0330, 0333, 0339, 0344, 0353, 0361, 0378, 0379, 0383, 0386, 0420, 0433, 0438, 0442, 0449, 0450, 0460, 0461, 0472, 0473.			0284, 0286, 0287, 0288, 0312, 0313, 0317, 0341, 0370, 0401, 0402, 0403, 0406, 0419, 0436, 0454, 0457, 0458.
	261034	Spring— Governor (For 2900 to 3100 RPM Top Speed Set—No Load) Used on type Nos. 0175, 0176, 0179, 0182, 0183, 0184, 0200, 0220, 0221, 0222, 0226, 0230, 0235, 0302, 0310, 0318, 0345, 0348, 0349, 0351, 0356, 0359, 0377, 0393, 0407, 0413, 0427, 0434, 0459, 0462.			261061 Spring— Governor (For 3600 to 3800 RPM Top Speed Set—No Load) Used on type Nos. 0297, 0303, 0316, 0418, 0443, 0446.			261312 Spring— Governor (For 2400 to 2600 RPM) Used on type Nos. 0375, 0425.
	261060	Spring— Governor (For 3100 to 3300 RPM Top Speed Set—No Load) Used on type Nos. 0016, 0017, 0018, 0050, 0051, 0178, 0181, 0185, 0190, 0240, 0247, 0265, 0272, 0289, 0290, 0293, 0294, 0309,			261105 Spring— Governor (For 3000 to 3200 RPM) Used on type Nos. 0170, 0171, 0172, 0173, 0186, 0187, 0189, 0194, 0197, 0201, 0223, 0227, 0229, 0231, 0232, 0248, 0256, 0257, 0259, 0264, 0273, 0276, 0277, 0279, 0280, 0298, 0299, 0307, 0308, 0311, 0331, 0332, 0335, 0346, 0352, 0362, 0363, 0369, 0381, 0384, 0388, 0389, 0390, 0392, 0395, 0396, 0397, 0398, 0408, 0414, 0416, 0417, 0420, 0423, 0428, 0429, 0432, 0447, 0448, 0466, 0467.	265 267 268	22372 93469 66986	Clamp—Casing Screw—Clamp Mtg. Casing—Control Wire—48" long Note: If longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.
						269	26099	Wire Control, 54" long Note: If longer wire is needed, specify length in inches; if shorter wire is needed order No. 26099 and cut to required length.
						270	63426	Locknut—Control Wire Casing
						271	290568	Lever Assembly Control
						298	220859	Locknut—Muffler
						300	391492	Muffler—Exhaust (Includes No. 270774 Mounting Gasket) Note: 393400 Muffler— Exhaust Used on type Nos. 0411, 0448.

7

110900 to 110999

REF. NO. 300A - 523

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300A	391435	Muffler—Exhaust			Used on type Nos.	374	92813	Washer—Lock—
	Note:	298830 Muffler—Exhaust			0251, 0261, 0262,			Shakeproof
	Uses:	91943 Elbow—Exhaust			0295, 0326, 0339,	375	294628	Breaker Points and
		220859 Locknut—Muffler			0359, 0360, 0388,		Note:	299061 Ignition Kit
		Used on type Nos.			0421, 0423, 0438.		Includes:	294628 Point Set
		0282, 0289, 0290,			293918 Plug—Spark			65704 Plunger
		0291, 0320.			(with Gasket)			61760 Key—Flywheel
		299106 Muffler—Exhaust			1-1/2" high (Resistor type)	377	93065	Key—Woodruff No. 6
		Used on type Nos.			392588 Plug—Spark	382	93545	Screw—Choke Link
		0233, 0234, 0347,	340	26018	2" high (Resistor type)			Cover
		0366, 0430, 0431,	341	93381	Spring—Breaker Arm	390	261249	Spring—Diaphragm
		0447.			Screw—Breaker Arm	392	260455	Spring—Fuel Pump
303	91943	Elbow—Exhaust			Mounting Sem			Diaphragm
304	391636	Housing—Blower	342	65704	Plunger—Breaker Point	394	391643	Diaphragm—Carburetor
305	93559	Screw—Blower Housing Mounting Sem	344	93042	Screw—Condenser Clamp Mounting Sem	396	270571	Gasket—Choke Link Cover
306	222394	Shield—Cylinder	345	220366	Cover—Breaker Point and Condenser	397	211678	Cover—Choke Link
307	93490	Screw—Cylinder Shield Mounting Sem	346	93705	Screw—Dust Cover Mounting	409	391590	Control—Dial
309	391551	Motor—Starter	351	93735	Screw—Terminal	410	260993	Link—Control
310	93774	Bolt—Starter Motor	352	66068	Washer—Insulating	423	93599	Screw—Sem
311	390204	Brush Kit—Starter Motor	353	92791	Washer—Lock—Shakeproof (3)	432	221377	Cap—Spring
324	280140	Screen—Rotating	354	90576	Nut—Hex. —8-32 (2)	445	392308	Cartridge—Air Cleaner
329	93294	Screw—Sem	355	66554	Collar—Insulating	446	222844	Base—Air Cleaner
330	391609	Rope—Starter (For use on all Engines with Electric Starters with Auxiliary Rope Pulley)	356	298479	Wire—Ground	447	93817	Screw—Cover Mtg.
				Note:	298581 Wire—Ground	467	299858	Knob—Dial Control
					Used on type Nos.	508	93158	Screw—Sem
					0187, 0309.	513	390074	Clutch Assembly
331	220865	Washer—Flywheel			391554 Wire—Ground	516	260374	Spring—Connector
332	92284	Nut—Flywheel			Used on type Nos.	517	392765	Pulley—Starter Rope
333	298502	Armature—Magneto			0015, 0016, 0017,	520	93722	Terminal—Spade
334	93381	Screw—Armature Mounting Sem			0018, 0050, 0051,	523	391838	Cap with Dipstick—Oil Filler
335	93435	Screw—Armature and Governor Blade			0167, 0266, 0286,			For complete Oil Fill
337	298809	Plug—Spark (with gasket)			0287, 0288, 0293,			Cap with Dipstick
		1-1/2" high—(37 & 42 mm.)			0294, 0298, 0299,			and Oil Filler Tube
	Note:	Spark Plugs use Ignition Cable Terminal No. 221798.			0302, 0310 0314,			Assy. —order Part
		29693 Plug—Spark (with Gasket)			0315, 0319, 0324,		Note:	393496 Cap with
		2" high—51 mm.			0325, 0340, 0355,			Dipstick—Oil Filler
					0362, 0366, 0386,			Used on type No.
					0393, 0403, 0430,			0401.
					0442.			For complete Oil Fill
			358	391662	Gasket Set			Cap with Dipstick
			363	19069	Puller—Flywheel (Optional Accessory)			and Oil Filler Tube
			372	220477	Clamp—Condenser			Assy. —order Part
								393498.

REF. NO. 523A - 768

110900 to 110999

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
523A	392056	Cap with Dipstick—Oil Filler (Complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy.)			0293, 0294, 0295, 0328, 0353, 0355, 0373, 0411, 0468.	681	299060	Needle—Valve Kit
523B	392359	Extended Oil Minder Cap and Tube Assy.	620A	391648	Carburetor Control Plate and Harness Plug Bracket	720	93474	Pin—Gear to Shaft
524	68838	Seal—Filler Tube		Note:	392036 Carburetor Control Plate and Harness Plug Bracket Used on type No. 0294.	721	221779	Stop—Drive Shaft
525	280131	Tube—Oil Filler				727	211757	Cover—Electric Starter
525A	392056	Tube—Oil Filler (Complete Oil Fill Cap with Dipstick and Oil Filler Tube Assy.)	621	297472	Switch—Stop	764	391486	Starter Assembly—Vertical Pull
527	222549	Clamp—Oil Filler Tube	625	391377	Tube—Fuel Intake		Note:	392064 Starter Assy. — Vertical Pull Used on type Nos. 0341, 0375, 0405, 0424, 0425.
527A	222064	Tube Clamp	634	270167	Washer—Throttle Shaft (Felt)			392584 Starter Assy. — Vertical Pull Used on type No. 0346.
529	67838	Grommet—Breather	635	66538	Elbow—Spark Plug			392801 Starter Assy. — Vertical Pull Used on type Nos. 0358, 0428.
534	93374	Screw—Air Cleaner	642	222626	Cover—Air Cleaner			392851 Starter Assy. — Side Pull Used on type No. 0379.
534A	93818	Screw—Air Cleaner (Internal)	643	221321	Cup—Air Cleaner	765	299947	Housing—Vertical Pull Starter
535	270848	Element—Air Cleaner	643A	222594	Cup—Air Cleaner		Note:	392138 Housing—Vertical Pull Starter Used on type Nos. 0341, 0375, 0405, 0424, 0425.
535A	270979	Element—Air Cleaner	645	23513	Bushing—Plunger			392993 Housing—Vertical Pull Starter Used on type No. 0358.
536	391641	Cleaner Assembly—Air	646	222444	Bracket—Electric Starter Mounting			393011 Housing—Side Pull Starter Used on type No. 0379.
536A	392368	Cleaner Assy. —Air	655	222057	Anchor—Spring	766	280022	Pulley—Rope (Small)
544	391667	Armature—Starter	665	296768	Oil Minder	767	231048	Pin—Small Rope Pulley
548	390208	Washer Set—Starter Motor	666	299992	Gauge—Fuel Level	768	299948	Pulley and Gear Assembly—Starter (50" Rope)
549	270978	Washer (Below Internal Screw Head)	673	93705	Screw—Receptacle Retainer		Note:	Use Part No. 66904 (79") Starter Rope Used on type No. 0379.
592	90356	Nut—Hex. —10-24	674	93559	Screw—Tank to Bracket			392063 Pulley and Gear Assy. —Starter
608	393841	Starter Assy. —Rewind	676	222238	Deflector—Muffler			
611	297219	Pipe—Fuel (long)		Note:	221794 Deflector—Muffler Used on type Nos. 0310, 0345, 0379, 0383, 0447.			
612	296811	Pipe—Fuel (short)			222292 Deflector—Muffler Used on type No. 0340.			
613	93549	Screw—Muffler Mtg.			222522 Deflector—Muffler Used on type Nos. 0380, 0405, 0424, 0425, 0468.			
617	270344	Seal—Fuel Intake Tube	677	93705	Screw—Muffler Deflector and Harness Retainer			
620	391442	Plate—Carburetor Control		Note:	93606 Screw—Muffler Deflector Used on type Nos. 0310, 0345, 0379, 0383, 0447.			
	Note:	391503 Plate—Carburetor Control Used on type Nos. 0015, 0016, 0017, 0018, 0050, 0051, 0156, 0161, 0166, 0190, 0194, 0195, 0197, 0213, 0218, 0219, 0238, 0239, 0250, 0251, 0253, 0261, 0265, 0272,						

110900 to 110999

REF. NO. 768 - 871

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used on type Nos. 0341, 0375, 0405, 0424, 0425.		Note:	390129 Wiring Harness—Starter Motor	791	390197	Charger—Battery
769	66734	Rope—Vertical Pull Starter (50'')		Uses:	222091 Bracket—Harness Plug	792	390137	Bracket Assembly—Battery Mounting
	Note:	66904 Rope—Side Pull Starter (79'')		Used on type Nos. 0256, 0276.		793	261049	Clip—Wiring Harness
		Used on type No. 0379.		390192 Wiring Harness—Starter Motor		795	390122	Switch Assembly—Starter—Ignition
771	299961	Clip—Vertical Pull		Used on type No. 0248.			Note:	390128 Switch Assy. Starter—Ignition (Less Housing)
772	93598	Screw—Sem						Used on type No. 0234.
773	390112	Retainer Assy.—Spur Gear	787	222088	Retainer—Harness Plug	797	390201	Nut Set
774	280121	Insert—Starter Handle	789	390207	Wiring Harness Assy.—Mower	798	590316	Key Set—Starter Switch
775	280036	Grip—Starter Rope			(55'' long with 32'' long side Lead Wire— for Switch on Handle)	799	211773	Housing—Starter Switch
	Note:	280195 Grip—Starter Rope		Note:	390372 Wiring Harness Assy.—Mower	800	222212	Retainer—Switch Receptacle
		Used on type Nos. 0358, 0428.			(12'' long with 8'' long side Lead Wire— for Switch on Deck)	801	390202	Motor Output End Cover and Mounting Bracket
776	222049	Guide—Rope				802	390203	Cap Assembly—End
777	390066	Spring—Vertical Pull Starter				803	391668	Shell to Housing
778	280021	Cover—Vertical Pull Starter Pulley	790	390123	Battery—Electric Starter	837	222241	Spacer—Muffler Mtg.
781	280034	Cap—Electric Starter Pulley			(G.E. No. 41B001LD09)	842	270920	Seal—Filler Cap
782	280038	Gear—Electric Starter Spur			If this Battery does not fit, refer to Equipment Manufacturer.	847	392056	Filler Group—Oil
783	230960	Gear—Electric Starter Pinion		Note:	Uses:		Note:	393498 Filler Group—Oil
784	222085	Cover—Electric Starter Clutch Gear			391999 Battery Terminal			Used on type No. 0401.
785	270610	Gasket—Electric Starter Clutch Gear Cover			(G.E. No. 152B5421—121)	851	221798	Terminal—Ignition Cable
786	390102	Wiring Harness—Starter Motor (Cylinder Head end)			392000 Charger Terminal	869	210879	Seat—Intake Valve (Standard)
					(G.E. No. 251A6695—G1)	870	211291	Seat—Exhaust Valve (Standard)
						871	63709	Guide—Exhaust Valve

