

130200 to 130299

Illustrated Parts List

Model Series 130200 to 130299

TYPE NUMBERS
0010 through 0075
0101 through 1204
2015 through 2049

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 012301 are listed herein only as 0123. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering the Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Number are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

PRINTED IN U.S.A.

COPYRIGHT ©




K&T Saw Shop 606-678-5623 or 606-561-4983

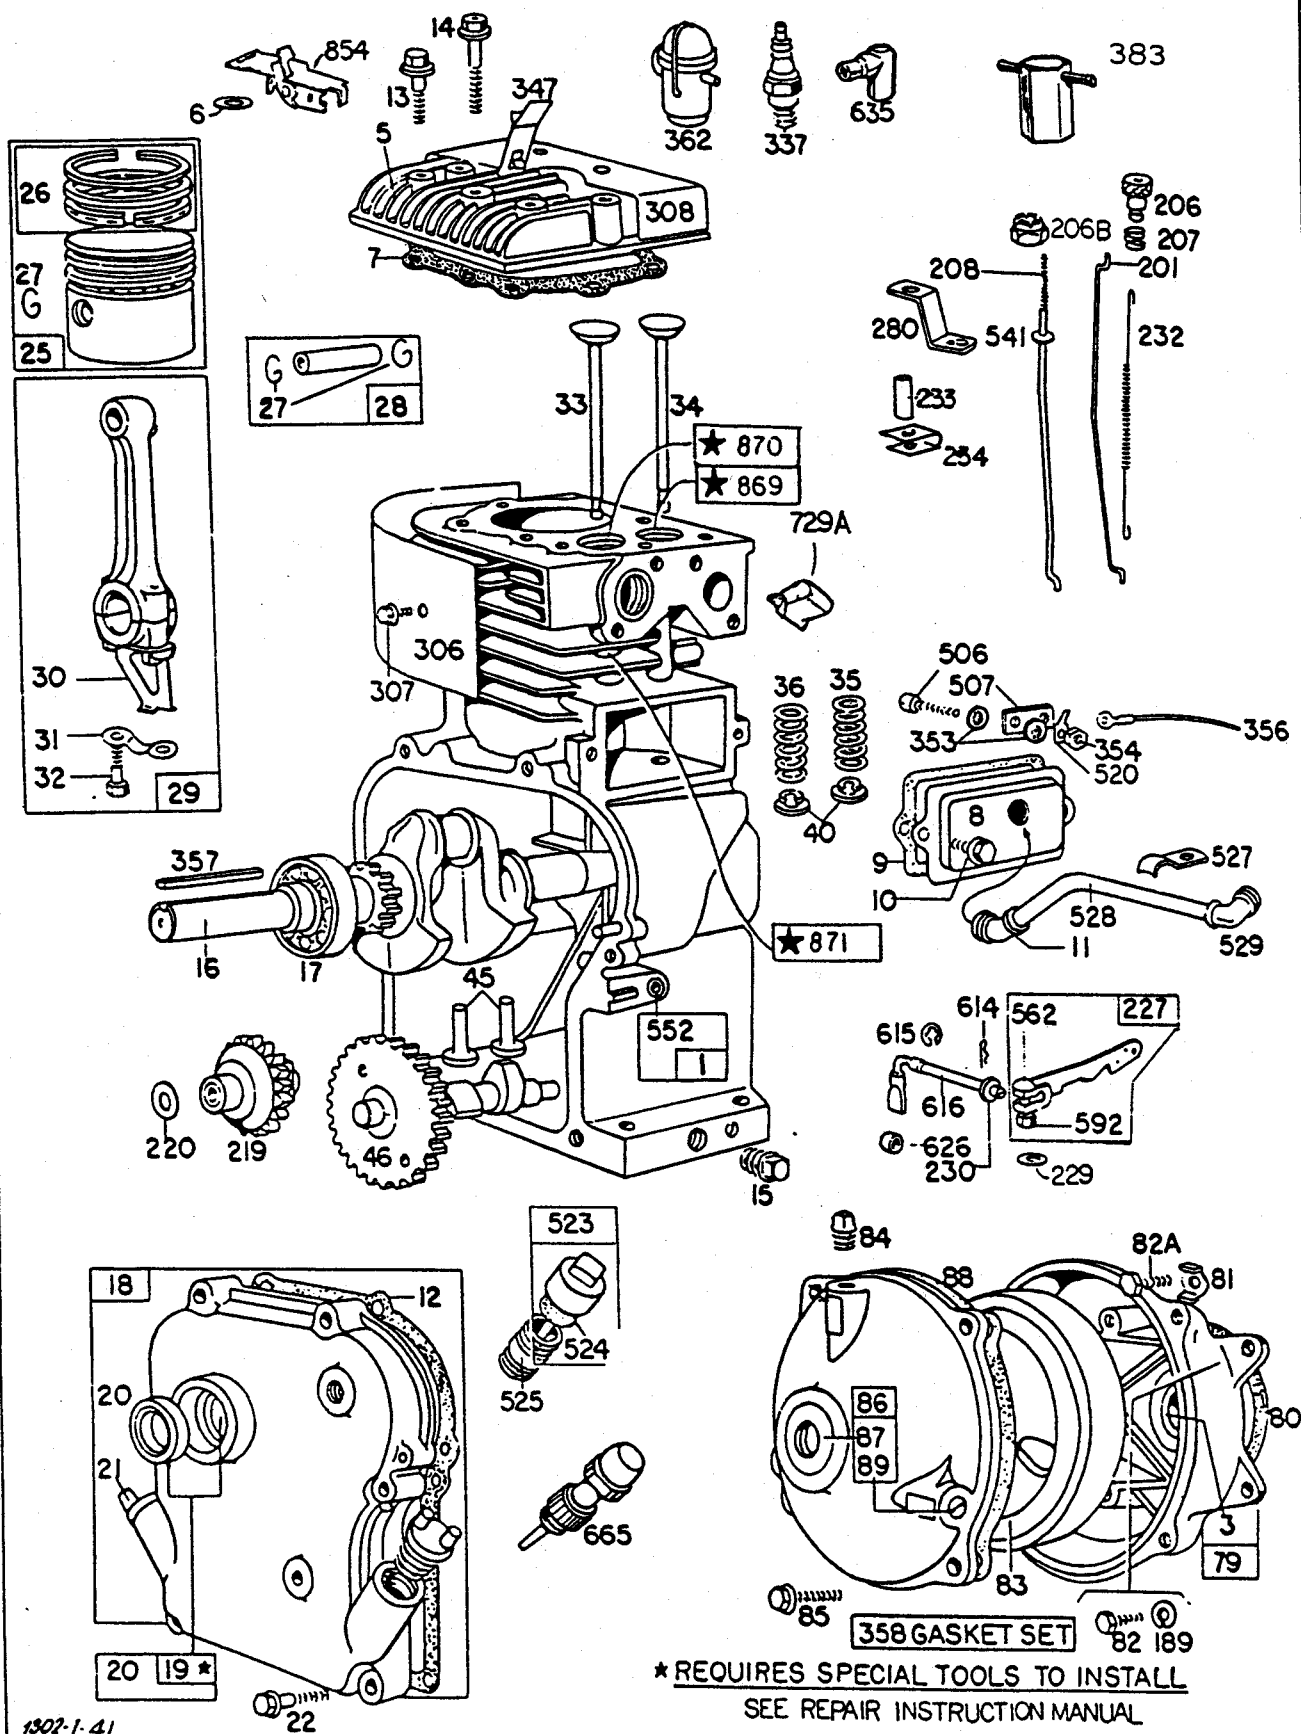


Assemblies include all parts shown in frames.

 K&T Saw Shop 606-678-9623 or 606-561-4983




K&T Saw Shop 606-678-9623 or 606-561-4983

130200 to 130299











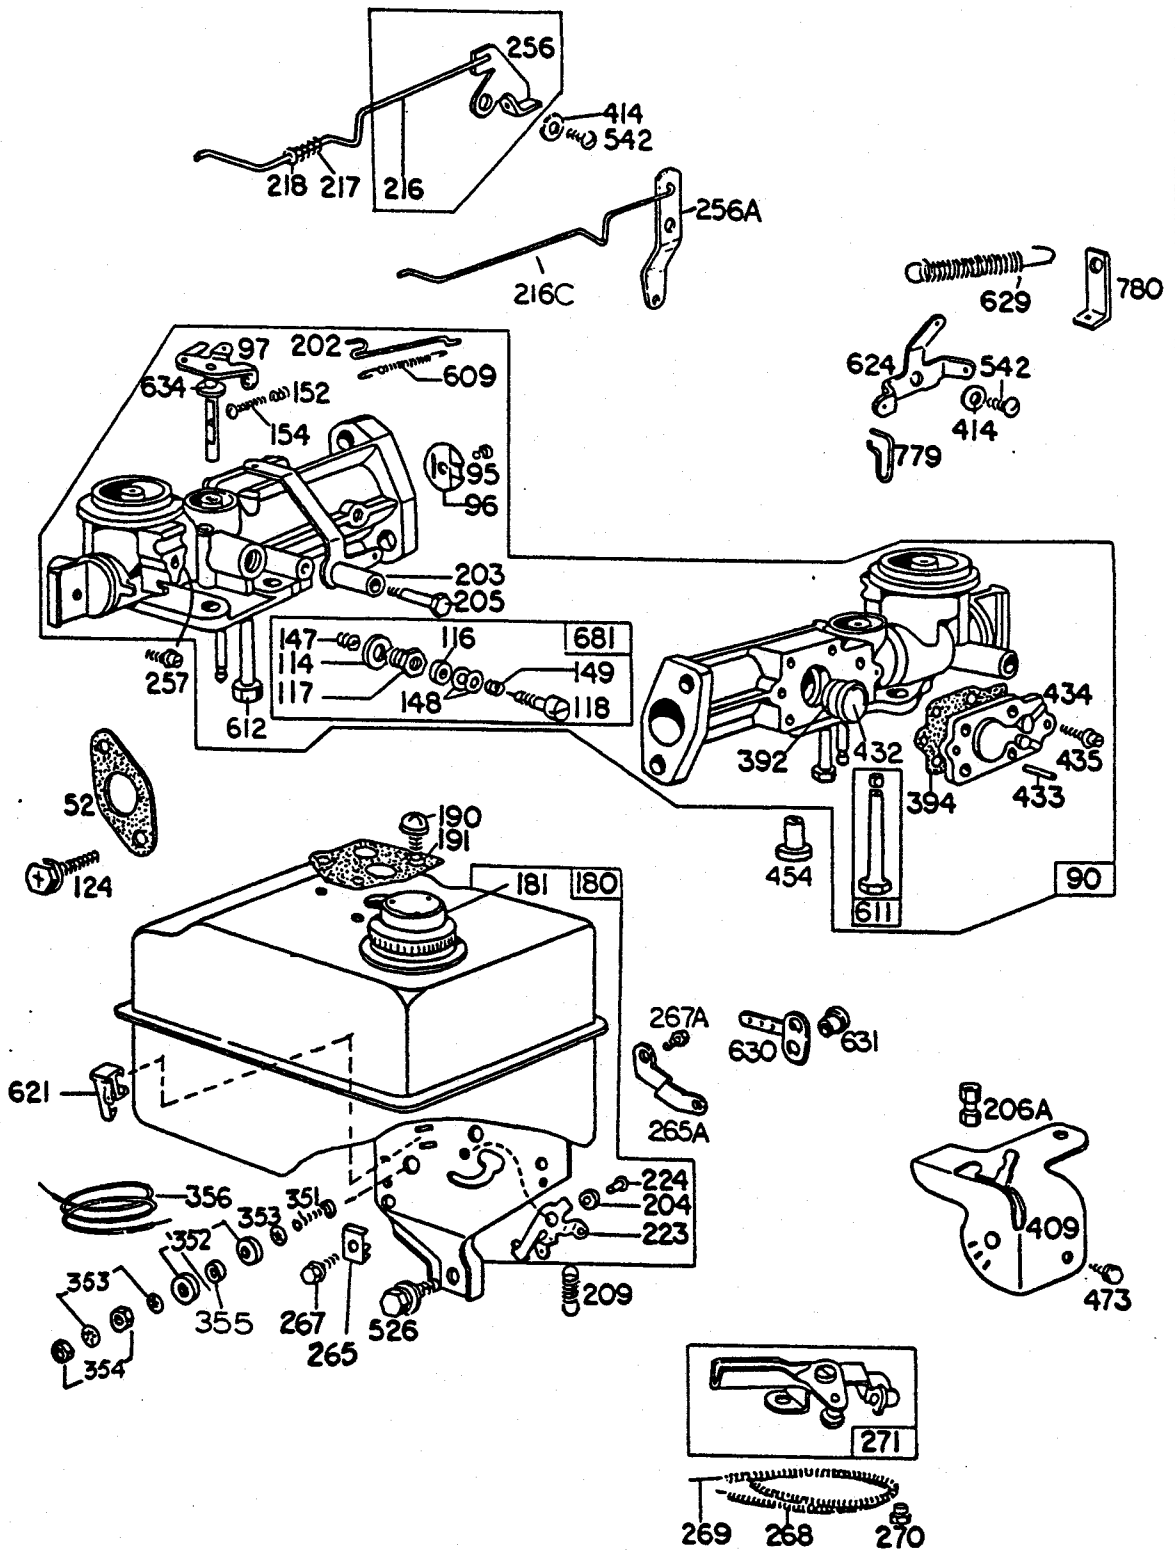


1302-3-41

Assemblies include all parts shown in frames.

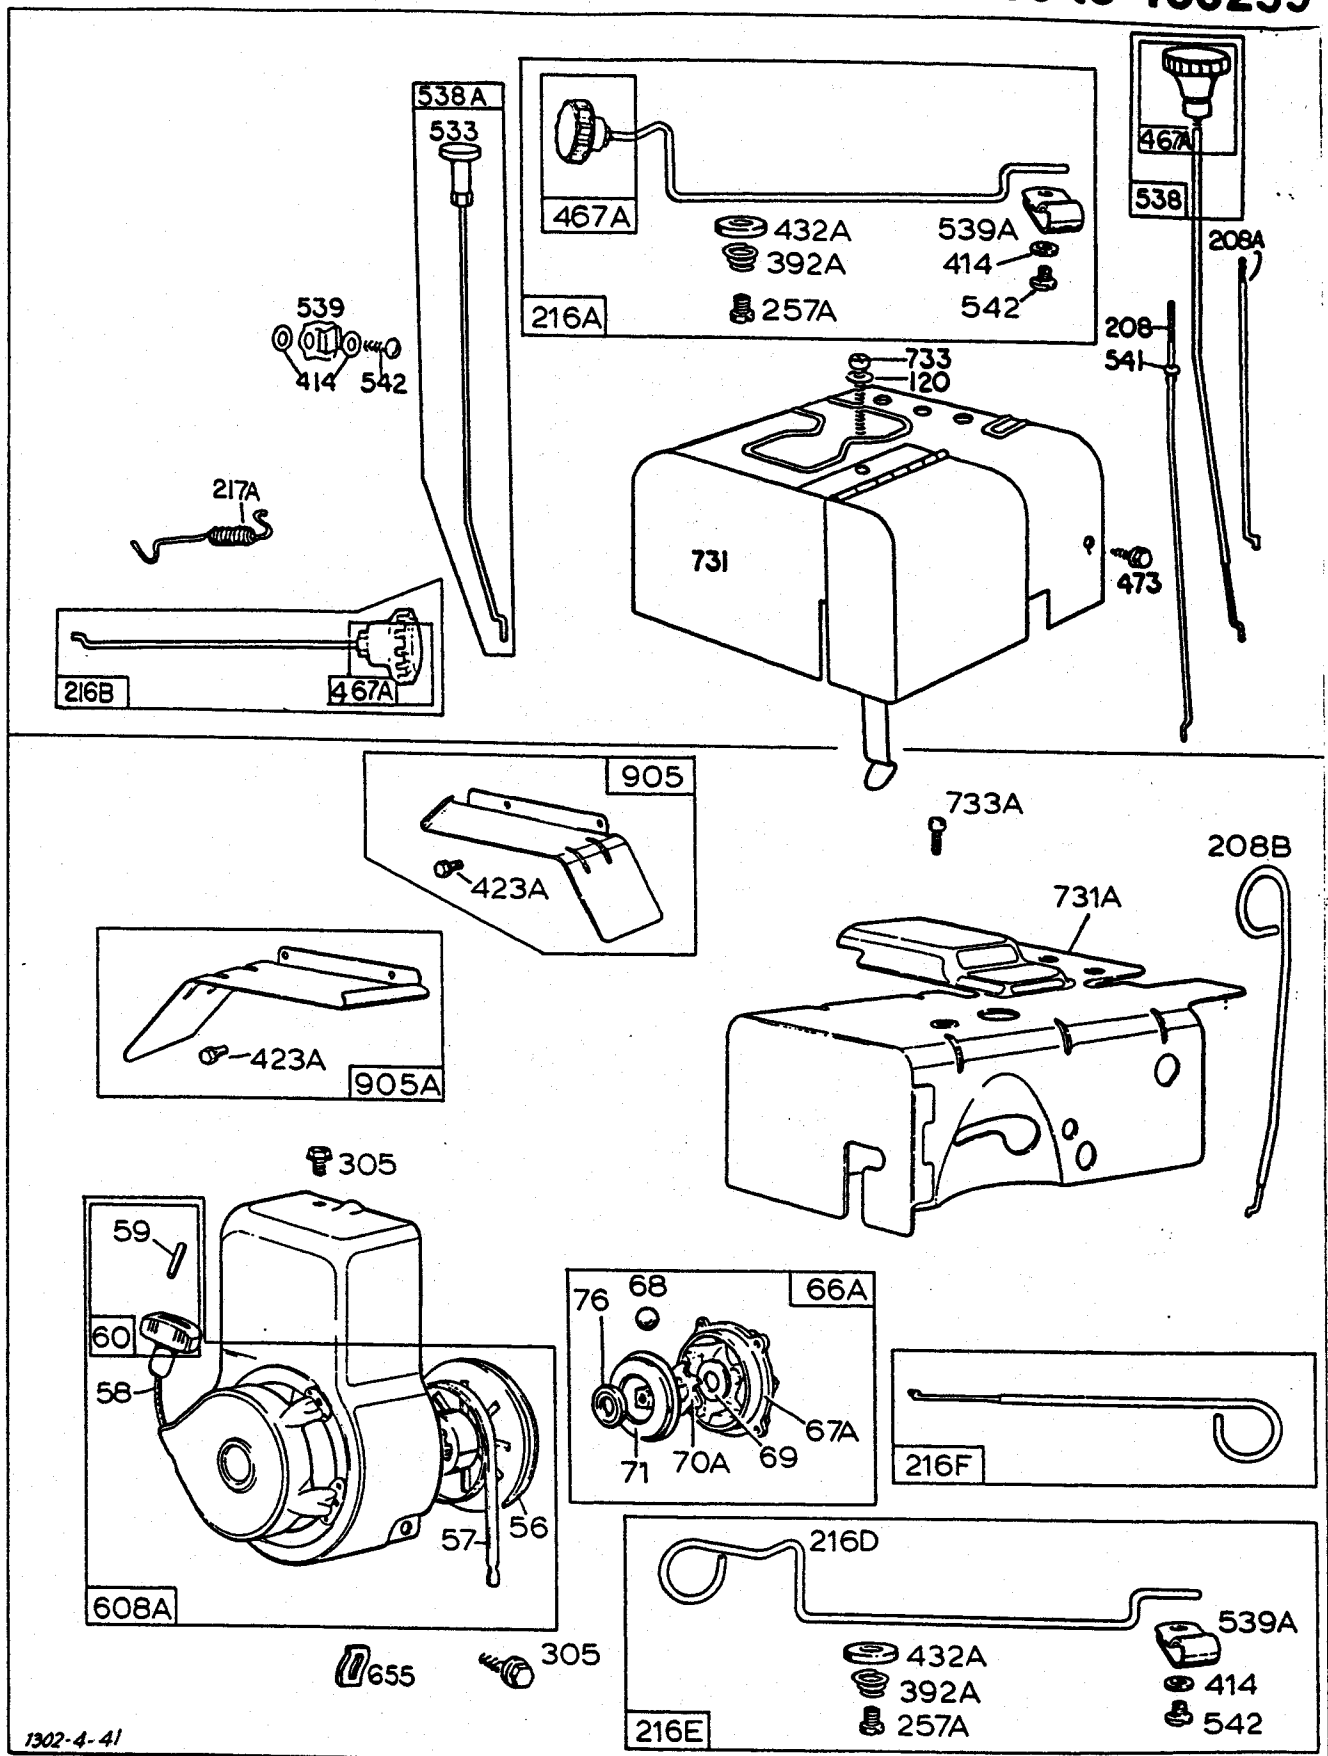


Assemblies include all parts shown in frames.

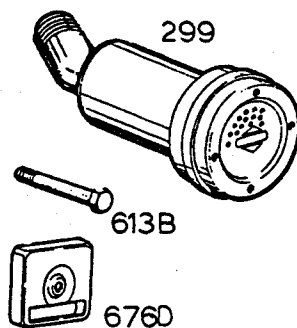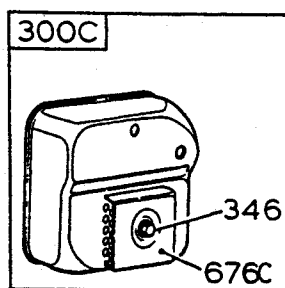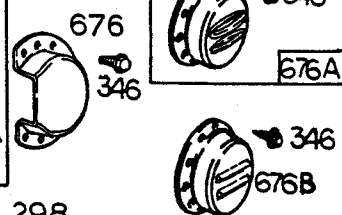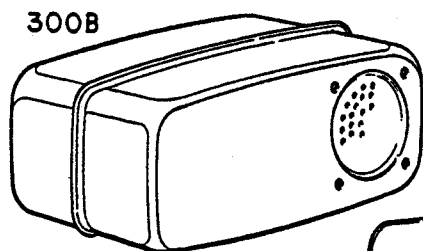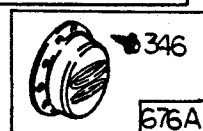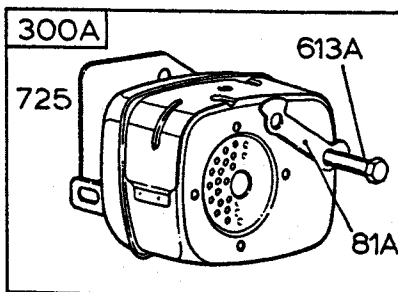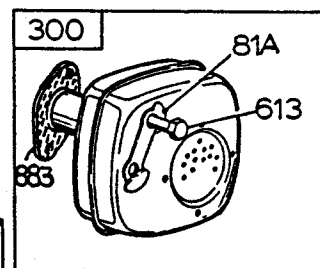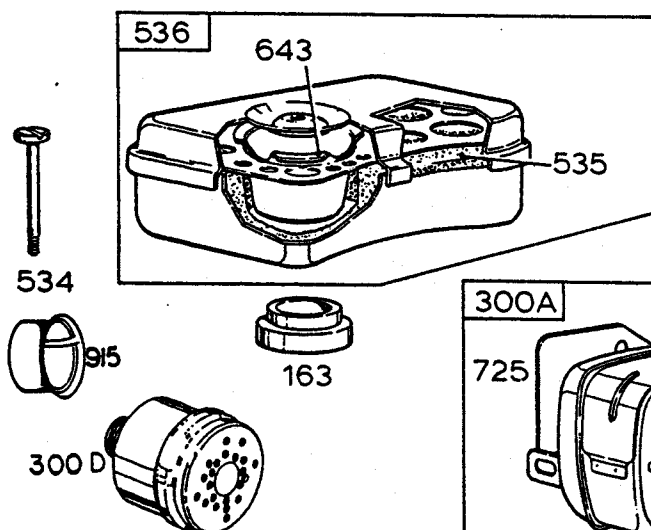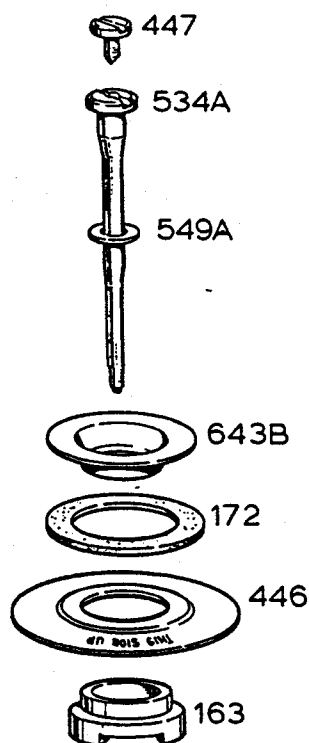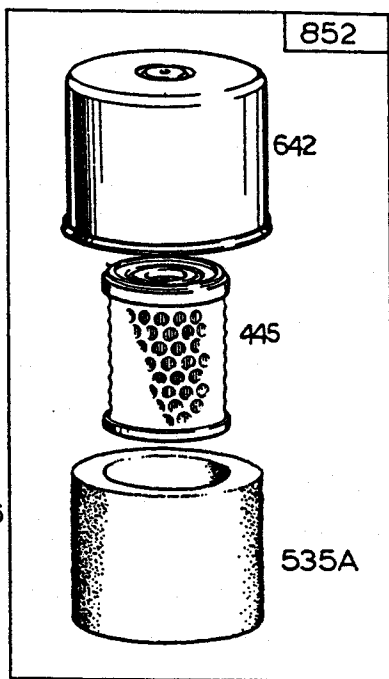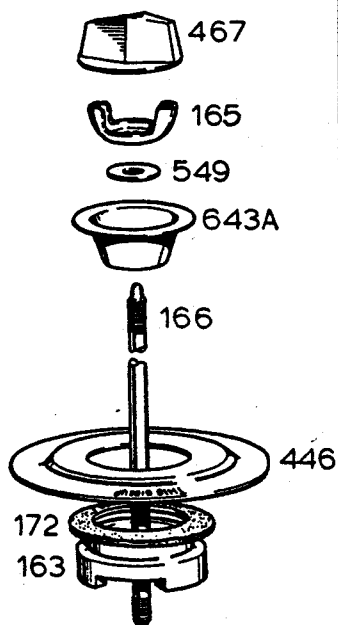

1302-5-4/

Assemblies include all parts shown in frames.

K&T Saw Shop 606-678-9623 or 606-561-4983

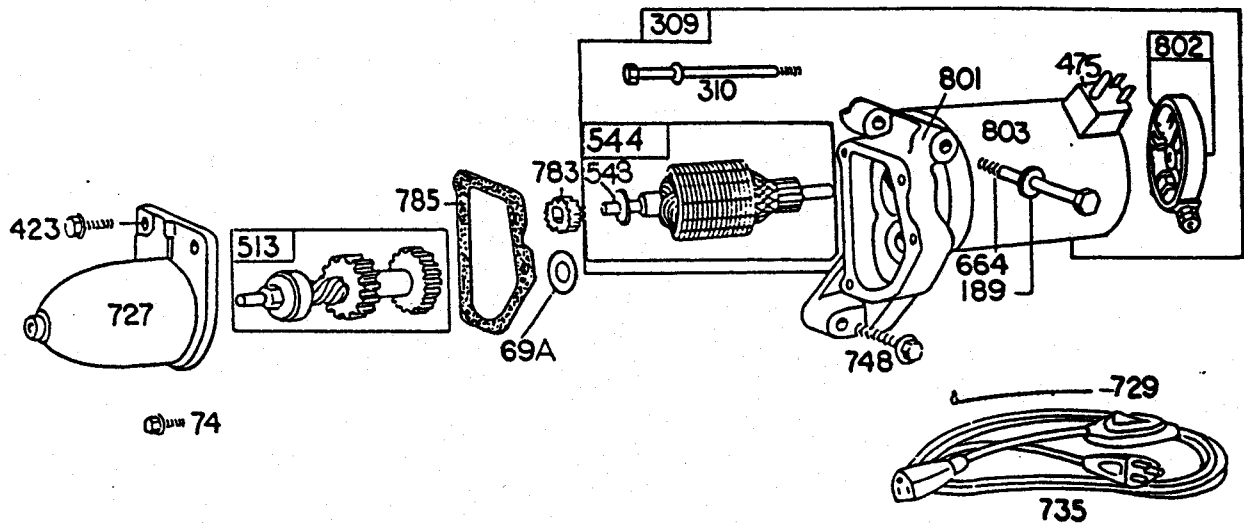

1302-6-41

Assemblies include all parts shown in frames.

Subject	Ref. No. 309	Ref. No. 513	Ref. No. 544	Ref. No. 803	Ref. No. 802	Ref. No. 475
Starter Motor Mfr.	Motor	Drive Assembly	Armature Assembly	Housing Assembly	End Cap Assy. Commutator	Rectifier Assembly
American Bosch						
12V	390551*	390581	390467	390468	390465	
110V	393842**					

*Uses #92813 Lockwasher and #231082 Hex Nut.

**Includes Entire Motor and Drive Assembly.

Parts Common to the 12V and 110V Motors

Ref. No. 423	Ref. No. 727	Ref. No. 785	Ref. No. 783	Ref. No. 69A	Ref. No. 310	Ref. No. 548	Ref. No. 664	Ref. No. 748	Ref. No. 801
Sem. Screw 93654	Drive Hsg. 390543	Gasket 270718	Pinion 230972	Washer 93676	Motor Bolt 93648	Washer 93649	Mtg. Screw 93358	Mtg. Screw 93534	Mounting Head 390544

*Included in Gasket Set—
Part No. 297615.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	260941	Crankshaft		260958	Crankshaft		0731, 0732, 0734,	
		Used on Type Nos.			Used on Type Nos.		0742, 0744, 0747,	
		0037, 0114, 0174,			0036, 0113,		0751, 0752, 0757,	
		0176, 0180, 0213,			0124, 0128,		0762, 0773, 0774,	
		0217, 0332, 0399,			0130, 0131, 0134,		0781, 0785, 0791,	
		0472, 0479, 0590,			0138, 0150, 0154,		0795, 0805, 0809,	
		0608, 0630, 0754,			0164, 0166, 0170,		0811, 0812, 0824,	
		0817, 0828, 0837,			0186, 0192, 0203,		0827, 0831, 0834,	
		0854, 0856, 0888,			0206, 0210, 0212,		0838, 0841, 0855,	
		0924, 0967, 0977,			0220, 0221, 0222,		0858, 0859, 0861,	
		1039, 1096, 1151.			0228, 0238, 0239,		0866, 0867, 0870,	
	260942	Crankshaft			0240, 0245, 0248,		0871, 0874, 0883,	
		Used on Type Nos.			0251, 0255, 0256,		0884, 0890, 0891,	
		0038, 0040, 0115,			0257, 0259, 0262,		0896, 0898, 0899,	
		0139, 0157, 0160,			0267, 0268, 0269,		0907, 0908, 0914,	
		0169, 0183, 0197,			0270, 0273, 0284,		0918, 0919, 0920,	
		0201, 0219, 0246,			0287, 0290, 0292,		0922, 0923, 0927,	
		0258, 0291, 0295,			0293, 0294, 0298,		0937, 0939, 0942,	
		0342, 0349, 0363,			0300, 0303, 0304,		0948, 0953, 0957,	
		0386, 0390, 0403,			0305, 0311, 0312,		0960, 0974, 0975,	
		0413, 0415, 0433,			0314, 0323, 0329,		0985, 0986, 0998,	
		0437, 0456, 0459,			0356, 0360, 0376,		1012, 1013, 1017,	
		0466, 0468, 0469,			0378, 0389, 0393,		1020, 1021, 1026,	
		0475, 0476, 0477,			0397, 0401, 0407,		1027, 1036, 1037,	
		0482, 0484, 0507,			0422, 0439, 0440,		1042, 1044, 1048,	
		0518, 0534, 0541,			0441, 0445, 0449,		1052, 1057, 1064,	
		0545, 0555, 0559,			0457, 0461, 0465,		1066, 1069, 1070,	
		0561, 0570, 0572,			0471, 0473, 0474,		1080, 1081, 1082,	
		0574, 0575, 0579,			0485, 0487, 0488,		1085, 1087, 1090,	
		0581, 0582, 0618,			0489, 0491, 0497,		1099, 1102, 1105,	
		0625, 0626, 0627,			0498, 0502, 0503,		1108, 1110, 1111,	
		0629, 0637, 0656,			0504, 0505, 0506,		1114, 1116, 1121,	
		0662, 0668, 0669,			0508, 0513, 0520,		1122, 1123, 1127,	
		0672, 0680, 0738,			0525, 0527, 0529,		1135, 1142, 1144,	
		0745, 0758, 0759,			0531, 0535, 0536,		1155, 1157, 1159,	
		0761, 0772, 0779,			0538, 0543, 0544,		1160, 1162, 1163,	
		0780, 0783, 0784,			0546, 0548, 0550,		1165, 1173, 1180,	
		0786, 0796, 0800,			0552, 0553, 0560,		1181, 1182, 1187,	
		0832, 0836, 0840,			0564, 0583, 0584,		1191, 1193, 1201,	
		0845, 0849, 0857,			0586, 0587, 0588,		2036.	
		0860, 0863, 0875,			0594, 0597, 0603,		260987	Crankshaft
		0886, 0887, 0904,			0605, 0606, 0607,		Used on Type Nos.	
		0905, 0909, 0912,			0612, 0619, 0623,		0024, 0049, 0116,	
		0916, 0932, 0934,			0632, 0636, 0645,		0120, 0181, 0193,	
		0935, 0938, 0947,			0648, 0650, 0654,		0202, 0214, 0227,	
		0951, 0954, 0959,			0655, 0657, 0661,		0322, 0325, 0327,	
		0963, 0965, 0979,			0665, 0675, 0677,		0350, 0355, 0412,	
		0983, 0994, 0996,			0679, 0683, 0687,		0416, 0420, 0431,	
		0999, 1002, 1004,			0690, 0691, 0692,		0443, 0462, 0481,	
		1005, 1016, 1031,			0696, 0697, 0701,		0514, 0519, 0551,	
		1059, 1073, 1075,			0704, 0707, 0713,		0562, 0563, 0566,	
		1076, 1107, 1112,			0717, 0720, 0724,		0567, 0568, 0573,	
		1124, 1126, 1133,			0726, 0729, 0730,		0578, 0599, 0602,	
		1145, 1148, 1149,					0624, 0634, 0639,	
		1154, 1164, 1172,					0644, 0653, 0658,	
		1174, 1185, 1192,					0664, 0710, 0712,	
		1199, 2038.					0719, 0746, 0749,	

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0755, 0756, 0775, 0797, 0799, 0879, 0880, 0882, 0885, 0889, 0894, 0901, 0903, 0906, 0944, 0946, 0952, 0955, 0961, 1008, 1019, 1029, 1030, 1040, 1068, 1079, 1119, 1125, 1136, 1156, 1158, 1161, 1168, 1188, 1194, 2049. 261046 Crankshaft Used on Type No. 0230. 261141 Crankshaft Used on Type Nos. 0361, 0388, 0554, 0663. 261142 Crankshaft Used on Type Nos. 0025, 0119, 0121, 0123, 0345, 0353, 0373, 0391, 0392, 0400, 0402, 0409, 0411, 0417, 0418, 0419, 0425, 0436, 0450, 0490, 0493, 0511, 0539, 0540, 0592, 0593, 0641, 0660, 0670, 0694, 0725, 0733, 0776, 0782, 0802, 0862, 0873, 0964, 0966, 0970, 0971, 0972, 0973, 0976, 0980, 1023, 1046, 1051, 1061, 1062, 1063, 1077, 1089, 1094, 1098, 1101, 1137, 1138, 1140, 1175, 1198. 261147 Crankshaft Used on Type Nos. 0438, 0764. 261148 Crankshaft Used on Type Nos. 0338, 0347, 0368, 0369, 0379, 0384, 0815, 0902. 261150 Crankshaft Used on Type Nos. 0351, 0352, 0406, 0424, 0598, 0765, 0872, 1045, 1047.			261165 Crankshaft Used on Type No. 0358. 261216 Crankshaft Used on Type Nos. 0423, 0426, 0533, 0542, 0622, 0635, 0735, 0770, 0806, 0990, 1003, 1018, 1147. 261227 Crankshaft Used on Type Nos. 0427, 0483, 0496. 261234 Crankshaft Used on Type Nos. 0039, 0499, 0577, 0596, 0628, 0674, 0684, 0771, 0839, 1054, 1058, 1078, 1084, 1132, 1152, 2039. 261299 Crankshaft Used on Type Nos. 0020, 0523, 0604, 0631, 0685, 0736, 0767, 0813, 0830, 1117. 261396 Crankshaft Used on Type No. 0676. 261399 Crankshaft Used on Type Nos. 0689, 0702, 0825, 0864, 0921, 1129, 1134, 1176, 1197. 261544 Crankshaft Used on Type Nos. 0989, 1001, 1032, 1056, 1183. 17 99158 Bearing—Ball 18 297602 Cover Assy.— Crankcase Used on Model Series 130201, 130202, 130203, 130206, 130207. 298183 Cover Assy.— Crankcase Used on Model Series 130292, 130297.			298204 Cover Assy.— Crankcase Used on Model Series 130231, 130232, 130233, 130235, 130236, 130237. 298517 Cover Assy.— Crankcase Used on Model Series 130212, 130217, 130251, 130252, 130253, except as listed under note. Note: 392778 Cover Assy.— Crankcase Used on Type Nos. 0689, 0702, 0825, 0864, 0921, 0989, 1001, 1032, 1056, 1197. 19 297603 Bushing—Crankcase Cover Note: Requires special tools for installation. 20 294606 Seal—Oil Note: 393812 Seal—Oil Used on Model 130231, 130232, 130233, 130235, 130236, 130237 Series Engines. 391484 Seal—Oil Used on the Auxiliary P.T.O. Shaft on Type Nos. 0070, 0071, 0117, 0125, 0126, 0141, 0159, 0208, 0224, 0234, 0249, 0301, 0359, 0369, 0371, 0430, 0447, 0448, 0455, 0524, 0530, 0540, 0611, 0613, 0614, 0617, 0646, 0647, 0651, 0678, 0706, 0709, 0711, 0722, 0723, 0728, 0737, 0766, 0776, 0778, 0782, 0789, 0792, 0793, 0794, 0803, 0873, 0895, 0917, 0941, 0972, 1009, 1025, 1050, 1055, 1061, 1062, 1092, 1131, 1139, 1140, 1196.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		298504 Oil Seal and Spacer Used on Type Nos. 0023, 0148, 0149, 0189, 0229, 0232, 0233, 0282, 0285, 0286, 0299, 0306, 0328, 0334, 0336, 0346, 0357, 0375, 0379, 0385, 0395, 0464, 0480, 0501, 0510, 0512, 0521, 0532, 0533, 0542, 0565, 0621, 0635, 0659, 0735, 0739, 0755, 0756, 0763, 0764, 0765, 0769, 0775, 0777, 0787, 0797, 0799, 0802, 0804, 0806, 0819, 0826, 0846, 0872, 0876, 0880, 0882, 0885, 0889, 0894, 0906, 0910, 0928, 0931, 0964, 0966, 0970, 0981, 0984, 0988, 0990, 0997, 1003, 1006, 1011, 1014, 1049, 1051, 1074, 1077, 1098, 1113, 1115, 1118, 1120, 1137, 1138, 1143, 1153, 1170, 1175, 1177, 1179, 1190, 1203, 2049. 392741 Oil Seal and Spacer Used on Type Nos. 0689, 0702, 0825, 0864, 0921, 0989, 1001, 1032, 1056, 1129, 1134, 1176, 1183, 1197.			0447, 0454, 0455, 0523, 0610, 0613, 0614, 0633, 0646, 0647, 0685, 0709, 0721, 0722, 0727, 0728, 0736, 0737, 0741, 0792, 0830, 0853, 0873, 0940, 1009, 1010, 1024, 1025, 1071, 1091, 1092, 1097, 1103, 1117.			29 299430 Rod Assy.—Connecting Note: For Connecting Rod with .020" undersize Crankpin Bore— Order No. 390459.
						30 221890 Dipper—Connecting Rod		
						31 221876 Lock—Conn. Rod Screw		
						32 92296 Screw—Connecting Rod		
						33 211119 Valve—Exhaust Note: 260860 Valve—Exhaust Used on Type Nos. 0038, 0120, 0122, 0124, 0150, 0155, 0156, 0167, 0175, 0178, 0179, 0183, 0197, 0202, 0207, 0219, 0230, 0258, 0316, 0318, 0337, 0403, 0412, 0413, 0427, 0437, 0459, 0469, 0475, 0476, 0477, 0482, 0484, 0507, 0529, 0534, 0541, 0546, 0561, 0574, 0575, 0577, 0579, 0583, 0606, 0620, 0653, 0656, 0665, 0738, 0740, 0747, 0758, 0759, 0786, 0799, 0818, 0831, 0837, 0843, 0849, 0857, 0859, 0860, 0863, 0871, 0875, 0882, 0885, 0886, 0903, 0916, 0919, 0920, 0954, 0959, 0965, 0976, 0979, 0983, 0996, 1005, 1019, 1026, 1029, 1030, 1031, 1037, 1041, 1069, 1073, 1075, 1076, 1078, 1080, 1085, 1087, 1126, 1145, 1148, 1172, 1174, 1176, 2015, 2035, 2036, 2038, 2039, 2049.		
			23 297229 Flywheel—Magneto Note: 211424 Pulley—V-Belt Uses: 69248 Belt—Vee Used between Flywheel and Starter Clutch on Type No. 0147. 391081 Flywheel Used on Type Nos. 0373, 0391, 0392, 0400, 0450, 0483, 0496.					
			23A 390509 Flywheel Assy.					
			24 61760 Key—Flywheel					
			25 298904 Piston Assy. Standard					
			298905 Piston Assy.— .010" O.S.					
			298906 Piston Assy.— .020" O.S.					
			298907 Piston Assy.— .030" O.S.					
			PISTON RING SETS:					
			Note: For Chrome Piston Ring Set — Standard Size — Order Part No. 299742.					
			26 298982 Ring Set—Standard Piston					
			298983 Ring Set—.010" O.S. Piston					
			298984 Ring Set—.020" O.S. Piston					
			298985 Ring Set—.030" O.S. Piston					
21 66768 Plug—Oil Filler			27 26026 Lock—Piston Pin					
22 93032 Screw—Crankcase Cover Mounting Sem			28 298909 Pin Assy.—Piston— Standard					
Note: 93656 Stud			298908 Pin Assy.—Piston— .005" O.S.					
90832 Lockwasher Used to mount Crankcase Cover on Type Nos. 0020, 0071, 0249, 0301, 0369, 0430, 0446,								

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
34	261044	Valve—Intake (Used after Serial No. 6908087) Note: 260961 Valve—Intake (Used before Code No. 6908117) Also on Type Nos. 0038, 0150, 0155, 0156, 0167, 0175, 0178, 0179, 0183, 0197, 0202, 0207, 0219, 0230, 0258.	37A	222578	Guard—Flywheel (Used on Engines with Electric Starters)			0224, 0234, 0249, 0301, 0359, 0369, 0371, 0430, 0447, 0448, 0455, 0524, 0530, 0540, 0611, 0613, 0614, 0617, 0646, 0647, 0651, 0678, 0706, 0709, 0711, 0722, 0723, 0728, 0737, 0766, 0776, 0778, 0782, 0789, 0792, 0793, 0794, 0803, 0873, 0895, 0917, 0941, 0961, 0972, 1009, 1025, 1050, 1055, 1061, 1062, 1092, 1131, 1139, 1140, 1186, 1196.
35	260552	Spring—Intake Valve	40	93312	Retainer—Valve Spring	52	* 27355	Gasket—Carburetor Mounting (2)
36	26478	Spring—Exhaust Valve		Note: 292259 Rotocap—Exhaust Valve		55	299431	Housing—Rewind Starter
		Note: 26826 Spring—Exhaust Valve Used on Type Nos. 0038, 0120, 0122, 0124, 0150, 0155, 0156, 0167, 0175, 0178, 0179, 0183, 0197, 0202, 0207, 0219, 0230, 0258, 0316, 0318, 0337, 0403, 0412, 0413, 0427, 0437, 0459, 0469, 0475, 0476, 0477, 0482, 0484, 0507, 0529, 0534, 0541, 0546, 0561, 0574, 0575, 0577, 0579, 0583, 0606, 0620, 0653, 0656, 0665, 0738, 0740, 0747, 0758, 0759, 0786, 0799, 0818, 0831, 0837, 0843, 0849, 0857, 0859, 0860, 0863, 0871, 0875, 0882, 0885, 0886, 0903, 0916, 0919, 0920, 0954, 0959, 0965, 0976, 0979, 0983, 0996, 1005, 1019, 1026, 1029, 1030, 1031, 1037, 1041, 1069, 1073, 1075, 1076, 1078, 1080, 1085, 1087, 1126, 1145, 1148, 1172, 1174, 1176, 2015, 2035, 2036, 2038, 2039, 2049.			230126 Pin—Exhaust Valve Rotocap Retainer 230127 Retainer—Exhaust Valve Rotocap Used on Type Nos. 0038, 0120, 0122, 0124, 0150, 0155, 0156, 0167, 0175, 0178, 0179, 0183, 0197, 0202, 0207, 0219, 0230, 0258, 0316, 0318, 0337, 0403, 0412, 0413, 0427, 0437, 0459, 0469, 0475, 0476, 0477, 0482, 0484, 0507, 0529, 0534, 0541, 0546, 0561, 0574, 0575, 0577, 0579, 0583, 0606, 0620, 0653, 0656, 0665, 0738, 0740, 0747, 0758, 0759, 0786, 0799, 0818, 0831, 0837, 0843, 0849, 0857, 0859, 0860, 0863, 0871, 0875, 0882, 0885, 0886, 0903, 0916, 0919, 0920, 0954, 0959, 0965, 0976, 0979, 0983, 0996, 1005, 1019, 1026, 1029, 1030, 1031, 1037, 1041, 1069, 1073, 1075, 1076, 1078, 1080, 1085, 1087, 1145, 1148, 1172, 1174, 1176, 2015, 2035, 2036, 2038, 2039, 2049.			Note: 297663 Housing—Rewind Starter Used on Type No. 0147.
37	222443	Guard—Flywheel	45	260642	Tappet—Valve	56	295871	Pulley—Rewind Starter (Includes 63" long rope) If longer rope is required, order rope No. 66894 and cut to length.
			46	211117	Gear—Cam			Note: 280117 Pulley—Rewind Starter Used on Type Nos. 0257, 0293, 0294, 0296, 0303, 0367, 1045, 1046, 1047, 1051, 1061, 1062, 1089, 1094.
				Note: 211284 Gear—Cam Used on Type Nos. 0070, 0071, 0117, 0122, 0125, 0126, 0141, 0159, 0208.		57	294303	Spring—Rewind Starter
						58	66884	Rope—Rewind Starter—63" long (For use with Plastic Pulley) If longer rope is required, order rope No. 66894 and cut to length.

*Included in Gasket Set—
Part No. 297615.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
	66564	Rope—Rewind Starter— 63" long. (For use with Metal Pulley) If longer rope is required, order rope No. 66574 and cut to length. 66694 Rope—Rewind Starter Used on Type Nos. 0257, 1045, 1046, 1047, 1051, 1061, 1062, 1089, 1094.	66	298310	Clutch Assy.—Rewind Starter Note: 298798 Clutch Assy.—Rewind Starter Uses: 212132 Housing—Starter Clutch 298799 Ratchet—Rewind Starter 66718 Washer—Thrust Used on Type Nos. 0017, 0018, 0101, 0129, 0130, 0147, 0173, 0181, 0185, 0195, 0196, 0205, 0208, 0221, 0227, 0229, 0233, 0237, 0238, 0239, 0245, 0255, 0259, 0276, 0277, 0283, 0285, 0290, 0298, 0299, 0304, 0307, 0319, 0324, 0333, 0345, 0350, 0351, 0352, 0353, 0355, 0357, 0359, 0389, 0404, 0406, 0409, 0414, 0418, 0419, 0420, 0422, 0424, 0425, 0431, 0438, 0471, 0490, 0501, 0540, 0592, 0598, 0599, 0640, 0641, 0667, 0670, 0676, 0681, 0694, 0737, 0764, 0765, 0776, 0822, 0844, 0862, 0872, 0873, 0877, 0892, 0910, 0964, 0966, 0970, 0972, 0973, 0980, 1006, 1011, 1055, 1088. 211424 Pulley—V-Belt 68428 V-Belt Used between Clutch and Flywheel on Type No. 0147.	67	212131	Housing—Starter Clutch Note: For Specials see Ref. 66.
59	230228	Pin—Starter Grip				67A	261453	Housing—Rewind Starter Clutch For engines with Ring Gear on Flywheel equipped for or with Electric Motor.
60	393152	Grip—Starter Rope				68	63770	Ball—Clutch
61	68848	Bumper—Starter Pulley Note: 68618 Bumper—Starter Pulley Used only with Steel Pulley on Type Nos. 0257, 0293, 0294, 0296, 0303, 0367.				69	66718	Washer—Starter Clutch, Thrust
62	93254	Screw—Pulley Bumper Mounting				70	298436	Ratchet—Rewind Starter Note: For other Specials see Ref. 66. 298799 Ratchet—Rewind Starter 66718 Washer—Thrust 230813 Adapter—Ratchet Spring 260414 Spring—Ratchet Used between Ratchet and Starter Housing. Used on Type No. 0147.
65	93067	Screw—Stamped Steel Housing Mtg. Sem Note: 93572 Screw Cast—Rewind Starter Housing Mounting (Used after Code No. 6909127) 93163 Screw—Rewind Starter Housing Mtg. Sem (Used before Code No. 6909157) 93414 Screw—Rewind Starter Housing Mtg. Sem (4) 92290 Washer—Lock (4) 222060 Spacer (4) Mounted to Blower Housing using 93042 Screw—Sem (8) Used on Type No. 0147.				70A	298799	Ratchet—Rewind Starter Clutch For engines with Ring Gear on Flywheel equipped for or with Electric Motor.
			66A	393117	Clutch Assy.—Rewind Starter For Engines with Ring Gear on Flywheel equipped for or with Electric Motor.	71	221653	Washer—Clutch Retainer Note: 93042 Screw—Sem (4) Used to secure Washer to Clutch Housing on Type No. 0147. 222277 Cover—Hsg. Uses: 93808 Screw (2) to mount Cover to Hsg. Used on Type No. 0358.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
73	221923	Screen—Starter Pulley	86	291730	Cover Assy.—Gear Case			1011, 1013, 1023, 1044, 1070, 1091, 1092, 1099, 1103, 1106, 1122, 1123, 1131, 1155, 1188, 1195, 1196, 1198.		
	Note: 221661	Screen—Starter Pulley	87	19011	Seal—Oil			390161 Carburetor Assembly		
		Used on Type Nos. 0257, 0293, 0294, 0296, 0303, 0367, 1045, 1046, 1047, 1051, 1061, 1062, 1063, 1077, 1089, 1094, 1098, 1101, 1137, 1138.	88	27313	Gasket—Gear Case Cover			Used on Type Nos. 0235, 0245, 0259, 0266, 0267, 0269, 0276, 0278, 0282, 0284, 0285, 0286, 0287, 0288, 0289, 0293, 0294, 0296, 0297, 0299, 0303, 0304, 0305, 0306, 0307, 0308, 0326, 0333, 0344, 0347, 0381, 0385, 0392, 0470, 0478, 0693, 0714, 0724, 0725, 0787, 0884, 0931, 0984, 0987, 1007, 1010, 1074, 1113, 1142, 1179.		
		221748 Screen—Starter Pulley	89	93448	Plug—Oil Drain			392404 Carburetor Assembly		
		Used on Type No. 0147.	90	299437	Carburetor Assembly			Used on Type Nos. 0591, 0592, 0640, 0641, 0667, 0681, 0764, 0862, 0964, 1061, 1062, 1063, 1077, 1098, 1101, 1137.		
74	93490	Screw—Sem		Note: 299576	Carb. Assy.			395587 Carburetor Assembly		
	Note: 93808	Screw—Sem			Used on Type Nos. 0016, 0071, 0076, 0136, 0138, 0140, 0144, 0145, 0147, 0159, 0162, 0173, 0199, 0200, 0203, 0204, 0207, 0209, 0211, 0212, 0214, 0218, 0234, 0236, 0241, 0249, 0260, 0279, 0301, 0313, 0317, 0318, 0331, 0334, 0338, 0346, 0358, 0362, 0365, 0366, 0371, 0375, 0376, 0379, 0387, 0395, 0401, 0402, 0404, 0405, 0412, 0417, 0421, 0434, 0436, 0463, 0473, 0492, 0497, 0498, 0500, 0508, 0510, 0515, 0522, 0531, 0532, 0533, 0535, 0537, 0542, 0547, 0553, 0554, 0556, 0557, 0565, 0571, 0588, 0600, 0601, 0605, 0621, 0601, 0605, 0621, 0622, 0624, 0634, 0638, 0644, 0645, 0646, 0658, 0659, 0682, 0698, 0699, 0705, 0710, 0711, 0712, 0715, 0726, 0733, 0734, 0735, 0757, 0763, 0766, 0778, 0789, 0805, 0806, 0808, 0816, 0821, 0822, 0826, 0844, 0846, 0848, 0851, 0876, 0925, 0928, 0930, 0953, 0955, 0990, 0992,					
		Used to mount Cover for Screen Hole on Type No. 0358.								
75	220865	Washer—Spring								
76	68238	Washer—Ratchet Sealing								
79	290779	Case Assembly—Gear								
80	27667	Gasket—Gear Case								
81	220234	Lock—Screw								
81A	222263	Lock—Screw (3/8" dia. bolt holes)								
	Note: 222929	Lock—Screw (1/4" dia. bolt holes)								
82	91541	Screw—Cap, Hex. Hd.—5/16-24 x 7/8"								
82A	92279	Screw—Cap, Hex. Hd.—5/16-24 x 1-1/2"								
83	211293	Shaft and Gear—Drive								
	Note: 211338	Shaft and Gear—Drive								
		Used on Type Nos. 0765, 1045, 1047.								
		211918 Shaft and Gear—Drive								
		Used on Type Nos. 0350, 0351, 0355, 0420, 0424.								
		211961 Shaft and Gear—Drive								
		Used on Type Nos. 0406, 0431, 0598, 0599.								
84	92617	Plug—Breather								
85	92747	Screw—Gear Case Mounting Sem								
						95	93499	Screw—Throttle Valve to Shaft Sem		
						96	211203	Throttle—Carburetor		
						97	299212	Shaft and Lever—Throttle		
						114	66594	Gasket—Needle Valve Nut		
						116	65978	Packing—Needle Valve		
						117	230590	Nut—Needle Valve		
						118	23433	Valve—Needle		
						120	92290	Washer—Lock No. 10 x 1/16 x 3/64"		
						124	93357	Screw—Hex. Head		
						147	230591	Seat—Needle Valve		

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
148	22235	Washer—Needle Valve (2)	181	392304	Cap—Fuel Tank			392300 Cap—Fuel Tank
149	26336	Spring—Needle Valve		Note:	293270 Cap—Fuel Tank			Used on Type Nos. 0373, 0693.
152	260575	Spring—Throttle Adjustment			0017, 0129, 0237, 0276, 0350, 0351, 0352, 0353, 0357, 0359, 0380, 0406, 0414, 0424, 0425, 0431, 0438, 0444, 0450, 0490, 0495, 0540, 0592, 0598, 0599, 0667, 0670, 0676, 0681, 0764, 0765, 0776, 0862, 0872, 0892, 0964, 0966, 0970, 0972, 0973, 0980.			394818 Cap—Fuel Tank
154	93527	Screw—Machine, Rd. Hd.—5-40 x 5/8"			297863 Cap—Fuel Tank	189	90366	Washer—Lock
163	27660	Gasket—Air Cleaner Mounting			Used on Type Nos. 0017, 0018, 0101, 0129, 0130, 0181, 0185, 0195, 0196, 0205, 0208, 0221, 0227, 0229, 0233, 0237, 0239, 0243, 0255, 0266, 0277, 0283, 0286, 0288, 0290, 0293, 0294, 0296, 0298, 0299, 0303, 0304, 0305, 0306, 0307, 0308, 0326, 0333, 0344, 0347, 0381, 0385, 0392, 0470, 0478, 0693, 0714, 0724, 0787, 0884, 0931, 0984, 0987, 1007, 1009, 1010, 1074, 1113, 1142, 1179.			5/16 x 1/8 x 1/16
163A	270488	Gasket—Air Cleaner Mounting			0391, 0400, 0406, 0409, 0414, 0418, 0419, 0420, 0422, 0424, 0425, 0431, 0438, 0471, 0490, 0492, 0501, 0540, 0598, 0599, 0600, 0605, 0645, 0667, 0670, 0676, 0681, 0694, 0737, 0873, 0877, 0992, 1045, 1046, 1047, 1051, 1055, 1061, 1062, 1063, 1077, 1088, 1089, 1093, 1094, 1098, 1101, 1135, 1137, 1138, 1159, 1175, 1195.	190	93440	Screw—Fuel Tank
165	93856	Wing Nut						Mounting Sem
166	231176	Stud—Air Cleaner				191	*27911	Gasket—Fuel Tank
172	271077	Gasket—Air Cleaner						Mounting (2)
180	297600	Tank Assembly—Fuel				200	221480	Guide—Air
	Note:	390160 Tank Assy.—Fuel				201	261558	Link—Governor
		Used on Type Nos. 0235, 0245, 0259, 0266, 0267, 0269, 0276, 0278, 0282, 0284, 0285, 0286, 0287, 0288, 0289, 0293, 0294, 0296, 0297, 0299, 0303, 0304, 0305, 0306, 0307, 0308, 0326, 0333, 0344, 0347, 0381, 0385, 0392, 0470, 0478, 0693, 0714, 0724, 0787, 0884, 0931, 0984, 0987, 1007, 1009, 1010, 1074, 1113, 1142, 1179.						(Used after Code No. 80052900)
		391422 Tank Assy.—Fuel					Note:	260661 Link—Governor
		Used on Type Nos. 0453, 0463, 0567, 0804.						(Used before Code No. 80053000)
		392380 Tank Assy.—Fuel				202	260678	Link—Throttle
		Used on Type Nos. 0633, 0685, 0709, 0736, 1117.				203	393919	Crank—Bell
		395548 Tank Assy.—Fuel (1 Quart)					Note:	297718 Crank—Bell
	Uses:							(Used before Code No. 79010500)
		395556 Bracket—Control				204	222962	Bushing—Governor
		93105 Screw (Tank to Bracket)						Lever (Flat)
		Used on Type No. 1181.					Note:	For Specials see Ref. 223.
						205	93838	Screw—Shoulder
						206	230149	Nut—Control Rod
							Note:	21772 Nut—Control Rod
								Used on Type Nos. 0241, 0254, 0263, 0370, 0788.
						206A	280012	Nut—Control Rod
						206B	93422	Stopnut—Hexagon
						207	26855	Spring—Control Rod
						208	230737	Rod—Control
							Note:	230946 Rod—Control
								Used on Type Nos. 0075, 0199, 0200, 0209, 0318, 0331, 0334, 0346, 0375, 0376, 0379, 0387, 0395, 0401, 0404, 0412, 0473, 0508, 0510, 0522, 0531, 0533, 0535, 0542, 0556, 0588, 0605, 0645, 0659, 0726, 0735, 0757, 0773.

*Included in Gasket Set—
Part No. 297615.

130200 to 130299

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0846, 0848, 0876, 0930, 0953, 0955, 1013, 1070, 1106, 1122, 1155, 1188. 261297 Rod—Control Used on Type Nos. 0521, 0528, 0530, 0679, 0818, 0838, 0923, 0937, 0941, 0946, 0956, 0961, 1036, 1048, 1049, 1050, 1181.			90597 Screw—Mach., Rd. Hd.—10-32 x 1/2" and 260847 Spring Washer on Type Nos. 0017, 0018, 0130, 1048, 0154, 0158, 0174, 0181, 0184, 0185, 0194, 0196, 0221, 0230, 0233, 0237, 0239, 0247, 0255, 0277, 0281, 0298, 0316, 0324, 0325, 0327, 0336, 0337, 0340, 0350, 0351, 0352, 0353, 0359, 0364, 0406, 0414, 0416, 0418, 0419, 0422, 0425, 0431, 0435, 0438, 0439, 0451, 0458, 0471, 0480, 0481, 0485, 0514, 0520, 0540, 0568, 0573, 0592, 0607, 0608, 0620, 0635, 0636, 0640, 0641, 0649, 0660, 0667, 0681, 0691, 0718, 0731, 0751, 0752, 0776, 0795, 0827, 0855, 0859, 0861, 0862, 0872, 0881, 0914, 0950, 0969, 0978, 0981, 1000, 1012, 1014, 1022, 1024, 1025, 1034, 1041, 1055, 1058, 1062, 1083, 1088, 1089, 1096, 1119, 1127, 1132, 1137, 1138, 1157, 1166, 1170, 1202.			227 393920 Lever Assy.—Governor Note: 297601 Lever Assy.— Gov.—For 3/16" Dia. Crank (Used before Code No. 75060607)
208A	392172	Rod—Control				229	220680	Washer—Governor Lever (Used before Code No. 75120900)
208B	261593	Rod—Control				230	222450	Washer—Governor Lever (1/4" I.D.)
209	260695	Spring—Governor Note: 260902 Spring—Gov. Used on Type Nos. 0721, 0722, 0743, 0777, 1159. 261130 Spring—Gov. Used on Type No. 0983, 1126.					221559	Washer—Governor Lever (3/16" I.D.)
216	299859	Link—Choke (Includes Bell Crank)				231	93064	Screw—Sem
216A	391899	Rod—Choke				232	260478	Spring—Governor Link
216B	392405	Rod—Control				233	230253	Stop—Control Rod
216C	231093	Link—Choke				234	220730	Clip—Control Rod
216D	261592	Rod—Choke				256	299859	Crank—Bell (Includes Choke Link)
216E	394562	Hand Choke Assy.				256A	222582	Lever—Choke
216F	261591	Rod—Choke				257	93543	Screw—Fil. Hd. Sem
217	260189	Spring—Choke Link				257A	90746	Screw—Fil. Hd. Sem
217A	261331	Spring—Control Rod				265	221535	Clamp—Casing
218	221198	Washer—Choke Link				265A	222629	Bracket—Cable Clamp
219	391737	Gear—Governor (Used after Code No. 75060507) Note: 297656 Gear—Gov. (Used before Code No. 75060607)				267	93496	Screw—Sem Note: 93686 Screw—Self Tapping Used on Type Nos. 0633, 0685, 0709, 0736, 0830, 1117.
220	221551	Washer—Thrust				267A	93543	Screw—Sem
223	221517	Lever—Governor Control Note: 230943 Bushing— Governor Lever (with 1/2" dia. Flange) Used with 93440 Screw—Sem and 93569 Spring Washer Or: 23688 Bushing— Governor Lever (with 3/8" dia. Flange) Used with	224	93491	Rivet—Governor Control Lever Mounting Note: 93495 Rivet—Governor Control Lever Mtg. Used with 221517 Lever, 222597 Lever—Adapter and 230852 Bushing on Type Nos. 0633, 0685, 0709, 0736, 0766, 0830, 1009. For other Specials see Ref. 223.	268	66986	Casing—Control Wire— 48" long Note: If longer casing is needed, specify length in inches; if a shorter casing is needed order No. 66986 and cut to required length.
						269	26099	Wire—Control 54" long Note: If longer wire is needed specify length in inches; if shorter wire is needed order No. 26099 and cut to required length.
						270	63426	Locknut—Control Wire Casing
						271	290568	Lever Assy.—Control

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
280	221384	Strap—Control Rod	299	393368	Muffler—Exhaust (Round Lo-Tone)			0252, 0253, 0259, 0261, 0266, 0269, 0272, 0275, 0284, 0285, 0288, 0289, 0294, 0297, 0305, 0318, 0322, 0334, 0341, 0375, 0381, 0415, 0555. 297506 Muffler—Exh. (Direct Outlet) Used on Type Nos. 0015, 0040, 0125, 0126, 0129, 0135, 0136, 0140, 0141, 0142, 0143, 0153, 0155, 0159, 0172, 0188, 0196, 0201, 0205, 0235, 0237, 0243, 0255, 0271, 0273, 0286, 0295, 0296, 0299, 0301, 0306, 0307, 0308, 0323, 0330, 0344, 0350, 0351, 0353, 0354, 0357, 0358, 0361, 0364, 0369, 0371, 0373, 0374, 0376, 0377, 0382, 0384, 0385, 0391, 0398, 0405, 0413, 0414, 0417, 0425, 0426, 0434, 0436, 0444, 0459, 0468, 0474, 0476, 0483, 0490, 0500, 0526, 0558, 0601, 0607, 0608, 0620, 0625, 0639. 390578 Muffler—Exh. Used on Type Nos. 0338, 0465, 0498. 391060 Muffler—Exh. Used on Type Nos. 0133, 0200.
	Note:	230944 Guide—Control Rod Used in 221384 Strap on Type Nos. 0015, 0023, 0024, 0025, 0035, 0036, 0037, 0049, 0070, 0268, 0270, 0460, 0461, 0462, 0487, 0489, 0536, 0563, 0566, 0586, 0616, 0617, 0688, 0700, 0719, 0720, 0732, 0753, 0774, 0785, 0824, 0828, 0829, 0837, 0874, 0896, 0901, 0919, 0960, 1012, 1020, 1095, 1125, 1158, 2015, 2035, 2036, 2039, 2049.		Note:	393010 Muffler—Exhaust Uses: 91464 Exhaust Elbow—90° Street Used on Type Nos. 0149, 0169, 0368, 0479, 0603, 0636, 0642, 0655, 0791, 1084. 393010 Muffler Only Used on Type No. 1201.			
		390341 Strap—Control Rod Used on Type Nos. 0148, 0154, 0158, 0160, 0174, 0184, 0194, 0230, 0247, 0281, 0316, 0325, 0327, 0336, 0337, 0340, 0364, 0416, 0422, 0435, 0439, 0451, 0458, 0471, 0480, 0481, 0485, 0514, 0520, 0568, 0573, 0607, 0608, 0620, 0635, 0636, 0649, 0660, 0691, 0718, 0731, 0751, 0752, 0795, 0827, 0855, 0859, 0861, 0881, 0914, 0950, 0969, 0978, 0981, 1000, 1014, 1022, 1024, 1025, 1034, 1041, 1058, 1083, 1096, 1119, 1127, 1132, 1157, 1166, 1170, 1202.	300	393615	Muffler—Exhaust Note: Parts furnished by equipment manufacturer: 222595 Shield—Heat Used on Type No. 0600.			
			300A	391313	Muffler—Exhaust Note: 391232 Guard—Muffler Uses: 93415 Screw (Guard and Retainer Mounting) 93606 Screw (Guard to Muffler Mounting) 222379 Retainer—Muffler 222361 Brace—Muffler Used on Type Nos. 0562, 0569, 0589, 0693, 0842, 0879.			
			300B	392101	Muffler—Exhaust (25 Super Lo-Tone)			
			300C	297274	Muffler—Exhaust (Side Outlet) Note: 89953 Muffler—Exhaust Used on Type Nos. 0316, 0349, 0407, 0587, 0675. 222291 Guard—Muffler (Mounted to Cylinder Head) Used on Type Nos. 0200, 0557. 294599 Muffler—Exh. Used on Type Nos. 0137, 0167, 0179, 0192, 0207, 0222, 0225, 0231, 0238, 0242, 0245, 0246,			
298	261409	Locknut—Muffler				300D	391435	Muffler—Exhaust
						303	91464	Elbow—Exhaust, 90° Street Note: 91219 Elbow—Exhaust, 45° Street Used on Type Nos. 0246, 0266, 0313, 0316, 0341, 0375, 0400, 0415, 0465, 0479, 0542, 0555, 0587, 0636, 0637, 0655, 0675, 0738, 0791, 1084.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	299410	Housing—Blower			0418, 0419, 0424,			Note: 29693 Plug—Spark
	Note: 297855	Housing—Blower			0425, 0438, 0490,			2" High—51 M.M.
		Used on Type Nos.			0540, 0598, 0676,			293918 Plug—Spark
		0243, 0244, 0250,			0694, 0765, 0776,			1-1/2" High—
		0274, 0275, 0293,			0872, 0873, 0966,			37 M.M. (Resistor
		0294, 0296, 0310,			0970, 0972, 0973,			Type)
		0367.			0980.			392588 Plug—Spark
	298572	Housing—Blower			392173 Housing—Blower			2" High—51 M.M.
		Used on Type Nos.			Used on Type Nos.	340	26018	(Resistor Type)
	Uses:				0640, 0667, 0681.	341	93381	Spring—Breaker Arm
	222060	Spacer Starter Housing to Blower Housing	305	93158	Screw—Blower Housing Mounting	342	65704	Screw—Breaker Arm Mounting Sem
	93042	Screw—Spacer Mounting	306	221511	Shield—Cylinder	344	93042	Plunger—Breaker Point
		Used on Type No. 0147.		Note: 222583	Shield—Cyl. Used on Type Nos.	345	220366	Screw—Condenser Clamp Mounting Sem
	299487	Housing—Blower			0592, 0640, 0641,			Cover—Breaker Point and Condenser
		Used on Type Nos.			0647, 0764, 0862,			Note: 222168 Cover—Breaker
		0017, 0129, 0130,			0964.			Point and Condenser
		0181, 0185, 0196,			223110 Shield—Cyl. Used on Type Nos.			Used on Type Nos.
		0205, 0208, 0221,			1061, 1062, 1063,			0017, 0018, 0101,
		0227, 0229, 0233,	307	93042	1077, 1098, 1101,			0129, 0130, 0181,
		0237, 0239, 0255,			1137.			0185, 0196, 0205,
		0277, 0283, 0290,						0208, 0221, 0227,
		0298, 0319, 0324,						0229, 0233, 0237,
		0350, 0355, 0357,	308	221512	Screw—Cylinder Shield Mounting Sem			0239, 0255, 0277,
		0359, 0389, 0414,		Note: 222291	Cover—Cylinder Head			0283, 0290, 0298,
		0420, 0431, 0501,			Guard—Muffler (Mounted to Cylinder Head)			0319, 0324, 0345,
		0599, 0670, 0737,			Used on Type No. 0200.			0350, 0351, 0352,
		0892.	309					0353, 0355, 0357,
	390658	Housing—Blower			Motor—Starting			0359, 0389, 0406,
		Used on Type Nos.			See Chart on Page 7 for Replacement Parts for Starting Motors			0409, 0414, 0418,
		0025, 0119, 0121,						0419, 0420, 0422,
		0123, 0358, 0361,	325	299421	Starter Pulley with Screen			0424, 0425, 0431,
		0373, 0388, 0391,		Note: 221082	Pulley—Starter			0438, 0471, 0490,
		0392, 0400, 0402,			Used on Type No. 0427.			0501, 0540, 0592,
		0411, 0417, 0427,						0598, 0599, 0667,
		0436, 0450, 0483,	330	69932	Rope—Starter			0670, 0764, 0765,
		0493, 0496, 0511,	331	220865	Washer—Flywheel			0776, 0822, 0844,
		0539, 0554, 0592,	332	92284	Nut—Flywheel			0862, 0872, 0877,
		0660, 0725, 0733,	333	298316	Armature—Magnet			0892, 0910, 0964,
		0764, 0782, 0802,	334	93613	Screw—Armature Mounting Sem (2)			0966, 0970, 0972,
		0862, 0964, 0971,						0973, 0980, 1006,
		1023, 1140, 1198.	335	93414	Screw—Armature Mtg. Sem			1011, 1045, 1046,
	390884	Housing—Blower						1047, 1051, 1055,
		Used on Type Nos.	337	298809	Plug—Spark 1-1/2" High—37-42 M.M.			1061, 1062, 1063,
		0345, 0351, 0352,						1077, 1088, 1089,
		0353, 0406, 0409,						1093, 1098, 1101,
								1137, 1138, 1175.
						346	93705	Screw—Sem

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
347	220884	Switch—Stop (For 1-1/2" High— 37 & 42 M.M. Spark Plugs)			0715, 0725, 0742, 0780, 0785, 0790, 0802, 0841, 0842, 0852, 0871, 0884, 0886, 0897, 0912, 0927, 0931, 0954, 0965, 0981, 0982, 0984, 0986, 0987, 0988, 0994, 0996, 1007, 1010, 1014, 1015, 1027, 1048, 1053, 1056, 1072, 1074, 1080, 1112, 1113, 1129, 1137, 1138, 1142, 1164, 1179.	392A	260847	Spring—Choke Friction
	Note:	221808 Switch—Stop (For 2" High—51 M.M. Spark Plugs)				394	270026	Diaphragm
		298927 Switch—Stop Used with 22963 Washer on Type No. 0731, 0751, 0752, 0827, 0855.				409	299837	Lever-Trol—Speed Control
		390785 Switch—Stop Used with 22963 Washer on Type Nos. 0219, 0272, 0286, 0383, 0529, 0570, 0583, 0683, 0702, 0745, 0785, 0809, 0834, 0838, 0907, 0923, 0941, 0965, 0999, 1059, 1107, 1124, 1135, 1159, 1181, 1185, 1197, 2015, 2035, 2036, 2038, 2039, 2049.			392074 Wire—Ground Used on Type Nos. 0576, 0598, 0599, 0645, 0676, 0678, 0702, 0734, 0764, 0765, 0938, 0957, 0964, 0966, 0970, 0972, 0973, 1017, 1045, 1046, 1047, 1077, 1088, 1089, 1098, 1114, 1125, 1141, 1158, 1175, 1180.	414	220982	Washer
351	93735	Screw—Terminal				423	93410	Screw—Sem
352	66068	Washer				432	221377	Cap—Spring
353	92791	Washer—Lock— Shakeproof (3)	357	91539	Key	432A	221766	Cap—Choke Spring
354	90576	Nut—Hex.—8-32	358	297615	Gasket Set	433	93265	Pin—Diaphragm Cover
355	66554	Washer—Insulating	362	291630	Shield—Spark Plug (with Stop Switch)	434	210959	Cover—Diaphragm
356	299500	Wire—Ground		Note:	89742 Shield—Spark Plug Used on Type Nos. 0466, 0482, 0661, 0669, 0773, 0779, 0783, 0800, 0832, 0886, 0904, 1129.	435	93141	Screw—Diaphragm Cover
	Note:	391115 Wire—Ground Used on Type Nos. 0326, 0330, 0347, 0354, 0372, 0373, 0380, 0385, 0386, 0388, 0391, 0400, 0410, 0411, 0417, 0427, 0429, 0433, 0434, 0436, 0444, 0450, 0466, 0467, 0468, 0474, 0476, 0477, 0482, 0483, 0486, 0495, 0496, 0503, 0518, 0525, 0570, 0572, 0574, 0575, 0582, 0585, 0586, 0590, 0595, 0609, 0618, 0623, 0627, 0656, 0665, 0669, 0693, 0694,	363	19069	Flywheel Puller (Optional Accessory)	445	392308	Cartridge—Air Cleaner
			372	220477	Clamp—Condenser	446	222844	Base—Air Cleaner
			373	92987	Nut—Hex.	447	93913	Screw—Air Cleaner
			375	294628	Breaker Points and Condenser Set	454	296178	Housing—Fuel Pipe Screen (for 3/16" O.D. Pipe)
				Note:	299061 Ignition Kit Includes: 294628 Set 65704 Plunger 61760 Key—Flywheel	467	212293	Knob—Air Cleaner
			383	89838	Wrench—Spark Plug	467A	391908	Knob—Choke Rod
			392	260455	Spring—Fuel Pump Diaphragm	473	93475	Screw—Sem
						474	394173	Stator Assembly— Alternator
						474A	390410	Alternator Assembly Note: 391052 Alternator Assy. Used on Type Nos. 0373, 0391, 0392, 0400, 0450, 0483, 0496.
						481	230970	Bushing—Stator
						482	93639	Screw—Alternator Armature Mounting
						506	90200	Screw—Machine, Fil. Hd.—8-32 x 1/2"
						507	66895	Insulator
						516	260374	Spring—Connector
						520	93722	Terminal—Spade
						521	298529	Shielding—Ignition Cable
						523	297357	Cap and Dipstick—Oil Filler
						524	65304	Gasket—Oil Filler Cap
						525	91258	Nipple—Oil Filler Note: Use 394884 Adapter Oil Filler with Nipple.
						526	93343	Screw—Tank Bracket Mounting Sem
						527	221514	Clamp—Breather Tube
						528	230722	Tube—Breather

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
529	67838	Grommet—Breather Tube		280025	Cup—Air Cleaner	612	296811	Pipe—Fuel
533	230149	Knob—Control Rod Uses: 93384 Nut—Hex.			Used on Type Nos. 0204, 0241, 0248, 0254, 0300, 0314.	613	93935	Screw—Hex. Hd. Shoulder Note: 93549 Screw—1/4-20 Hex. Hd.
534	93322	Screw—Air Cleaner Note: 230741 Stud—Air Cleaner 92067 Nut—Wing Used on Type Nos. 0204, 0241, 0248, 0254, 0300, 0314, 0348, 0356, 0370, 0378, 0403, 0422, 0442, 0452, 0471, 0472, 0480, 0481, 0484, 0505, 0560, 0661, 0668, 0687, 0691, 0701, 0767, 0788, 0914, 0936.	538	390756	Rod—Control	613A	93704	Screw—Muffler Mtg.
534A	93825	Screw—Air Cleaner	538A	299545	Rod—Control	613B	93377	Screw—Muffler Mtg.
535	27987	Element—Air Cleaner Note: 270209 Element—Air Cleaner Used on Type Nos. 0204, 0241, 0248, 0254, 0300, 0314. 390492 Element—Air Cleaner Uses: 390588 Cover—Air Cleaner 221969 Support—Air Cleaner 270730 Gasket—Air Cleaner Used on Type Nos. 0348, 0356, 0370, 0378, 0403, 0422, 0442, 0452, 0471, 0472, 0480, 0481, 0484, 0505, 0560, 0661, 0668, 0687, 0691, 0701, 0767, 0788, 0914, 0936.	539	221372	Clip—Control Rod	614	93306	Cotter—Hair Pin
			539A	93784	Clamp—Choke Rod	615	93307	Retainer—E-Ring
			541	22398	Washer	616	231077	Crank—Governor (1/4" Dia.) (Used after Code No. 75060507) Note: 230723 Crank—Gov. (3/16" Dia.) (Used before Code No. 75060607)
			542	92265	Screw			
			549	271118	Washer—Air Cleaner	621	297472	Switch—Stop
			549A	270978	Washer	624	390383	Crank—Bell (Includes Bell Crank Link) Note: 222476 Crank—Bell Used on Type Nos. 0521, 0528, 0530, 0679, 0818, 0838, 0923, 0937, 0941, 0946, 0956, 0961, 1036, 1048, 1049, 1050, 1181.
			552	231079	Bushing—Governor Crank (1/4" I.D.) (Used after Code No. 75060507) Note: 230732 Bushing—Gov. Crank (3/16" I.D.) (Used before Code No. 75060607)	626	230749	Spacer—Governor Crank
						629	261094	Spring—Throttle Return Note: 261137 Spring— Throttle Return Uses: No. 222268 Connector between Lever on Tank Bracket and Control Wire. Used on Type Nos. 0343, 0354, 0372, 0380, 0391, 0400, 0410, 0411, 0444, 0450, 0474, 0483, 0495, 0496, 0897, 0988, 0997.
			562	92613	Bolt—Governor Lever			
			592	231082	Nut—Hex.—10-24	630	222597	Lever—Adapter
			608	390463	Starter Assy.—Rewind Note: 297259 Str. Assy.— Rewind Used on Type Nos. 0222, 0257, 0267, 0269, 0303. 298573 Starter Assy.— Rewind (Cast Hsg.) Used on Type No. 0147.	631	230852	Bushing
						634	270167	Washer, Throttle Shaft (Felt)
			608A	297372	Starter Assy.—Rewind (10 o'clock position) Note: 394475 Starter Assy.— Rewind (10 o'clock) Used on Type Nos. 1045, 0146, 1047, 1051, 1089, 1094, 1138, 1175. 394490 Starter Assy.— Rewind (3 o'clock) Used on Type Nos. 1061, 1062, 1063, 1077, 1098, 1101, 1137.			
535A	270979	Element—Air Cleaner	609	260694	Spring—Throttle Link			
536	297036	Cleaner Assembly—Air Note: 299593 Cleaner Assy.—Air Uses: 221969 Support—Air Cleaner	611	391813	Fuel Pipe and Clip Assembly Note: 297219 Pipe—Fuel (1 Quart) Used on Type No. 1181.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
635	66538	Elbow—Spark Plug	682	211516	Shield—Clutch			Uses:
	Note:	392273 Elbow—R.F. Suppressor (only used with Spark Plug 29693) Used on Type No. 0989.	712	223140	Guard—Ring Gear (With One Tab for 1-5/8" Cut Out in Blower Housing)			280092 Sealing Strip Used between Hood and Blower Housing
638	93713	Washer—Lock		Note:	222279 Guard—Ring Gear (With Two Tabs for 1-1/8" Cut Out in Blower Housing)			393201 Wire & Terminal Assy. (Key Switch)
642	222626	Cover—Air Cleaner						392755 Key Switch Assembly (Furnished by Equipment Manufacturer)
643	221321	Cup—Air Cleaner	725	221885	Shield—Heat			93836 Lockwasher (Key Switch Assy.) (Furnished by Equipment Manufacturer)
643A	222845	Cup—Air Cleaner		Note:	Heat Shield 222595 Used on Type No. 0600 are furnished by the equipment manufacturer.			93837 Nut—Hex. (Key Switch Assy.) (Furnished by Equipment Manufacturer)
643B	222594	Cup—Air Cleaner	729	270723	Tie—Rectifier Wire			Used on Type No. 0776.
645	23513	Bushing—Plunger	729A	93708	Clip (Used to retain Ground Wire lead to Cylinder Rib)	731A	394410	Hood—Snow
655	222598	Anchor—Spring (Used after Code No. 73061011)				733	93518	Screw—Hood
	221014	Anchor—Spring (Used before Code No. 73061111)				733A	93977	Screw—Hood
665	298858	Oil Minder	731	299419	Hood—Snow	735	390900	Cord—Starter (Includes Switch)
670	261065	Spacer—Armature		Note:	390870 Hood—Snow	779	390383	Link—Bell Crank (Includes Bell Crank)
676	393757	Deflector—Exhaust (Side Outlet)			Uses:	780	222101	Anchor—Spring
	Note:	393761 Deflector—Exhaust (Side Outlet) Used on Type Nos. 0780, 0800. For Spark Arrestor Assy. Use No. 392193 on Type Nos. 0719, 0879, 0901, 0978, 1146, 1166, 1185, 1194, 1202, 2015, 2035, 2036, 2038, 2049. For Spark Arrestor Assy. Use No. 392195 on Type Nos. 0453, 0691, 0795, 0802, 0845, 0886.			391173 Hood—Snow		Note:	222267 Anchor—Spring
		393760 Deflector—Exhaust (Side Outlet) Used on Type No. 1123.			Uses:			93496 Screw for Mounting to Tank Bracket. Used on Type No. 0343, 0354, 0372, 0380, 0391, 0400, 0410, 0411, 0444, 0450, 0474, 0483, 0495, 0496, 0897, 0988, 0997.
676A	393759	Deflector—Exhaust (Direct Outlet)			222339 Strap—Support	809	390414	Rectifier—Alternator
676B	393758	Deflector—Exhaust (Louvered)			92656 Stud—Strap to Crankcase Cover		Note:	391051 Housing Assy. Used on Type Nos. 0373, 0391, 0392, 0400, 0450, 0483, 0496.
676C	221488	Deflector—Exhaust (Side Outlet)			93490 Screw—Strap to Hood	823	93712	Screw—Socket Head
676D	221527	Deflector—Exhaust (Direct Outlet)			92278 Nut—Hex. (1)	851	221798	Cable Terminal—Ignition
681	299060	Needle Valve Kit			90832 Washer—Lock (2) Used on Type No. 0501.			
					393198 Hood—Snow (Key Switch)			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
852	392368	Cleaner Group—Air Note: For Dual Element Air Cleaner Kit Order No. 393018.	870	211172	Seat—Exhaust Valve (Standard) Note: For Options see Repair Manual	878	393422	Alternator Harness Assembly
854	392884	Bracket Assembly— Stop Switch	871	63709	Guide—Exhaust Valve	883	270918	Gasket—Muffler
869	211787	Seat—Intake Valve (Standard)	877	393854	Diode and Connector Assembly	905	394510	Shield—Sno Gard
						905A	394511	Shield—Sno Gard
						915	222933	Liner—Port