Illustrated Parts List Model Series 134200 to 134299

TYPE NUMBERS 0114, 1114, 1115, 1118, 1119.


TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

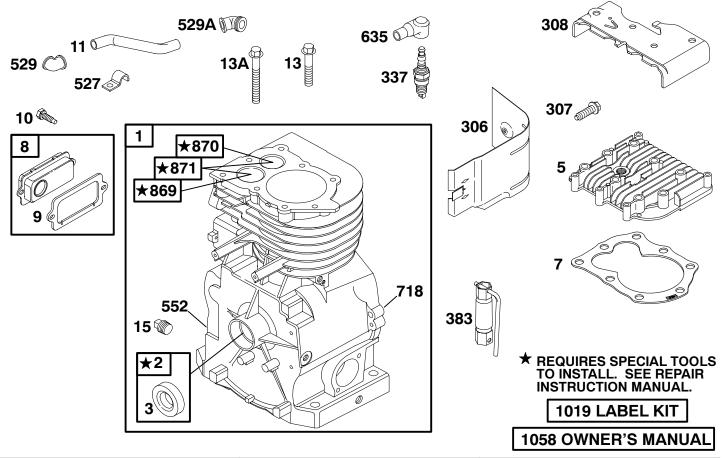


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1 2 3 5 7 9 10 11 13	399268 *299819 214040 272157 495774 * 27549 691666	(Breather Assembly) Tube-Breather	13A 15 306 307 308 337 383 527 529 529A 552 635 718	694514 94680 691193 802592 89838 223786 67838 66578 690508	(Cylinder Head) (21/2" Long) Plug-Oil Shield-Cylinder Screw (Cylinder Shield) Cover-Cylinder Head Sparkplug Wrench-Sparkplug Clamp-Tube Grommet (90 Degree) Grommet (120 Degree) Bushing-Governor Crank	869 870 871 1019 1058	263094 262001 491102	Seat-Valve (Intake) Seat-Valve (Exhaust) Bushing-Valve Guide (Exhaust Valve) Note 63709 Bushing-Valve Guide (Intake Valve) Kit-Label Owner's Manual (Emission Engine) Note 272646 Owner's Manual (Non Emission Engine)

[★] Included in Engine Gasket Set-Ref. 358.

 • Included in Carburetor Overhaul Kit-Ref. 121.






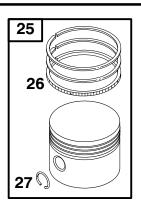


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	393819	Piston Assembly (Standard) Note 393820 Piston Assembly (.010" O.S.) 393821 Piston	26	399067	Ring Set (Standard) Note 399014 Ring Set (.010" O.S.) 399015 Ring Set (.020" O.S.)	27 28		Lock-Piston Pin Pin-Piston (Standard) Note 298908 Pin- Piston (.005" O.S.)
		Assembly (.020" O.S.) 393822 Piston Assembly (.030" O.S.)			399016 Ring Set (.030" O.S.)	29		Rod-Connecting (Standard) Note 390459 Rod- Connecting (.020" Undersize)
						30	225183	Dipper-Connecting Rod
						32	94699	

Included in Engine Gasket Set-Ref. 358.
Included in Carburetor Overhaul Kit-Ref. 121.

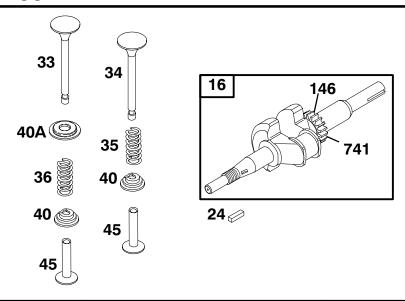


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16 24 33 34	222698 211119	Crankshaft Key-Flywheel Valve-Exhaust Valve-Intake	36 40	93312	Spring-Valve (Exhaust) Retainer-Valve (Intake/Exhaust) Retainer-Valve	45 146 741	94388	Tappet-Valve Key-Timing (Used With Timing Gear 262992) Gear-Timing
35		Spring-Valve (Intake)	40A	225257	Retainer-Valve (Exhaust)	741	262992	Gear-Timing (Uses Woodruff Key)
		no Cooket Cot Def 250						alat Sat. Daf. 1005

Included in Engine Gasket Set-Ref. 358.
Included in Carburetor Overhaul Kit-Ref. 121.

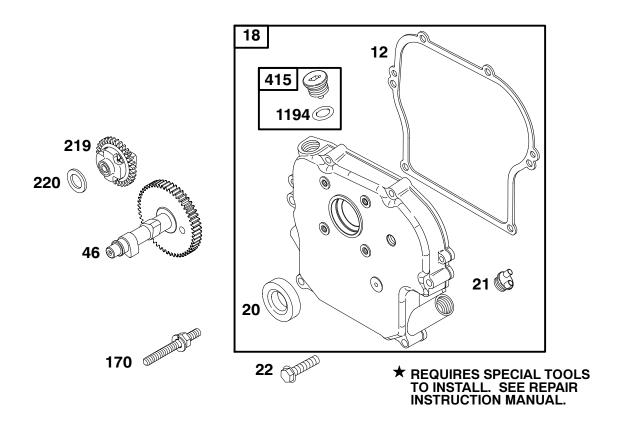

RE NO	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Gasket-Crankcase (.015", Standard) Note *270125 Gasket- Crankcase (.005") *270126 Gasket- Crankcase (.009")	NO. 18 20 21	694350 *294606	Cover-Crankcase (Used After Code Date 99031400) Note 494044 Cover- Crankcase (Used Before Code Date 99031500).	46 170 219 220 415 1194	691129 691164 691120 494845 221551 691363	Screw (Crankcase Cover) Camshaft Stud (Crankcase Cover) Gear-Governor Washer (Governor Gear)

Included in Engine Gasket Set-Ref. 358.
Included in Carburetor Overhaul Kit-Ref. 121.

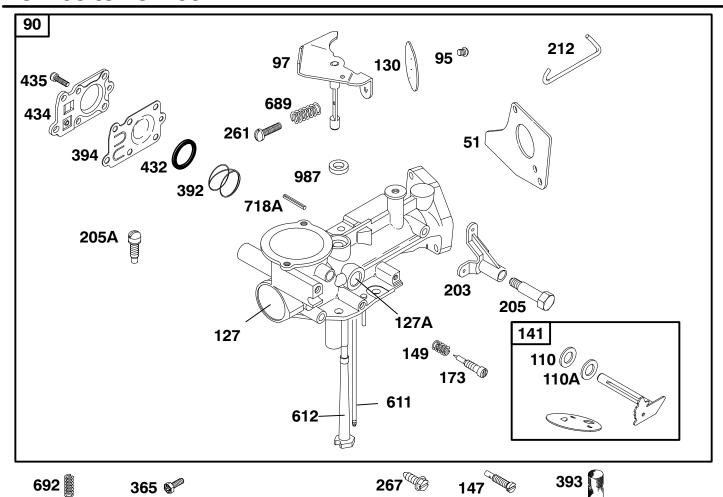


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	⋆•273113	Gasket-Intake	147	691250	Jet-Pilot	392	262328	Spring-Pump
		(2 Required)			(Standard)			Diaphragm
90	498298	Carburetor			Note	393	691213	Screen-Carburetor
		Note			692725 Jet-Pilot	394	●272538	Diaphragm-Carbureto
		495426 Carburetor			(High Altitude)	432		Cap-Spring
		Used on Type No(s).	149	26336	Spring-Needle Valve	434		Cover-Diaphragm
		0114.	173	231533	Valve-Idle Mixture	435		Screw
95	93499	Screw	203	280720	Crank-Bell			(Diaphragm Cover)
		(Throttle Valve)			(Standard, Nylon)	611	231068	Pipe-Fuel
97	497600	Shaft-Throttle	205	231520	Screw	612		Tube-Pick-Up
110		Washer			(Bell Crank, 1 3/32"	V		(Uses Clip Spring)
	2.0002	(Choke Shaft, Felt)	_		Long)	689	260575	
110A	690401	Washer	205A	690320	Screw	000	200010	(Idle Screw)
'''	030401	(Choke Shaft, Brass)			(Bell Crank, 5/8" Long)	692	690572	` '
127	220352	•	212	262270	Throttle Link	718A	690296	. •
'2'	220352	(1 1/16" Diameter)	261	93527	Screw	/ IOA	090290	(Pump Cover)
1074	002700	,			(Control Side)	987	605072	Seal-Throttle Shaft
127A	223789	Plug-Welch	267	691082		987	695273	
		(3/64" Diameter)			(Casing Clamp)			(5/16" Thick)
130	223793	Valve-Throttle	365	94913				
141	497230	Kit-Choke Shaft			(Carburetor)			

Included in Engine Gasket Set-Ref. 358.
 Included in Carburetor Overhaul Kit-Ref. 121.

Included in Valve Overhaul Gasket Set-Ref. 1095.


Assemblies include all parts shown in frames.


2Q-7/2000

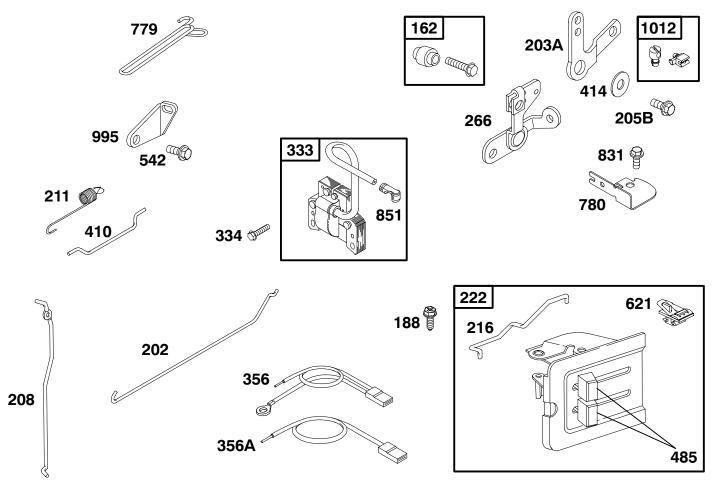


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
162	690503	Collar-Bell Crank Note 490589 Collar-Bell	222 266	490649 691414	Bracket-Control (Panel) Control-Throttle	410 414		Link-Control Washer (Bell Crank)
		Crank Used on Type No(s). 0114.	333	307359	(Remote Governor/ Idle) Armature-Magneto	485 542		Knob-Control (Slide) Screw
188	94924	Screw (Control Bracket)	334	93414	Screw			(Link Bracket)
202	262280	Link-Mechanical Governor	356	398808	(Magneto Armature) Wire-Stop	621 779	262570	Switch-Stop Link-Bell Crank
203A	223813	Crank-Bell (Steel)			(2 Wire, Ring Terminal, Bare Wire End and	780 831	691211 691099	
205B	94897	Screw (Bell Crank)			Insulated Male Blade Terminal)	851		(Spring Anchor) Terminal-Sparkplug
208 211	262279 263031	Rod-Governor Control Spring-Governed Idle	356A	692390	Wire-Stop (1 Wire, Bare Wire End	995 1012		Bracket-Link Retainer-Link
216	262359	Link-Choke (Manual)			and Insulated Male Blade Terminal)			

★ Included in Engine Gasket Set-Ref. 358.• Included in Carburetor Overhaul Kit-Ref. 121.

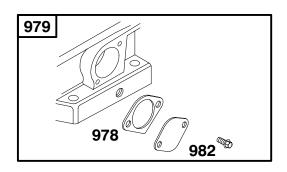

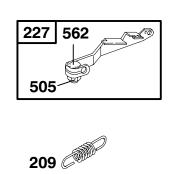

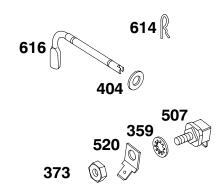


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	262282	Spring-Governor (Red)	227	690653	Lever-Governor Control	520 562	691084 691119	Terminal-Ground Bolt
		Note 262948 Spring-	359	691077	Washer (Ground Terminal)			(Governor Control Lever)
		Governor (Silver)	373	90576	Nut (Ground Terminal)	614 616		Pin-Cotter Crank-Governor
		Used on Type No(s). 1114, 1118, 1119.	404	94927	Washer (Governor Crank)	978 979		Gasket-Oil Gard® Cover-Oil Gard®
		262283 Spring-Governor	505	691251	Nut (Governor Control	982	690351	Screw (Oil Gard® Cover, 1/2"
		(Black) Used on Type No(s). 0114.	507	398525	Lever) Insulator			Long)

Included in Engine Gasket Set-Ref. 358.
Included in Carburetor Overhaul Kit-Ref. 121.

Included in Valve Overhaul Gasket Set-Ref. 1095.


Assemblies include all parts shown in frames. 8

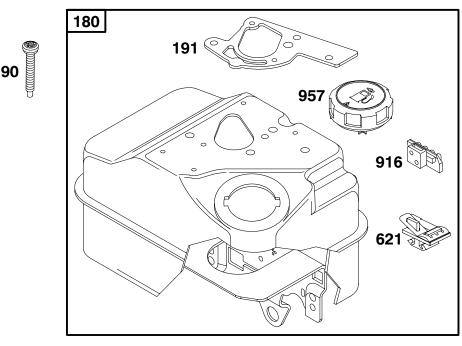


1	q	0 /	7	Ñ	
ı	9	UF	١	V)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
180 190	NO. 495405	DESCRIPTION Tank-Fuel (3 Quart) Screw (Fuel Tank, 1 5/8" Long)	NO. 190A	NO. 94914 *•272489	DESCRIPTION Screw (Fuel Tank, 5/8" Long) Gasket-Fuel Tank Switch-Stop		NO. 280321	DESCRIPTION Rack-Governor Gear Cap-Fuel Tank (Plastic)

<sup>Included in Engine Gasket Set-Ref. 358.
Included in Carburetor Overhaul Kit-Ref. 121.</sup>

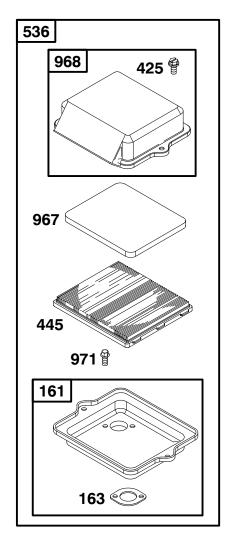


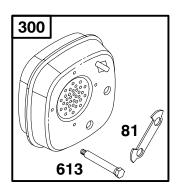



REF.	PART		REF.	PART		REF.	PART	
NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION	NO.	NO.	DESCRIPTION
81 161		Lock-Muffler Screw Base-Air Cleaner	445	491588	Cartridge	677		Screw (Muffler Deflector)
		Gasket-Air Cleaner	536	494279		967		Filter-Pre Cleaner
300	494585		613	93935	Screw	968		Cover-Air Cleaner
425	490073	(Air Cleaner Cover)			(Exhaust Muffler, 2 1/4" Long)	971	94902	Screw (Air Cleaner Base)
		(All Cleaner Cover)	676	393757	Deflector-Muffler			(All Oleaner Dase)


Included in Engine Gasket Set-Ref. 358.
Included in Carburetor Overhaul Kit-Ref. 121.

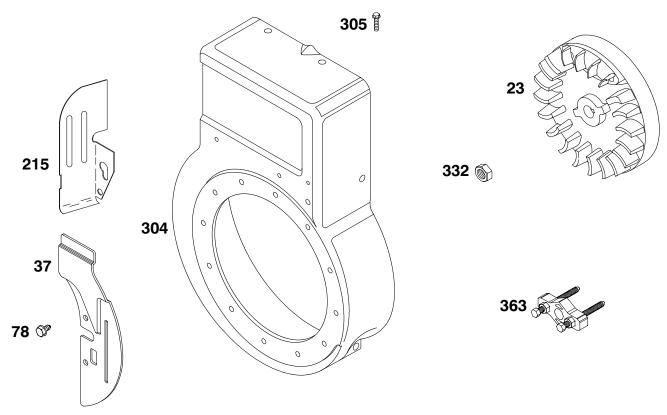

1036 EMISSIONS LABEL


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23 37 78 215	222443 94680	Flywheel Guard-Flywheel Screw (Flywheel Guard) Guide-Air	304	495759	Housing-Blower (Black) Note 691410 Housing- Blower (Red)	1036	695100	Label-Emissions (Used After Code Date 9909300) Note 694517 Label- Emissions
			305 332	94786 94877	Screw (Blower Housing)			(Used Before Code Date 99100100 and After Code Date
			363	19069	(Flywheel) Flywheel Puller			98123100). 499345 Label- Emissions (Used Before Code Date 99010100).


<sup>Included in Engine Gasket Set-Ref. 358.
Included in Carburetor Overhaul Kit-Ref. 121.</sup>

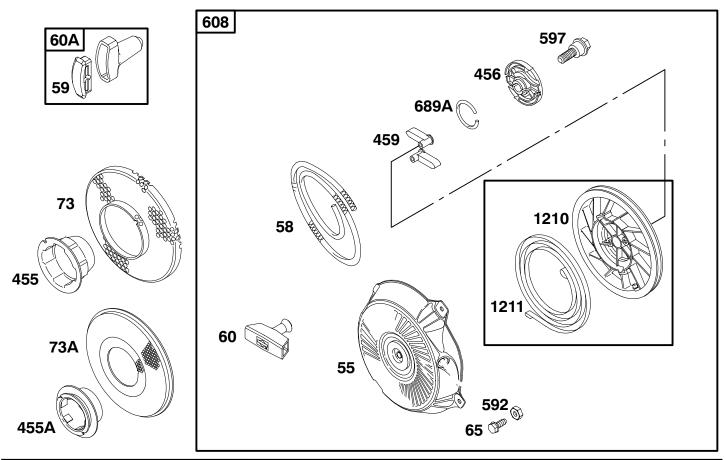


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691421	Housing-Rewind	73A	691226	Screen-Rotating	592	94908	Nut
		Starter			(Without Ring)			(Rewind Starter)
58	691921	Rope-Starter			(Used After Code Date	597	94943	Screw
		(Cut To Required	455	601010	95010800).	600	407020	(Pawl Friction Plate) Starter-Rewind
59	396892	Length) Insert-Grip	455	691219	Cup-Flywheel (With Ring)	608 689A		Spring-Friction
60		Grip-Starter Rope			(Used After Code Date	0037	200070	(Ratchet Pawl)
60A		Grip-Starter Rope			95020300).	1210	498144	` '
65		Screw	455A	691426	Cup-Flywheel			Assembly
		(Rewind Starter)			(Without Ring)			(Pulley)
73	691225				(Used After Code Date	1211	498144	Pulley/Spring
		(With Ring)	4=0	004500	95010800).			Assembly
		(Used After Code Date	456 450	281503	Plate-Pawl Friction			(Spring)
		95020300).	459	261505	Pawl-Ratchet			

<sup>Included in Engine Gasket Set-Ref. 358.
Included in Carburetor Overhaul Kit-Ref. 121.</sup>

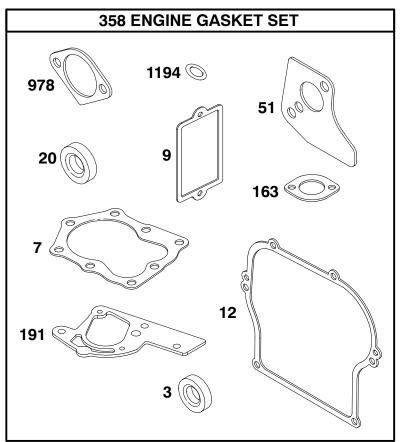

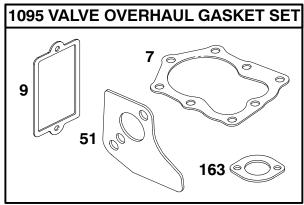

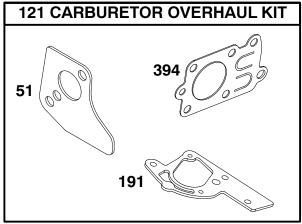

REF. PART NO. NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
9 * 27549	Seal-Oil (Magneto Side) Gasket-Cylinder Head Gasket-Breather Gasket-Crankcase (.015", Standard) Note *270125 Gasket- Crankcase (.005") *270126 Gasket- Crankcase (.009")	51* 121 163 *	495606 271935	Seal-Oil (PTO Side, 1 3/8" O.D.) Gasket-Intake (2 Required) Kit-Carburetor Overhaul Gasket-Air Cleaner Gasket-Fuel Tank	358 394 978 1095 1194	●272538 ★273326 498529	Gasket Set-Engine Diaphragm-Carburetor Gasket-Oil Gard® Gasket Set-Valve O-Ring Seal (Plug)

Included in Engine Gasket Set-Ref. 358.
Included in Carburetor Overhaul Kit-Ref. 121.