

136200 to 136299

Illustrated Parts List Model Series 136200 to 136299

TYPE NUMBERS
0006 through 0026,
0120 through 0140,
0141, 0142, 0143,
0144, 0151, 0615,
0616, 0617, 0618,
0626, 0751, 1015,
1016, 1018, 1026,
1027, 1132, 1134,
1140, 1142, 1143,
1144, 1151.

TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW



- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

136200 to 136299

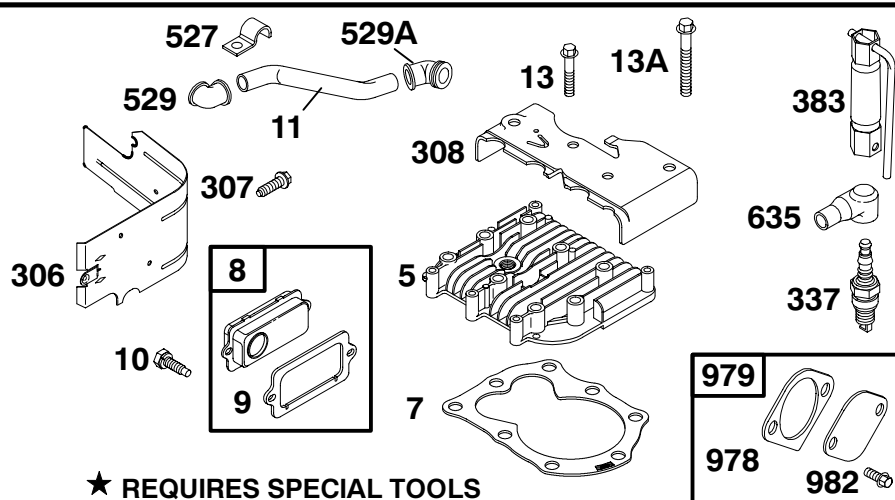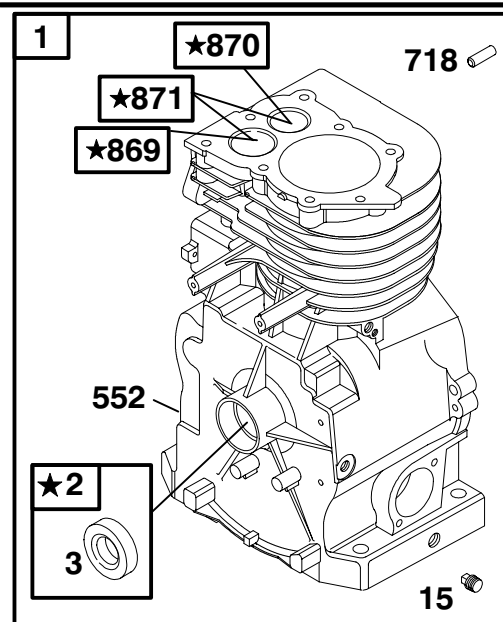

★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**


1019 LABEL KIT

1058 OWNER'S MANUAL

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	497144	Cylinder Assembly ----- Note ----- 494955 Cylinder Assembly Used on Type No(s). 0018, 0125, 0127, 0130, 0140, 0142, 1018, 1027, 1140, 1142.	9	★27549	Gasket-Breather	552	690508	Bushing-Governor Crank
2	399268	Kit-Bushing/Seal (Used After Code Date 94012300). ----- Note ----- 297565 Kit-Bushing/ Seal (Used Before Code Date 94012400).	10	691666	Screw (Breather Assembly)	635	66538	Boot-Sparkplug
3	★299819	Seal-Oil (Magneto Side) ----- Note ----- ★294606 Seal-Oil (Magneto Side) Used on Type No(s). 0122, 0129, 0133, 0143, 0144, 1143, 1144.	11	231550	Tube-Breather	718	230192	Pin-Locating
5	214040	Head-Cylinder	13	94221	Screw (Cylinder Head) (2 1/8" Long)	869	211787	Seat-Valve (Intake)
7	★272157	Gasket-Cylinder Head	13A	94679	Screw (Cylinder Head) (2 1/2" Long)	870	211172	Seat-Valve (Exhaust)
8	495774	Breather Assembly	15	94916	Plug-Oil Drain ----- Note ----- 94886 Plug-Oil Drain Used on Type No(s). 0127, 0130, 0140, 1140.	871	262001	Bushing-Valve Guide (Exhaust Valve) ----- Note ----- 63709 Bushing-Valve Guide (Intake Valve)
			306	690483	Shield-Cylinder	978	★271736	Gasket-Oil Gard®
			307	94680	Screw (Cylinder Shield)	979	691382	Cover-Oil Gard®
			308	694514	Cover-Cylinder	982	690351	Screw (OIL GARD®, 1/2 Long)
			337	802592	Sparkplug (Resistor Type) ----- Note ----- 492167 Sparkplug	1019	499134	Kit-Label
			383	89838	Wrench-Sparkplug	1058	274784	Owner's Manual (Emission Engines) ----- Note ----- 272646 Owner's Manual (Non Emission Engines)
			527	223786	Clamp-Tube			
			529	67838	Grommet (90 Degree)			
			529A	66578	Grommet (120 Degree)			

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.


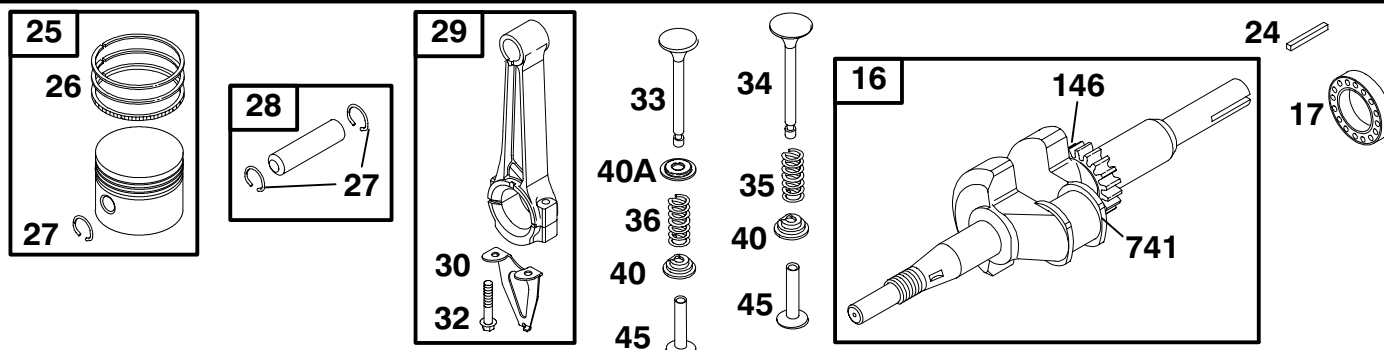


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	492088	Crankshaft ----- Note ----- 495645 Crankshaft Used on Type No(s). 0120, 0131, 0141, 0151, 0751, 1151. 499765 Crankshaft Used on Type No(s). 0014, 0015, 0018, 0122, 0129, 0133, 0141, 0143, 0144, 0615, 0617, 1015, 1018.			298906 Piston Assembly (.020" O.S.) (Used Before Code Date 99011200).			498683 Ring Set (.030" O.S.) (Used After Code Date 99011100).
17	494874	Bearing-Ball			498671 Piston Assembly (.030" O.S.) (Used After Code Date 99011100).	27	26026	Lock-Piston Pin
24	222698	Key-Flywheel			298907 Piston Assembly (.030" O.S.) (Used Before Code Date 99011200).	28	298909	Pin-Piston (Standard)
25	498668	Piston Assembly (Standard) (Used After Code Date 99011100).	26	498680	Ring Set (Standard) (Used After Code Date 99011100).			----- Note ----- 298908 Pin-Piston (.005" O.S.)
		----- Note ----- 298904 Piston Assembly (Standard) (Used Before Code Date 99011200).			----- Note ----- 298982 Ring Set (Standard) (Used Before Code Date 99011200).	29	299430	Rod-Connecting (Standard)
		498669 Piston Assembly (.010" O.S.) (Used After Code Date 99011100).			498681 Ring Set (.010" O.S.) (Used After Code Date 99011100).			----- Note ----- 390459 Rod- Connecting (.020" Undersize)
		298905 Piston Assembly (.010" O.S.) (Used Before Code Date 99011200).			298983 Ring Set (.010" O.S.) (Used Before Code Date 99011200).	30	221890	Dipper-Connecting Rod
		498670 Piston Assembly (.020" O.S.) (Used After Code Date 99011100).			498682 Ring Set (.020" O.S.) (Used After Code Date 99011100).	32	94699	Screw (Connecting Rod)
					298984 Ring Set (.020" O.S.) (Used Before Code Date 99011200).	33	211119	Valve-Exhaust
						34	261044	Valve-Intake
						35	260552	Spring-Valve (Intake)
						36	26478	Spring-Valve (Exhaust)
						40	93312	Retainer-Valve (Intake/Exhaust)
						40A	225257	Retainer-Valve (Exhaust)
						45	260642	Tappet-Valve
						146	94388	Key-Timing (Used With Timing Gear 262992)
						741	262992	Gear-Timing (Uses Woodruff Key)

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.

136200 to 136299

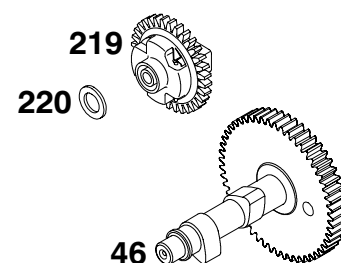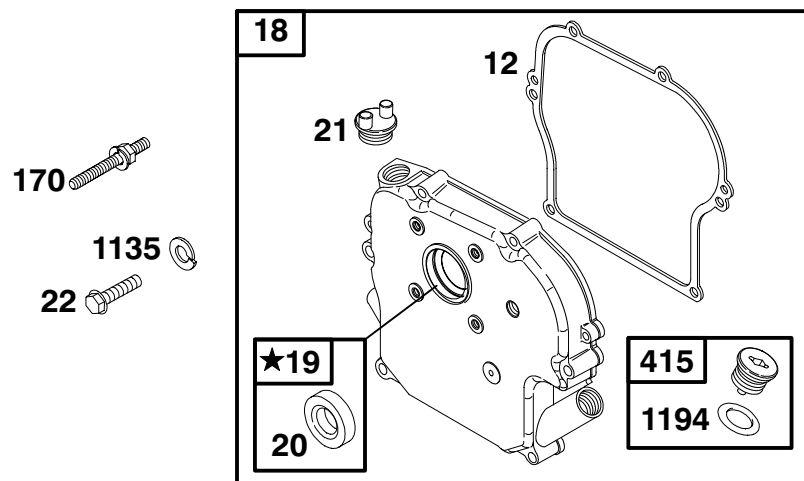


★ **REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
12	★270080	Gasket-Crankcase (.015", Standard) ----- Note ----- ★270125 Gasket-Crankcase (.005") ★270126 Gasket-Crankcase (.009")			Used on Type No(s). 0122, 0129, 0133, 0143, 0144, 1143, 1144.	170	691120	Stud (Crankcase Cover) (Used in Positions 1 and 5) Used on Type No(s). 0122, 0125, 0127, 0129, 0130, 0133, 0140, 0142, 0143, 0144.
18	694377	Cover-Crankcase (Gear Reduction) (Used After Code Date 99031400). ----- Note ----- 493916 Cover-Crankcase (Gear Reduction) (Used Before Code Date 99031500).			694319 Cover-Crankcase (Ball Bearing) (Used After Code Date 99031400). Used on Type No(s). 0120, 0131, 0141, 0151, 0751, 1151.	219	494845	Gear-Governor
		694350 Cover-Crankcase (Plain Bearing) (Used After Code Date 99031400). Used on Type No(s). 0122, 0129, 0133, 0143, 0144, 1143, 1144.	19	495660	Kit-Bushing/Seal	220	221551	Washer (Governor Gear)
		494044 Cover-Crankcase (Plain Bearing) (Used Before Code Date 99031500).	20	★495307	Seal-Oil (PTO Side, 1 5/8" Long)	415	691363	Plug
			21	281658	Cap-Oil Fill	1135	90832	Washer (Crankcase Cover) (Used on Type No(s). 0140, 0143, 0144). ----- Note ----- 690371 Washer (Crankcase Cover) (Used in Positions 1 and 5) Used on Type No(s). 0006, 0014, 0121, 0122, 0124, 0125, 0127, 0128, 0129, 0130, 0133, 0140, 0142, 0143, 0144.
			22	94682	Screw (Crankcase)	1194	★271485	O-Ring Seal (Plug)
			46	691164	Camshaft (Used After Code Date 96112500). ----- Note ----- 212733 Camshaft (Used Before Code Date 96112500).			

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.

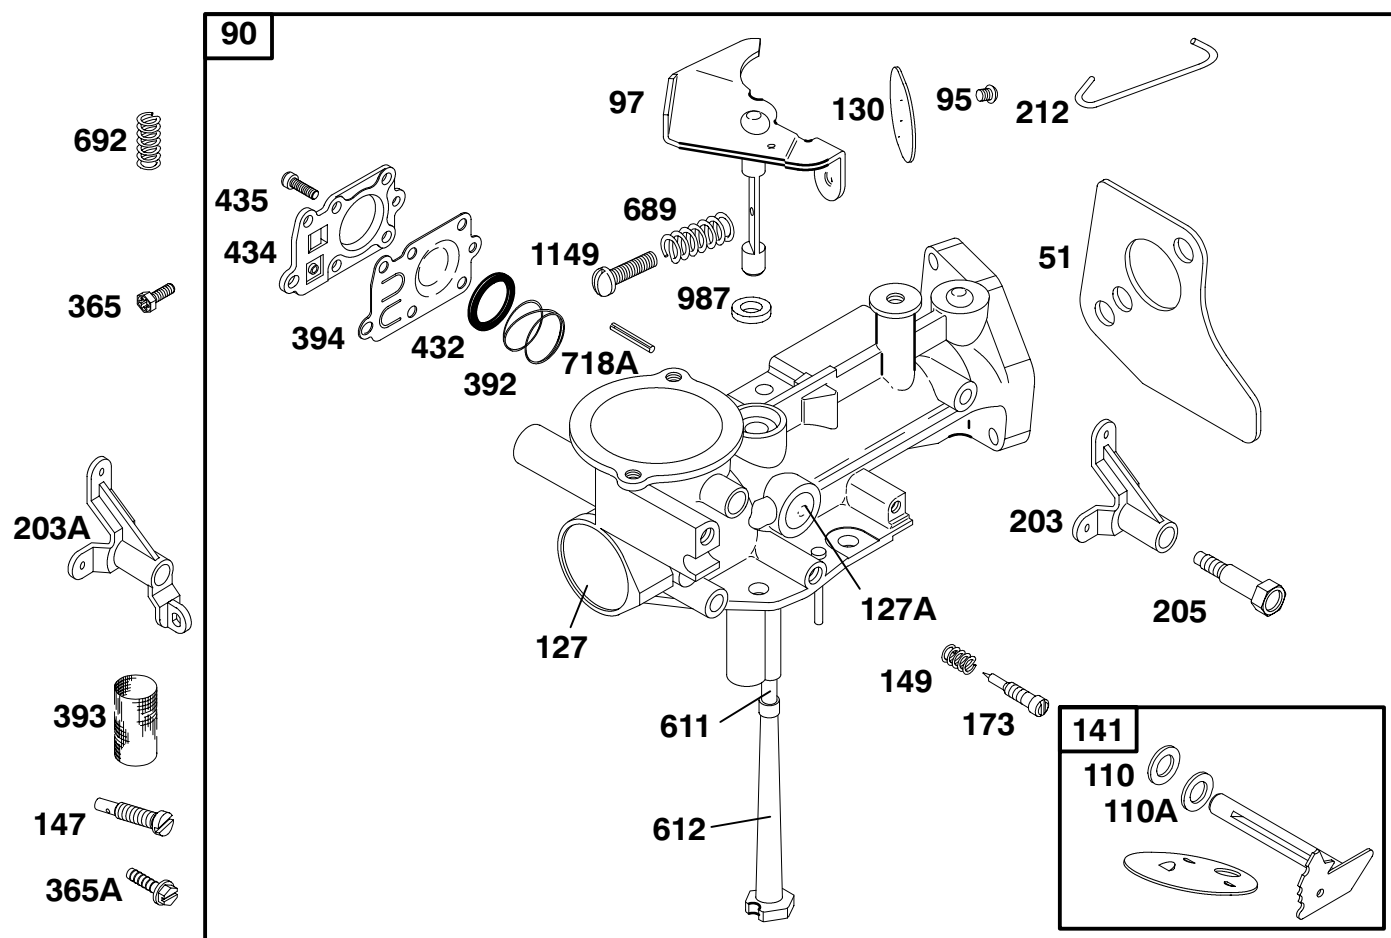


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	★273113	Gasket-Intake	147	691250	Jet-Pilot (Standard)	392	262328	Spring-Pump Diaphragm
90	495426	Carburetor			Used on Type No(s). 0615, 0616, 0617, 0618, 0626, 0751.	393	691213	Screen-Carburetor
	----- Note -----					394	★272538	Diaphragm-Carburetor (Pump)
	498298	Carburetor			Used on Type No(s). 0615, 0616, 0617, 0618, 0626, 0751, 1151.		----- Note -----	
95	93499	Screw (Throttle Valve)	149	26336	Spring-Needle Valve	432	221377	Cap-Spring
97	497600	Shaft-Throttle	173	★231533	Valve-Idle Mixture	434	213963	Cover-Diaphragm
110	270382	Washer (Choke Shaft, Felt)	203	280720	Crank-Bell (Standard, Nylon)	435	93141	Screw (Diaphragm Cover)
110A	690401	Washer (Choke Shaft, Brass)	203A	691341	Crank-Bell (Nylon)	611	231068	Pipe-Fuel
127	220352	Plug-Welch (1 1/16 Diameter)	205	231520	Screw (Bell Crank, 1 3/32" Long)	612	391813	Tube-Pick Up (Uses Clip Spring)
127A	223789	Plug-Welch (3/64 Diameter)	212	262270	Link-Throttle	689	260575	Friction-Spring (Idle Screw)
130	223793	Valve-Throttle	365	94913	Screw (Carburetor)	692	690572	Spring-Detent Used on Type No(s). 0615, 0616, 0617, 0618, 0626.
141	497230	Kit-Choke Shaft	365A	691082	Screw (Carburetor)	718A	690296	Pin-Locating (Pump Cover)
						987	695273	Seal-Throttle Shaft (5/16 Thick)
						1149	93527	Screw (Throttle Shaft)

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.


136200 to 136299

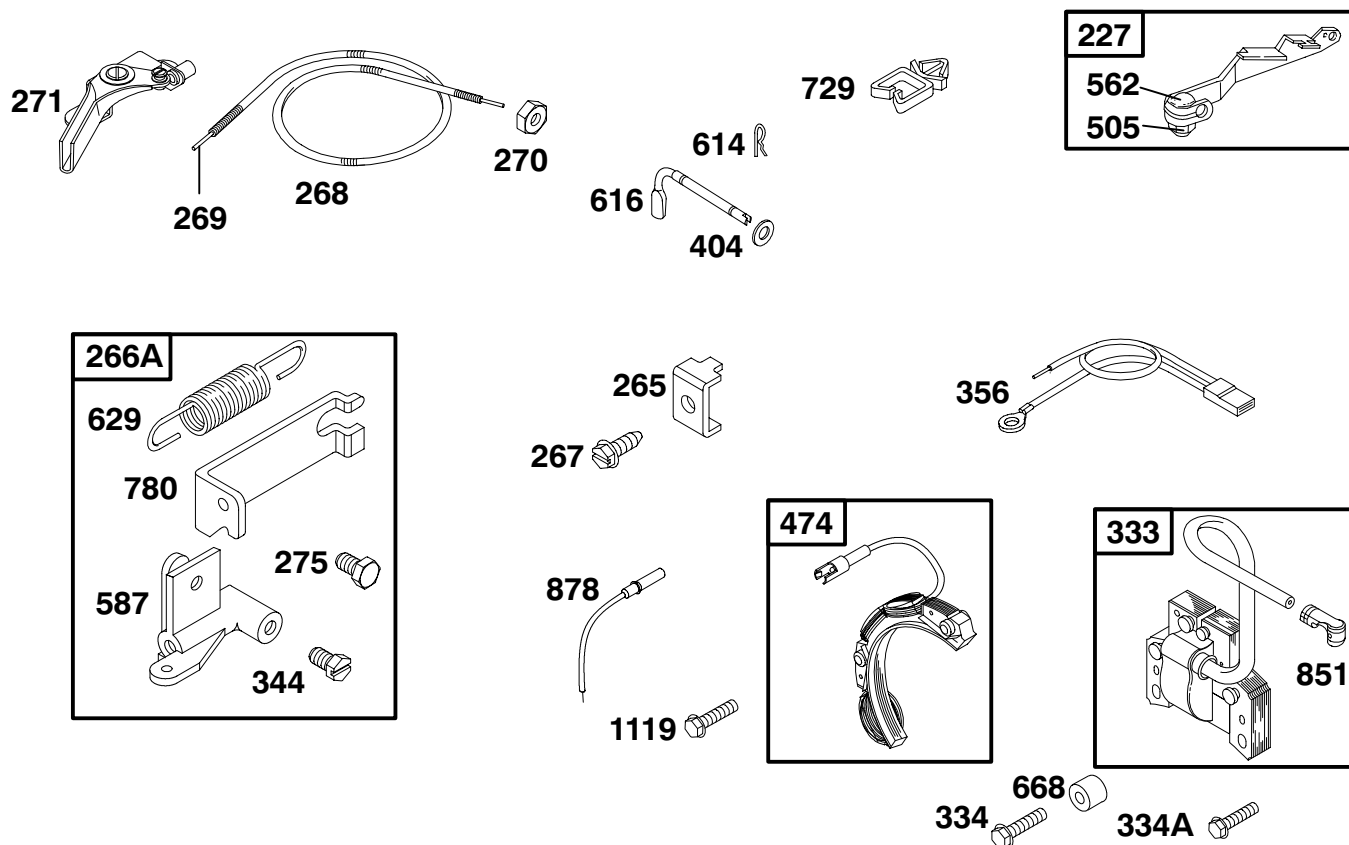

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
227	690653	Lever-Governor Control	275	94415	Screw (Horizontal Return Spring Throttle Control)	505	691251	Nut (Governor Control Lever)
265	221535	Clamp-Casing				562	691119	Bolt (Governor Control Lever)
266A	492342	Control-Throttle (Horizontal Return Spring)	333	397358	Armature-Magneto	587	213474	Clamp-Cable
267	94906	Screw (Casing Clamp)	334	690306	Screw (Magneto Armature, Used on Models With Electric Start)	614	93306	Pin-Cotter
268	691072	Casing-Control Wire (Cut to Required Length)	334A	93414	Screw (Magneto Armature)	616	495243	Pin-Governor
269	26099	Wire-Control (Cut to Required Length)	344	94415	Screw (Casing Clamp)	629	261137	Spring-Throttle Return
270	63426	Nut (Control Wire Casing)	356	398808	Wire-Stop (Governor Crank)	668	690531	Spacer
271	290568	Lever-Control	404	94927	Washer (Governor Crank)	729	690588	Clip-Wire (Snap In Nylon)
			474	494254	Alternator	780	224085	Anchor-Spring (Throttle Control)
						851	493880	Terminal-Sparkplug
						878	393422	Harness-Alternator
						1119	93621	Screw (Alternator)

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.

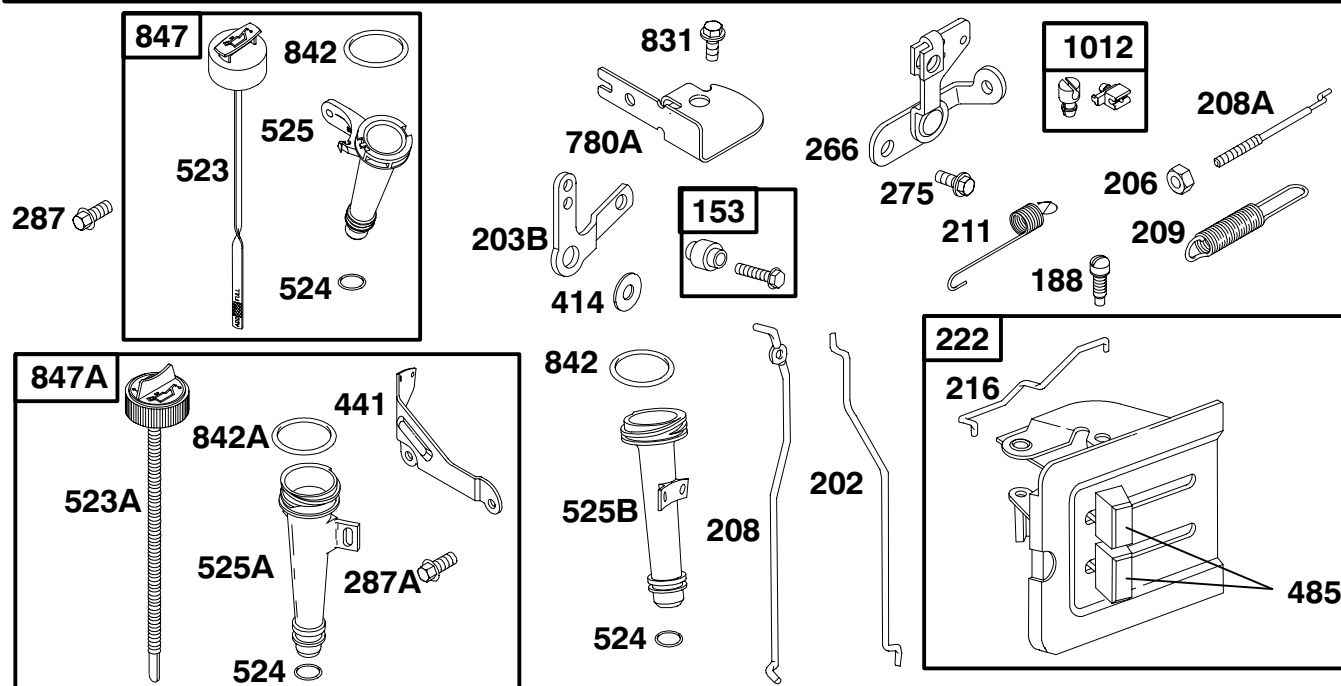

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
153	490589	Kit-Collar/Screw	266	691414	Control-Throttle (Remote Governor Idle)	525A	694531	Tube-Dipstick (For Spring Dipstick) (Used Before Code Date 99031500).
188	94924	Screw (Control Bracket)	275	691683	Screw (Throttle Control)	525B	690587	Tube-Dipstick Used on Type No(s). 0018.
202	262280	Link-Mechanical Governor	287	94807	Screw (Dipstick, 5/8 Long)	780A	691211	Anchor-Spring
203B	223813	Crank-Bell (Steel)	287A	94929	Screw (Dipstick, 3/8 Long)	831	691099	Screw (Spring Anchor)
206	690325	Nut (Governor Control Rod)	414	220982	Washer (Bell Crank)	842	★280393	O-Ring Seal (7/8 I.D.) (Used After Code Date 99031400).
208	262279	Rod-Governor Control	441	690448	Bracket-Oil Fill	842A	★270920	O-Ring Seal (1 3/16 I.D.) (Used Before Code Date 99031500).
208A	262321	Rod-Governor Control (Governor Idle Speed)	485	280715	Knob-Control (Slide)	847	694381	Dipstick/Tube Assembly Without Bracket (Used After Code Date 99031400).
209	262282	Spring-Governor (Red)	523	495264	Dipstick (Flat Wire) (Used After Code Date 99031400).	847A	691379	Dipstick/Tube Assembly (With Bracket) (Used Before Code Date 99031500).
----- Note -----			523A	691388	Dipstick (Spring) (Used Before Code Date 99031500).	1012	490507	Retainer-Link
690549 Spring-Governor (Blue) Used on Type No(s). 0026, 0140, 0143, 0151, 0615, 0616, 0626.			----- Note -----					
262948 Spring-Governor (Silver) Used on Type No(s). 0144.			524	★271485	O-Ring Seal (Dipstick Tube)			
211	263031	Spring-Governed Idle	525	694379	Tube-Dipstick (For Flat Wire Dipstick) (Used After Code Date 99031400).			
216	262359	Link-Choke (Manual)						
222	490649	Bracket-Control (Panel)						



★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.

136200 to 136299

190A 

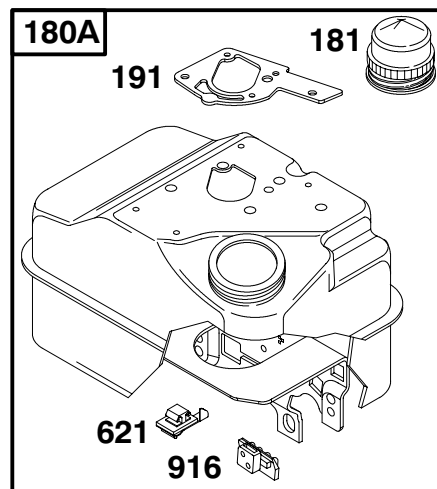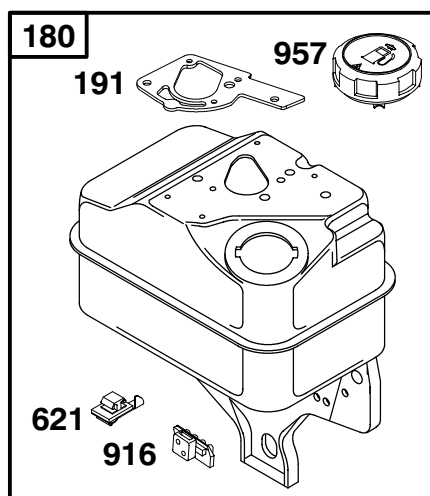


190 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
180	694315	Tank-Fuel (3 Quart) (Used After Code Date 99022800).	190	94914	Screw (Fuel Tank, 5/8" Long)	507	398525	Insulator
180A	498691	Tank-Fuel (Includes 498156 Cap) (Used Before Code Date 99030100).	190A	94919	Screw (Fuel Tank, 1 5/8" Long)	520	691084	Terminal-Ground
181	498156	Cap-Fuel Tank (Metal)	191	★●272489	Gasket-Fuel Tank	621	396847	Switch-Stop
			359	691077	Washer (Ground Terminal)	916	280321	Rack-Governor Gear (Black)
			373	90576	Nut (Ground Terminal)	957	494559	Cap-Fuel Tank (Plastic)

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

▣ Included in Valve Gasket Set-Ref. 1095.

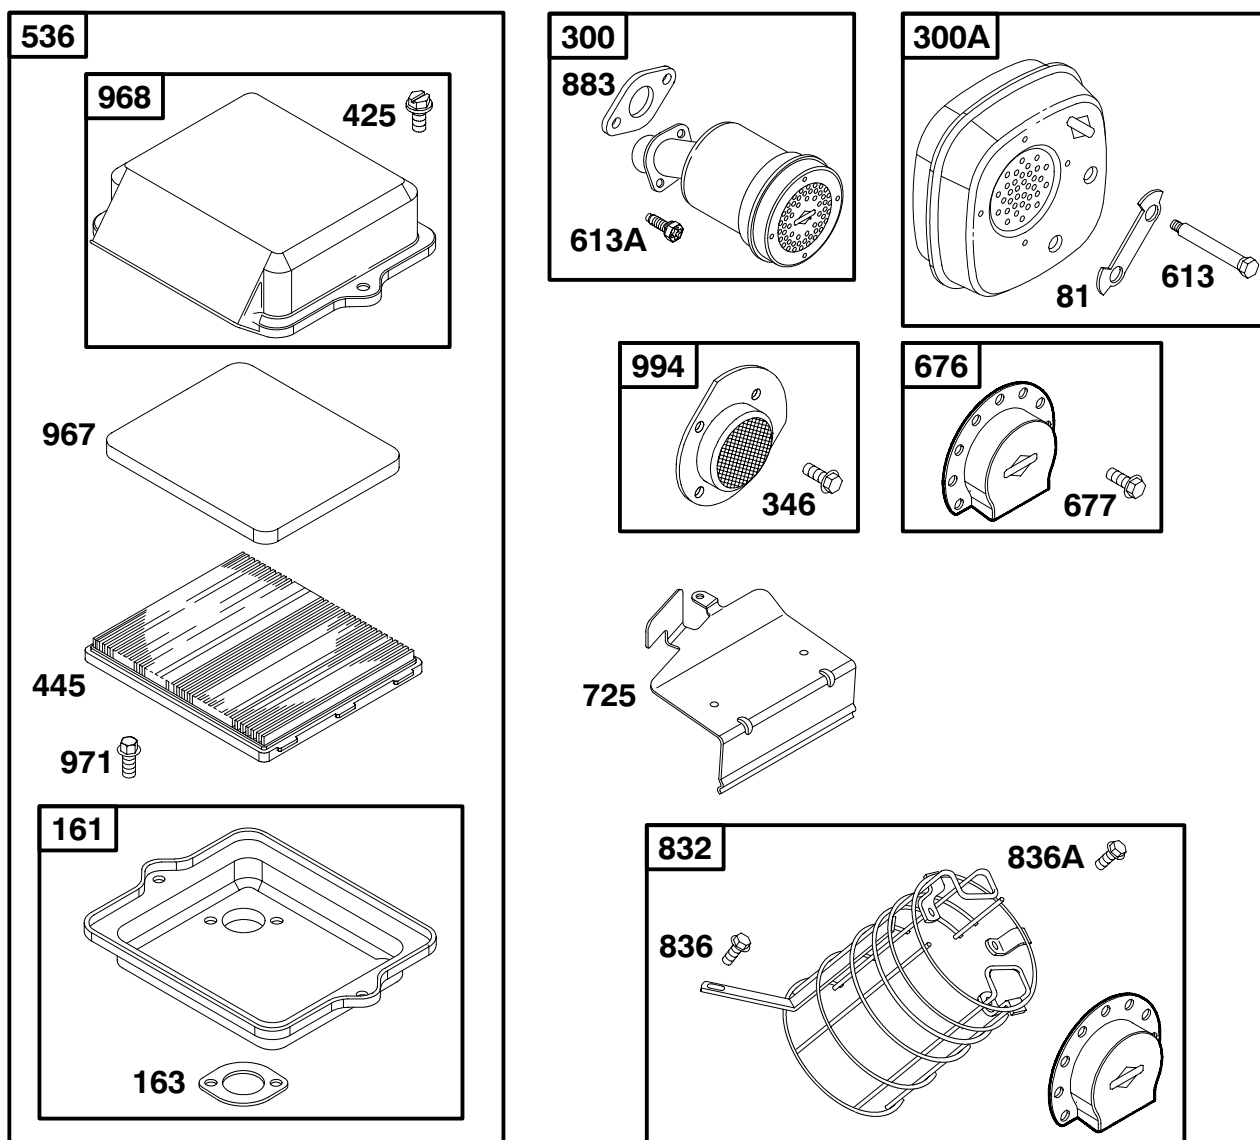


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	222263	Lock-Muffler Screw	536	494279	Cleaner-Air	836	94881	Screw
161	492797	Base-Air Cleaner (Standard)	613	93935	Screw (Exhaust Muffler, 2 1/4" Long)			(Muffler Guard, 3/4" Long)
163	★271935	Gasket-Air Cleaner	613A	94706	Screw (Exhaust Muffler, 1/2" Long)	836A	690367	Screw
300	496892	Muffler (Round Lo Tone)	676	393757	Deflector-Muffler (Side Out)			(Muffler Guard, 9/16" Long)
300A	494585	Muffler (Standard)	677	94896	Screw (Muffler Deflector)	883	★272309	Gasket-Exhaust
346	94896	Screw (Spark Arrestor)	725	690440	Shield-Heat (Fuel Tank)	967	491435	Filter-Pre Cleaner (Standard)
425	490073	Screw (Air Cleaner Cover)	832	498257	Guard-Muffler (Round Lo Tone)	968	495872	Cover-Air Cleaner (Standard)
445	491588	Filter-Air Cleaner Cartridge (Standard)				971	690370	Screw (Air Cleaner Base)
						994	399541	Arrestor-Spark

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.


136200 to 136299

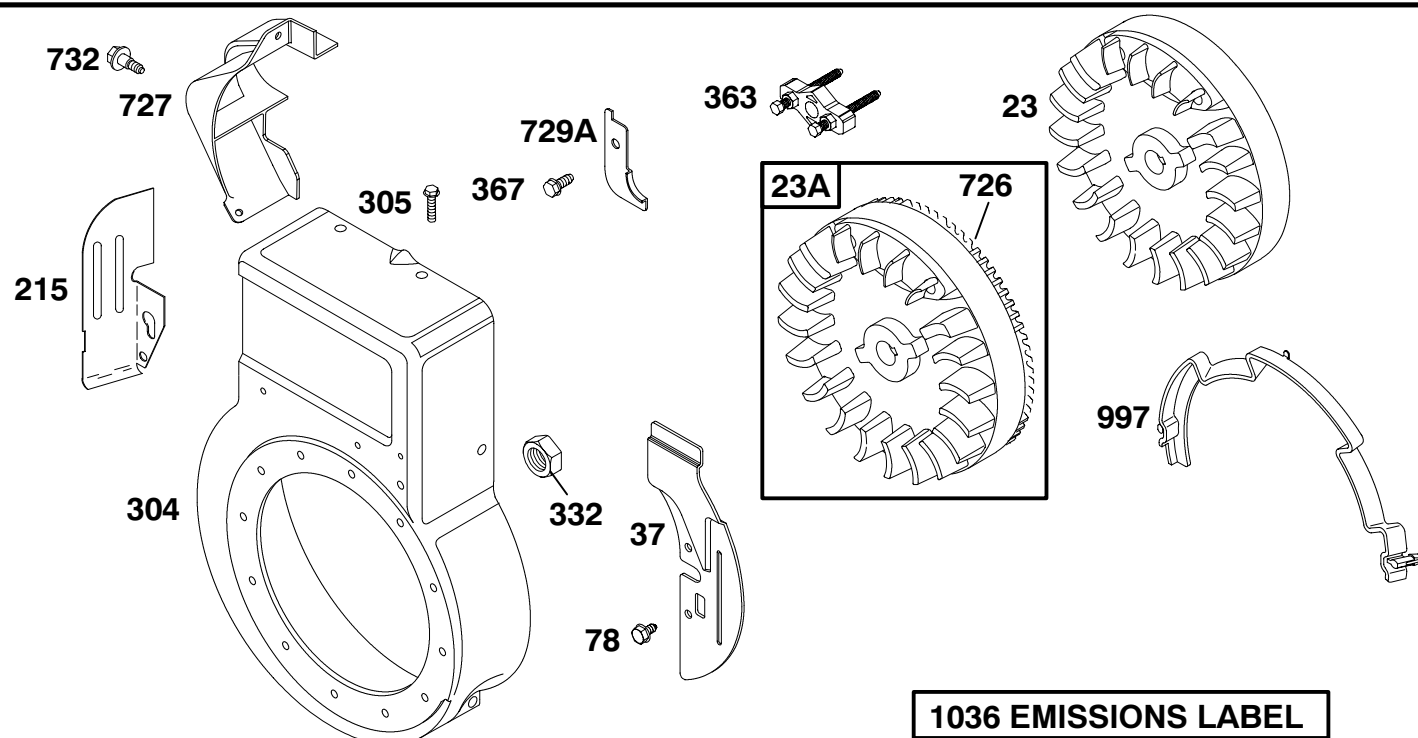

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	399673	Flywheel (Rewind Start)	305	94786	Screw (Blower Housing)	1036	695100	Label-Emissions (Used After Code Date 99093000).
23A	690820	Flywheel (Electric Start)	332	94877	Nut (Flywheel)	----- Note -----		
37	222443	Guard-Flywheel	363	19069	Flywheel Puller	694517 Label-Emissions		
78	94680	Screw (Flywheel Guard)	367	94680	Screw (Wire Clip)	(Used Before Code Date 99100100 and		
215	223886	Guide-Air (Rewind Start)	726	495765	Gear-Ring (Includes Mtg. Hardware)	After Code Date 98123100).		
----- Note -----			727	690600	Cover-Starter Drive	499345 Label-Emissions		
690472 Guide-Air (Electric Start)			729A	690471	Clip-Wire (Steel)	(Used Before Code Date 99010100 and		
Used on Type No(s). 0018, 0125, 0127, 0130, 0140, 0142, 1018, 1027, 1140, 1142.			732	691097	Screw (Starter Drive Cover)	After Code Date 97052500).		
304	495759	Housing-Blower (Rewind Start)	997	691338	Shield-Debris	499344 Label-Emissions		
----- Note -----			(Used Before Code Date 97052600).					
495760 Housing-Blower (Electric Start)								
Used on Type No(s). 0018, 0125, 0127, 0130, 0140, 0142, 1018, 1027, 1140, 1142.								

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.

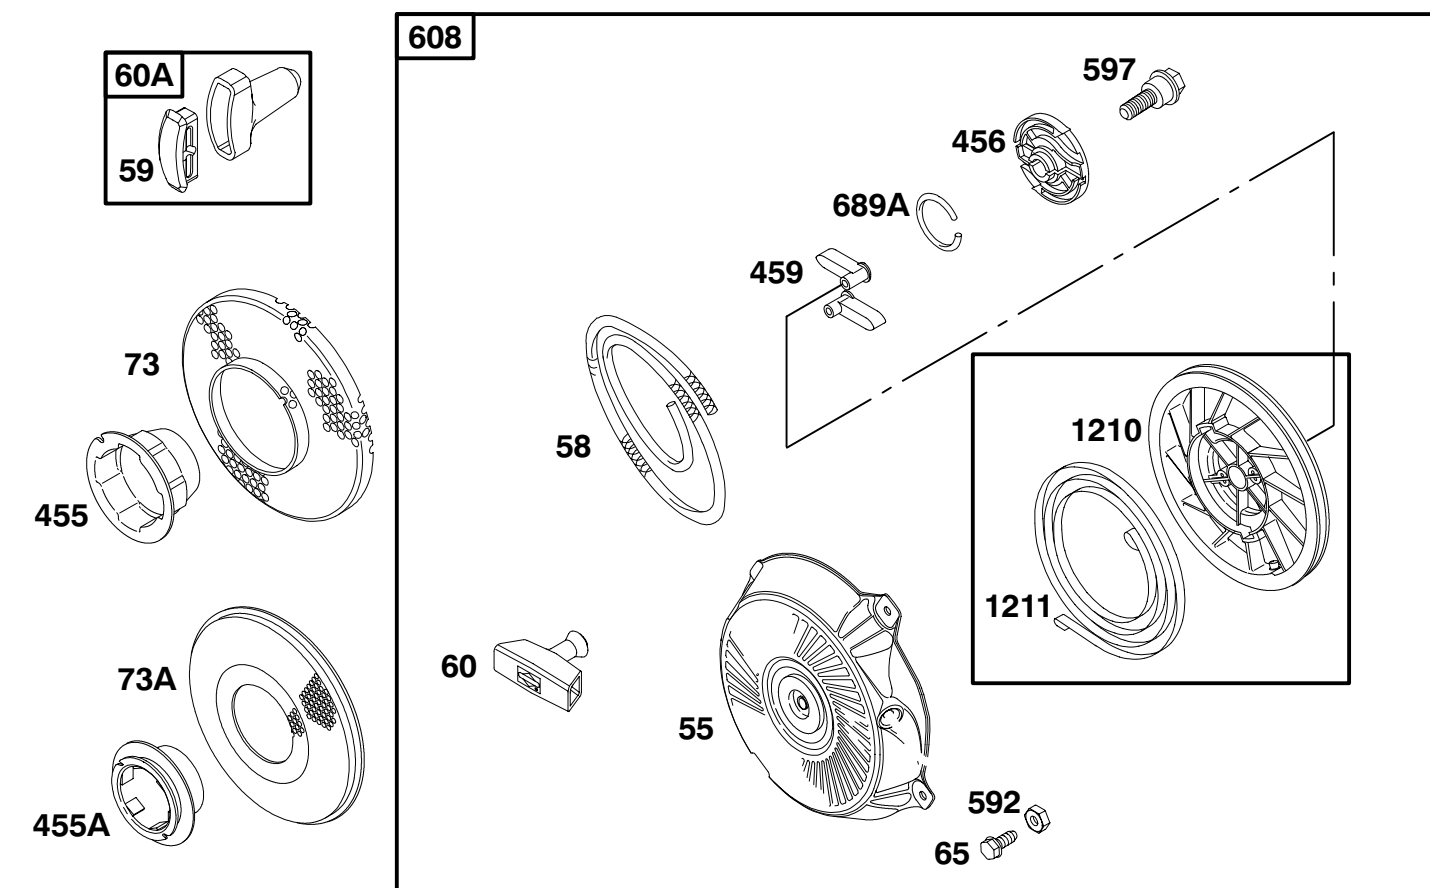


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691421	Housing-Rewind Starter	73A	691226	Screen-Rotating (Without Ring) (Used After Code Date 95010800).	592	94908	Nut (Rewind Starter)
58	691921	Rope-Starter (Cut To Required Length)	455	691219	Cup-Flywheel (With Ring) (Used After Code Date 95020300).	597	94943	Screw (Pawl Friction Plate)
59	396892	Insert-Grip	455A	691426	Cup-Flywheel (Without Ring) (Used After Code Date 95010800).	608	497830	Starter-Rewind
60	281101	Grip-Starter Rope	456	281503	Plate-Pawl Friction	689A	263073	Spring-Friction (Ratchet Pawl)
60A	393152	Grip-Starter Rope	459	281505	Pawl-Ratchet	1210	498144	Pulley/Spring Assembly (Pulley)
65	94904	Screw (Rewind Starter)				1211	498144	Pulley/Spring Assembly (Spring)
73	691225	Screen-Rotating (With Ring) (Used After Code Date 95020300).						

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.


136200 to 136299

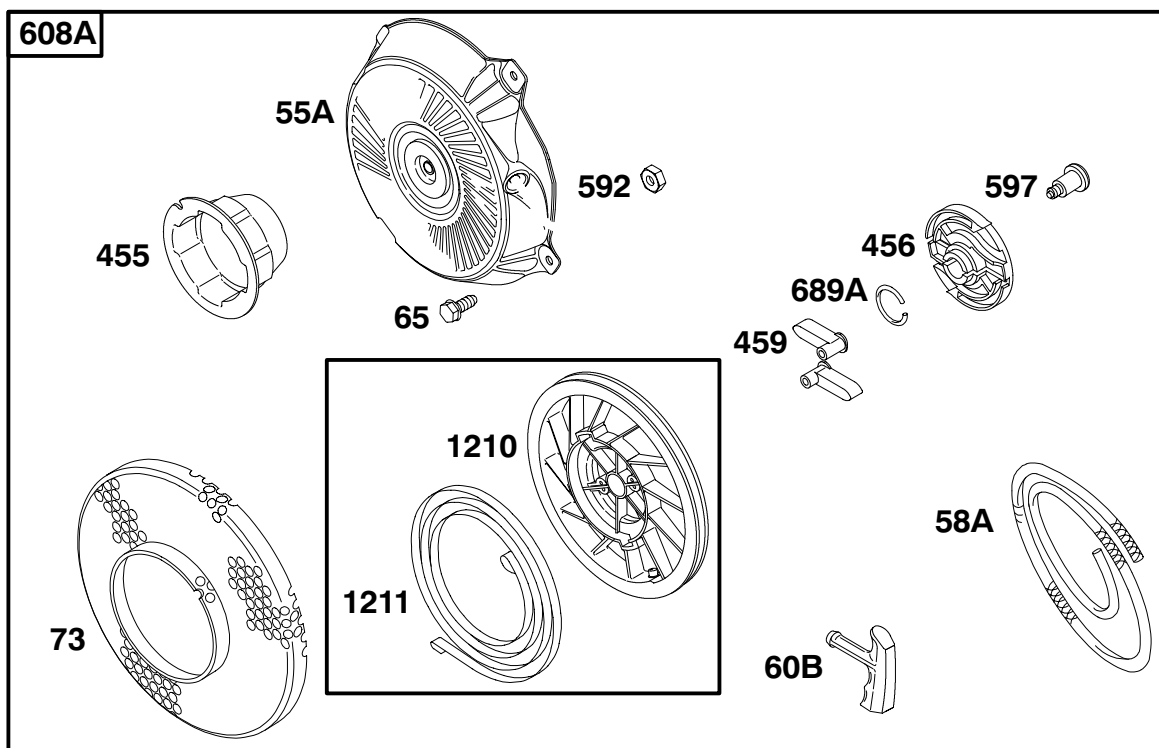

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55A	691421	Housing-Rewind Starter	73	691225	Screen-Rotating (With Ring)	608A	496650	Starter-Rewind
58A	280399	Rope-Starter (90" Long, Cut To Required Length)	455	691219	Cup-Flywheel (With Ring)	689A	263073	Spring-Friction (Ratchet Pawl)
60B	281434	Grip-Starter Rope Pistol Style)	456	281503	Plate-Pawl Friction	1210	498144	Pulley/Spring Assembly (Pulley)
65	94904	Screw (Rewind Starter Housing)	459	281505	Pawl-Ratchet	1211	498144	Pulley/Spring Assembly (Spring)
			592	94908	Nut (Rewind Starter)			
			597	94943	Screw (Pawl Friction Plate)			

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.

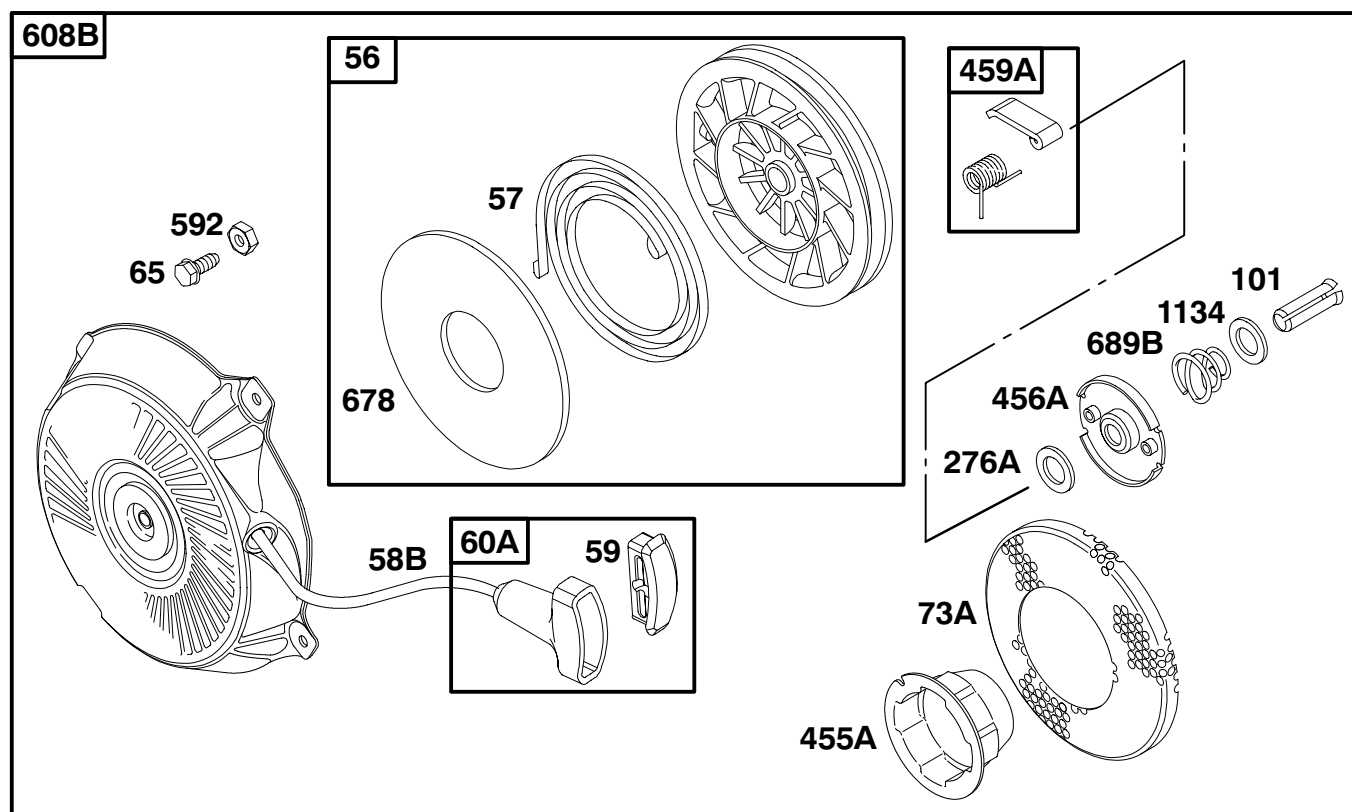


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
56	493824	Pulley-Starter	73A	691226	Screen-Rotating (Without Ring)	592	690800	Nut (Rewind Starter)
57	491889	Spring-Rewind Starter	101	262626	Pin-Shaft	608B	495766	Starter-Rewind
58B	280406	Rope-Starter (70" Long, Cut to Required Length)	276A	280973	Washer-Sealing	678	224278	Spacer-Rewind
59	396892	Insert-Grip	455A	691426	Cup-Flywheel (Without Ring)	689B	262625	Spring-Friction
60A	393152	Grip-Starter Rope (2 Piece)	456A	224321	Plate-Pawl Friction	1134	224322	Washer (Pawl Friction Plate)
65	690837	Screw (Rewind Starter)	459A	492833	Pawl-Ratchet			

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.




136200 to 136299

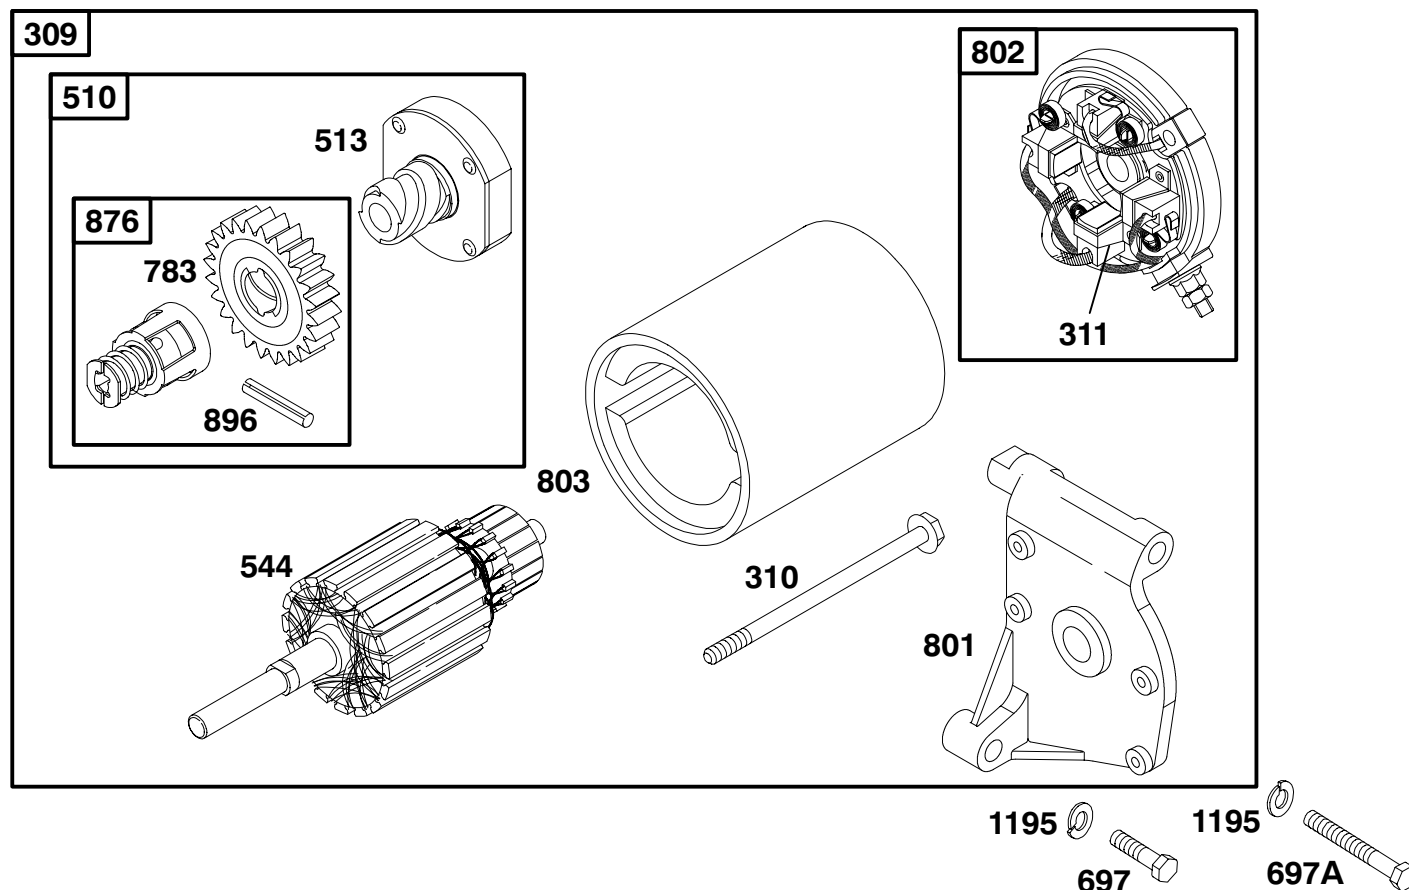

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	690658	Motor-Starter	697	93585	Screw (Drive Cap, 1 5/8" Long)	801	690835	Cap-Drive
310	690323	Screw (Motor Starter)	697A	690298	Screw (Drive Cap, 3 7/16 Long)	802	395537	Cap-End
311	395538	Brush Set	783	692353	Gear-Pinion	803	398159	Housing-Starter
510	490768	Drive-Starter				876	495879	Kit-Pinion Spring
513	398003	Clutch-Drive				896	94288	Pin-Drive Retainer
544	492865	Armature-Starter				1195	691075	Washer (Drive Cap)

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.

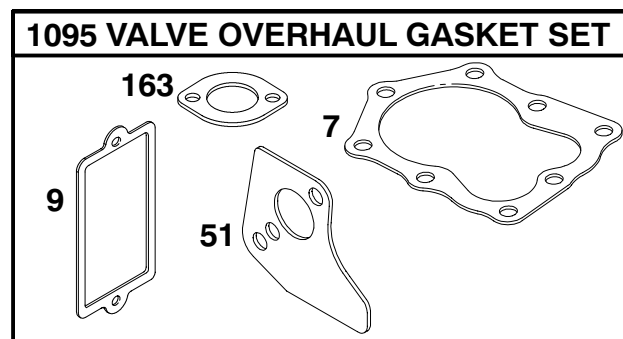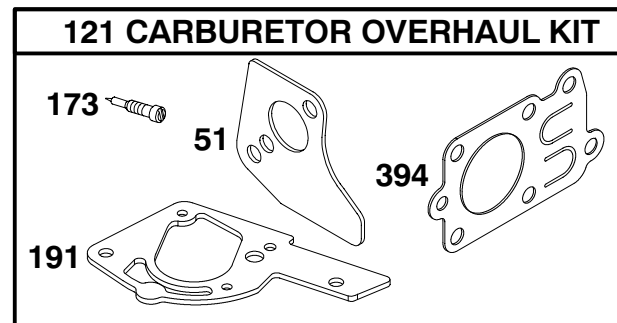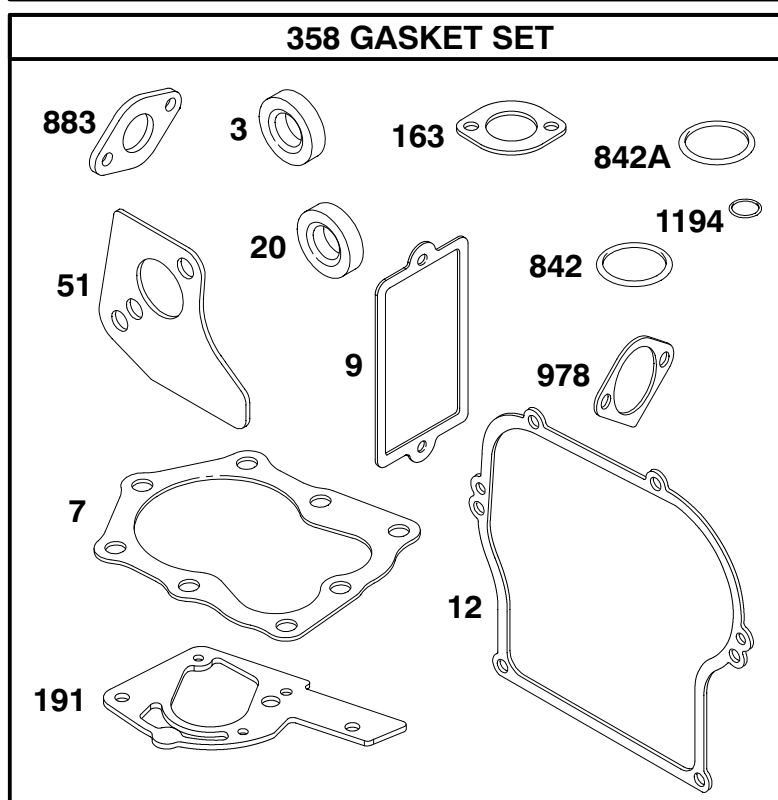

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★299819	Seal-Oil (Magneto Side)	12	★270080	Gasket-Crankcase (.015", Standard)	191	★●272489	Gasket-Fuel Tank
	----- Note -----			----- Note -----		358	495603	Gasket Set-Engine
	★294606	Seal-Oil (Magneto Side)		★270125	Gasket-Crankcase (.005")	394	●272538	Diaphragm-Carburetor (Pump)
		Used on Type No(s). 0122, 0129, 0133, 0143, 0144, 1143, 1144.		★270126	Gasket-Crankcase (.009")	842	★280393	Seal-O-Ring (7/8" I.D.) (Used After Code Date 99031400).
7	★272157	Gasket-Cylinder Head	20	★495307	Seal-Oil (PTO Side)	842A	★270920	Seal-O-Ring (1 3/16" I.D.) (Used Before Code Date 99031500).
9	★27549	Gasket-Breather	51	●★273113	Gasket-Intake	883	★272309	Gasket-Exhaust
			121	495606	Kit-Carburetor Overhaul	978	★271736	Gasket-Oil Gard®
			163	★271935	Gasket-Air Cleaner	1095	498529	Gasket Set-Valve
			173	●231533	Valve-Idle Mixture	1194	★271485	Seal-O-Ring

★ Included in Engine Gasket Set-Ref. 358.
● Included in Carburetor Overhaul Kit-Ref. 121.

□ Included in Valve Gasket Set-Ref. 1095.