


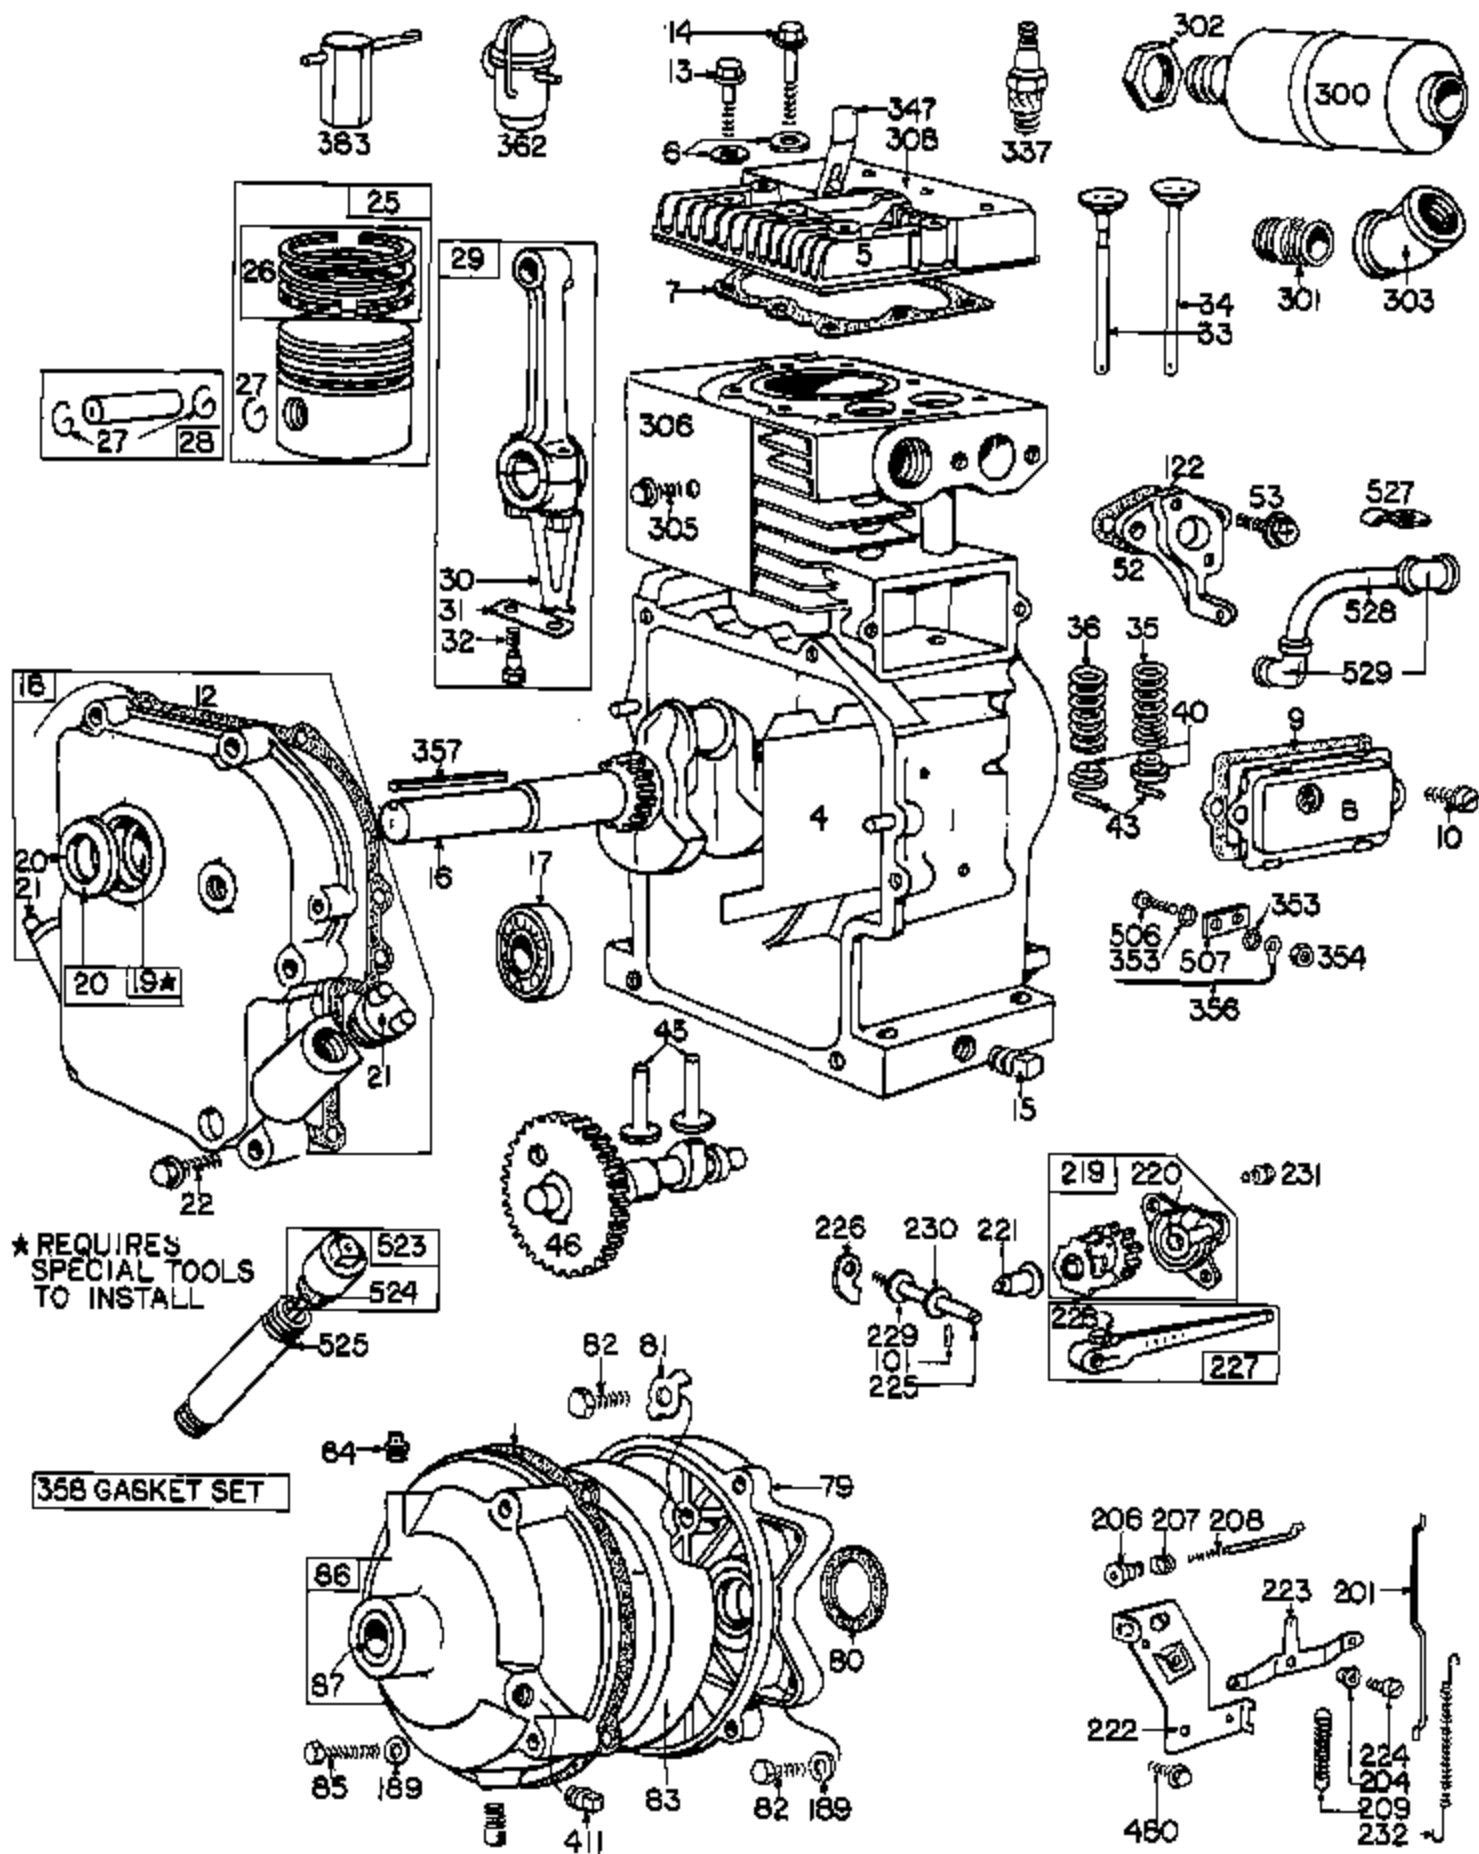


FORM MS-4355-16
Illustrated Parts List
Model Series
140200 to 140257
TYPE NUMBERS
0010 to 0016
0110 to 0149
9020 to 9139
504010 to 504033
505010 to 505033
Model Series
141200 to 141257
TYPE NUMBERS
0110 to 0139
9120 to 9138
504510 to 504552
505510 to 505532

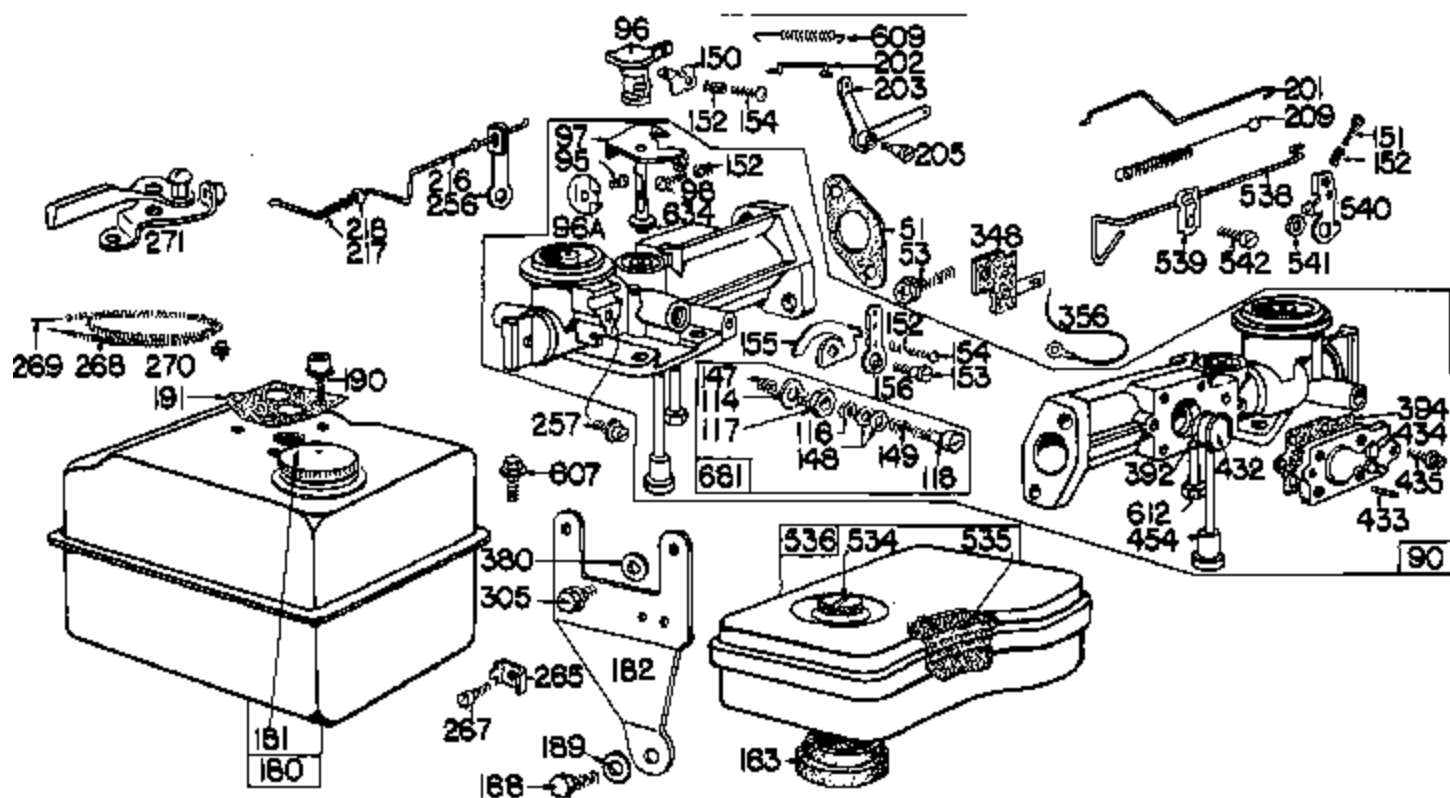

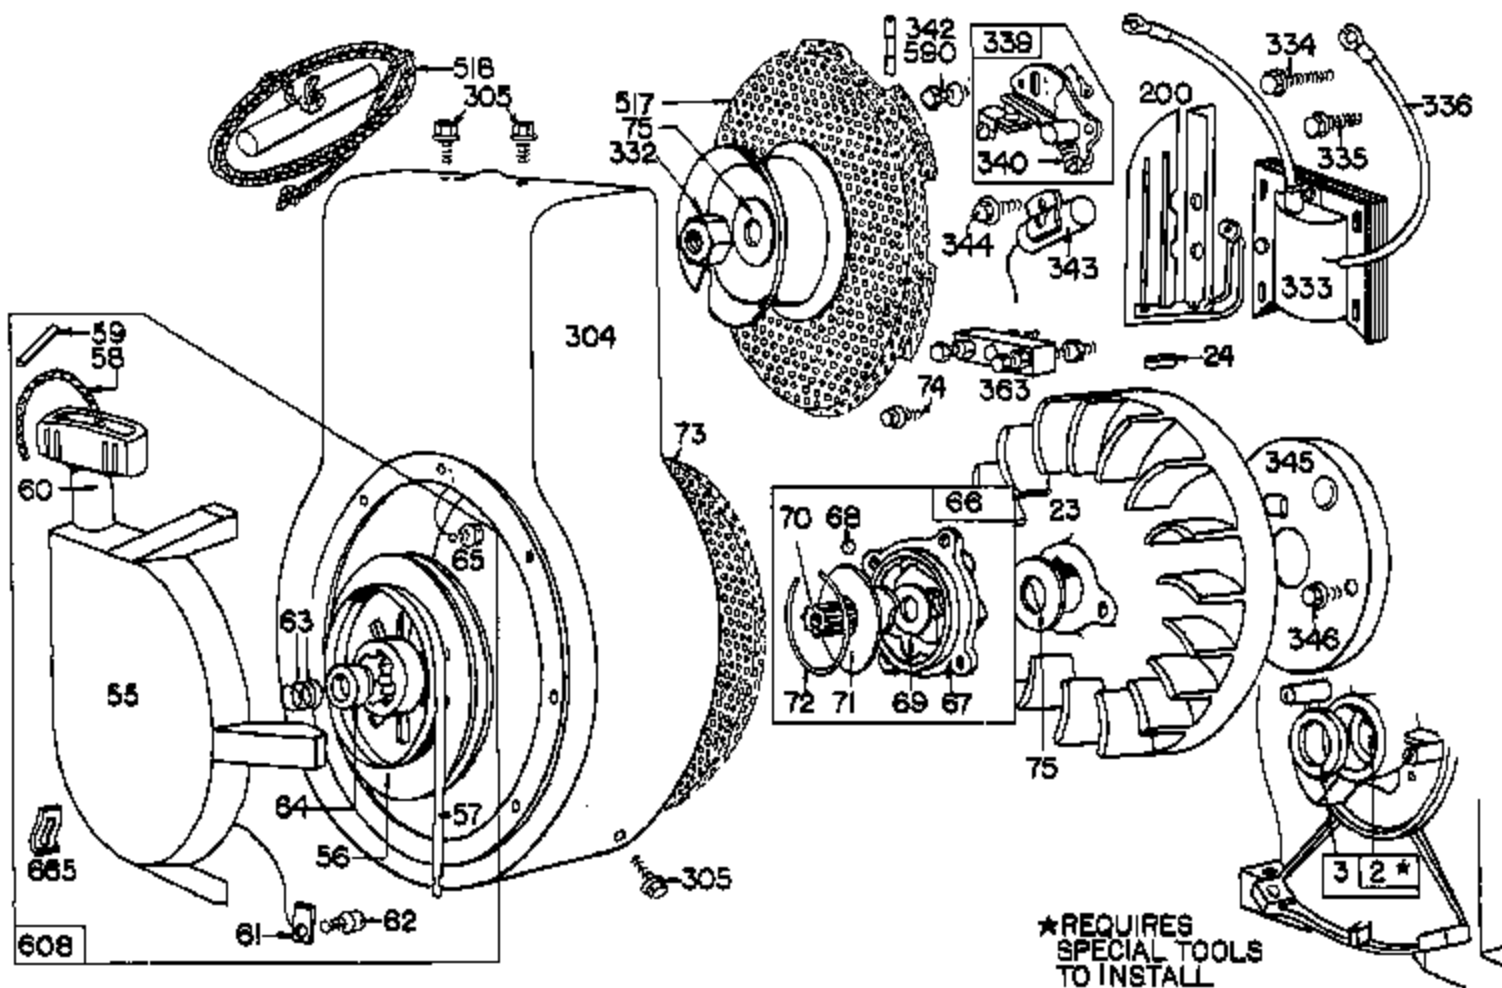

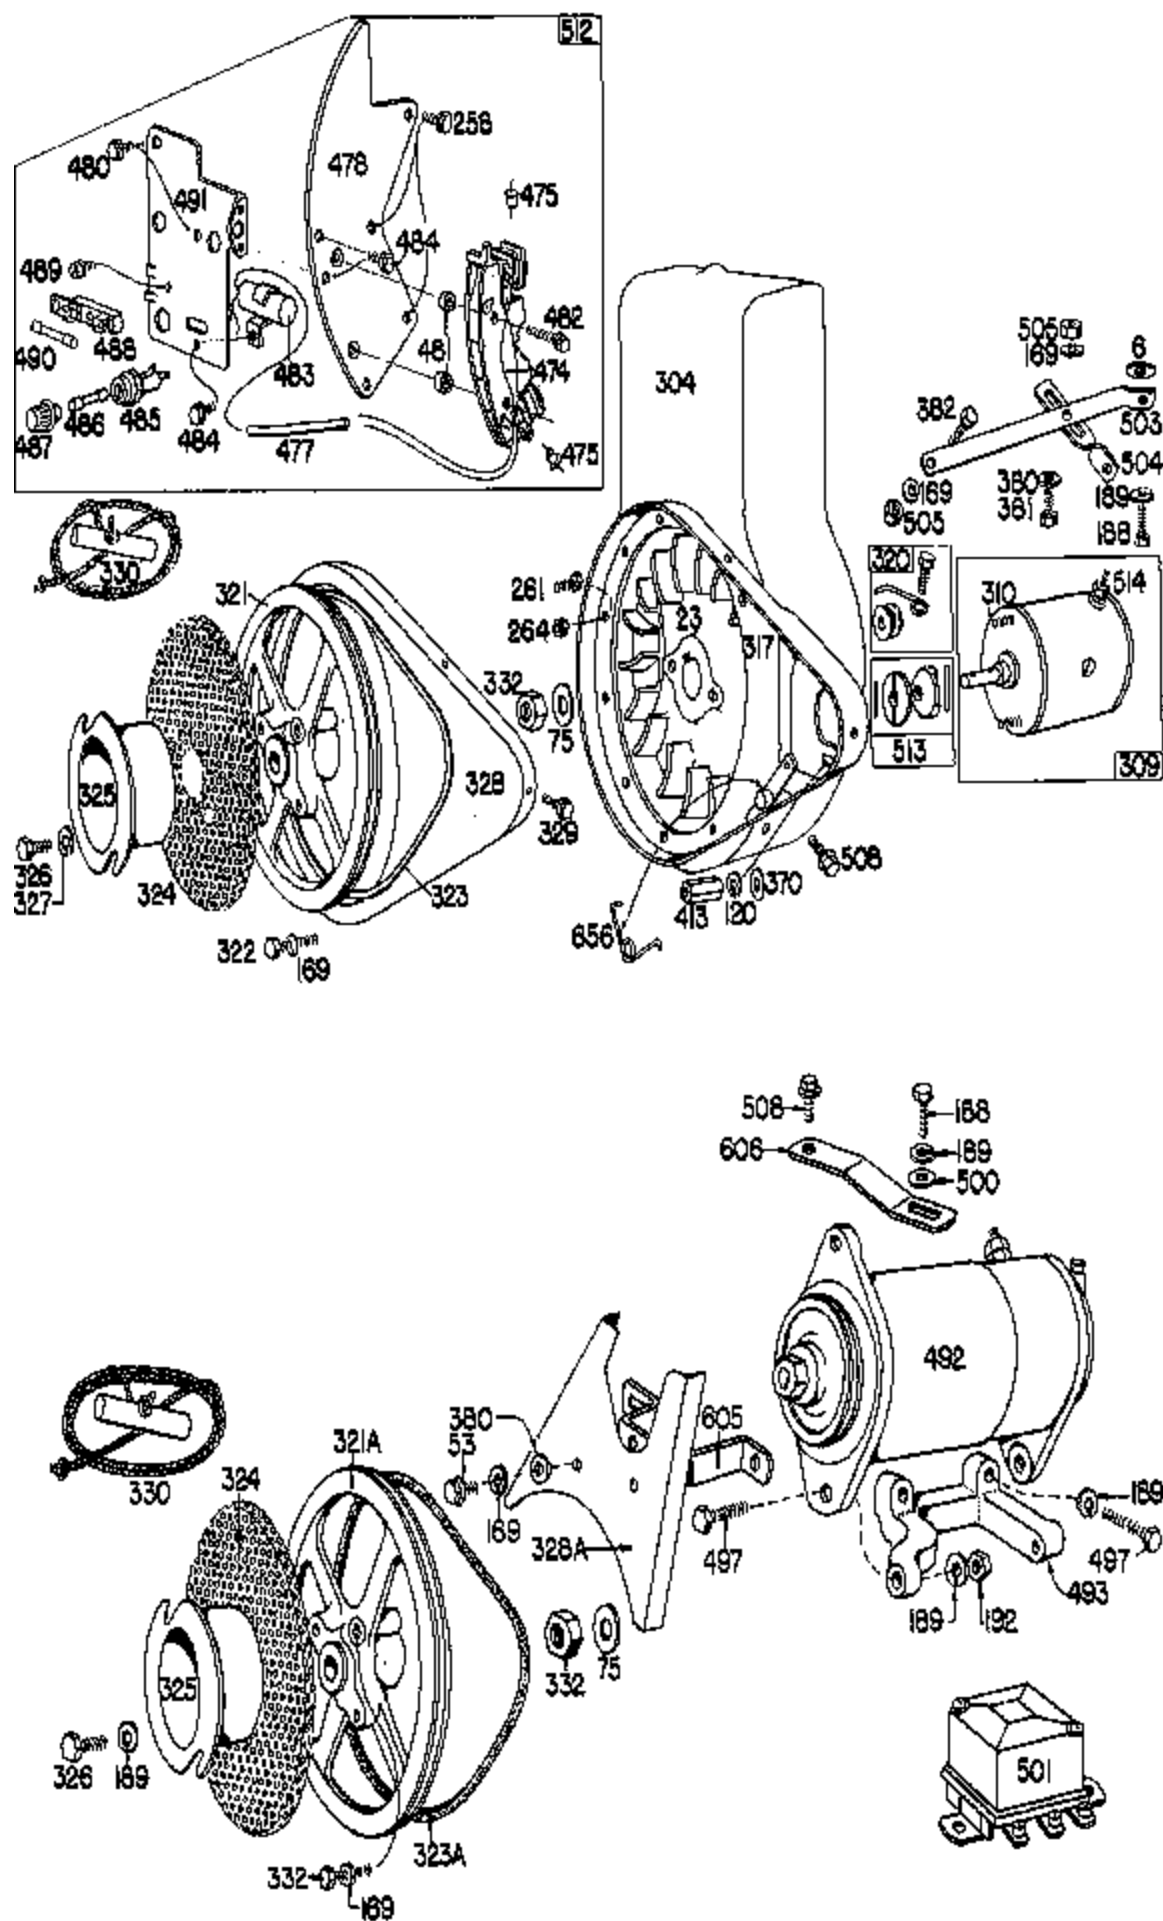

1 297723 Cylinder Assembly
 "Kool Bore"*
 Used on Model 140200
 Series.

Note:

297913 Cylinder Assy.
Used on Model 140200
Series type Nos.
0140, 9138, 504031.
296953 Cylinder Assembly
(Sleeve Bore)
Used on Model 141200
Series.

Note:

297266 Cylinder Assy.
(Sleeve Bore)
Used on Model 141200
Series type Nos.
0137, 504530,
504541, 504543,
504550.

2 295962 Bushing--Cylinder

Note:

Requires special tools
for installation.

3 294606 Seal-Oil
4 221001 Plate-Cylinder Baffle
5 210578 Head-Cylinder
6 22963 Washer-PIain
7 †270340 Gasket-Cylinder Head
8 294948 Breather Assembly
9 †27803 Gasket-Valve Cover
10 93394 Screw-Breather Mtg.
 Sem
12 †27750 Gasket-Crankcase
 Cover--1/64" thick
 †27876 Gasket-
 Crankcase
 Cover--005" thick
 †27877 Gasket-
 Crankcase
 Cover--. 009" thick
13 93210 Screw-Cylinder Head
 (2-9/32" long)
14 93211 Screw-Cylinder Head
 (2-21/32" long)
15 91084 Plug--Oil Drain
16 260315 Crankshaft

Note:

260356 Crankshaft
Used on Model 141200
Series type No.
505531.

260358 Crankshaft
Used on Model 140200
Series type Nos.
0115, 0116, 9128,
9129, 504015,
504016, 504017,
504018, 504019,
505015;
also used on Model
141200 Series type
Nos. 0115, 0116,
9127, 9128, 504515,
504516, 504517,

504518, 504519,
504527, 505515,
505516, 505517,
505518.

260359 Crankshaft
Used on Model 140200
Series type Nos.
9134, 9138, 505025,
505031;

also used on Model
141200 Series type
Nos. 505526, 505528.

260389 Crankshaft
Used on Model 140200
Series type Nos.

0120, 0121, 0148,
504020, 504021,
504022, 504023,
504024; also used on
Model 141200 Series
type Nos. 0120,
0121, 0131, 504520,
504521, 504522,
504523, 504524,
504530, 504531,
504533, 504542,
504547, 504551,
505520, 505521,
505522, 505523,
505524.

260407 Crankshaft
Used on Model 141200
Series type No.
504548.

260423 Crankshaft
Used on Model 140200
Series type Nos.
0131, 0133, 504027,
504029;

also used on Model
141200 Series type
Nos. 504526, 504549.

260425 Crankshaft
Used on Model 140200
Series type Nos.
0138, 0143, 9126,
9127, 9136, 504028,
505010, 505011,
505032; also used on
Model 141200 Series
type Nos. 0130, 0135,
0136, 0137, 0138,
9125, 9126, 9138,
504528, 504534,
504543, 504544,
504550, 505510,
505511, 505512,
505513, 505514,

505527, 505532.
260644 Crankshaft
Used on Model 140200
Series type Nos.
9024, 505030; also
used on Model 141200
Series type No.
505530.

260663 Crankshaft
Used on Model 141200
Series type Nos.
0129, 504535.

260833 Crankshaft
Used on Model 140200
Series type No. 9137.

17 29530 Bearing--Ball
18 295868 Cover Assy.--Crankcase

Note:

295876 Cover Assy.-
Crankcase
Used on Model 140200
Series type Nos.
0135, 504025.

295958 Cover Assy. -
Crankcase

Used on Model 140200
Series type Nos.

0115, 0116, 0131,
0133, 0138, 0143,
9128, 9129, 9134,
9136, 9138,

504015, 504016,

504017, 504018,

504019, 504027,

504028, 504029,

505015, 505025,

505031, 505032;

also used on Model

141200 Series type

Nos. 0115, 0116,

0129, 0130, 0135,

0136, 0137, 0138,

9127, 9128,

504515, 504516,

504517, 504518,

504519, 504526,

504527, 504528,

504534, 504535,

504543, 504544,

504549, 504550,

505515, 505516,

505517, 505518,

505526, 505527,

505528.

296075 Cover Assy.-

Crankcase

Used on Model 140200

Series type Nos.

0120, 0121, 0148,

504020, 504021,

504022, 504023,

504024; also used on

Model 141200 Series

type Nos. 0120,

0121, 0131,

504520, 504521,

504522, 504523,

504524, 504530,

504531, 504533,

504542, 504547,

504551, 505520,

505521, 505522,

505523, 505524.

296184

Cover Assy.--
Crankcase
Used on Model 140200
Series type Nos.
9126, 9127, 9137,
505010, 505011;
also used on Model
141200 Series type
Nos.
9125, 9126,
9138, 505510,
505511, 505512,
505513, 505514,
505531, 505532.
296321 Cover Assy.--
Crankcase
Used on Model 140200
Series type Nos.
9024, 505030; also
used on Model 141200
Series type No.
505530.

19 295964 Bushing-Crankcase
Cover

Note:

Requires special tools
for installation.

20 298423 Seal-Oil
21 66768 Plug-Oil Filler
22 93205 Screw-Crankcase
Cover Mounting Sem
23 295214 Flywheel

Note:

296335 Flywheel-
Mag.
Used on Model 140200
Series type Nos.
5a4014, 504019,
504024; also used on
Model 141200 Series
type Nos. 0144,
504514, 504519,
504524, 505514,
505519, 505524.

24 61760 Key-Flywheel

MODEL 140200 SERIES PISTON
ASSEMBLIES FOR "KOOL BORE"*

25 297692 Piston Assembly-Std.
297693 Piston Assembly-
.010" O.S.
297694 Piston Assembly-
.020" O.S.
297695 Piston Assembly-
.030" O.S.

MODEL 1412 SERIES PISTON
ASSEMBLIES (FOR SLEEVE BORE)

295842 Piston Assembly-Std.
295846 Piston Assembly-
.010" O.S.
295848 Piston Assembly--
.020" O.S.
295850 Piston Assembly-
.030" O.S.

MODEL 140200 SERIES PISTON

RING SETS FOR ''K00L BORE''*

- 26 297815 Ring Set-Piston-Std.
 Consists of:
 210600 Ring, Piston,
 Comp., Top, Std.
 211037 Ring, Piston,
 Comp., Center, Std.
 210602 Ring, Piston,
 Oil, Std.
- 297705 Ring Set-Piston--
 .010'' O.S.
 Consists of:
 211241 Ring, Piston,
 Comp., Top,
 .010'' O.S.
 211244 Ring, Piston,
 Comp., Center,
 010'' O.S.
 211247 Ring, Piston,
 Oil, 010'' O.S.
- 297706 Ring Set-Piston-
 .020'' O.S.
 Consists of:
 211242 Ring, Piston,
 Comp., Top
 .020" O.S.
 211245 Ring, Piston,
 Comp., Center,
 .020'' O.S.
 211248 Ring, Piston,
 Oil, .020" O.S.
- 297707 Ring Set-Piston-
 .030" O.S.
 Consists of:
 211243 Ring, Piston,
 Comp., Top,
 030" O.S.
 211246 Ring, Piston,
 Comp., Center,
 .030'' O.S.
 211249 Ring, Piston,
 Oil, .030'' O.S.

MODEL 1412 SERIES PISTON

RING SETS (FOR SLEEVE BORE)

- 295852 Ring Set-Piston-Std.
 Includes: 210703
 Ring,
 Piston,
 Comp.,
 Top
 Standard
 210601
 Ring,
 Piston,
 Comp.,
 Center,
 Standard
 295843
 Ring
 Piston,
 Oil
 Standard
 (with
 expander)

295853 Ring Set-Piston--
 .010" O. S.
 Includes: 210889
 Ring,
 Piston,
 Comp.,

Top,
 .010" O.S.
 210890
 Ring,
 Piston,
 Comp.,
 Center,

.010" O.S.
 295847
 Ring,
 Piston,
 Oil,
 .010" O.S.(with
 expander)

295854 Ring Set-Piston--
 .020" O. S.
 Includes: 210893
 Ring
 Piston,
 Comp.,

Top,
 .020" O.S.
 210894
 Ring,
 Piston,
 Comp.,
 Center,
 .020", O.S.

295849
 Ring
 Piston,
 Oil,
 .020" O.S.
 (with
 expander)

295855 Ring Set-Piston--
 .030" O.S.
 Includes: 210897
 Ring,
 Piston,
 Comp.,

Top,
 .030" O. S.
 210898
 Ring,
 Piston,
 Comp.,
 Center,
 .030" O.S.

295851
 Ring,
 Piston,
 Oil,
 .030" O.S.
 (with
 expander)

27 68546 Lock--Piston Pin
 28 295840 Pin Assembly--Std.
 295841 Pin Assembly--

		.005'' O.S.
29	295838	Rod Assembly--Conn.
30	220837	Dipper--Conn. Rod
31	220811	Lock-Connecting Rod Screw
32	92659	Screw-Connecting Rod
33	230385	Valve--Exhaust
	Note:	260444 Valve-Exh. Used on Model 140200 Series type Nos. 0131, 0140, 9138, 504031, 505025; also used on Model 141200 Series type Nos. 0134, 0137, 0138, 504525, 504526, 504530, 504532, 504541, 504543, 504550.
34	230386	Valve-Intake
	Note:	230385 Valve--Intake Used on Model 140200 Series type Nos. 0131, 0140, 9138, 504031, 505025; also used on Model 141200 Series type Nos. 0134, 0137, 0138, 504525, 504526, 504530, 504532, 504541, 504543, 504550.
35	65906	Spring--Intake Valve
36	65906	Spring-Exhaust Valve
	Note:	26828 Spring--Exhaust Valve Used on Model 140200 Series type Nos. 0131, 0140, 9138, 504031, 505025; also used on Model 141200 Series type Nos. 0134, 0137, 0138, 504525, 504526, 504530, 504532, 504541, 504543, 504550.
40	230477	Retainer-Valve Spring
	Note:	292260 Rotocap- Exhaust Valve Used on Model 140200 Series type Nos. 0131, 0140, 9138, 504031, 505025; also used on Model 141200 Series type Nos. 0134, 0137, 0138, 504525, 504526, 504530, 504532, 504541, 504543, 504550.

43 230476 Pin--Valve Spring Ret.

Note:

230570 Pin--Exhaust
Valve Rotocap Retainer
230569 Retainer-
Exhaust Valve Rotocap
Used on Model 140200
Series type Nos.
0131, 0140, 9138,
504031, 505025; also
used on Model 141200
Series type Nos.
0134, 0137, 0138
504525, 504526,
504530, 504532,
504541, 504550.

45 260125 Tappet--Valve

46 210728 Gear-Cam

51 †27355 Gasket-Carburetor
To Spacer

52 †27828 Gasket-Spacer To
Cylinder Mounting

53 93329 Screw-Sem

55 295272 Housing-Rewind
Starter

56 295871 Pulley--Rewind Starter

57 294303 Spring--Rewind Starter

58 66564 Rope-Starter (63"
Long)

Note:

If longer rope is
needed, order No.
66574 and cut to
required length.

59 230228 Pin--Starter Grip

60 66728 Grip-Starter Rope

61 66918 Bumper--Starter Pulley

62 93254 Screw--Pulley Bumper
Mounting Sem

63 260414 Spring--Ratchet

64 230543 Adapter-Ratchet
Spring

65 93163 Screw-Rewind Starter
Housing Mounting Sem

66 295684 Clutch Assembly-
Rewind Starter

67 210400 Housing-Rewind
Starter Clutch

68 63770 Ball--Clutch

69 66718 Washer-Starter
Clutch, Thrust

70 296916 Ratchet--Rewind
Starter Clutch

Note:

270045 Washer--
Ratchet Sealing
260517
Spring-Ratchet
Sealing Washer
Used on Model.140200
Series type No. 9137.

71 221301 Washer-Retainer

72 26032 Ring-Clutch Retainer

73 220823 Screen-Rewind Starter

74 93042 Screw-Rotating Screen
Mounting Sem

75	220865	Washer-Spring
79	296179	Case Assembly-Gear
80	27884	Gasket-Gear Case to Crankcase Cover
81	220234	Lock-Gear Case Mounting Screw
82	92502	Screw-Cap
83	296052	Shaft Assembly-Drive

Note:

296298 Shaft Assy.-
Drive
Used on Model 140200
Series type No. 0148;
also used on Model
141200 Series type
No. 504531.

84	92617	Plug--Breather
85	91386	Screw-Gear Case Cover Mounting
86	296053	Cover Assembly-- Gear Case

87	298423	Seal-Oil
88	27328	Gasket-Gear Case Cover
89	91488	Plug-Oil Drain
90	296968	Carburetor Assembly (Manual Choke)

Note:

297243 Carburetor
Assy. (Mechanical
Gov.-Manual Choke)
Used on Model 140200
Series type Nos.
9024, 505030; also
used on Model 141200
Series type Nos.
505530, 505531.
297314 Carburetor
Assy. (Manual Choke)
Used on Model 140200
Series type Nos.
0135, 0138, 0141,
0142, 0146, 0148,
504028; also used on
Model 141200 Series
type Nos. 0132, 0133,
504533, 504534,
504536, 504539,
540547, 540548.
297388 Carburetor
Assy. (Mechanical
Gov.-Manual Choke)
Used on Model 140200
Series type Nos.
9126 9127, 9128,
9129, 9134, 9136,
9138; also used on
Model 141200 Series
type Nos. 9125, 9126,
9127, 9128, 9138,
505511, 505512,
505513, 505514,
505515, 505516,
505517, 505518,
505519, 505520,
505521, 505522,

505523, 505524,
505526, 505527,
505528.
297554 Carburetor
Assy. (Choke-A-Matic)
Used on Model 140200
Series type Nos.
0125, 0130, 0137,
0139, 504026; also
used on Model 141200
Series type Nos.
0135, 504537,
504538, 504540,
504546.
298507 Carburetor
Assy. (Manual Choke)
Used on Model 140200
Series type No. 0132.
298621 Carburetor
Assy.
Used on Model 140200
Series type No. 0147.
298666 Carburetor
Assy.
Used on Model 140200
Series type No. 9137.

95	93385	Screw-Throttle Valve Mounting Sem
96	210957	Valve--Throttle
96A	211203	Valve--Throttle
97	297988	Shaft and Lever- Throttle
98	93392	Screw-Machine, Rd. Hd .-#5-40 x 1/2"
101	93043	Pin-Governor Shaft
114	66594	Gasket-Needle Valve

Note:

66604 Gasket-Needle
Valve
Used on Model 140200
Series type Nos.
9024, 505030; also
used on Model 141200
Series type Nos.
505530, 505531.

116	65978	Packing-Needle Valve
117	230590	Nut-Needle Valve
118	23433	Valve-Needle
120	92290	Washer-Lock-No. 10 x 1/16'' x 3/64''
122	210596	Spacer-Intake Elbow
124	92636	Screw-Cap, Hex. Hd.-1/4-20 x 2"
147	230591	Seat-Needle Valve
148	22235	Washer-Needle Valve (2)
149	26336	Spring-Needle Valve
150	220105	Connector-Gov. Link
151	93350	Screw-Machine, Rd. Hd.-5-40 x 3/4"
152	260575	Spring-Speed and Throttle Adjustment
153	298031	Screw-Carb. Lever
154	92634	Screw-Machine, Rd. Hd.-5-40 x 5/8"

Note:

		93350 Screw-Machine, Rd. Hd.-5-40 x 3/4" Used on Model 140200 Series type No. 0147.
155	220107	Carn-Speed Adjuster
156	220949	Lever-Speed Adjuster
	Note:	
		220678 Lever-Speed Adjuster Used on Model 140200 Series type No. 0147.
163	†27660	Gasket-Air Cleaner Mounting
169	90832	Washer--Lock, 1/4" x 3/32" x 5/64"
171	92129	Nut--Hex.--1/4-28
180	296789	Tank Assembly-Fuel (3 quart)
181	293270	Cap-Fuel Tank
	Note:	
		297863 Cap--Fuel Tank Used on Model 140200 Series type No. 9137.
182	221367	Bracket--FuelTa n k Support
188	92272	Screw--Cap, Hex. Hd.--5/16"-18 x 3/4"
189	90366	Washer--Lock, 5/16'' x 1/8'' x 1/16''
190	93341	Screw-Fuel Tank Mtg.
191	†27911	Gasket-Fuel Tank
		Mtg.
192	91397	Nut--Hex.--5/16''-18
200	295844	Blade-Air Vane Governor
	Note:	
		221148 Guide-Air (Mechanical Gov.) Used on type Nos. 9000 to 9139 and all 505500 Series type nos.)
201	298091	Link--Air Vane Governor (Used on type Nos. 0110 to 0150 and all 504500 Series type nos.)
	Note:	
		260555 Link-- Mechanical Gov. (Used on type Nos. 9000 to 9139 and all 505500 Series type nos.)
202	260563	Link--Throttle (Used on type Nos. 9000 to 9139 and all 505500 Series type nos.)
203	296791	Crank--Bell (Used on type Nos. 9000 to 9139 and all 505500 Series type nos.)
	Note:	

297069 Crank-Bell
 221425 Arm--Throttle
 Control
 221427 Washer
 260546 Spring--
 Control Arm Return
 260575 Spring--
 Control Arm
 221384 Bracket-
 Return Spring
 93149 Screw--Control
 Arm
 Used on Model 140200
 Series type Nos.
 9024, 505030; also
 used on Model 141200
 Series type Nos.
 505530, 505531.
 221390 Crank--Bell
 Used on Model 140200
 Series type No. 0132.
 221764 Crank-Bell
 Used on Carburetor
 between Square
 Control Rod and Link
 and Speed Control
 Rod and Governor
 Lever on Model 140200
 Series type No. 9137.
 204 230117 Collar
 205 230671 Screw--Bell Crank Mtg.

Note:

92265 Screw--Self
 Tapping
 220982 Washer-Bell
 Crank

Used on Model 140200
 Series type No. 9137.
 93342 Screw-Self
 Tapping
 230450 Collar--
 Bell Crank
 Used on Model 140200
 Series type No. 0132.
 206 230533 Nut--Governor
 Control Rod
 (Used on type Nos.
 0110 to 0150 and all
 504500 Series type
 nos.)

Note:

230149 Nut--
 Governor Control Rod
 (Used on type Nos.
 9000 to 9139 and all
 505500 Series type
 nos.)
 230580 Guide--Stop
 230253 Stop--Control
 Rod-7/8" long
 93266 Fastener-
 Washer
 Used on Model 140200
 Series type No. 9137.
 207 26855 Spring-Governor
 Control Rod

208	230460	Rod--Air Vane Governor Control (Used on type Nos. 0110 to 0150 and all 504500 Series type nos.)
Note:		
		230559 Rod-Mechanical Governor Control (Used on type Nos. 9000 to 9139 and all 505500 Series type nos.)
209	260587	Spring--Air Vane Governor (Used on type Nos. 0110 to 0150 and all 504500 Series type nos.)
	260546	Spring--Mechanical Governor (Used on type Nos. 9000 to 9139 and all 505500 Series type nos.)
216	260449	Link-Choke
217	260189	Spring-Choke Link
218	221198	Washer-Choke Link (3)
219	296688	Governor Housing and Gear Assembly
220	221361	Washer-Thrust
221	230177	Cup-Governor
222	221144	Bracket-Mechanical Governor
Note:		
		298640 Bracket--Mechanical Governor Used on Model 140200 Series type No. 9137.
223	221145	Lever-Governor Control
Note:		
		93458 Washer--Spring Used between Lever and Bushing on Model 140200 Series type No. 9137.
224	91841	Screw--Machine, Fill. Hd.--6-32 x 1/4"
225	230526	Shaft-Governor Lever
226	220381	Follower-Governor Crank
227	296087	Lever Assembly-Governor
228	93100	Screw--Governor Lever
229	220680	Washer-Thrust
230	22826	Washer-Spacer
231	93064	Screw-Governor Housing to Crankcase Cover Mounting Sem
232	260584	Spring-Governor Link (Used only on type Nos. 9000 to 9139 and all 505500 Series

		type nos.)
256	220952	Lever-Speed Adjuster
257	93263	Screw-Machine, Fill. Hd.-#10-32 x 3/8"
258	93062	Screw-Sem
261	93105	Screw-Sem
264	90355	Nut-Hex.-10-32
265	221370	Clamp-Casing
267	92715	Screw-Sem
268	65616	Casing-Control Wire-- 72" long

Note:

If longer casing is required, specify length in inches; if shorter wire is needed, order No. 65616 and cut to required length .

269	26633	Wire-Control- 78" long
-----	-------	---------------------------

Note:

If longer wire is required, specify length in inches; if shorter wire is needed, order No. 26633 and cut to required length.

270	63426	Locknut-Control Wire Casing
271	290568	Lever Assembly- Control
272	290584	Base-Control Wire
273	290642	Lever-Control
274	91237	Washer-Lock- 1/4" x 3/32" x 5/64"
275	92287	Screw-Machine, Rd. Hd.-10-32 x 1/4"
276	22834	Washer-Spacer
277	22368	Washer-Control Lever
278	22725	Washer-Control Lever
279	92306	Screw Cap, Hex. Hd.- 1/4-28 x 5/8"
300	294599	Muffler-Exhaust
301	91245	Nipple-Exhaust

302	91242	Locknut-Muffler and Elbow
303	91246	Elbow--Muffler- 45 degree

Note:

91219 Elbow-Muffler-
45 degree, Street
Used on Model 141200
Series type Nos.
0133, 504536, 504540.
91464 Elbow-Muffler-
90 degree, Street
Used on Model 140200
Series type Nos.
0125 , 0130, 0137,
0138, 0139, 0147,
9137, 504028;
also used on Model
141200 Series type
Nos . 504026 ,504537,

304 295389 Housing-Blower
 Note: 294605 Housing-Blower
 Used on Model 140200
 Series type No. 9137;
 also used on Model
 141200 Series type
 No. 9138.
 296454 Housing-Blower
 When ordering this
 blower housing, order
 No. 297415 screw and
 nut kit to remount the
 belt guard.
 Used on Model 140200
 Series type Nos.
 504014, 504019,
 504024; also used on
 Model 141200 Series
 type Nos. 0114,
 504514, 504519,
 504524, 505514,
 505519, 505524.
 296470 Housing-Blower
 When ordering this
 blower housing, order
 No. 297415 screw and
 . nut kit to remount
 the
 belt guard.
 Used on Model 140200
 Series type Nos.
 504013, 504018,
 504023; also used on
 Model 141200 Series
 type Nos. 504513,
 504518, 504523,
 505513, 505518,
 505523.
 297189 Housing-Blower
 Used on Model 140200
 Series type Nos.
 504012, 504017,
 504022; also used on
 Model 141200 Series
 type Nos. 0112,
 504512, 504517 ,

305 93158 Screw-Blower
 Housing, Guard and
 Tank Bracket to Sup-
 port Bracket Mtg. Sem

Note:

93294 Screw-Blower
 Housing Mounting Sem
 (At Bottom)
 62199 Washer-Plain
 Used on Model 141200
 Series type No.
 505523.

306 221005 Shield-Cylinder

307	93163	Screw-Cylinder Shield Mounting Sem
308	220824	Cover-Cylinder Head
309	296122	Motor-Electric Starter (12 volt) (Electric Auto-Lite No. Med. 4001) For Service on these motors see your near- est "Authorized Auto- Lite Service Station."
310	93268	Bolt-Case
317	296013	Bracket-Starter
320	297162	Pulley-Iidler
321	210961	Pulley-Electric Starter
321A	210899	Pulley-Vee Belt
322	90931	Screw-Cap, Hex. Hd.-1/4-20 x 2-1/4"
323	67318	Belt-Vee
323A	66828	Belt-Vee
324	221067	Screen-Electric Starter
325	22809	Pulley-Rope Starter
326	90681	Screw-Cap, Hex. Hd.-5/16-18 x 5.8"
327	91388	Washer-Lock, 5/16 x 3/32 x 5/64"
328	221122	Guard-Belt
328A	221447	Guard-Belt
329	93246	Screw-Belt Guard Mounting Sem
330	29878	Rope-Starter
332	92284	Nut
333	296834	Armature Assembly
334	93381	Screw-Armature Mounting Sem
335	93381	Screw-Armature Mounting Sem (with 2 washers)
336	296827	Cable-Ignition (Used before Serial No. 38769. Cables used after this serial number are integral with the ignition coil.)
337	29693	Plug-Spark
Note:		293918 Plug-Spark Used on Model 140200 Series type Nos. 9134, 9136, 9138, 505025, 505031, 505032; also used on Model 141200 Series type Nos. 9138, 505527, 505528, 505532.
338	29806	Gasket-Spark Plug
339	29667	Breaker Assembly-- Ignition
340	26018	Spring-Breaker Arm
342	65704	Plunger-Breaker Point
343	29861	Condenser
344	93370	Screw-Condenser

		Mounting Sem
345	221046	Cover-Breaker Point
346	93014	Screw-Breaker Point
		Cover Mounting Sem
347	221808	Switch--Stop
Note:		
		297472 Switch-Stop
		Used on Mech. Gover-
		nor Bracket on Model
		140200 Series type No.
		9137.
348	296110	Plate Assembly-
		Stop Switch Insulator
353	92791	Washer-Lock-
		Shakeproof
354	90576	Nut-Hex.-8-32
356	295413	Wire-Ground
357	91540	Key-Pulley
358	295970	Gasket Set
362	291630	Shield-Spark Plug
		(with stop switch)
Note:		
		66538 Elbow-Spark
		Plug
		Used on Model 140200
		Series type No. 9137;
		also used on Model
		141200 Series type No.
		505531.
363	19165	Puller-Flywheel
		(optional accessory)
370	66432	Washer-Plain
380	62199	Washer-Plain
381	91419	Screw-Cap, Hex.
		Hd.-1/4-20 x 5/8"
382	92666	Screw-Cap, Hex.
		Hd.-1/4-20 x 1/2"
383	89838	Wrench-Spark Plug
392	260455	Spring-Fuel Pump
		Diaphragm
394	270026	Diaphragm
411	93448	Plug-Oil Level Hole
413	230581	Nut-Starter Mounting
432	221377	Cap-Spring
433	93265	Pin-Diaphragm Cover
434	210959	Cover-Diaphragm
435	93141	Screw-Diaphragm
		Cover
454	296178	Housing-Fuel Pipe
		Screen
		(For 3/16" O.D.
		Brass Pipe)
	296191	Housing-Fuel Pipe
		Screen
		(For 1/8" O.D.
		Brass Pipe)
474	296436	Armature-Flywheel
		Generator
475	296562	Rectifier
477	67538	Sleeving-Wire
478	296367	Plate-Generator Mtg.
480	93163	Screw-Support Plate
		and Bracket Mtg. Sem
481	230582	Spacer-Armature Mtg.
482	93234	Screw-Armature
		Mounting Sem

483	296266	Capacitor (Condenser)
484	93166	Screw-Self Tapping, Hex. Hd., Sem
485	296437	Post Assy. --Fuse
486	67135	Fuse-3AG-1-1/2 Amp.
487	296347	Cap-Fuse Holder
488	296579	Block Assy.-Fuse
489	93237	Screw-Fuse Block Mounting Sem
490	67125	Fuse-3AG-7-1/2 Amp.
491	221241	Support-Charger Mtg.
492	296028	Starter-Generator (12 volt) (Delco-Remy No. 1101968 and Pulley- Delco-Remy No. 1949358)

Note:

For service on the
Starter-Generator, see
your nearest "Author-
ized Delco-Remy Ser-
vice Station of United
Motors."

493	211112	Bracket-Lower Starter
497	91203	Screw-Cap, Hex. Hd .-5/16-18 x 1"
500	91325	Washer-Plain
501	295924	Regulator-Voltage (Delco-Remy No. 1118988).
503	221205	Strap-Starter (long)
504	221206	Strap-Starter (short)
505	92278	Nut-Hex.-1/4-20
506	90072	Screw--Machine, Rd. Hd.-8-32 x 5/8"
507	66895	Insulator
508	93294	Screw-Blower Hsg. Mounting Sem
512	296560	Armature and Wiring Assembly
513	296567	Clutch Assembly- Electric Starter
514	91700	Nut-Hex.-1/4-20
517	295423	Pulley-Rope Starter
518	69932	Rope-Starter
523	295940	Cap Assembly- Oil Filler
524	65304	Gasket-Oil Filler Cap
525	230553	Pipe-Oil Filler
527	221428	Clamp-Breather Tube
528	230670	Tube-Breather
529	66928	Grommet-Breather Tube
534	93322	Screw-Air Cleaner
535	27987	Element-Air Cleaner

Note:

294861 Cover and
Filter-Air Cleaner
Used on Model 140200
Series type No. 0143.
Uses: 27795 Gasket
(Internal)

536	297036	Cleaner Assy.-Air
-----	--------	-------------------

Note:

294870 Cleaner Assy.-

		Air (Includes Mtg. Stud) Used on Model 140200 Series type No. 0143. 297778 Cover-- Carburetor (Includes Mtg. Stud) Used on Model 140200 Series type No. 9137.
538	260560	Rod--Speed Control
	Note:	260683 Rod-Speed Control 260684 Link-Speed Control Used between rod and speed adjuster lever on Model 140200 Series type Nos. 0135, 0148, 504025. 260683 Rod-Speed Control 260864 Link-Speed Control Used between Square Rod and Bell Crank on Carburetor . 260845 Link-Speed Control Used between Bell Crank and Governor Lever on Model 140200 Series type No. 9137.
539	221372	Clip-Speed Control
	Note:	66432 Washer 26157 Spring Used on Model 140200 Series type Nos. 0135, 0148, 504025. 221766 Cap-Friction Spring 260847 Spring-Friction Used on Model 140200 Series type No. 9137.
540	221380	Lever-Speed Adjuster
541	22398	Washer-Speed Adjuster Lever to Carburetor
542	91494	Screw-Clip Mtg.
	Note:	91359 Screw-Machine, Fill. Hd.- 10-32 x 3/4" Used on Model 140200 Series type Nos. 0135, 0148, 504025. 92484 Screw-Machine, Fil. Hd.-10-32 x 1/2" Used on Model 140200 Series type No. 9137.
590	93226	Screw-Breaker Mtg.
605	297170	Bracket-Guard
606	221445	Strap-Adjusting
607	93338	Screw-Sem (Bracket to Cylinder)
608	295001	Starter Assembly- Rewind

609	260564	Spring-Throttle Link
612	296811	Pipe-Fuel (Plastic)
634	270167	Washer-Throttle Shaft (Felt)

655	221014	Anchor-Spring
656	260672	Spring-Idler Arm
681	299060	Needle Valve Kit

*Trademark of Briggs & Stratton Corp.

†Included in Gasket Set-Part No. 295970.