

146400 to 146468

Illustrated Parts List

MODEL SERIES

146400 to 146468

TYPE NUMBERS

1010 to 1071

1110 to 1228

1510 to 1540

1610 to 1718


TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW:

- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing or name plate of engine. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.


PRINTED IN U.S.A.



146400 to 146468

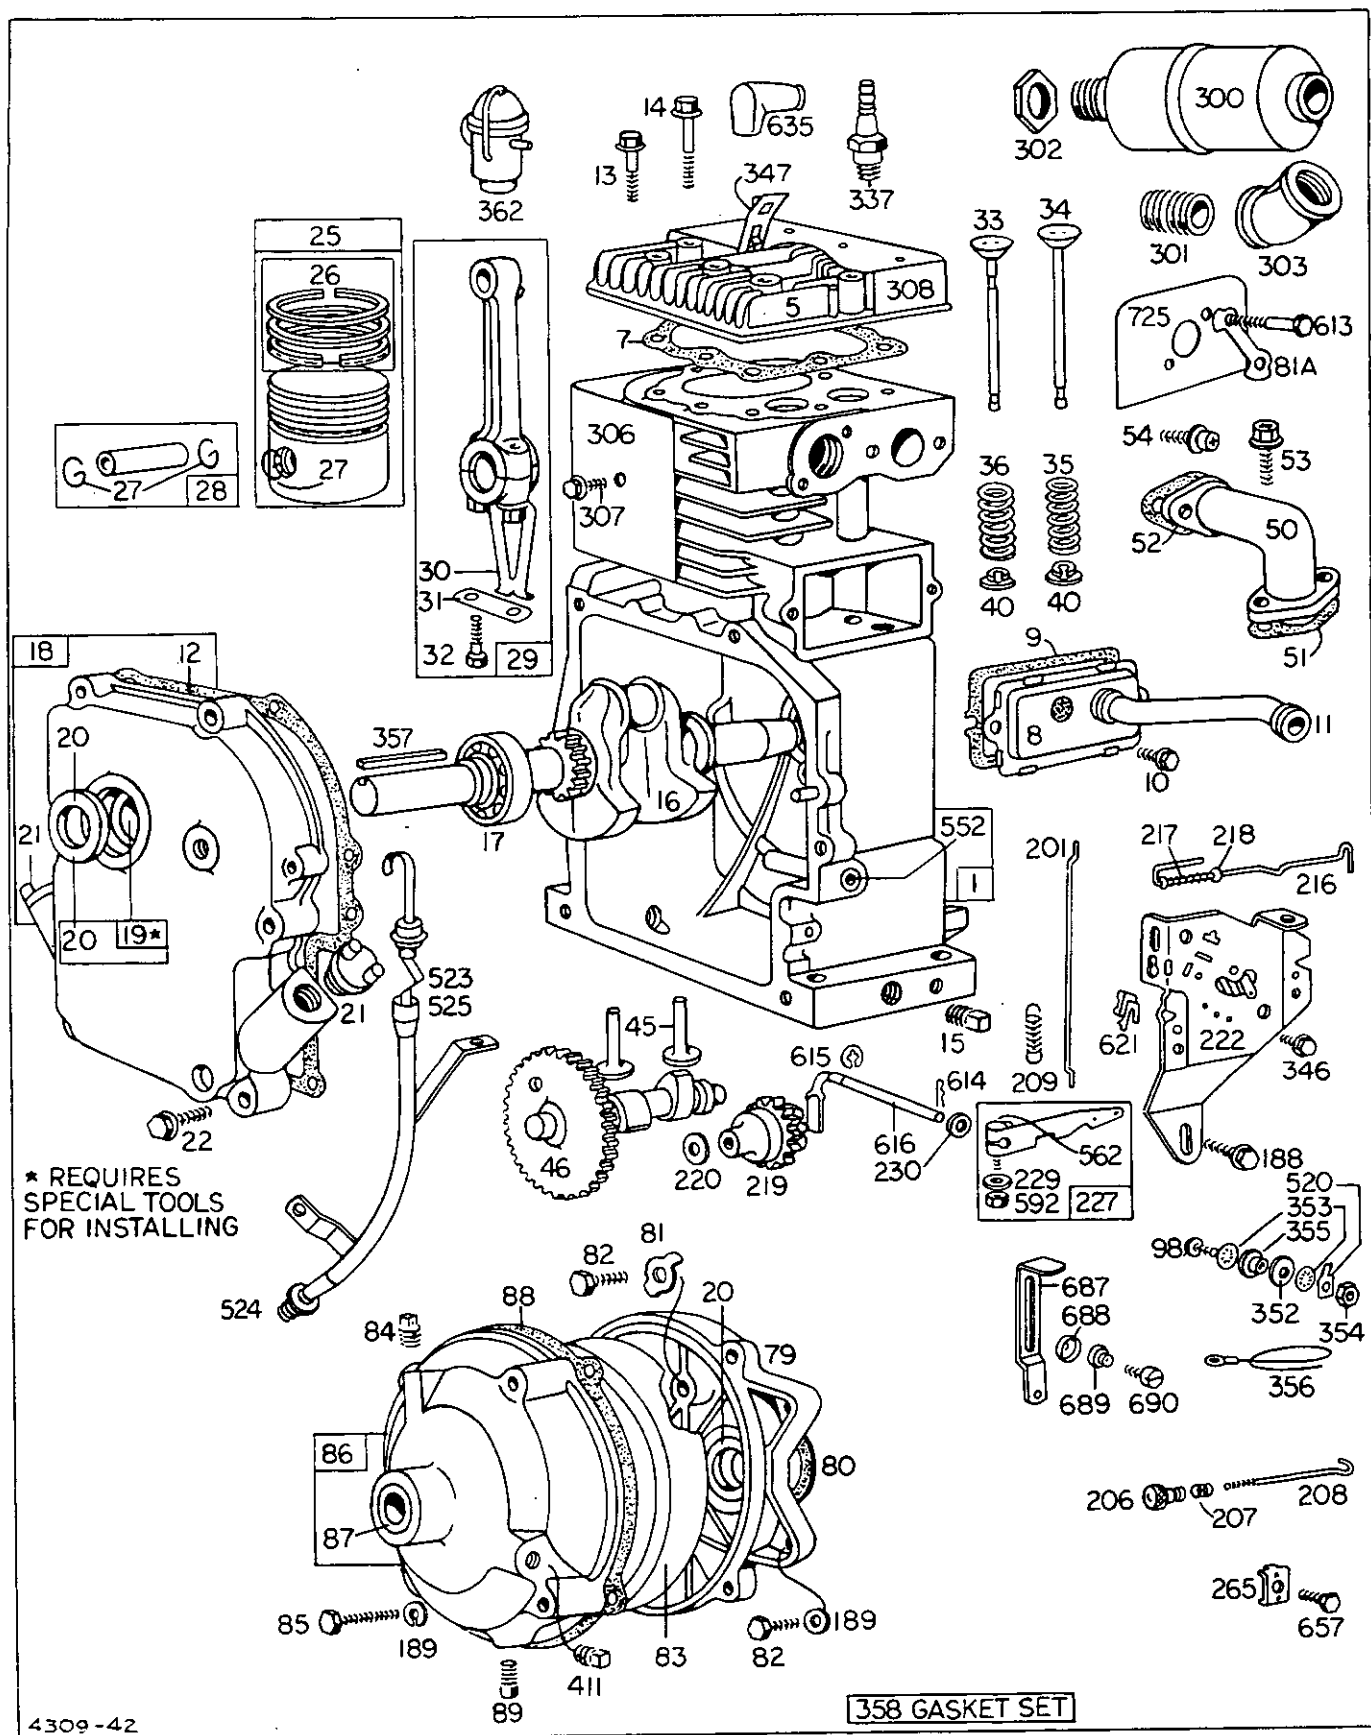


Assemblies include all parts shown in frames.

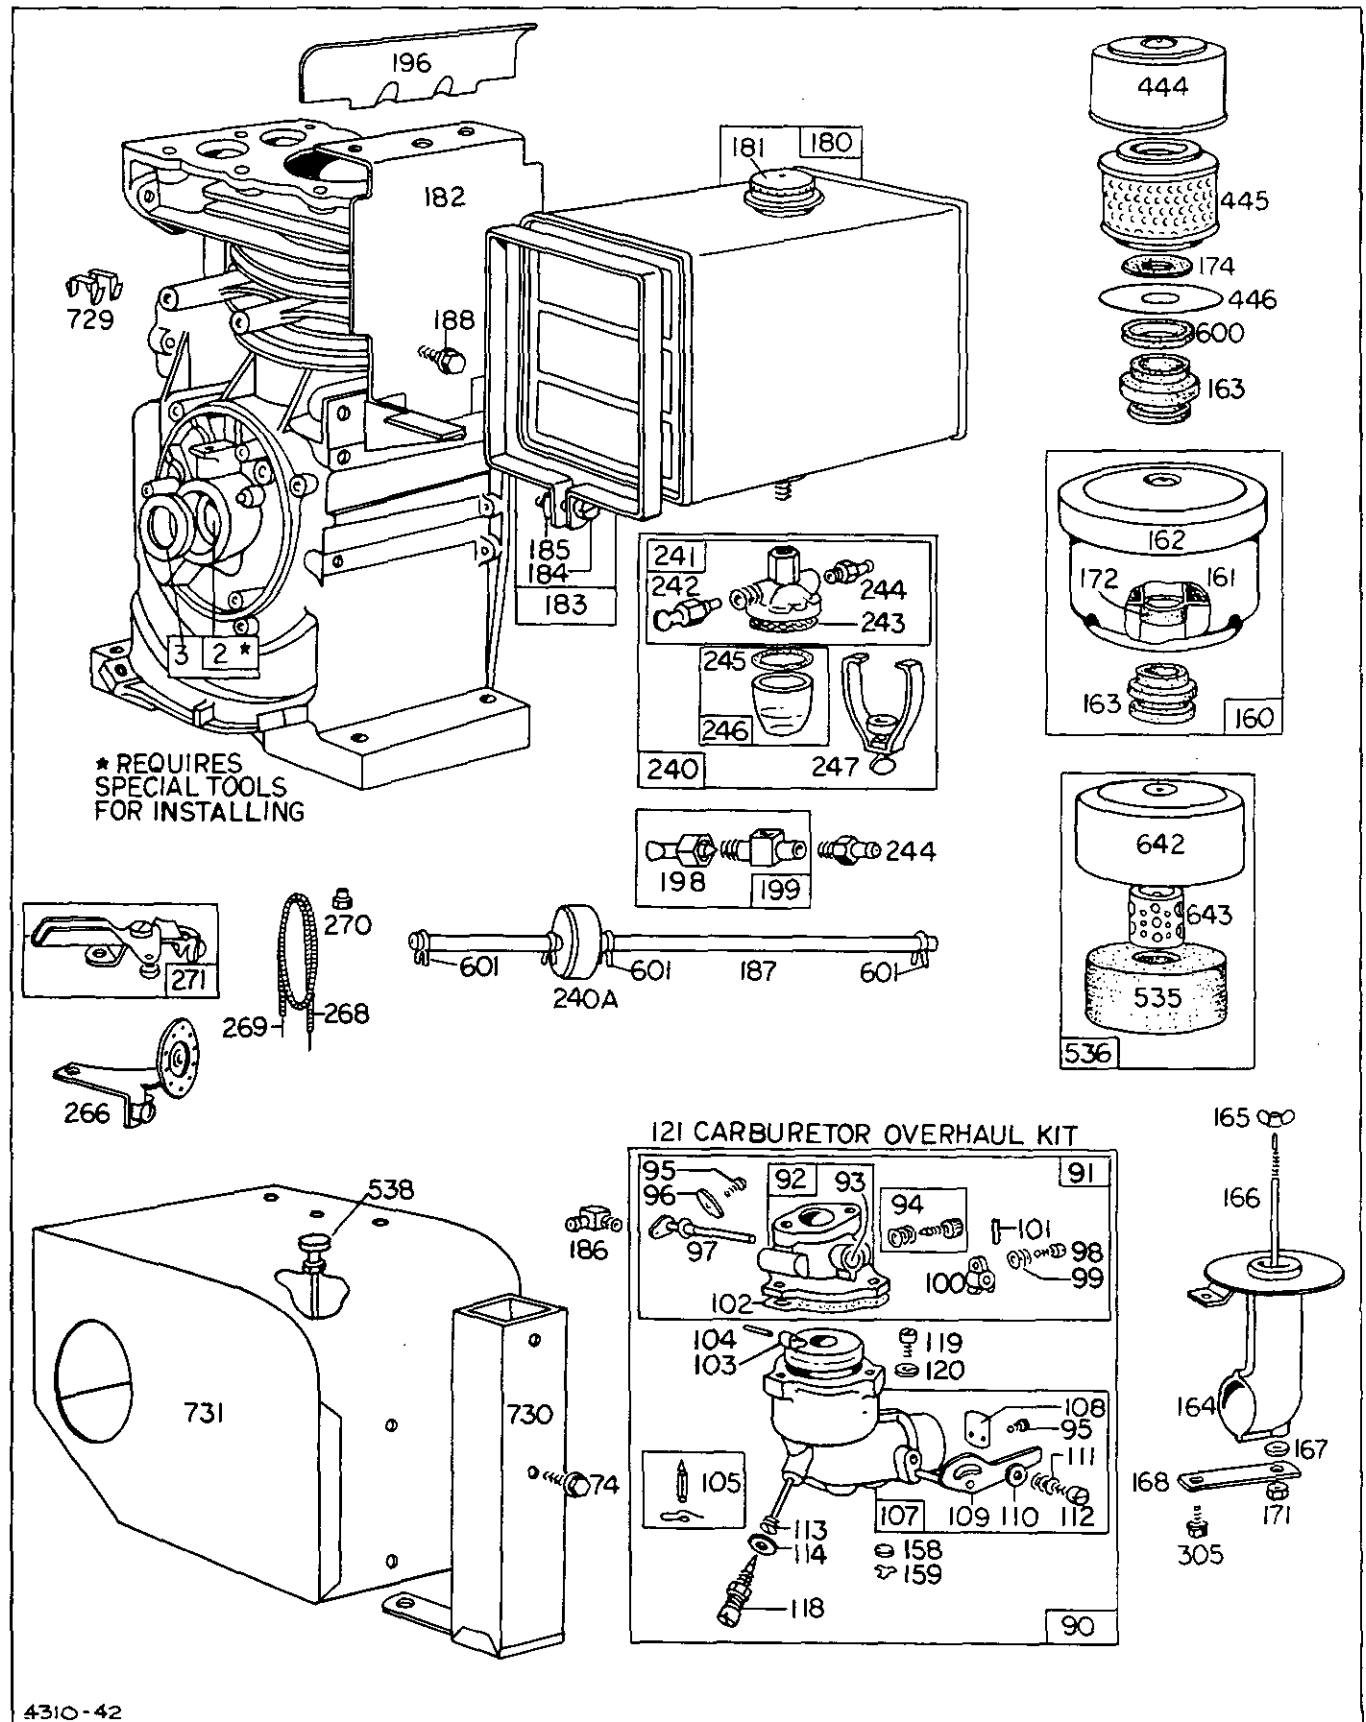


Assemblies include all parts shown in frames.

146400 to 146468

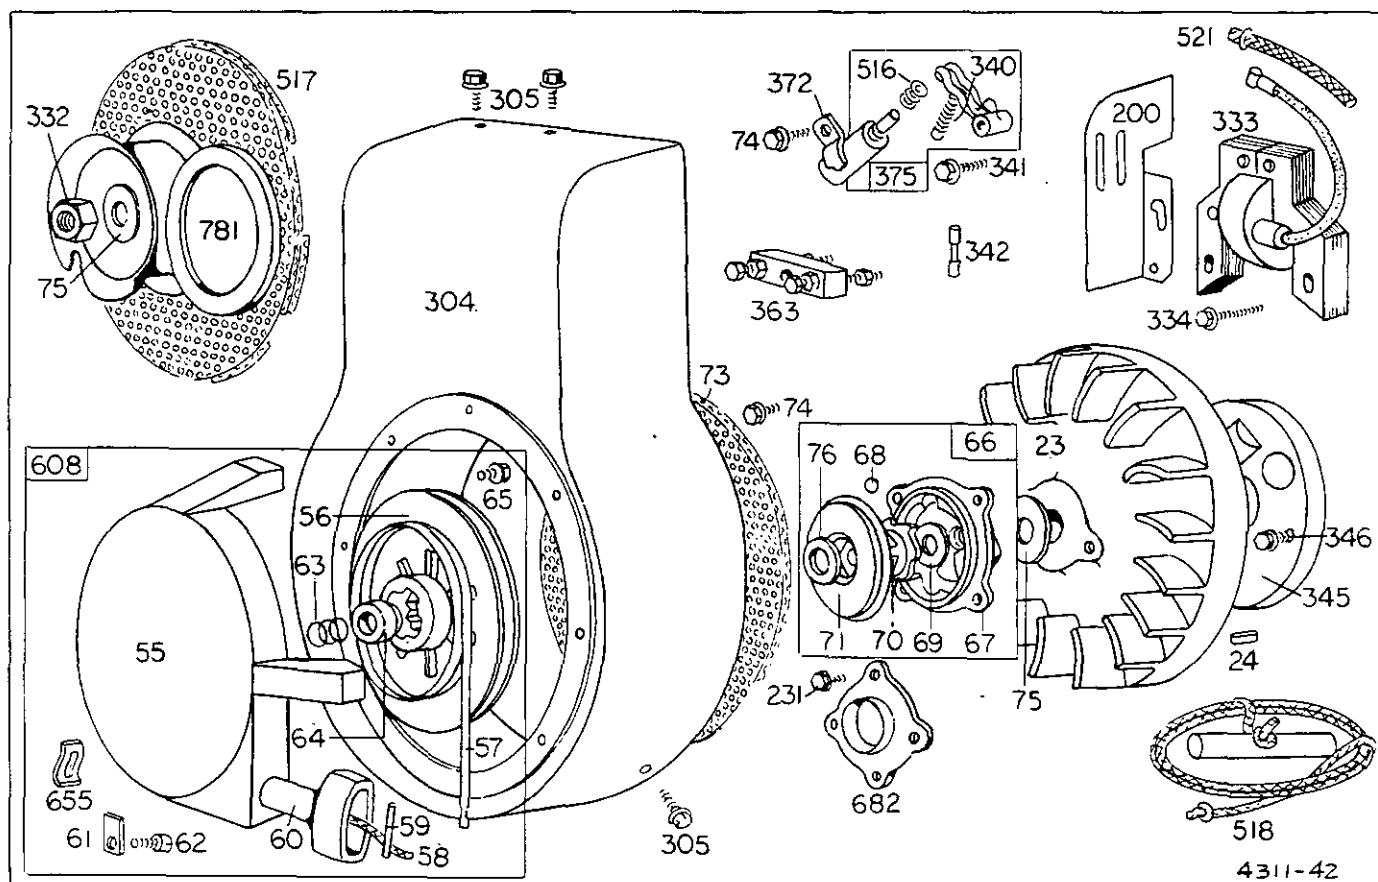

Assemblies include all parts shown in frames.

146400 to 146468

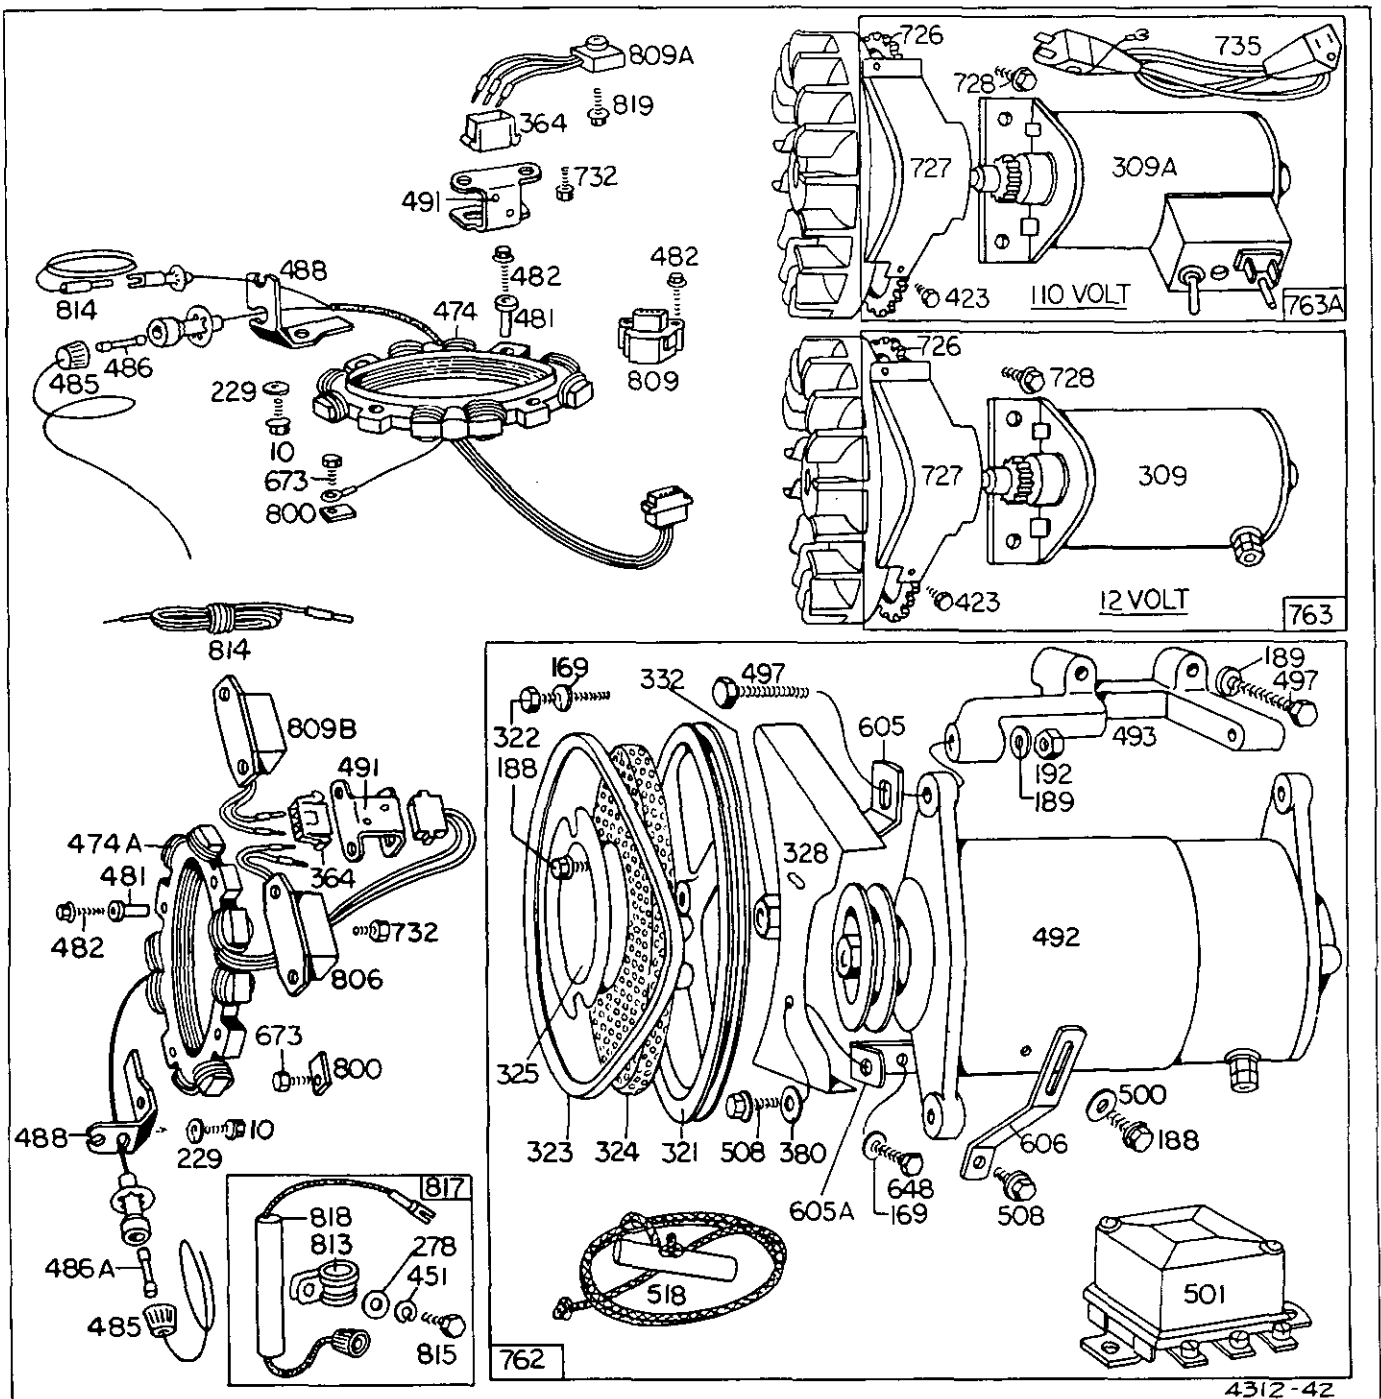

Assemblies include all parts shown in frames.

* Included in Gasket Set—Part No. 295970.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used on type Nos. 1112, 1114, 1159, 1218, 1227, 1612, 1614, 1633. 390180 Flywheel—Magneto Used on type Nos. 1123, 1124, 1125, 1212, 1213, 1623, 1624, 1625, 1706, 1707.						
24	61760	Key—Flywheel	297706		Ring Set—Piston— .020" O.S. Consists of: 211242 Ring— Piston, Comp., Top, .020" O.S. 211245 Ring— Piston, Comp., Center, .020" O.S. 211248 Ring— Piston, Oil, .020" O.S.	34	261055	Valve—Intake
25	297692	Piston Assembly—Std.				35	65906	Spring—Intake Valve
	297693	Piston Assembly— .010" O.S.				36	65906	Spring—Exhaust Valve
	297694	Piston Assembly— .020" O.S.					Note:	26828 Spring—Exhaust Valve
	297695	Piston Assembly— .030" O.S.						Used on type Nos. 1038, 1039, 1070, 1131, 1138, 1142, 1145, 1147, 1152, 1164, 1169, 1171, 1180, 1538, 1539, 1639, 1640, 1661, 1664, 1667, 1674, 1676, 1683, 1694, 1698, 1703, 1710.
MODEL 146400 SERIES PISTON RING SETS			297707		Ring Set—Piston— .030" O.S. Consists of: 211243 Ring— Piston, Comp., Top, .030" O.S. 211246 Ring— Piston, Comp., Center, .030" O.S. 211249 Ring— Piston, Oil, .030" O.S.	40	221596	Retainer—Valve Spring
	Note:	For Chrome Piston Ring Set — Standard Size — order Part No. 298745.					Note:	292260 Rotocoil—Exhaust Valve
26	297815	Ring Set—Piston—Std. Consists of: 210600 Ring— Piston, Comp., Top, Std. 211037 Ring— Piston, Comp., Center, Standard 210602 Ring— Piston, Oil, Std.						93630 Retainer—Exhaust Valve Rotocoil Used on type Nos. 1038, 1039, 1070, 1131, 1138, 1142, 1145, 1147, 1152, 1164, 1169, 1171, 1180, 1196, 1208, 1538, 1539, 1631, 1637, 1639, 1640, 1661, 1664, 1667, 1674, 1676, 1683, 1694, 1698, 1703, 1710.
	297705	Ring Set—Piston— .010" O.S. Consists of: 211241 Ring— Piston, Comp., Top, .010" O.S. 211244 Ring— Piston, Comp., Center, .010" O.S. 211247 Ring— Piston, Oil, .010" O.S.	27	68546	Lock—Piston Pin	45	260933	Tappet—Valve
			28	295840	Pin Assembly—Standard	46	210728	Gear—Cam
				295841	Pin Assy.—.005" O.S.	50	211812	Elbow—Intake
			29	295838	Rod Assy.—Connecting Note: For Connecting Rod with .020" undersize Crankpin Bore order No. 298788.		Note:	210705 Elbow—Intake Used on type Nos. 1039, 1134, 1152, 1155, 1159, 1162, 1187, 1192, 1193, 1203, 1205, 1208, 1211, 1214, 1218, 1220, 1224, 1539, 1634, 1636, 1644, 1648, 1651, 1654, 1656, 1657, 1667, 1679, 1687, 1690, 1694, 1697.
			30	220837	Dipper—Connecting Rod	51	†*65647	Gasket—Intake Elbow
			31	220811	Lock—Conn. Rod Screw	52	*27828	Gasket—Intake Elbow Mtg.
			32	92659	Screw—Connecting Rod	53	93128	Screw—Carburetor Mounting Sem
			33	299885	Valve—Exhaust 390420 Valve—Exhaust Used on type Nos. 1038, 1039, 1070, 1131, 1138, 1142, 1145, 1147, 1152, 1164, 1169, 1171, 1180, 1538, 1539, 1639, 1640, 1661, 1664, 1667, 1674, 1676, 1683, 1694, 1698, 1703, 1710.	54	93208	Screw—Intake Elbow Mounting Sem
						55	295272	Housing—Rewind Starter
							Note:	298402 Housing—Rewind Starter Used on type Nos. 1225, 1662.
						56	295871	Pulley—Rewind Starter
						57	294303	Spring—Rewind Starter
						58	66564	Rope—Rewind Starter (63" long)
							Note:	If longer rope is needed, order No. 66574 and cut to required length.
						59	230228	Pin—Starter Grip

* Included in Gasket Set—Part No. 295970.

† Included in Carburetor Overhaul Kit—Part No. 295938.

146400 to 146468

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
60	66728	Grip—Starter Rope			Used on type Nos. 1144, 1179, 1202, 1203, 1634, 1636, 1644, 1646, 1697, 1714.			Used on type Nos. 1039, 1152, 1208, 1539, 1667.
61	68848	Bumper—Starter Pulley						390776 Body Assy.—
62	93254	Screw—Pulley Bumper Mounting Sem						Lower Carburetor
63	260414	Spring—Ratchet	84	92617	Plug—Breather			Used on type Nos. 1630, 1646, 1655, 1678, 1689, 1695, 1707, 1714, 1715.
64	230543	Adapter—Ratchet Spring	85	91386	Screw—Gear Case Cover Mounting	108	221835	Valve—Choke
65	93067	Screw—Rewind Starter Housing Mounting Sem	86	296053	Cover Assy.—Gear Case		Note:	62872 Valve—Choke
	Note:	230796 Nut—Starter Mounting	87	298423	Seal—Oil			Used on type Nos. 1039, 1152, 1208, 1539, 1667.
		93420 Screw—Sem	88	27328	Gasket—Gear Case Cover	109	298875	Shaft and Lever—Choke
		92290 Washer—Lock	89	91488	Plug—Oil Drain		Note:	299452 Shaft & Lever—Choke
		90289 Washer—Lock (On Blower Housing)	90	299169	Carburetor Assembly (Manual Choke)			Used on type No. 1706.
		Used on type Nos. 1225, 1662.		Note:	299177 Carburetor Assy. (Kerosene)			390669 Shaft and Lever—Choke
66	298798	Clutch Assy.—Rewind Starter			Used on type Nos. 1134, 1162, 1192, 1193, 1220, 1651, 1654, 1656, 1657, 1694.			Used on type Nos. 1630, 1646, 1655, 1678, 1689, 1695, 1707, 1714, 1715.
	Note:	211521 Fan—Starter Clutch			299458 Carburetor Assy. Used on type No. 1706.	110	62899	Washer—Choke Lever
		Uses: 93335 Screw—Sem			299892 Carburetor Assy. (LP Gas)	111	26155	Spring—Choke Lever
		To mount Fan to Starter Clutch			Used on type Nos. 1039, 1152, 1208, 1539, 1667.	112	23123	Screw—Choke Lever
		Used on type Nos. 1225, 1662.			390705 Carburetor Assy. (Choke-A-Matic)	113	†390395	Nozzle—Carburetor
67	211383	Housing—Rewind Starter Clutch			Used on type Nos. 1630, 1646, 1655, 1678, 1689, 1695, 1707, 1715.	114	†68667	Gasket—Nozzle
68	63770	Ball—Clutch	91	299171	Body Assembly—Upper Carburetor	118	†99525	Valve Assembly—Needle
69	66718	Washer—Starter Clutch, Thrust	92	295858	Body—Upper Carburetor		Note:	391213 Valve Assy.—Needle
70	298799	Ratchet—Rewind Starter Clutch		Note:	296725 Body—Upper Carburetor			Uses: 23118 Nut—Needle Valve Packing
71	221653	Washer—Retainer			Used on type Nos. 1039, 1152, 1208, 1539, 1667.			68677 Packing—Needle Valve
73	221796	Screen—Rewind Starter						292226 Retainer Assy.—Jet Needle
	Note:	221668 Screen—Rewind Starter						Used on type Nos. 1134, 1162, 1192, 1193, 1220, 1651, 1654, 1656, 1657, 1694.
		Used on type Nos. 1225, 1662.	93	23108	Bushing—Throttle Shaft	119	90746	Screw—Machine, Fil. Hd.—10-32 x 5/8"
74	93042	Screw—Sem	94	†292681	Valve Assembly—Carburetor Idle	120	92290	Washer—Lock—No. 10 x 1/16" x 3/64"
	Note:	93014 Screw—Rotating Screen Mounting (4) (To Fan Blades)	95	93038	Screw—Throttle and Choke Valve Mtg. Sem	121	295938	Carburetor Overhaul Kit
		93335 Screw—Fan to Clutch Housing Mtg. (4)	96	62940	Valve—Throttle	158	27590	Filter—Carburetor Drain
		Used on type Nos. 1225, 1662.	97	298826	Shaft and Lever—Throttle	159	220521	Retainer—Carburetor Drain Filter
75	220865	Washer—Spring	98	91920	Screw—Machine, Fil. Hd.—8-32 x 5/8"	160	296434	Cleaner Assembly—Air
76	68238	Washer—Ratchet Sealing	99	26157	Spring—Throttle Adjustment	161	296704	Bowl—Air Cleaner
79	296179	Case Assembly—Gear	100	61967	Stop—Throttle	162	296270	Cover and Filter—Air Cleaner
80	27884	Gasket—Gear Case to Crankcase Cover	101	93043	Pin—Throttle Stop	163	*27907	Gasket—Air Cleaner Mtg.
81	220234	Lock—Gear Case Mounting Screw	102	†27918	Gasket—Carburetor Body		Note:	27858 Gasket—Air Cleaner
81A	222263	Lock—Screw	103	99333	Float—Carburetor			Cleaner
82	92502	Screw—Cap	104	†230896	Pin—Float Hinge			Used on type Nos. 1214, 1659.
83	296052	Shaft Assembly—Drive	105	299096	Valve—Fuel Inlet	164	390311	Pipe Assy.—Air Cleaner
	Note:	296298 Shaft Assy.—Drive	107	299170	Body Assembly—Lower Carburetor		Note:	211070 Elbow—Air Cleaner
				Note:	299811 Body Assy.—Lower Carburetor			
					Used on type No. 1706.			
					299895 Body Assy.—Lower Carburetor			

* Included in Gasket Set—Part No. 295970.

† Included in Carburetor Overhaul Kit—Part No. 295938.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used between Air Cleaner and Stamped Steel Air Cleaner Pipe No. 295593 on type Nos. 1214, 1659.	168	222150	Strap—Air Cleaner Pipe			296537 Pipe—Fuel (carburetor to filter)
		295593 Pipe Assy.—Air Cleaner (For Round Oil Bath Air Cleaner)		Note:	22832 Strap—Air Cleaner Pipe			89248 Pipe—Fuel (between filters)
		Used on type Nos. 1150, 1152, 1159, 1208, 1214, 1218, 1633, 1659, 1667, 1669, 1694.			Used on type Nos. 1039, 1134, 1150, 1152, 1159, 1162, 1187, 1192, 1193, 1203, 1205, 1208, 1211, 1214, 1218, 1220, 1224, 1539, 1633, 1634, 1636, 1644, 1648, 1651, 1654, 1656, 1657, 1659, 1667, 1669, 1679, 1687, 1694, 1697, 1714.			92655 Tee
		298410 Pipe Assy.—Air Cleaner	169	90832	Washer—Lock, 1/4" x 3/32" x 5/64"			The above fuel pipes and fitting are used on type Nos. 1134, 1162, 1192, 1193, 1220, 1651, 1654, 1656, 1657, 1694.
		Used on type Nos. 1039, 1134, 1162, 1187, 1192, 1193, 1203, 1205, 1211, 1220, 1224, 1539, 1634, 1636, 1644, 1646, 1648, 1651, 1654, 1656, 1657, 1679, 1687, 1697, 1714.	171	92129	Nut—Hex.—1/4-28	188	93535	Screw—Sem
165	93453	Nut—Wing	172	27906	Gasket—Air Cleaner	189	90366	Washer—Lock, 5/16 x 1/8 x 1/16"
	Note:	92067 Nut—Wing	174	270730	Gasket—Air Cleaner Mtg.	192	91397	Nut—Hex.—5/16-18
		Used on type Nos. 1152, 1208, 1667.	180	290816	Tank Assy.—Fuel (4 quart)	196	22907	Support—Upper Fuel Tank
166	230768	Stud—Air Cleaner (9-1/4" long)		Note:	291488 Tank Assy.—Fuel (6 quart)	198	293934	Valve—Fuel Shut-Off
	Note:	230539 Stud—Air Cleaner (To Elbow) (6-19/32" long)			Used on type Nos. 1136, 1168, 1210, 1223, 1225, 1652, 1662, 1704, 1708.	199	297563	Outlet—Fuel Tank
		230697 Stud (To Carb.) (6-3/16" long)			291513 Tank Assembly—Combination Fuel	200	221760	Guide—Air
		Uses: 91168 Nut—Hex.—1/4-20			Used on type Nos. 1134, 1162, 1192, 1193, 1220, 1651, 1654, 1656, 1657, 1694.	201	260872	Link—Governor
		90832 Washer—Lock	181	69221	Cap—Fuel Tank	206	230149	Nut—Gov. Control Rod
		Used on type Nos. 1214, 1659.		Note:	297866 Cap—Fuel Tank	207	26855	Spring—Gov. Control Rod
		230633 Stud—Air Cleaner (8-13/32" long)			Used on type Nos. 1155, 1159, 1185, 1218, 1633.	208	230841	Rod—Governor Control
		Used on type Nos. 1039, 1134, 1144, 1162, 1187, 1192, 1193, 1203, 1205, 1211, 1220, 1224, 1539, 1634, 1636, 1644, 1648, 1651, 1654, 1656, 1657, 1679, 1687, 1694, 1697, 1714.	182	221906	Bracket—Fuel Tank	209	260695	Spring—Governor
		230639 Stud—Air Cleaner (9-29/32" long)	183	291367	Strap Assy.—Fuel Tank		Note:	260871 Spring—Governor
		Used on type Nos. 1159, 1218, 1633.		Note:	291490 Strap Assembly—Fuel Tank			Used on type Nos. 1010 thru 1228 except as noted below.
		230696 Stud—Air Cleaner (5-7/8" long)			Used on type Nos. 1134, 1136, 1162, 1168, 1192, 1193, 1210, 1220, 1223, 1225, 1651, 1652, 1654, 1656, 1657, 1662, 1694, 1704, 1708.			260695 Spring—Governor
		Used on type Nos. 1152, 1208, 1667.	184	91257	Screw—Machine, Fil. Hd.—1/4-20 x 1-1/2"			Used on type Nos. 1141, 1179, 1200, 1213.
167	66648	Gasket—Air Cleaner Stud	185	90970	Nut—Square—1/4-20	216	261122	Link—Choke
			186	67218	Connector—Fuel Pipe (For flexible fuel pipe)		Note:	261091 Link—Choke
				Note:	63377 Connector—Fuel Pipe			Used on type Nos. 1015, 1130, 1141, 1166, 1179, 1200, 1205, 1213.
					Used on type Nos. 1134, 1162, 1192, 1193, 1220, 1651, 1654, 1656, 1657.	217	261119	Spring—Choke Link
			187	299942	Pipe—Fuel (Flexible) 13-1/2" long		Note:	260903 Spring—Choke Link
				Note:	296004 Pipe—Fuel			Used on type Nos. 1015, 1130, 1141, 1166, 1179, 1200, 1205, 1213.
					Used on type No. 1200.	218	221198	Washer—Choke Link
						219	297656	Gear—Governor
						220	221551	Washer—Thrust
						222	390670	Plate—Governor Control
							Note:	299012 Plate—Governor Control

146400 to 146468

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Used on type Nos. 1010 thru 1228 except as listed below.	278	22358	Washer—Flat			92778 Washer—Lock—Shakeproof
		390166 Plate—Governor Control	300	294599	Muffler—Exhaust			Used to mount Blower Housing on type No. 1640.
		Used on type No. 1155.		Note:	89953 Muffler—Exhaust			93294 Screw—Blower Housing Mtg. Sem
227	299165	Lever Assy.—Governor			Used on type Nos. 1038, 1039, 1141, 1166, 1205, 1538, 1539, 1655, 1678.			(5/8" long) (At Bottom)
229	220680	Washer			297205 Muffler—Exhaust			Used on type Nos. 1113, 1143, 1165, 1183, 1204.
230	221559	Washer—Spacer			Used on type Nos. 1214, 1659.			Shield—Cylinder
231	93064	Screw—Sem			390918 Muffler—Exhaust	306	221005	Screw—Cylinder Shield Mtg. Sem
240	295984	Filter Assembly—Fuel			Uses: 222261 Deflector	307	93163	Note: 221834 Clamp—Hose
	Note:	99910 Filter Assy.—Fuel			93014 Screw—Deflector			66432 Washer—Clamp.
		Used on type Nos. 1134, 1162, 1192, 1193, 1220.			Used on type Nos. 1703, 1712, 1717.			Used to mount Fuel Pipe to Cylinder Shield on type No. 1167.
		295977 Filter Assy.—Fuel	301	91245	Nipple—Exhaust	308	220824	Cover—Cylinder Head
		Used on type No. 1167.	302	91242	Locknut—Muffler and Elbow		Note:	221153 Cover—Cyl. Head
240A	298090	Filter—Fuel (In Fuel Pipe)	303	91246	Elbow—Muffler—45°			Used on type Nos. 1132, 1143, 1165, 1169, 1184, 1209, 1210, 1638, 1661, 1675, 1692, 1701, 1702, 1708, 1712, 1717.
241	296005	Cover Assembly—Fuel		Note:	91219 Elbow—Muffler, 45°, Street	309	390307	Motor—Starting
	Note:	99909 Cover Assembly—Fuel Filter			Used on type Nos. 1170, 1216, 1632, 1690, 1695, 1699.		(*)	American Bosch—Arma No. SMH 12-A11
		Used on type Nos. 1134, 1162, 1192, 1193, 1220.			91464 Elbow—Muffler, 90°, Street		(**)	(on Commutator End Cap)
		296019 Cover Assembly—Fuel Filter			Used on type Nos. 1038, 1039, 1150, 1152, 1159, 1161, 1175, 1179, 1182, 1188, 1195, 1207, 1208, 1215, 1218, 1224, 1538, 1539, 1633, 1641, 1646, 1649, 1658, 1667, 1669, 1679, 1688, 1700, 1706, 1711, 1714.			No. MMO.5ML
		Used on type No. 1167.			Used on type Nos. 1038, 1039, 1150, 1152, 1159, 1161, 1175, 1179, 1182, 1188, 1195, 1207, 1208, 1215, 1218, 1224, 1538, 1539, 1633, 1641, 1646, 1649, 1658, 1667, 1669, 1679, 1688, 1700, 1706, 1711, 1714.			(on Main Housing)
242	295913	Valve—Fuel Shut-Off			299412 Housing—Blower			Replacement Parts for
243	22547	Screen—Fuel Filter			Used on type No. 1155.			Starting Motor No. 390307
244	230318	Connector—Fuel Pipe			299860 Housing—Blower			(see list below)
	Note:	53029 Connector			Used on type Nos. 1112, 1114, 1123, 1124, 1125, 1159, 1212, 1213, 1218, 1227, 1612, 1614, 1623, 1624, 1625, 1633, 1706, 1707.			Drive Assembly
		Used on type Nos. 1134, 1162, 1192, 1193, 1220.			299412 Housing—Blower			(complete)
		67218 Connector—Fuel Pipe			Used on type No. 1155.			B & S No. 390443 (*)
		Used on type No. 1167.			299860 Housing—Blower			B & S No. 299963 (**)
245	*68477	Gasket—Fuel Filter Bowl		Note:	Used on type Nos. 1113, 1143, 1165, 1181, 1183, 1204, 1215, 1224, 1613, 1675, 1679, 1682, 1702, 1705.			Drive End Cap Assembly
					299861 Housing—Blower			w/Bearing and Bracket
246	298683	Bowl—Fuel Filter			Used on type No. 1200.			B & S No. 390444 (*)
247	99665	Yoke—Fuel Filter			299862 Housing—Blower			B & S No. 390454 (**)
265	221535	Clamp—Casing			Used on type Nos. 1225, 1662.			Armature Assembly
266	291460	Control—Throttle			Screw—Sem (1/2" long)			including Washers.
268	65616	Casing—Control Wire—72" long			Note: 92666 Screw—Cap, Hex. Hd.—1/4-20 x 1/2			B & S No. 390446 (*)
	Note:	If longer casing is required, specify length in inches; if shorter wire is needed, order No. 65616 and cut to required length.						B & S No. 390456 (**)
269	26633	Wire—Control—78" long						Housing Assembly
	Note:	If longer wire is required; specify length in inches; if shorter wire is needed, order No. 26633 and cut to required length.						including Field Coils.
270	63426	Locknut—Control Wire Casing	305	93158				B & S No. 390447 (*)
271	290568	Lever Assy.—Control		Note:				B & S No. 390452 (**)
								Commutator End Cap Assy. including Bushing, Brushes and Springs.
								B & S No. 390448 (*)
								B & S No. 390455 (**)

* Included in Gasket Set—Part No. 295970.

11

146400 to 146468

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
508	93294	Screw—Sem (5/8" Long) Note: For 1/2" long Screw order Part No. 93158.	562	92613	Bolt—Governor Lever	726	299543	Gear, Flywheel Ring (Includes mounting parts)
	93128	Screw—Sem (3) Used to mount Guard to Guard Bracket on type No. 1200.	592	90356	Nut—Hex. —10-24	727	390233	Cover and Shield—Starter Note: 221940 Guard—Ring Gear Uses: 92034 Screw (2) 90366 Washer—Lock (2)
516	260374	Spring—Connector	600	270055	Spacer—Air Cleaner Mtg.			Used to mount Guard on type Nos. 1114, 1159, 1218, 1227, 1614, 1633.
517	295423	Pulley—Rope Starter Note: 297887 Pulley—Rope Starter Used on type Nos. 1146, 1635, 1644.	601	93053	Clamp—Fuel Pipe	728	93523	Screw—Sem
518	69932	Rope—Starter	605	297187	Bracket—Guard (Upper) Note: 298758 Bracket—Guard Used on type No. 1200.	729	221907	Clip—Ground Wire
521	298529	Shielding—Ignition Cable Note: 299367 Shielding—Ignition Cable Uses: 92704 Terminal 66298 Insulator—Spark Plug Used on type No. 1640.	605A	297171	Bracket—Guard (Lower)	730	299384	Stack Assembly
			606	221443	Strap—Adjusting Note: 221790 Strap—Adjusting Used on type No. 1200.	731	299391	Hood Assembly
			608	295001	Starter Assy.—Rewind (With standard length rope) Note: For Starter Assembly with longer than standard rope order No. 298107.	732	93490	Screw—Sem
					298340 Starter Assy.—Rewind Used on type Nos. 1225, 1662.	735	390966	Cord—Starter (Includes Adaptor Plug)
523	390848	Cap and Dipstick—Oil Filler Note: 295923 Cap Assy.—Oil Filler Uses: 65304 Gasket—Oil Filler Used on type Nos. 1038, 1039, 1208, 1214, 1538, 1539, 1659, 1667.	613	93704	Screw—Muffler Mounting	762	297335	Electric Starter-Generator Kit—12 Volt (Low Position)
			614	93306	Cotter—Hair Pin	763	390211	Electric Starter Kit—12 Volt (Gear Drive)
			615	93307	Retainer—E-Ring	763A	299914	Electric Starter Kit—110 Volt (Gear Drive)
			616	230842	Crank—Governor	781	280068	Cap—Starter Pulley
			621	297472	Switch—Stop	800	222212	Retainer
			635	66538	Elbow—Spark Plug	806	390545	Regulator—Alternator Used on type Nos. 1123, 1124, 1213.
524	68838	Seal—Filler Tube to Crankcase	642	221468	Cover—Air Cleaner			
			643	280001	Cup—Air Cleaner	809	390892	Rectifier—Alternator
525	299284	Tube—Filler Note: 230553 Pipe—Oil Filler Used on type Nos. 1038, 1039, 1208, 1214, 1538, 1539, 1659, 1667.	648	91439	Screw—Cap, Hex. Hd.—1/4-20 x 3/8"	809A	390692	Rectifier—Alternator
			655	221014	Anchor—Spring	809B	390546	Rectifier—Alternator Used on type Nos. 1123, 1124, 1213. Note: 390408 Rectifier—Alternator Uses: 230982 Spacer—Mounting Used on type No. 1212.
			657	93496	Screw—Sem	813	93660	Clamp—Diode
535	270093	Element—Air Cleaner Note: 270067 Element—Air Cleaner Used on type Nos. 1152, 1208, 1667.	673	93438	Screw	814	390867	Wire Assy.—Alternator
			682	211516	Shield—Starter Clutch Note: 211521 Fan—Starter Clutch Uses: 93335 Screw To mount Fan to Starter Clutch Used on type No. 1225, 1662.	815	93661	Screw—Sem
536	390400	Cleaner Assy.—Air Note: 297595 Cleaner Assy.—Air Used on type Nos. 1152, 1208, 1667.	687	298957	Slide—Friction Control	817	390624	Diode Assy.—Isolation For Isolation Diode Kit for 7 Amp. Alternator — order No. 390607.
			688	221766	Cap—Friction Spring			
538	390167	Rod—Control	689	260847	Spring—Friction	818	390608	Diode—Isolation
552	230843	Bushing—Governor Shaft	690	92484	Screw—Machine, Fil. Hd.—10-32 x 1/2"	819	93680	Screw—Sem
			725	221885	Shield—Heat			