

170700 to 170799

Illustrated Parts List

Model Series 170700 to 170799

TYPE NUMBERS
0010 through 0017
0110 through 0161
0510 through 0732
1010 through 1026
1110 through 1271
5015 through 5142

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 012301 are listed herein only as 0123. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering the Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Number are listed. THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.

PRINTED IN U.S.A.


COPYRIGHT®



170700 to 170799

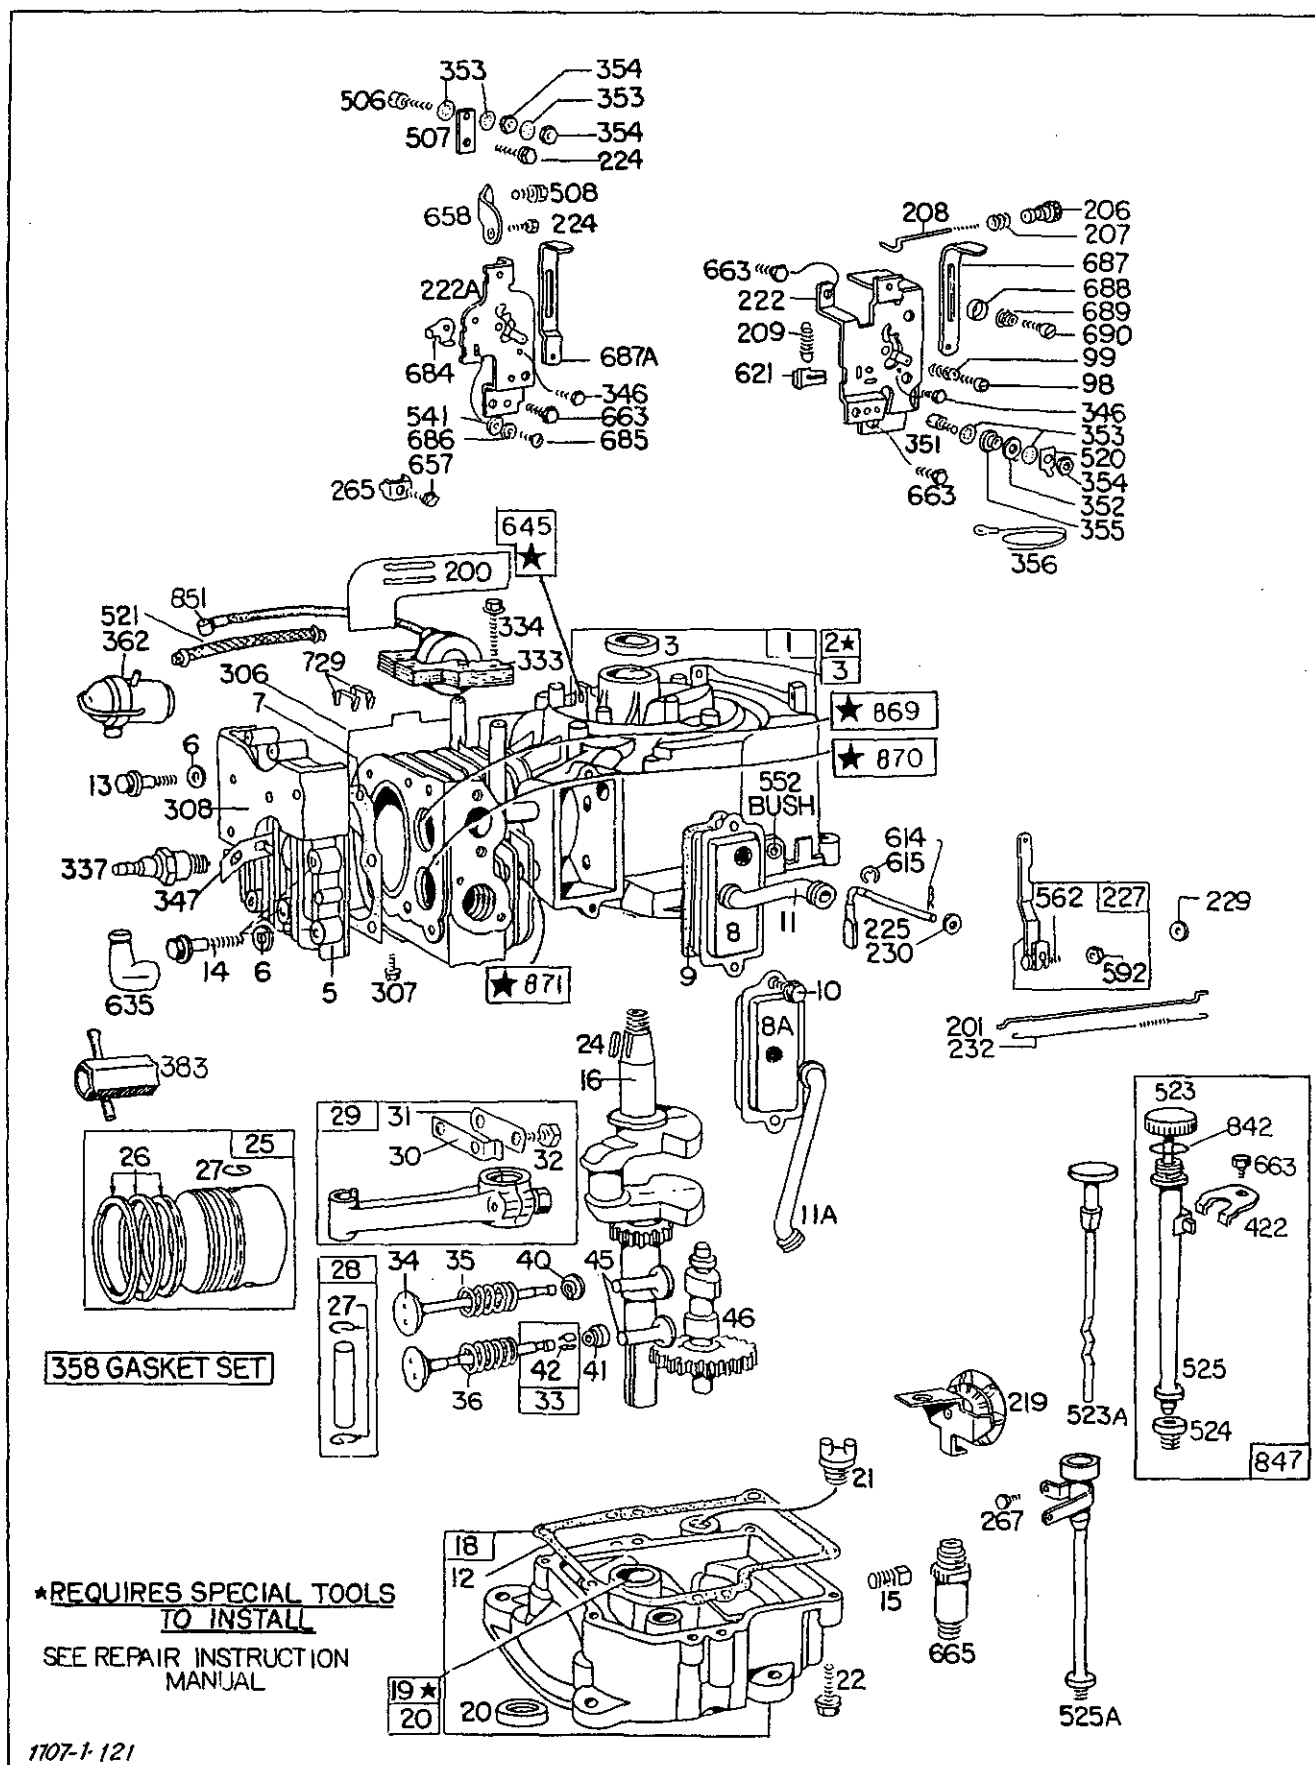


Assemblies include all parts shown in frames.

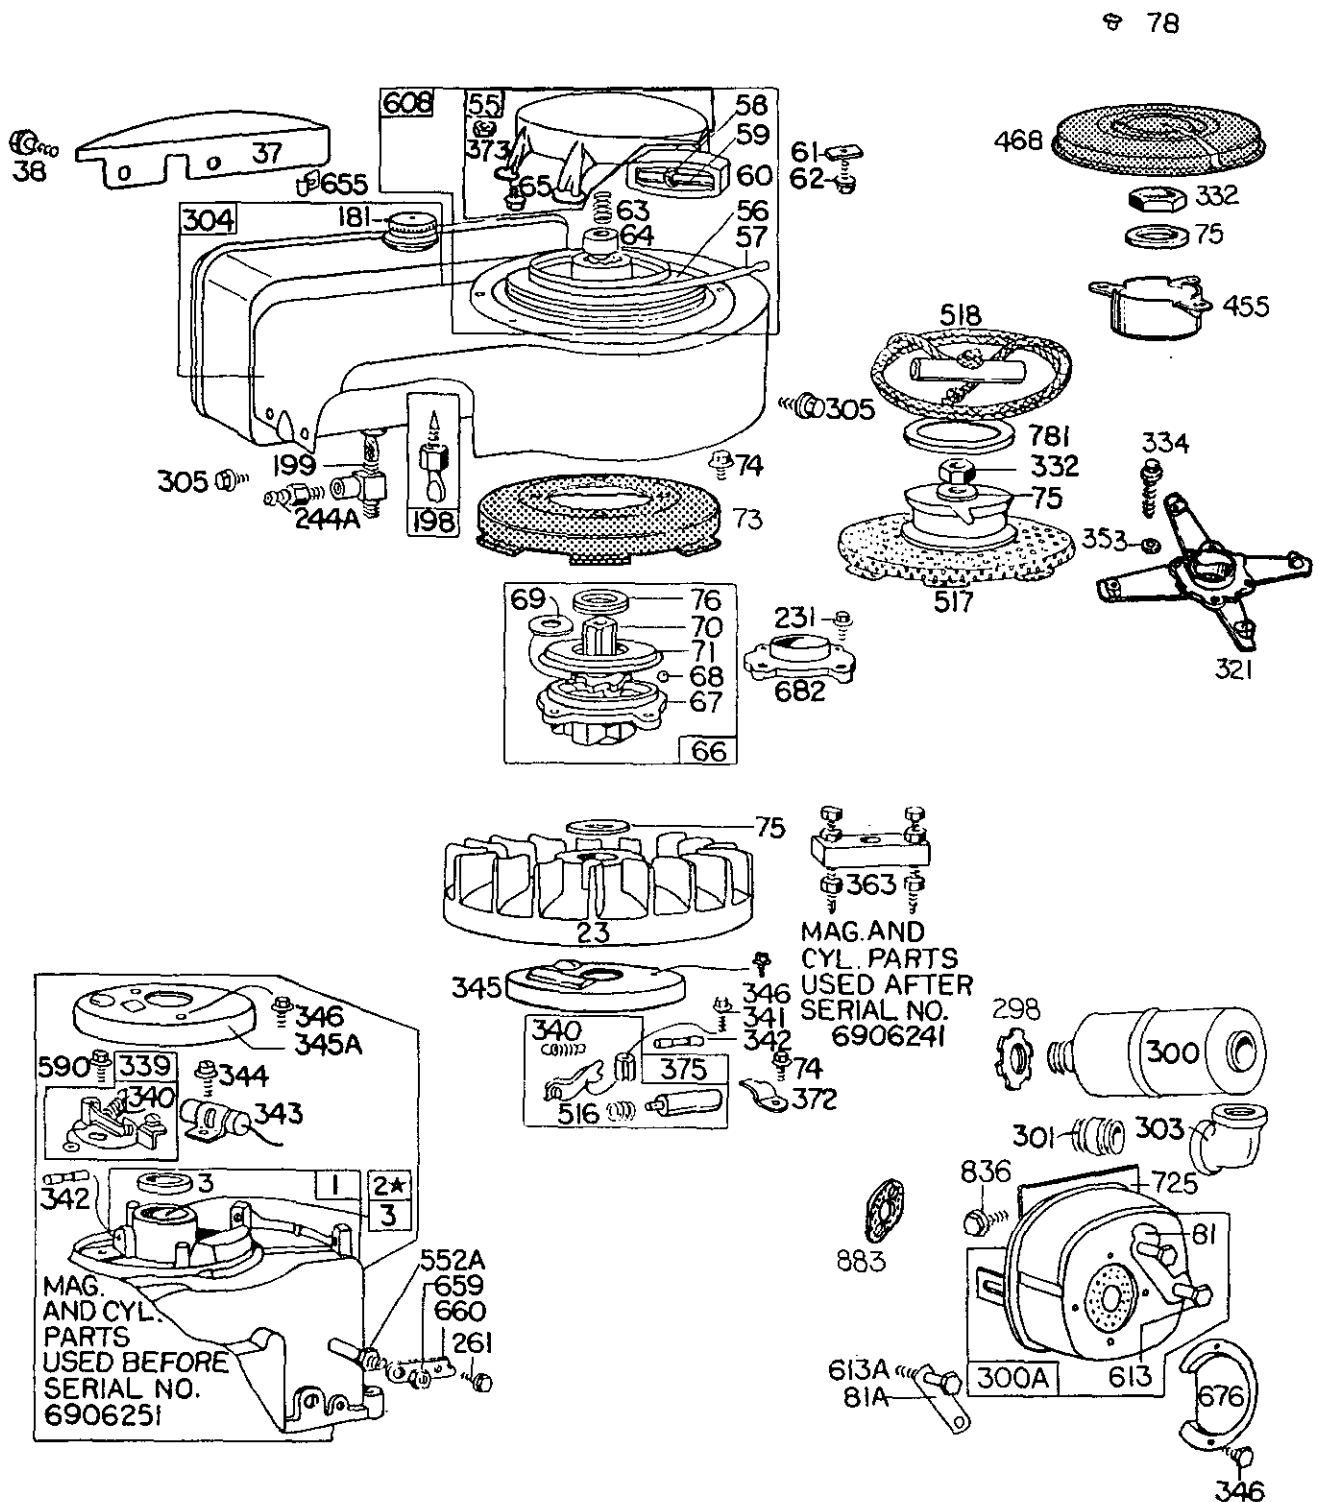

1707-2-121


Assemblies include all parts shown in frames.

170700 to 170799

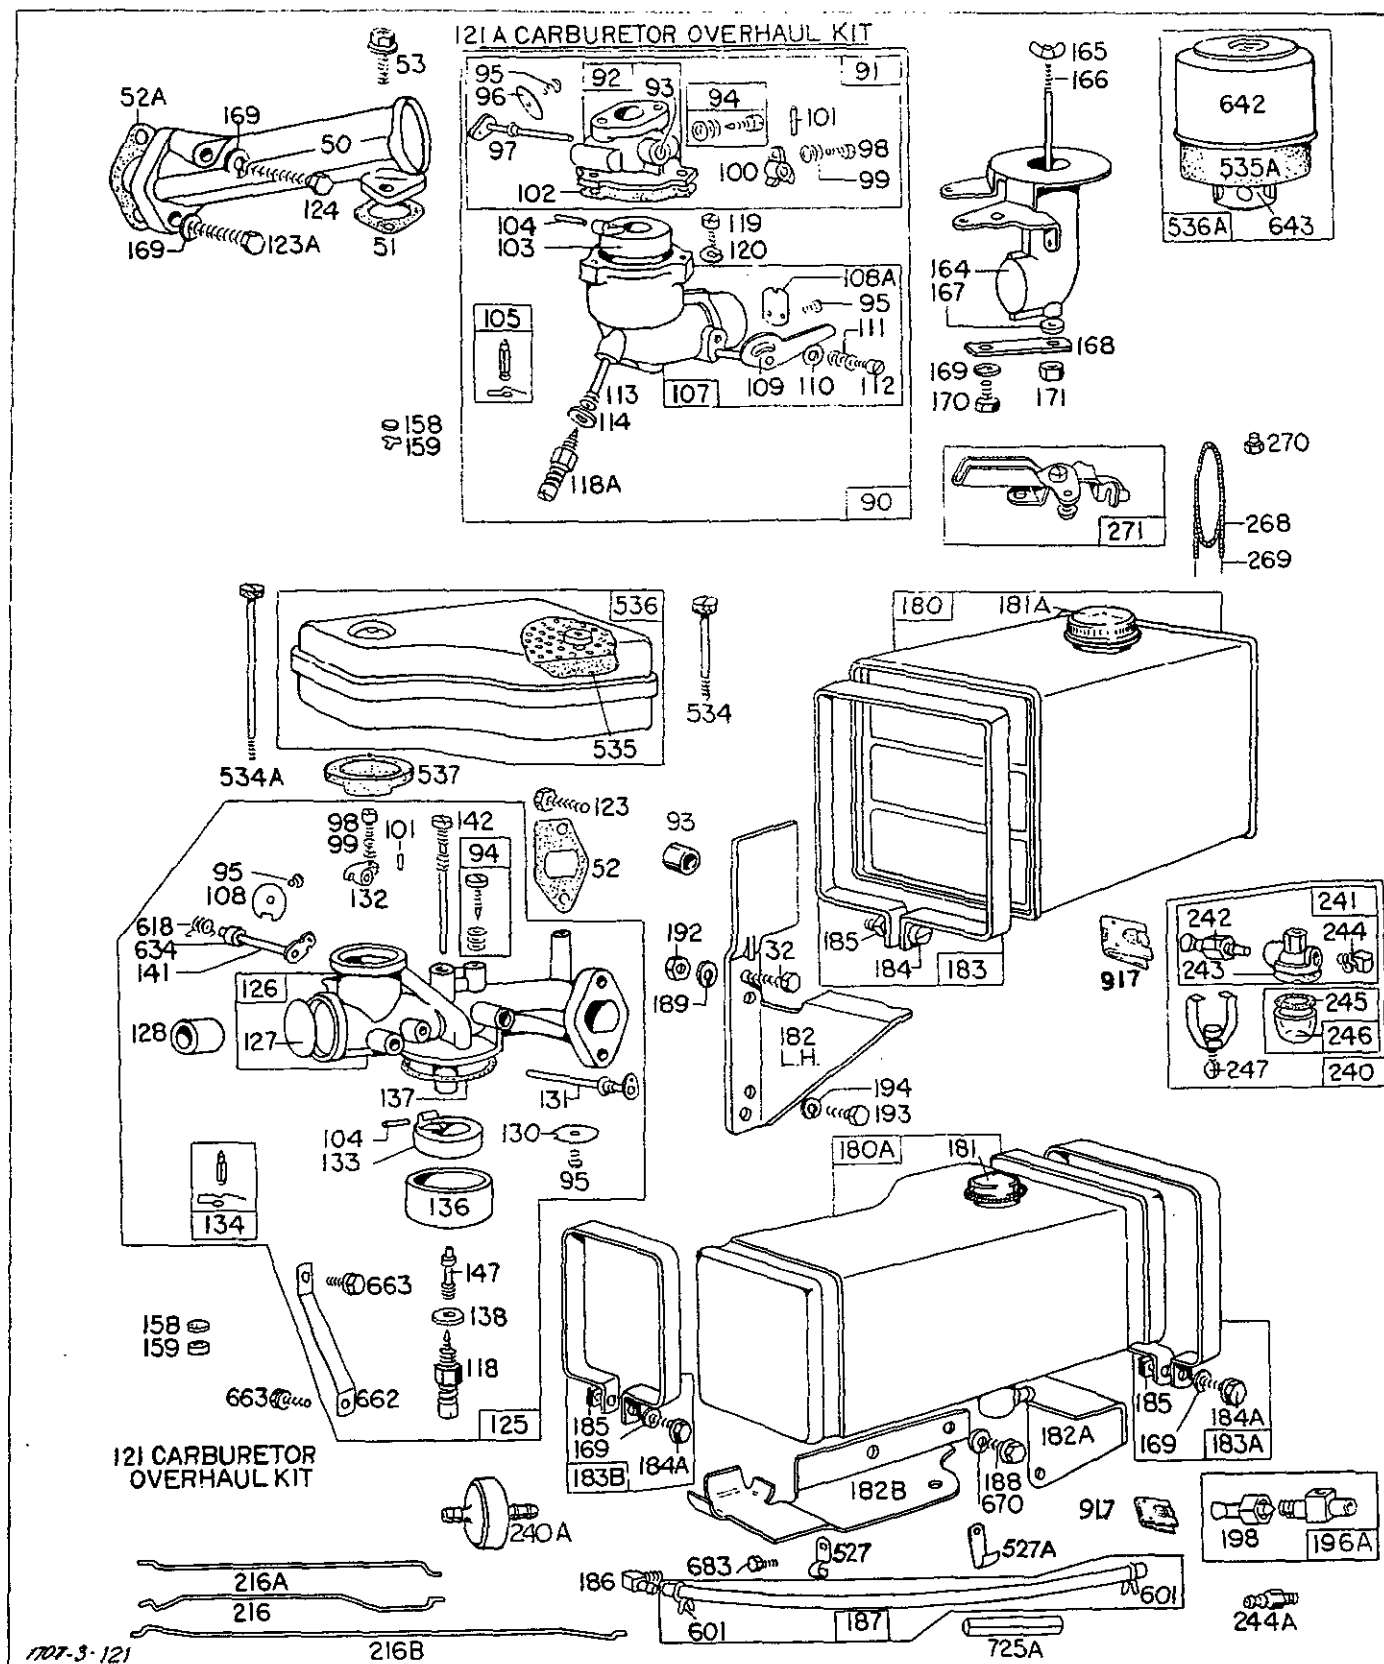


Assemblies include all parts shown in frames.

170700 to 170799

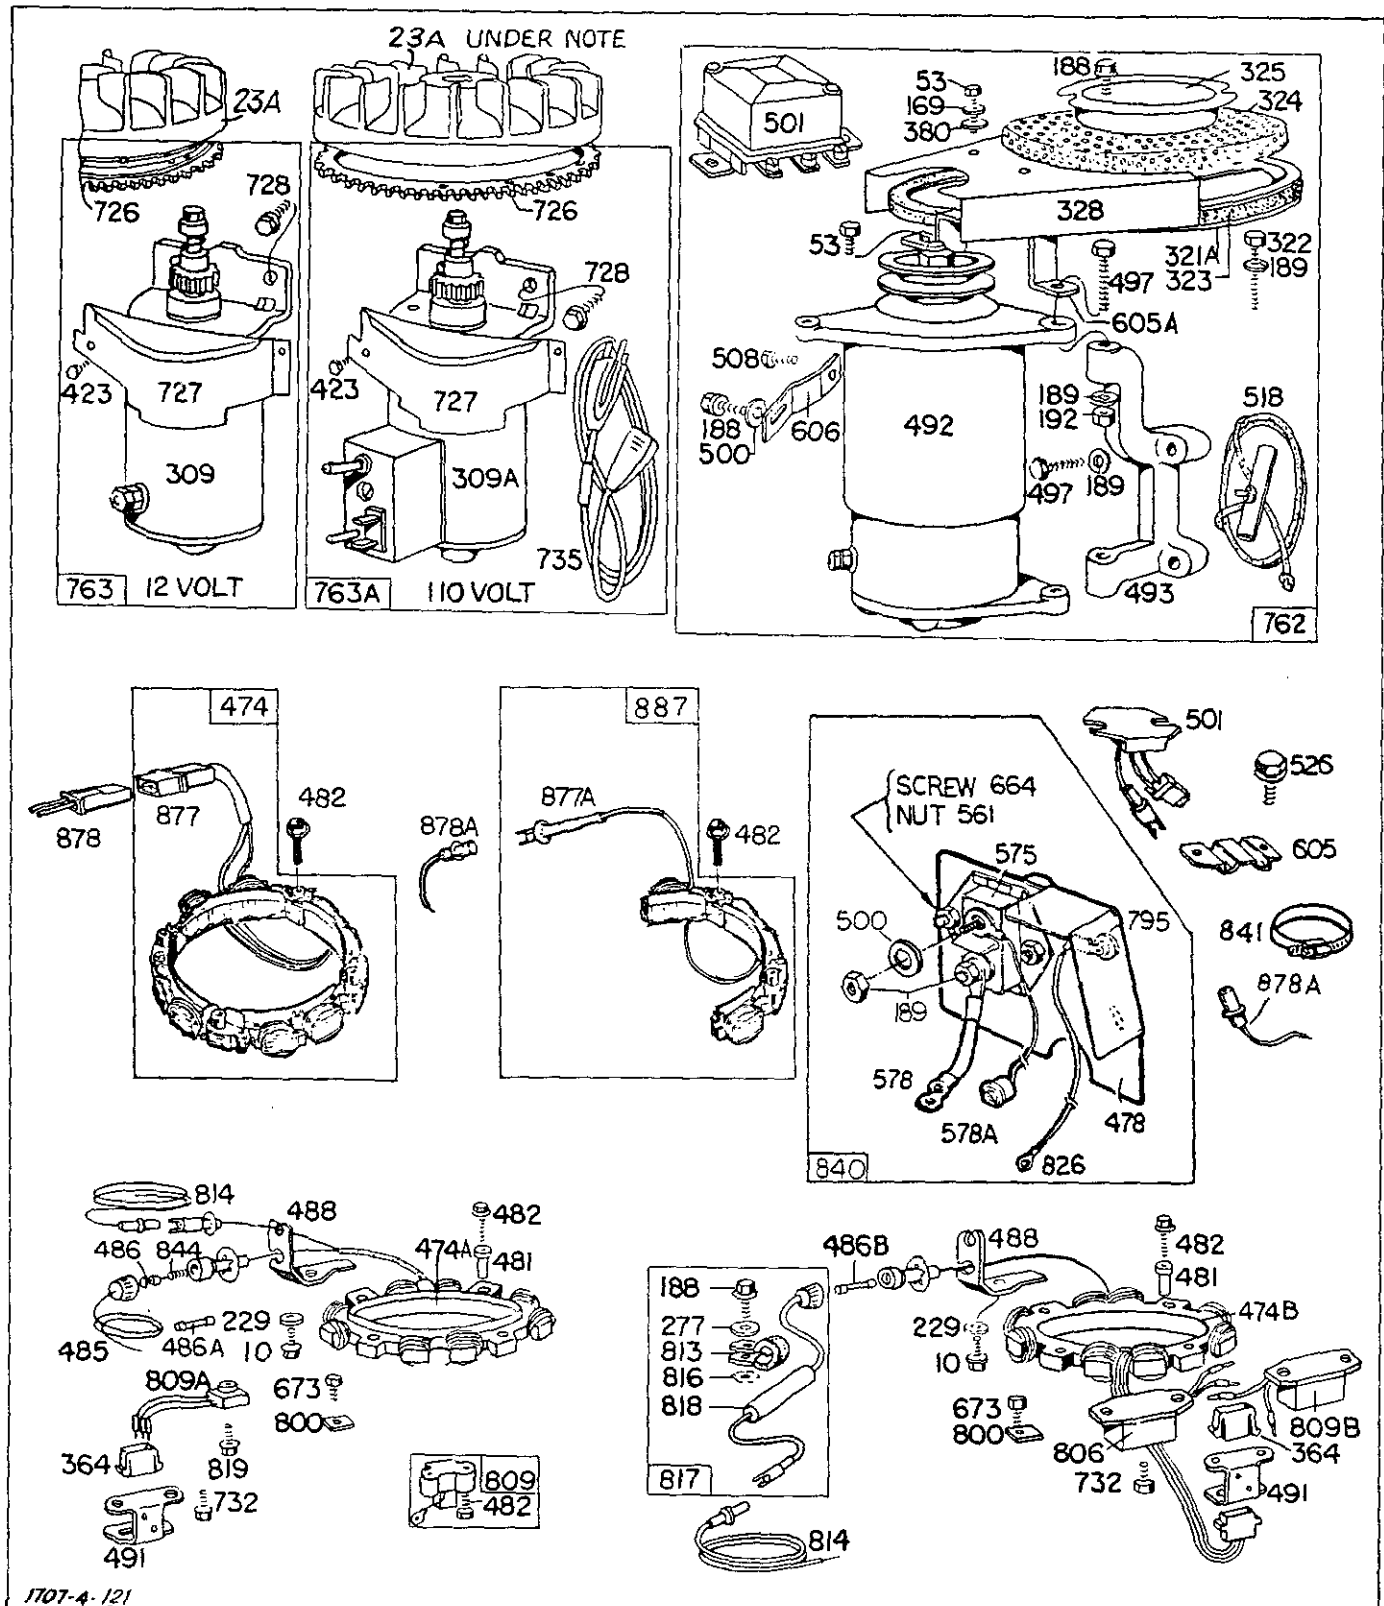


Assemblies include all parts shown in frames.

170700 to 170799

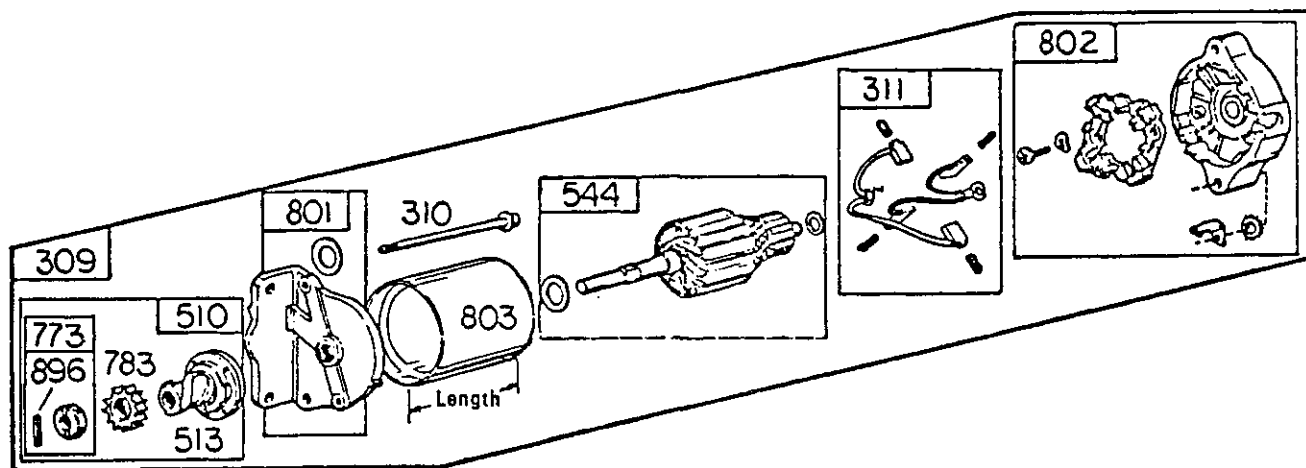

Subject		Ref. No. 309 and 895	Ref. No. 510	Ref. No. 801	Ref. No. 310	Ref. No. 803	Ref. No. 544	Ref. No. 311	Ref. No. 802
Manufacturer		Motor and Drive Assembly	Drive Assembly	Drive End Cap Assembly	Thru Bolt Assembly	Housing Assembly	Armature Assembly	Brush Assembly	Comm. End Cap Assembly
B&S	Housing Length								
120 V	3-1/2"	393851	391461*	393228	93934	393433	393607	393612	393833

*Includes #391135 Clutch Assembly (Ref. No. 513)
 #280104 Gear (Ref. No. 783)
 #391462 Retainer and Pin (Ref. No. 773)
 # 93754 Roll Pin (Ref. No. 896)

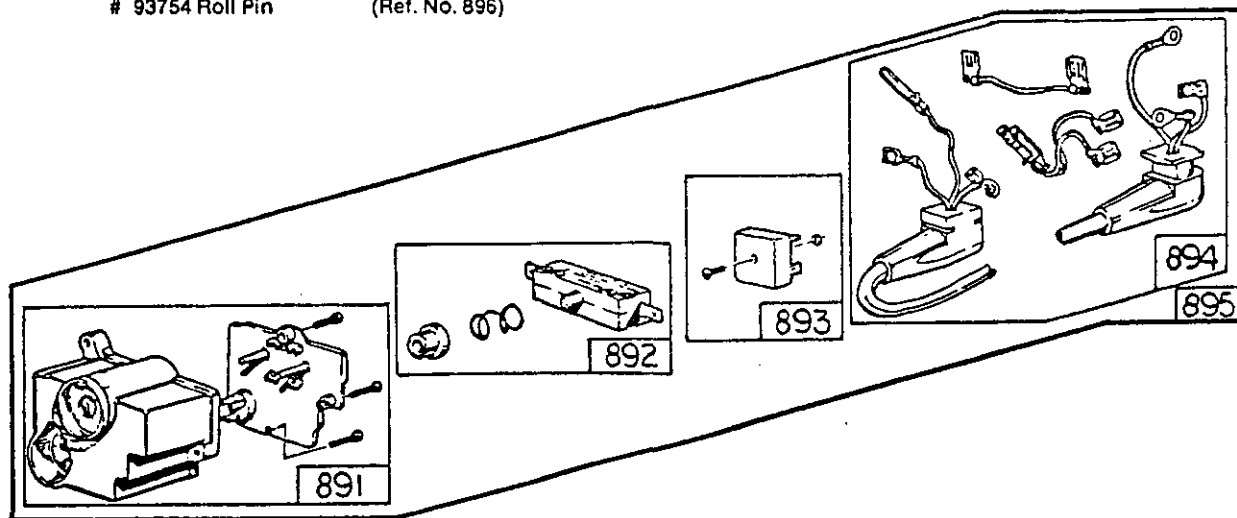


Subject	Ref. No. 891	Ref. No. 892	Ref. No. 893	Ref. No. 894	Ref. No. 895
Manufacturer	Housing Group	Switch Group	Rectifier Group	Lead Group	Control Group
Briggs & Stratton					
120 V	393705	393708	393707	393706	393486

1707-5-121

Assemblies include all parts shown in frames.

170700 to 170799

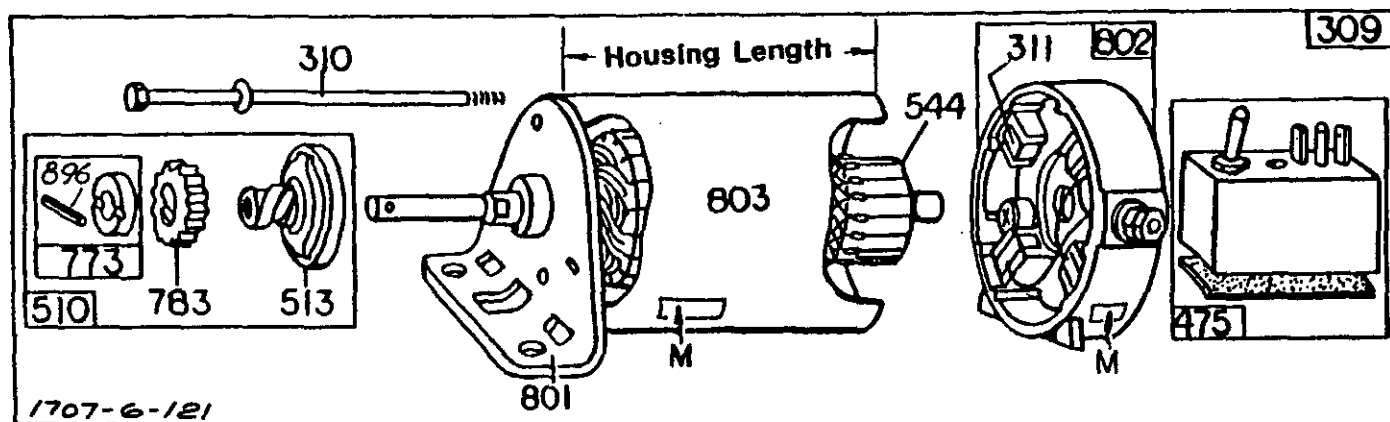

Subject	Ref. No. 309	Ref. No. 510	Ref. No. 801	Ref. No. 544	Ref. No. 803	Ref. No. 802	Ref. No. 311	Ref. No. 310	Ref. No. 475
Starter Motor Mfr. and Motor Model Number	Motor and Drive Assy.	Drive Assembly	End Cap Assy. Drive	Armature Assembly	Housing Assembly	End Cap Assy. Commutator*	Brush Assembly	Thru Bolt Assembly	Rectifier Assembly
American Bosch									
12V SMH 12-A11	390307	390443	390444	390446	390447	390448	390449	390450	
12V SME 12-A8	390307R	390094	390092	390086	390097	390089		390080	
12V 01965-23-MO-30-SM	392749R	391461**	390444	391607	390447	390448	390449	390450	
110V SME 110-C3	393143R	390094	390091	390088	390096	390098	390081	390080	390099†
110V SME 110-C6	299556	390094	390092	390088	390095	390098	390081	390080	390084
110V SME 110-C8	299764	390094	390093	390088	390096	390098	390081	390080	390099
110V 06026-28-MO-30-SM	393143	390443	393682	393692	393781	393691		393690	393510
Mitsubishi									
12V MMO-5ML	390307R	299963	390454	390456	390452	390455	390990	299962	
12V MMO-4FL	390307R	299963	390454	390457	390453	390455	390990	299962	
12V MOOIT02271	392749R	391461**	391585	391584	390452	390455	390990	93771	
110V J282188	393143R	299963	299964	299968	299967	299965		299962	299966
Briggs & Stratton									
Housing Length									
‡12V 3-1/16"	390838	391461**	392061	390837	392744	390846	391705	391706	
‡12V 3-1/16"	392749	391461**	392061	392747	392744	390846	391705	391706	
12V 3-21/32"	394805	391461**	394856	392747	393625	395537	395538	94003	

*Includes Brush Set

**Includes #391135 Clutch Assembly (Ref. No. 513)

#280104 Gear (Ref. No. 783)

#391462 Retainer and Pin (Ref. No. 773)

#93754 Roll Pin (Ref. No. 896)

†Uses #392247 Switch Shield Assembly

R - Replacement motor. Parts shown are for original equipment motor.

M - Only Briggs & Stratton motors are not marked in these areas.

NOTE: **Style Identification** of 12 Volt Motors. New Style: Thru Bolt Heads are Located on the Brush End Head Side.

‡Old Style: Brush End Head is 13/16" Wide.

170700 to 170799

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	392004	Cylinder Assembly		Note:	93583 Stud—Cylinder Head(1)		260973	Crankshaft
2	295962	Bushing—Cylinder			22963 Washer(1)			Used on Type Nos.
	Note:	Requires special tools for installation.			Used on Type Nos.			0127, 0138, 0150,
3	294606	Seal—Oil			1131, 1132, 1172,			0636, 0637, 0643,
5	211592	Head—Cylinder			1173, 1187, 1190,			0657, 0662, 0680,
6	22963	Washer—Flat			1228, 1229, 5020,			0689, 0707, 0714,
7	*270430	Gasket—Cylinder Head			5026, 5027, 5125,			0715, 0718, 0719,
8	299848	Breather Assembly			5126, 5127, 5128,			0729, 1135, 1136,
		Used on Model 170700			5134.			1142, 1149, 1167,
		Series Type Nos. 0510	14	93211	Screw—Cylinder Head			1168, 1186, 1193,
		and up.			(2-21/32" long)			1195, 1200, 1201,
	Note:	391406 Breather Assy.		Note:	93583 Stud—Cylinder Head(1)			1205, 1208, 1210,
		Used on Type Nos.			22963 Washer(1)			1216, 1217, 1220,
		5015, 5020, 5025,			Used on Type Nos.			1221, 1224, 1269,
		5026, 5027, 5125,			1131, 1132, 1172,			1270, 1271, 5027,
		5126, 5127, 5128,			1173, 1190, 1228,			5125, 5126, 5135,
		5129, 5130, 5131,			1229, 1262, 5020,			5136.
		5132, 5133, 5134,			5026, 5027, 5125,			261008 Crankshaft
		5135, 5136, 5137,			5126, 5127, 5128,			Used on Type Nos.
		5140.			5134.			0652, 0668, 0678,
8A	294988	Breather Assembly	15	91084	Plug—Oil Drain			0681, 0685, 1196,
		Used on Model 170700		Note:	93418 Plug—Oil Drain			1198, 1209, 1211,
		Series Type Nos. 0010			(Hex. Socket)			1213, 1226, 1239,
		to 0165.			Used on Type Nos.			1240, 1249, 1262,
9	*27803	Gasket—Valve Cover			0655, 0674, 0692,			5129, 5130, 5132,
10	93394	Screw—Sem			0712, 0716, 0717,			5140, 5141.
11	280005	Tube—Breather			0725, 0730, 1144,			261143 Crankshaft
		Used on Model 170700			1145, 1147, 1223,			Used on Type Nos.
		Series Type Nos. 0510			1236.			1172, 1173, 1190,
		and up.			93448 Plug—Oil Drain			1228, 1229.
11A	67068	Tube—Breather			(Hex. Socket)			261189 Crankshaft
		Used on Model 170700			Used on Type Nos.			Used on Type No.
		Series Type Nos. 0010			0701, 0702, 0726,	18	392548	Sump—Oil
		to 0165.			0727, 1129, 1130,		Note:	296594 Sump—Oil
	Note:	298747 Tube—Breather			1131, 1132, 1172,			Used on Type No.
		Used on Type Nos.			1173, 1189, 1190,			1207.
		0121, 0129, 0133,			1227, 1228, 1229,			390479 Sump—Oil
		0138, 0140, 0141,			1234.			Used on Type Nos.
		0144, 0145, 0146,						0701, 0702, 0726,
		0151, 0160, 0161.						0727, 1129, 1130,
12	*27750	Gasket—Crankcase	16	260609	Crankshaft			1131, 1132, 1172,
		Cover—1/64" thick		Note:	260950 Crankshaft			1173, 1189, 1190,
					Used on Type Nos.			1227, 1228, 1229,
	*27876	Gasket—Crankcase			0120, 0124, 0130,			1234.
		Cover—.005" thick			0640.			
	*27877	Gasket—Crankcase			260970 Crankshaft	19	295963	Bushing—Oil Sump
		Cover—.009" thick			Used on Type Nos.		Note:	Requires special tools
13	93113	Screw—Cylinder Head			0143, 0148, 0644,			for installation.
		(2-5/16" long)			0666, 0674, 0692.	20	391086	Seal—Oil
						21	66768	Plug—Oil Filler
						22	93585	Screw—Sump Mtg. Ser

*Included in Gasket Set—
Part No. 299577.

170700 to 170799

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	298260	Flywheel—Magneto Note: 392040 Flywheel—Magneto Used on Type Nos. 1129, 1227.	MODEL 170700 SERIES PISTON RING SETS:			35	65906	Spring—Intake Valve
23A	391983	Flywheel and Ring Gear Assy.—Magneto For use on engines <i>WITH ALTERNATOR</i> (Includes aluminum ring gear). For use only with starter motors with Plastic Drive Gear. Note: 392034 Flywheel and Ring Gear Assy.—Magneto For use only on electric starter engines <i>WITHOUT ALTERNATOR</i> (Includes aluminum ring gear). For use only with starter motors with Plastic Drive Gear. 390180 Flywheel—Magneto For use on engines <i>WITH ALTERNATOR</i> —machined to accept <i>STEEL</i> ring gear (not included). 299375 Flywheel—Magneto For use on engines <i>WITHOUT ALTERNATOR</i> —machined to accept <i>STEEL</i> ring gear (not included).	26	391669	Ring Set—Piston—Std.	36	26828	Spring—Exhaust Valve
				391670	Ring Set—Piston—.010" O.S.	37	222475	Guard—Flywheel Note: 222402 Guard—Flywheel Uses: 22963 Washer—Spacer(4) Used on Type No. 5125.
				391671	Ring Set—Piston—.020" O.S.	38	93777	Screw—Sem
				391672	Ring Set—Piston—.030" O.S.	40	221596	Retainer—Intake Valve (Used with Valves with groove in stem after Code No. 6711030) Note: 230477 Retainer—Intake Valve Spring 230476 Pin—Intake Valve Spring Retainer Used before Code No. 6711060 with Valves with hole in stem except those with Rotocoil (Ref. No. 41).
			27	68546	Lock—Piston Pin	41	292260	Rotocoil—Exhaust Valve
			28	295840	Pin Assy.—Piston—Standard (2-7/32" Long)	42	93630	Retainer—Exhaust Valve Rotocoil(2) (Used after Code No. 6906241) Note: 230569 Retainer—Exhaust Valve Rotocoil Spring Retainer (Used before Code No. 6906251)
				295841	Pin Assembly—Piston—.005" O.S. (2-7/32" Long) Used after Code No. 6702151. Note: 298401 Pin Assy.—Piston—Standard (2-15/32" Long) 294681 Pin Assy.—Piston—.005" O.S. (2-15/32" Long) Used before Code No. 6702161.	45	260933	Tappet—Valve
			29	295839	Rod Assy.—Connecting Note: For Connecting Rod with .020" Undersize Crankpin Bearing order No. 298788.	46	211689	Gear—Cam
			30	221725	Dipper—Conn. Rod	50	295759	Elbow—Intake Note: 211459 Elbow—Intake (Not Available) Used on Type Nos. 0121, 0129, 0133, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.
24	61760	Key—Flywheel	31	220811	Lock—Conn. Rod Screw	51	†*270684	Gasket—Intake Elbow
25	299573	Piston Assy.—Standard	32	92659	Screw—Conn. Rod			
	299566	Piston Assembly—.010" O.S.	33	390419	Valve—Exhaust			
	299567	Piston Assembly—.020" O.S.	34	261055	Valve—Intake (Used after Code No. 6906241)			
	299568	Piston Assembly—.030" O.S.			Note: 299884 Valve—Intake (Grooved Stem—includes Retainer No. 221596) Used before Code No. 6905251. For Pins and Retainers for Valves with hole in stem, see Ref. No. 40.			

*Included in Gasket Set—
Part No. 299577.

†Included in Carburetor Overhaul
Kit—Part No. 394693.

170700 to 170799

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
52	‡270538	Gasket—Carburetor Mounting	59	230228	Pin—Starter Grip	68	63770	Ball—Clutch
	Note:	*270824 Gasket—Carburetor Mtg. Used on Type Nos. 1244, 1263, 5015, 5020, 5025, 5026, 5027, 5125, 5126, 5127, 5128, 5129, 5130, 5131, 5132, 5133, 5134, 5135, 5136, 5137.	60	66728	Grip—Starter Rope	69	66718	Washer—Starter Clutch, Thrust
52A	*27828	Gasket—Intake Elbow Mounting		Note:	Grip used on Type Nos. 1239, 1244, 5139 must be ordered from equipment manufacturer MTD Part No. 11263.	70	298799	Ratchet—Rewind Starter Clutch
53	93357	Screw—Sem	61	68848	Bumper—Starter Pulley	71	221653	Washer—Retainer
	Note:	93158 Screw—Bracket to Blower Housing (1) and Guard to Bracket (3) Used on Type No. 0684.	62	93254	Screw—Pulley Bumper Mounting		Note:	222277 Cover—Hsg. Used on Type Nos. 1026, 1185, 1187, 1189, 1190, 1195, 1205, 1208, 1213, 1216, 1229, 1240, 1243, 5126, 5128, 5132, 5133, 5135, 5136.
55	393576	Housing—Rewind Starter (Stamping)	63	260414	Spring—Ratchet	73	221796	Screen—Rewind Starter
	Note:	298402 Housing—Rewind Starter Used on Type Nos. 0123, 0518, 0669, 0682, 0683, 0703, 1018, 1127, 1184. 390391 Housing—Rewind Starter (Casting style replacement)	64	230543	Adapter—Ratchet Spring		Note:	221668 Screen—Rewind Starter Used on Type Nos. 0123, 0518, 0669, 0682, 0683, 0703, 1018, 1127, 1184.
56	295871	Pulley—Rewind Starter	65	93064	Screw—Stamped Steel Rewind Starter Housing Mounting	74	93042	Screw—Sem
	Note:	Includes 63" Rope; if longer Rope is required, order Rope No. 66894 and cut to required length.		Note:	93572 Screw—Cast Rewind Starter Housing Mounting (Used after Code No. 6904301)		Note:	93335 Screw—Rotating Screen Mounting (4) (to Clutch Housing)
57	294303	Spring—Rewind Starter		Note:	93163 Screw—Rewind Starter Housing Mtg. Sem (Used before Code No. 6905011)			93705 Screw—Rotating Screen Mounting (4) (to Fan Blades) Used on Type Nos. 0123, 0518, 0669, 0682, 0683, 0703, 1018, 1127, 1184.
58	66884	Rope—Rewind Starter—63" long for use with Plastic Pulley; if longer Rope is needed, order No. 66894 and cut to required length.			230796 Nut—Starter Mounting	75	220865	Washer—Spring
	Note:	66564 Rope—Rewind Starter—63" long for use with Steel Pulley	66	298798	Clutch Assembly—Rewind Starter	76	68238	Washer—Ratchet Sealing
	Note:	If longer Rope is needed, order No. 66574 and cut to required length.	66A	393117	Clutch Assembly—Rewind Starter for Engines with Ring Gear on Flywheel equipped for or with Electric Motor.	78	93805	Screw—Sem
			67	212132	Housing—Rewind Starter Clutch	81	222263	Lock—Muffler Mtg. Screw
			67A	261453	Housing—Rewind Starter Clutch For Engines with Ring Gear on Flywheel equipped for or with Electric Motor.	81A	222265	Lock—Muffler Mtg. Screw
						90	298472	Carburetor Assembly (Manual Choke)
							Note:	299159 Carburetor Assembly (Choke-A-Matic) Used on Type Nos. 0015, 0017, 0120, 0124, 0127, 0128, 0130, 0131, 0132, 0135, 0138, 0139, 0143, 0148, 0150, 0152, 0153, 0154.

*Included in Gasket Set—
Part No. 299577.

‡Included in Carburetor Overhaul
Kit—Part No. 394698.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		299162 Carburetor Assy. Used on Type Nos. 0121, 0129, 0133, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.	107	295860	Body Assy.—Lower Carb. (Manual Choke) Note: 299160 Body Assy.—Lower Carburetor (Choke-A-Matic) Used on Type Nos. 0015, 0017, 0120, 0124, 0127, 0128, 0130, 0131, 0132, 0135, 0138, 0139, 0143, 0148, 0150, 0152, 0153, 0154. 299163 Body Assy.—Lower Carb. Used on Type Nos. 0121, 0129, 0133, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.	121	394698	Carburetor Overhaul Kit (Used after Code No. 81032700) Note: 299852 Carburetor Overhaul Kit (Used before Code 81033000) (Used only for Ref. No. 125 Carburetors)
91	298473	Body Assembly—Upper Carburetor Note: 298774 Body Assy.—Upper Carburetor Used on Type Nos. 0121, 0129, 0133, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.				121A	394693	Carburetor Overhaul Kit (Used after Code No. 81032700) Note: 291763 Carburetor Overhaul Kit (Used before Code No. 81033000) Used only on Ref. No. 90 Carburetors.
92	299158	Body—Upper Carb.	108	222010	Valve—Choke	123	93357	Screw—Carburetor Mounting
93	23108	Bushing—Throttle Shaft	108A	62872	Valve Choke	123A	91456	Screw—Cap, Hex. Hd.—1/4-20 x 1"
94	†292681	Valve Assembly—Carburetor Idle	109	391987	Shaft and Lever—Choke (Manual) Note: 298944 Shaft Assy.—Choke (Choke-A-Matic) Used on Type Nos. 0015, 0017, 0120, 0124, 0127, 0128, 0130, 0131, 0132, 0135, 0138, 0139, 0143, 0148, 0150, 0152, 0153, 0154. 299054 Shaft and Lever—Choke Used on Type Nos. 0121, 0129, 0133, 0138, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.	Note: 93483 Screw—Sem(2) Used on Type Nos. 0121, 0129, 0133, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.		
95	93499	Screw—Throttle and Choke Valve Mtg. Sem				124	92636	Screw—Cap, Hex. Hd.—1/4-20 x 2"
96	221600	Valve—Throttle				125	390811	Carburetor Assembly (Choke-A-Matic) Note: 390411 Carburetor Assy. (Manual Choke) Used on Type Nos. 0510, 0516, 0518, 0610, 0611, 0612, 0613, 0614, 0615, 0621, 0627, 0628, 0632, 0641, 0642, 0646, 0647, 0659, 0659, 0687, 0691, 0720, 0721, 0722, 0729, 0731, 1010, 1016, 1018, 1019, 1110, 1111, 1112, 1113, 1114, 1115, 1126, 1149, 1166, 1169, 1174, 1175, 1179, 1207, 1209, 1210, 1212, 1222, 1235, 1246, 1248, 1252, 1253, 1257.
97	297845	Shaft and Lever—Throttle Note: 298772 Shaft and Lever—Throttle Used on Type Nos. 0121, 0129, 0133, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.						
98	91920	Screw—Machine, Fill. Hd. 8-32 x 5/8"	110	62899	Washer—Choke Lever			
99	26157	Spring—Throttle Adjustment	111	26155	Spring—Choke Lever			
100	61967	Stop—Throttle	112	23123	Screw—Choke Lever			
101	93043	Pin—Throttle Stop	113	390395	Nozzle—Carburetor			
102	†27918	Gasket—Carb. Body	114	†68667	Gasket—Nozzle			
103	99333	Float—Carburetor	118	†391233	Valve—Needle			
104	†230896	Pin—Float Hinge	118A	†99525	Valve—Needle			
105	394681	Valve—Fuel Inlet (Used after Code No. 81032700) Note: 299096 Valve—Fuel Inlet (Used before Code No. 81033000) Order No. 394683 for Fuel Pump Applications	119	90746	Screw—Machine, Fill. Hd.—10-32 x 5/8"			
			120	92290	Washer—Lock—No. 10 x 1/16" x 3/64"			

†Included in Carburetor Overhaul Kit—Part No. 394693.

11

†Included in Carburetor Overhaul Kit—Part No. 394698.

†Included in Carburetor Overhaul Kit—Part No. 394693.

†Included in Carburetor Overhaul Kit—Part No. 394698.

70700 to 170799

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
126	299851	Body Assy.—Lower Carburetor			1179, 1207, 1209, 1210, 1212, 1222, 1235, 1246, 1248, 1252, 1253, 1257.	181	392300	Cap—Fuel Tank
127	221997	Plug—Welch				181A	69221	Cap—Fuel Tank
128	211682	Venturi—Carburetor				182	221088	Bracket—Fuel Tank, L.H.
130	221986	Valve—Throttle	142	‡299740	Nozzle—Carburetor		221087	Bracket—Fuel Tank, R.H.
131	391512	Shaft and Lever—Throttle	147	‡230932	Screw—Nozzle		Note:	220369 Support—Fuel Tank
132	211712	Stop—Throttle	158	27590	Filter—Carburetor Drain		Uses:	93083 Screw—Tank Mounting Sem Used on Type No. 0660.
133	299707	Float—Carburetor	159	211954	Retainer—Carburetor Drain Filter (Die Cast)			221906 Bracket—Fuel Tank
134	‡394681	Valve—Fuel Inlet (Used after Code No. 81032700)		Note:	220521 Retainer Carburetor Drain Filter (Steel Stamping)			Used on Type Nos. 0147, 0663, 1212, 1222.
	Note:	299096 Valve—Fuel Inlet (Used before Code No. 81033000) Order No. 394683 for Fuel Pump Applications	164	298410	Pipe Assembly—Air Cleaner			222103 Bracket—Fuel Tank
				Note:	298756 Pipe Assy.—Air Cleaner Used on Type Nos. 0121, 0129, 0133, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.			Used on Type Nos. 0675, 0680.
136	221995	Bowl—Flat	165	93453	Nut—Wing	182A	222813	Bracket—Fuel Tank, R.H.
137	‡270511	Gasket—Float Bowl	166	295947	Stud—Air Cleaner	182B	222112	Bracket—Fuel Tank, L.H.
138	‡222014	Washer—Float Bowl	167	65978	Seal—"O" Ring	183	291367	Strap Assy.—Fuel Tank
141	390684	Shaft and Lever—Choke	168	222707	Strap—Air Cleaner Pipe		Note:	291490 Strap Assy.—Fuel Tank
	Note:	299746 Shaft and Lever—Choke-A-Matic Used on Type Nos. 0015 thru 0733 except those listed under Part No. 299647.	169	90832	Washer—Lock—1/4" x 3/32" x 5/64"			Used on Type Nos. 0723, 1156.
		299647 Shaft and Lever—Manual Choke	170	91468	Screw—Cap. Hex. Hd.—1/4-20 x 3/8"	183A	390406	Strap Assy.—Fuel Tank, R.H.
	Uses:	23270 Screw—Choke Lever	171	92129	Nut Hex.—1/4-28	183B	390405	Strap Assy.—Fuel Tank, L.H.
		26229 Spring—Choke Lever	180	290816	Tank Assy.—Fuel (4 Quart)	184	91257	Screw—Machine, Fill. Hd.—1/4-20 x 1-1/2"
		220899 Washer—Choke Lever		Note:	292415 Tank Assy.—Fuel (8 Quart) Used on Type Nos. 0723, 1156.		Note:	93603 Screw—Fuel Tank to Lower Bracket
		Used on Type Nos. 0510, 0516, 0518, 0610, 0611, 0612, 0613, 0614, 0615, 0621, 0627, 0628, 0632, 0641, 0642, 0646, 0647, 0659, 0660, 0687, 0691, 0720, 0721, 0722, 0729, 0731, 1010, 1016, 1018, 1019, 1110, 1111, 1112, 1113, 1114, 1115, 1126, 1149, 1166, 1169, 1174, 1175.			292945 Tank Assy.—Fuel (3 Quart) Used on Type Nos. 0129, 0133, 0660, 0675, 0680, 0713, 1152, 1153.			93604 Screw—Fuel Tank Top to Bracket(2) Used on Type Nos. 0675, 0680.
					299940 Tank Assy.—Fuel (3 Quart) Used on Type Nos. 0641, 0642, 0664, 0665.	184A	93803	Screw—Fuel Tank Strap
			180A	390225	Tank Assy.—Fuel	185	90970	Nut—Square, 1/4-20
						186	67218	Connector—Fuel Pipe

‡Included in Carburetor Overhaul Kit—Part No. 394698.

12

‡Included in Carburetor Overhaul Kit—Part No. 394698.

170700 to 170799

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
186A	390303	Connector and Shut-Off Valve Note: 297563 Connector and Fuel Shut-Off Valve Used on Type Nos. 0641, 0642, 0664, 0665.	261306		Spring—Governor Note: 261129 Spring—Governor Used on Type Nos. 0500 and up except as listed under note: also used on Type Nos. 0644, 0655, 0666, 0674, 0692, 1176, 1178, 1196, 1197, 1198, 1199, 1207, 1226, 1230, 1231, 1236, 5129, 5130, 5131, 5132, 5133.			1264, 1265, 1266, 1268, 1269, 5015, 5020, 5025, 5026, 5134, 5137, 5138, 5139, 5140, 5141.
187	296004	Pipe—Fuel (23" long) Note: 299146 Pipe—Fuel (28" long) Used on Type Nos. 0147, 0663, 0695.						The following Governor Springs are used before Code No. 75111311.
188	93535	Screw—Sem Note: 93661 Screw—Sem Used to mount Diode Clamp Type Nos. 0699, 0704, 0705.				261129		Spring—Governor Note: 260723 Spring—Governor Used on Type Nos. 0010 thru 0773 except as listed under note; also used on Type Nos. 1176, 1178, 1236.
189	90366	Washer—Lock—5/16 x 1/8 x 1/16"						260931 Spring—Governor Used on Type Nos. 0143, 0148, 0644, 0655, 0666, 0674, 0692, 1196, 1197, 1198, 1199, 1207, 1226, 1230, 1231, 5129, 5130, 5131, 5132, 5133.
192	91397	Nut—hex. 5/16-18						261130 Spring—Governor Used on Type Nos. 1141, 1144, 1145, 1147, 1188, 1191, 1204.
193	93535	Screw—Sem						
194	90366	Washer—Lock, 5/16 x 1/8 x 1/16"						
198	293934	Valve—Fuel Shut-Off						
199	295896	Outlet—Fuel Tank (Includes Strainer) Note: 292797 Outlet—Fuel Tank (Includes Strainer) Used on Type Nos. 0660, 0713, 1152, 1153.						
200	221760	Guide—Air						
201	260971	Link—Governor Used on Type Nos. 0510 and up. Note: 260710 Link—Governor Used on Type Nos. 0010 to 0162 except as listed below. 260862 Link—Governor Used on Type Nos. 0121, 0129, 0133, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.						
206	230149	Nut—Gov. Control Rod						
207	26855	Spring—Control Rod						
208	230841	Rod—Governor Control						
209		The following Governor Springs are used after Code No. 75111211.						
						216	261117	Link—Choke (Used with Ref. No. 125 Choke-A-Matic Carburetors on Type Nos. 1015 and up)
						216A	260979	Link—Choke (Used with Ref. No. 125 Choke-A-Matic Carburetors on Type Nos. 0510 to 0734)

170700 to 170799

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
216B	260892	Link—Choke (Used with Ref. No. 90 Choke-A-Matic Carburetors; also see the note)			0639, 0640, 0643, 0644, 0645, 0648, 0649, 0650, 0651, 0652, 0653, 0654, 0655, 0656, 0657, 0658, 0661, 0662, 0663, 0664, 0665, 0666, 0667, 0668, 0669, 0670, 0671, 0672, 0673, 0674, 0675, 0678, 0680, 0681, 0682, 0683, 0684, 0685, 0686, 0688, 0689, 0690, 0692, 0693, 0694, 0695, 0696, 0697, 0698, 0699, 0700, 0701, 0702, 0703, 0704, 0705, 0706, 0707, 0708, 0710, 0711, 0712, 0713, 0714, 0715, 0716, 0717, 0718, 0719, 0723, 0724, 0725, 0726, 0727, 0728, 0730, 0732.	240	295977	Filter Assembly—Fuel 393169 Filter Assy.—Fuel Used on Type Nos. 0147, 0663, 0695, 0723, 1156, 1212, 1222.
	Note:	260896 Link—Choke Used on Type Nos. 0121, 0129, 0133, 0140, 0141, 0144, 0145, 0146, 0151, 0160, 0161.				240A	298090	Filter—Fuel (In Fuel Pipe)
219	392718	Oil Slinger, Gov. Gear and Bracket Assembly (Used after Code No. 75111211)				241	296019	Cover Assy.—Fuel Filter Note: 296005 Cover Assy.—Fuel Filter Used on Type Nos. 0147, 0663, 0695, 0723, 1156, 1212, 1222.
	Note:	298614 Oil Slinger, Gov. Gear and Bracket Assembly (Used before Code No. 75111311)				242	295913	Valve and Cover—Fuel Shut-Off
222	390662	Plate—Gov. Control				243	22547	Screen—Fuel Filter
	Note:	390661 Plate—Gov. Control Used on Type Nos. 1010, 1016, 1018, 1019, 1110, 1111, 1112, 1113, 1114, 1115, 1126, 1149, 1166, 1169, 1174, 1175, 1179, 1207, 1209, 1210, 1212, 1222, 1235, 1246, 1248, 1252, 1253, 1257.	224	93067	Screw—Sem	244	67218	Connector—Fuel Pipe Note: 230318 Connector—Fuel Pipe Used on Type Nos. 0147, 0663, 0695, 0723, 1156, 1212, 1222.
			225	231058	Crank—Governor (1/4" Dia.) (Used after Code No. 75111211)	244A	230318	Connector—Fuel Pipe Note: 67218 Connector—Fuel Pipe Used on Type Nos. 0129, 0133, 0713, 1152, 1153.
				Note:	231071 Crank—Gov. (3/16" Dia.) (Used before Code No. 75111311)			230317 Connector—Fuel Pipe Used on Type No. 0660.
222A	298997	Plate—Gov. Control	227	391733	Lever Assy.—Governor (Used after Code No. 75111211)	245	*68477	Gasket—Fuel Filter Bowl
	Note:	298998 Plate—Gov. Control Used on Type Nos. 0015, 0017, 0120, 0121, 0124, 0127, 0128, 0129, 0130, 0132, 0133, 0135, 0138, 0139, 0140, 0141, 0143, 0144, 0145, 0146, 0148, 0150, 0151, 0152, 0153, 0154, 0160, 0161, 0515, 0517, 0620, 0622, 0623, 0624, 0625, 0626, 0629, 0630, 0631, 0633, 0634, 0635, 0636, 0637, 0638,		Note:	298303 Lever Assy.—Governor (Used before Code No. 75111311)	246	298683	Bowl—Fuel Filter
			229	220680	Washer—Flat	247	99665	Yoke—Fuel Filter
			230	222450	Washer—Gov. Lever (1/4" I.D.)	261	93105	Screw—Sem
				Note:	221559 Washer—Gov. Lever (3/16" I.D.)	265	221535	Clamp—Casing Note: 92484 Screw 66432 Washer Used as Casing Clamp on Type Nos. 0627, 0687.
			231	93064	Screw—Sem			93543 Screw—Sem Used as Casing Clamp on Type Nos. 0721, 0722, 1174.
			232	260584	Spring—Governor Link	267	93612	Screw—Clamp Mtg.

Included in Gasket Set—
Part No. 299577.

170700 to 170799

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
268	65616	Casing—Control Wire—72" long Note: If longer casing is required, specify length in inches; if shorter casing is needed, order No. 65616 and cut to required length.		299629	Muffler—Exhaust Used on Type Nos. 0140, 0141, 0146, 0151, 0152, 0156, 0622, 0624, 0625, 0626, 0635, 0641, 0642, 0643, 0645, 0648, 0649, 0656, 0664, 0665, 0673, 0680, 0684, 0691, 0696, 0706, 0711, 0720, 0724, 0730, 1141, 1143, 1146, 1147, 1160, 1161, 1170, 1188, 1223.	303	91205	Elbow—Muffler—90° Note: 91219 Elbow—Muffler, 45° Street Used on Type Nos. 0129, 0133, 0144, 0145, 0160, 0161, 0633, 0638, 0661, 0667, 0672, 0693, 0700, 0713, 0728, 1212, 1219, 1222, 1249.
269	26633	Wire—Control—78" long Note: If longer wire is required, specify length in inches; if shorter wire is needed, order No. 26633 and cut to required length.		390147	Muffler—Exhaust Used on Type Nos. 0649, 0670, 0671, 0688, 0690, 0701, 0705, 1133, 1137, 1138, 1165.		91464	Elbow—Muffler, 90° Street Used on Type Nos. 0121, 0127, 0129, 0131, 0133, 0146, 0634, 0635, 0638, 0672, 0713, 0732, 1151, 1152, 1153, 1155, 1224, 1225, 1261.
270	63426	Locknut—Control Wire Casing		390438	Muffler—Exhaust Used on Type Nos. 0698, 0699, 1139, 1140, 1150.	304	299870	Housing—Blower (with Tank) Note: All Blower Housings under Note do not include a tank.
271	290568	Lever Assy.—Control		390580	Muffler—Exhaust Used on Type Nos. 0701, 0702.		299392	Housing—Blower Used on Type Nos. 0112, 0114, 0130, 0133, 0141, 0145, 0150, 0151, 0160, 0612, 0614, 0615, 0625, 0626, 0635, 0637, 0651, 0673, 0675, 0678, 0680, 0688, 0699, 0700, 0702, 0704, 0705, 0706, 0707, 0708, 0713, 0714, 0716, 0719, 0724, 0726, 0727, 0731, 1025, 1026, 1112, 1114, 1115, 1128, 1129, 1130, 1132, 1136, 1138, 1140, 1145, 1146, 1152, 1153, 1158, 1164, 1165, 1168, 1173, 1175, 1177, 1185, 1186, 1187, 1189, 1190, 1192, 1195, 1198, 1199, 1202, 1205,
277	22776	Washer—Flat Note: 22358 Washer—Flat Used to mount Diode Clamp on Type Nos. 0699, 0704, 0705.		390749	Muffler—Exhaust Used on Type Nos. 0689, 0707, 0718, 0719, 1142, 1186, 1195, 1200, 1205, 1208, 5135, 5136.			
298	261409	Locknut—Muffler		390755	Muffler—Exhaust Used on Type Nos. 1131, 1132, 1172, 1173, 1190, 1196, 1198, 1226, 5129, 5130, 5132.			
300	294599	Muffler—Exhaust Note: 89953 Muffler—Exhaust Used on Type No. 0127. 390578 Muffler—Exhaust Used on Type Nos. 1129, 1130, 1159, 1177, 1189, 1213, 1216, 1217, 1242, 1243, 1261.		391370	Muffler—Exhaust Uses: 270918 Gasket Used on Type No. 1239.			
300A	391313	Muffler—Exhaust Note: 391237 Guard—Muffler Uses: 93606 Screw (Deflector and Guard to Muffler) 222379 Retainer—Muffler Guard Used on Type No. 1234.	301	91245	Nipple—Exhaust			

170700 to 170799

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		1206, 1208, 1213, 1214, 1216, 1221, 1227, 1229, 1231, 1240, 1243, 1246, 1251, 1259, 1262, 1265.			299862 Housing—Blower Used on Type Nos. 0123, 0518, 1018, 1184, 1127.	309		Motor—Starting (12 Volt) See Chart on Page 7 for Replacement Parts for Starting Motors
		299853 Housing—Blower Used on Type Nos. 0015, 0121, 0129, 0132, 0136, 0140, 0144, 0146, 0147, 0156, 0161, 0515, 0624, 0627, 0633, 0634, 0636, 0641, 0645, 0654, 0663, 0664, 0667, 0670, 0692, 0696, 0698, 0701, 0710, 0711, 0717, 0722, 0723, 0725, 0728, 0730, 1015, 1131, 1133, 1134, 1139, 1141, 1143, 1147, 1150, 1156, 1161, 1163, 1172, 1174, 1176, 1180, 1181, 1182, 1191, 1194, 1196, 1197, 1201, 1203, 1204, 1210, 1212, 1215, 1219, 1222, 1224, 1226, 1228, 1230, 1232, 1233, 1234, 1236, 1242, 1244, 1247, 1250, 1252, 1255, 1261, 1266, 1267.			299887 Housing—Blower Used on Type Nos. 0669, 0682, 0683, 0703.	309A		Motor—Starting (110 Volt) See Chart on Pages 6 & 7 for Replacement Parts for Starting Motors
		299860 Housing—Blower Used on Type No. 0628.			391379 Housing—Blower Used on Type Nos. 5025, 5026, 5027, 5126, 5128, 5132, 5133, 5134, 5135, 5136, 5138, 5141.	321	211521	Fan—Starter Clutch Uses: 395347 Clutch Assy. 298799 Ratchet Assy. 395354 Housing—Clutch 93335 Screw—Sem To Mount Fan to Clutch Housing Used on Type Nos. 0123, 0518, 0669, 0682, 0683, 0703, 1018, 1127, 1184.
		299861 Housing—Blower Used on Type Nos. 0113, 0122, 0510, 0613, 0642, 0648, 0660, 0661, 0665, 0666, 0671, 0681, 0684, 0685, 0687, 0695, 0721, 1010, 1019, 1113, 1169.	305	93158	Screw—Blower Housing Mounting Sem Note: 93294 Screw—Sem Used to mount Blower Housing to Cylinder Head on Type Nos. 0721, 0722, 1016, 1017, 1111, 1137, 1167, 1169, 1171, 1183, 1200, 1207, 1239, 1248, 1253, 1254, 1258, 1260, 1268, 1269, 1271.	321A	210899	Pulley—Starter Drive
			306	222830	Shield—Cylinder	322	90931	Screw—Cap. Hex. Hd.—1/4-20 x 2-1/4"
			307	93163	Screw—Cylinder Shield Mounting Sem	323	68588	Belt—Vee Note: 68878 Belt—Vee Used on Type No. 0661. 68898 Belt—Vee Used on Type No. 0684.
			308	221901	Cover—Cylinder Head Note: 222351 Cover—Cylinder Head Used on Type Nos. 1244, 1263, 5015, 5020, 5025, 5026, 5027, 5125, 5126, 5127, 5128, 5129, 5130, 5131, 5132, 5133, 5134, 5135, 5136, 5137, 5140.	324	221067	Screen—Rotating
						325	299307	Pulley—Rope Starter (with Screen)
						328	221447	Guard—Belt Note: 222104 Guard—Belt Used on Type No. 0684.
						332	92284	Nut
						333	298968	Armature Assembly
						334	93381	Screw—Armature Mounting Sem
						337	298809	Plug—Spark (1-1/2" high—37-42 M.M.) Note: 29693 Plug—Spark (2" high—51 M.M.) 293918 Plug—Spark (1-1/2" high—37-42 M.M.) (Resistor Type)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
339	29667	Breaker Assy.—Ignition	375	294628	Breaker Points and Condenser Set	491	222115	Bracket—Rectifier
340	26018	Spring—Breaker Arm	Note:	299061 Ignition Kit Includes: 294628 Point Set 65704 Plunger 61760 Key—Flywheel	492	390555	Starter—Generator (12 volt) (Delco-Remy No. 1101695 and Pulley Delco-Remy No. 1949358)	
341	93381	Screw—Breaker Arm Mounting						
342	65704	Plunger—Breaker Point						
343	29861	Condenser						
344	93370	Screw—Condenser Mounting Sem	380	62199	Washer—Plain	493	211594	Bracket—Lower Starter
345	222117	Cover—Breaker Point	383	89838	Wrench—Spark Plug	Note:	211775 Bracket—Upper Starter Used on Type No. 0684.	
345A	221046	Cover—Breaker Point	422	222502	Clamp—Oil Filler Tube			
346	93705	Screw—Hex. Hd.	423	93410	Screw—Sem	497	91203	Screw—Cap, Hex. Hd.—5/16-18 x 1-3/4"
347	220884	Switch—Stop (For 1-1/2" high—37-42 M.M. Spark Plugs)	455	222561	Cup—Screen Mounting	Note:	91162 Screw—Bracket Mounting Used on Type No. 0684.	
		Note: 221808 Switch—Stop (For 2" high—51 M.M. Spark Plug)	468	222562	Screen—Flush Rotating			
			Note:	222302 Screen—Blower Housing Uses: 93572 Screw (8) 231020 Spacer (4) 93917 Washer (4) Used on Type No. 5132.	500	91325	Washer—Plain	
351	93735	Screw—Terminal			501	393374	Regulator—Alternator (10 Amp.)	
352	66068	Washer—Insulating			501A	295924	Regulator—Voltage (Delco-Remy No. 1118988)	
353	92791	Washer—Lock—Shakeproof (3)			506	90200	Screw—Machine Fill. Hd. 8-32 x 1/2"	
354	90576	Nut—Hex.—8-32(2)	474	393474	Stator—Alternator (Dual Circuit)	507	66895	Insulator
355	66554	Collar—Insulating	Note:	393295 Stator—Alternator (10 Amp.) (Uses Ref. 878A)	508	93294	Screw—Sem (Control Plate Strap and Blower Housing Mounting)	
356	299500	Wire—Ground			516	260374	Spring—Connector	
		Note: 391255 Wire—Jumper Used in addition to No. 299500 Ground Wire on Type Nos. 1015, 1016, 1017, 1025, 1026, 1150, 1191, 1220, 1221, 1227, 1241, 1249, 1254, 1259, 1269, 5015, 5020, 5025, 5026, 5027, 5130,	474A	393800	Stator and Bracket—Alternator (Diode type)	517	295423	Pulley—Rope Starter (with screen)
			474B		Stator—Alternator (Order No. 391735)	518	69932	Rope—Starter
			Note:	Used on Type Nos. 0615, 0699, 0702, 0704, 0705, 0707, 0713, 0719, 0731.	520	93722	Terminal—Spade	
358	299577	Gasket Set			521	298529	Shielding—Ignition Cable	
362	291630	Shield—Spark Plug (with Stop Switch)	478	222751	Panel—Instrument	523	391840	Cap and Dipstick—Oil Filler
363	19165	Puller—Flywheel (optional accessory)	481	230976	Bushing—Stator (Loose)	523A	392066	Cap and Dipstick—Oil Filler
364	280081	Socket—Regulator and Rectifier Lead Wire	482	93621	Screw—Sem	524	68838	Seal—Filler Tube
			485	390888	Knob Assembly—Fuse	525	280133	Tube—Oil Filler
			486	391507	Diode—Alternator	525A		Tube—Oil Filler (Order No. 392066)
			486A	67125	Fuse—7-1/2 Ampere	526	93343	Screw—Regulator
			486B	67345	Fuse—15 Ampere	527	221428	Clamp (2) (at Cylinder Head)
			Note:	Used on Type Nos. 0615, 0699, 0705, 0731.	527A	221834	Clamp (At Intake Elbow)	
372	220477	Clamp—Condenser						
373	92987	Nut—Hex. (4)	488	222211	Bracket—Output			
			Note:	390740 Bracket—Output Uses: 93523 Screw—Mounting Used on Type No. 1205.				

170700 to 170799

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
534	93622	Screw—Air Cleaner (Used after Code No. 6906241)	592	231082	Nut—Hex., 10-24	658	221576	Strap—Control Plate
	Note:	93330 Screw—Air Cleaner (Used before Code No. 6906251)	601	93053	Clamp—Fuel Pipe		Note:	221827 Strap—Speed Control
534A	93323	Screw—Air Cleaner	605	222934	Bracket—Regulator			Used on Type Nos. 0015, 0016, 0017, 0120, 0121, 0124, 0127, 0128, 0129, 0130, 0132, 0133, 0135, 0138, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0148, 0150, 0151, 0152, 0153, 0154, 0155, 0158, 0160, 0161, 0515, 0516, 0517, 0620, 0622, 0623, 0624, 0625, 0626, 0629, 0630, 0631, 0633, 0634, 0635, 0636, 0637, 0638, 0639, 0640, 0643, 0644, 0645, 0647, 0648, 0649, 0650, 0651, 0652, 0653, 0654, 0655, 0656, 0657, 0658, 0662, 0663, 0664, 0665, 0666, 0667, 0668, 0669, 0670, 0671, 0672, 0673, 0674, 0678, 0680, 0681, 0682, 0683, 0684, 0685, 0686, 0688, 0689, 0690, 0692, 0693, 0694, 0695, 0696, 0697, 0698, 0699, 0700, 0703, 0704, 0705, 0706, 0707, 0710, 0711, 0712, 0713, 0715, 0716, 0717, 0718, 0719, 0723, 0724, 0725, 0726, 0727, 0728, 0730, 0732.
535	270528	Element—Air Cleaner	605A	298758	Bracket—Guard			
535A	270209	Element—Air Cleaner (Round Type)		Note:	222107 Bracket—Guard Used on Type Nos. 0661, 0684.			
536	390379	Cleaner Assy.—Air (For Cartridge Type Air Cleaner Kit order No. 393481)	606	221790	Strap—Adjusting			
	Note:	391399 Cleaner Assy.—Air		Note:	222105 Strap—Adjusting Used on Type No. 0684.			
	Uses:	280111 Support—Air Cleaner Element (Plastic) Used on Type Nos. 5015, 5020, 5025, 5026, 5027, 5125, 5126, 5127, 5128, 5129, 5130, 5131, 5132, 5133, 5134, 5135, 5136, 5137, 5138, 5139, 5140, 5141, 5142	608	390391	Starter Assy.—Rewind (with Standard Rope)			
536A	393616	Cleaner Assy.—Air		Note:	For Starter Assembly with longer than standard rope, order No. 298107.			
537	270539	Gasket—Air Cleaner			298340 Starter Assy.—Rewind Used on Type Nos. 0123, 0518, 0669, 0682, 0683, 0703, 1018, 1127, 1184.			
541	22398	Washer	613	93704	Screw—Muffler Mtg.			
552	231055	Bushing—Gov. Shaft (1/4" I.D.) (Used after Code No. 75111211)	613A	93549	Screw—Muffler Mtg.			
	Note:	230927 Bushing—Gov. Shaft (no threads) (3/16" I.D.) (Used before Code No. 75111311)		Note:	93642 Screw—Muffler Mounting Used on Type Nos. 0698, 0699, 1131, 1132, 1139, 1140, 1150, 1172, 1173, 1190, 1196, 1198, 1226.			
552A	230761	Bushing—Gov. Shaft (with threaded end)	614	93306	Cotter—Hair Pin			
561	92278	Nut—Hex. (1/4-20)	615	93307	Retainer—E-Ring			
562	92613	Bolt—Governor Lever	618	261116	Spring—Choke Return			
575	299139	Switch—Starting	621	297472	Switch—Stop			
578	392683	Wire—Starter Switch	634	270382	Washer—Choke Shaft			
578A	393109	Wire—Switch (Starter Switch to Alternator)	635	66538	Elbow—Spark Plug			
590	93226	Screw—Breaker Mounting Sem	642	221634	Cover—Air Cleaner			
			643	280002	Cup—Air Cleaner			
			645	23513	Bushing—Plunger			
			655	222598	Anchor—Spring			
				Note:	221014 Anchor—Spring (Used before Code No. 73061111)	659	93390	Nut—Governor Shaft Bushing
			657	93496	Screw—Sem	660	221577	Bracket—Control Plate
						662	222027	Bracket—Carburetor
						663	93572	Screw—Thread Forming
						664	93415	Screw—Sem 1/4-20 x 3/4" long

19