

Illustrated Parts List

Model Series

380400 to 380499

TYPE NUMBERS

0024, 0042, 0048,
0065, 0075, 0076,
0077, 0078, 0079,
0100, 0101, 0102,
0116, 0125, 0126,
0129, 0130, 0131,
0137, 0139, 0141,
0142, 0143, 0144.

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW


- A. Refer to Engine Model, Type and Code Number that is stamped on the blower housing of engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01 or 02, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE."**
- D. If a "Note" appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under "Note," order the part referred to at the "Note."
- E. If your Engine Type Number does not appear after any part number listed under "Note," use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


380400 to 380499

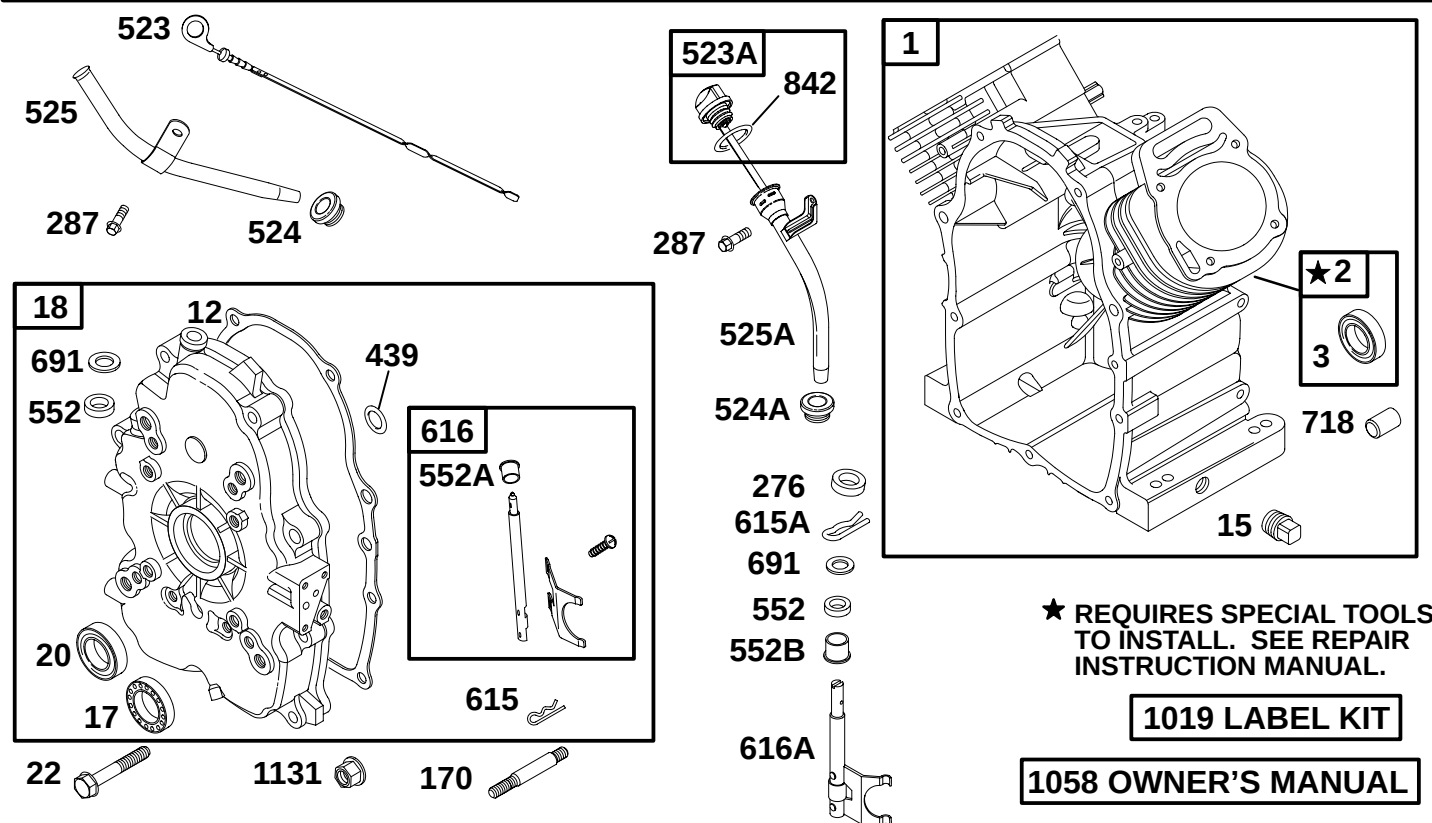

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	808650	Cylinder Assembly	439	★692154	Seal—O Ring (Crankcase Cover)	552B	690702	Bushing—Governor Crank (Flanged) (Used Before Code Date 99072100).
2	808534	Kit—Bushing/Seal (Magnetos Side)	523	693175	Dipstick	615	691550	Retainer—Governor Shaft (Used After Code Date 99072000).
3	★805101	Seal—Oil (Magnetos Side)	523A	807977	Dipstick Used on Type No(s). 0100. (Used Before Code Date 98053100).	615A	805417	Retainer—Governor Shaft (Used Before Code Date 99072100).
12	★806190	Gasket—Crankcase	524	693172	Seal—Dipstick Tube	616	806685	Crank—Governor (Used After Code Date 99072000).
15	94239	Plug—Oil Drain	524A	281370	Seal—Dipstick Tube Used on Type No(s). 0100. (Used Before Code Date 98053100).	616A	690899	Crank—Governor (Used Before Code Date 99072100).
17	690752	Bearing—Ball	525	693174	Tube—Dipstick	691	690680	Seal—Governor Shaft
18	808849	Cover—Crankcase (Used After Code Date 99072000).	525A	690897	Tube—Dipstick Used on Type No(s). 0100. (Used Before Code Date 98053100).	718	690684	Pin—Locating
		----- Note -----	552	690701	Bushing—Governor Crank	842	690611	Seal—Dipstick/Tube
		808685 Cover—Crankcase (Used Before Code Date 99072100).	552A	806686	Bushing—Governor Crank (Flanged) (Used After Code Date 99072000).	1019	808539	Kit—Label
20	★805049	Seal—Oil (PTO Side)				1058	274792	Owner's Manual (Emission Engines)
22	692540	Screw (Crankcase Cover)				1131	806446	Nut (Crankcase Cover)
170	806445	Stud (Crankcase Cover)						
276	690704	Washer—Sealing (Governor Crank)						
287	805247	Screw (Dipstick Tube)						

★ Included in Engine Overhaul Gasket Set—Ref. No. 358.
● Included in Carburetor Overhaul Kit—Ref. No. 121.

△ Included in Valve Overhaul Kit—Ref. No. 1033.

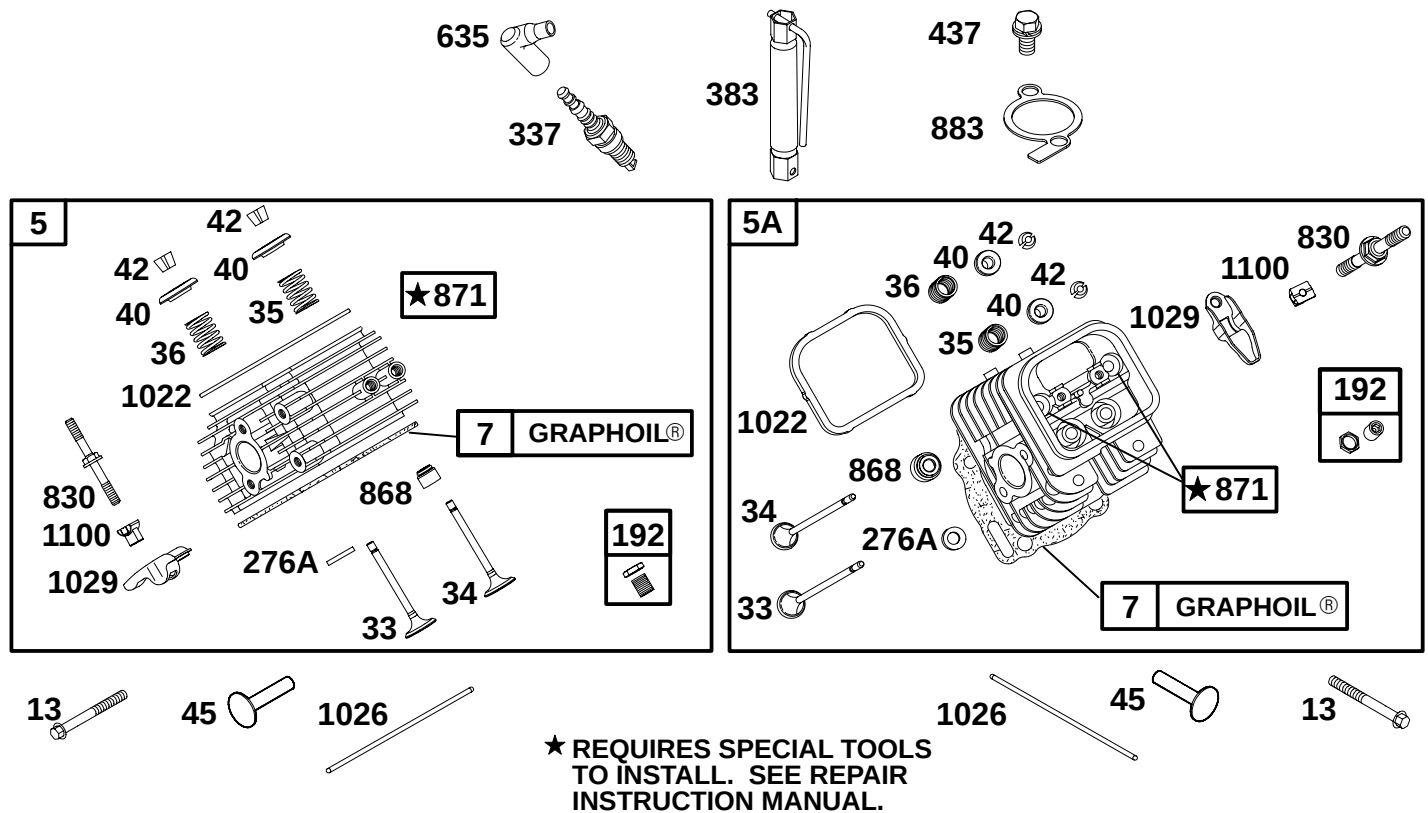


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	808529	Head-Cylinder (Cylinder 1)	40	805092	Retainer-Valve	868	805094	Seal-Valve
5A	808530	Head-Cylinder (Cylinder 2)	42	807683	Keeper-Valve	871	805084	Bushing-Valve Guide
7	★Δ806377	Gasket-Cylinder Head	45	262679	Tappet-Valve	883	★Δ806425	Gasket-Exhaust
13	805097	Screw (Cylinder Head)	192	807623	Adjustor-Rocker Arm	1022	★Δ806039	Gasket-Rocker Cover
33	806419	Valve-Exhaust	276A	★Δ805420	Washer-Sealing (Rocker Arm Cover)	1026	805352	Rod-Push (Intake, Steel)
34	806420	Valve-Intake	337	491055	Sparkplug	----- Note -----		
35	805937	Spring-Valve (Intake)	383	19374	Wrench-Sparkplug	805617	805617	Rod-Push (Exhaust, Aluminum)
36	805937	Spring-Valve (Exhaust)	437	805158	Screw (Exhaust Manifold)	1029	691543	Arm-Rocker
			635	805529	Boot-Sparkplug	1100	690973	Pivot-Rocker Arm
			830	691544	Stud (Rocker Arm)			

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.
 ● Included in Carburetor Overhaul Kit-Ref. No. 121.

Δ Included in Valve Overhaul Kit-Ref. No. 1033.

380400 to 380499







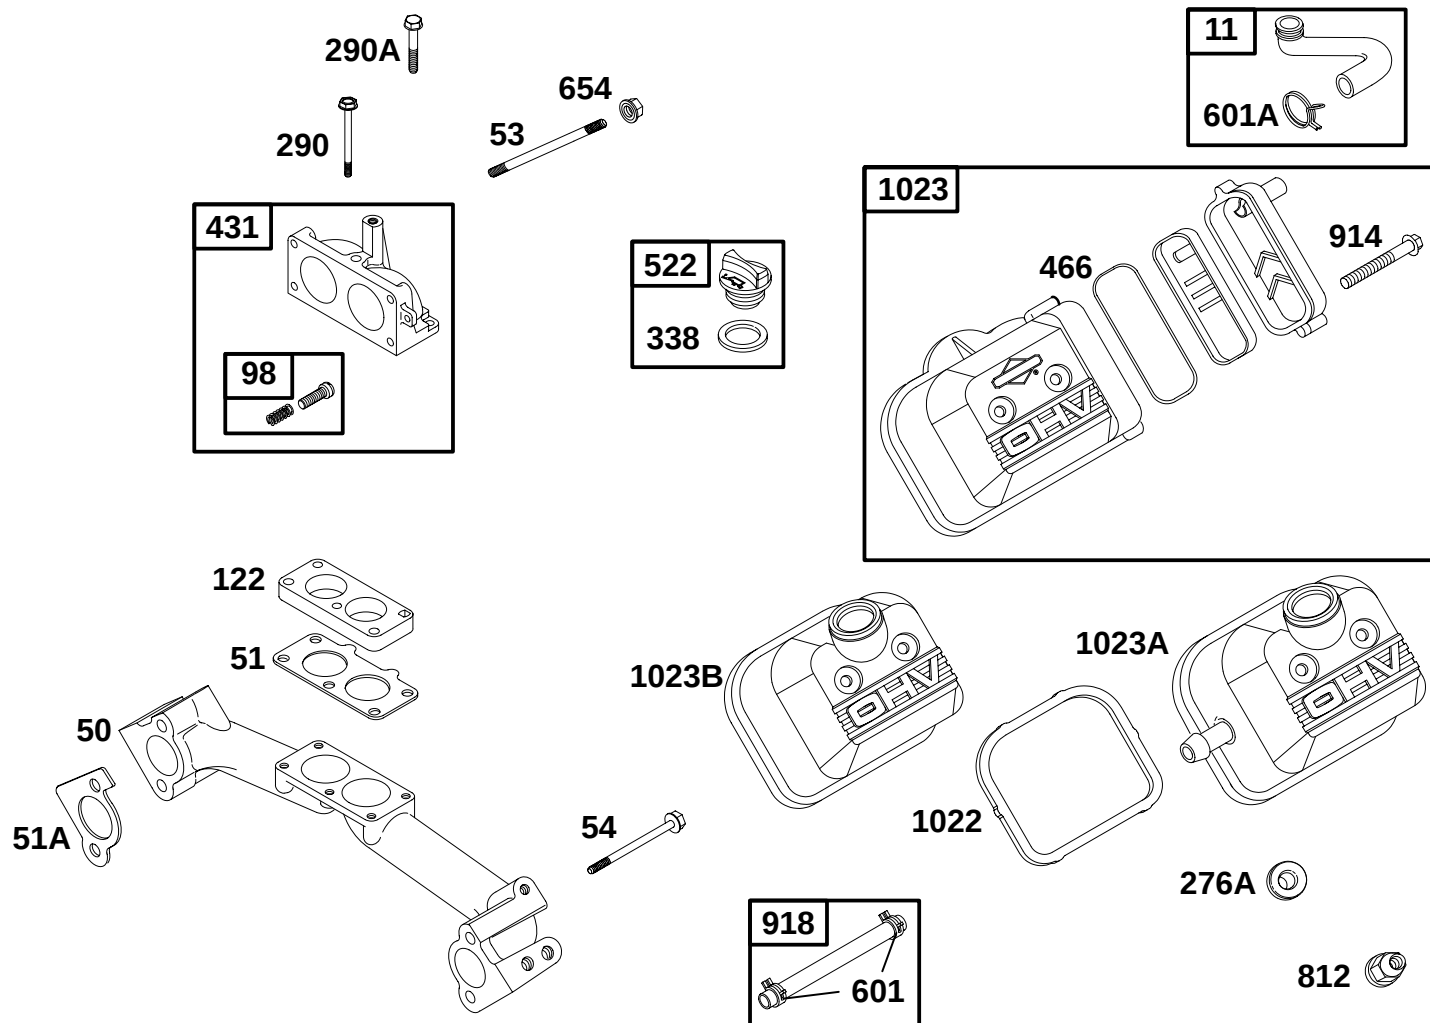


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
11	806379	Tube-Breather	290	691537	Screw (Intake Elbow) (M6-1x70)	812	Δ805019	Nut (Rocker Arm Cover)
50	806376	Manifold-Intake	290A	691492	Screw (Intake Elbow) (M6-1x30)	914	806421	Screw (Rocker Cover)
51	★690950	Gasket-Intake (Manifold to Carburetor)	338	691312	Gasket-Dipstick	918	393815	Hose-Vacuum (Cut to Required Length)
51A	Δ★806418	Gasket-Intake (Manifold to Head)	431	808659	Elbow-Intake	1022	Δ★806039	Gasket-Rocker Cover
53	690746	Stud (Carburetor)	466	806466	Seal-O Ring (Breather Assembly)	1023	808648	Cover-Rocker Arm (Includes Breather Assembly)
54	806444	Screw (Intake Manifold)	522	491832	Plug-Dipstick/Fill	1023A	690910	Cover-Rocker Arm
98	808177	Kit-Idle Speed	601	95162	Clamp-Hose	1023B	690758	Cover-Rocker Arm
122	690870	Spacer-Carburetor	601A	691145	Clamp-Hose			
276A	Δ★805420	Washer-Sealing	654	690939	Nut (Carburetor)			

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Δ Included in Valve Overhaul Kit-Ref. No. 1033.

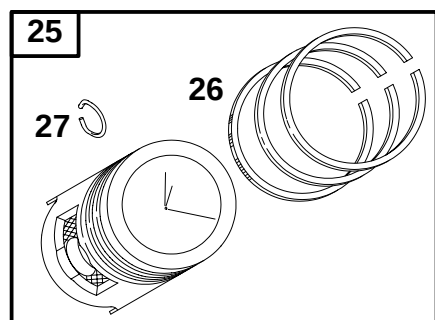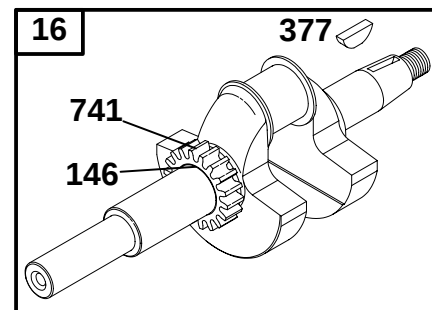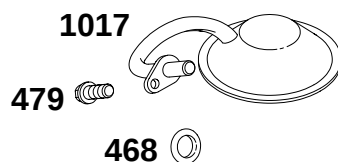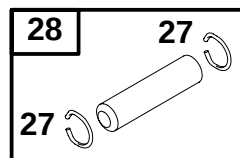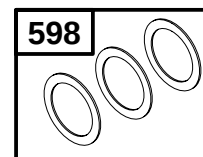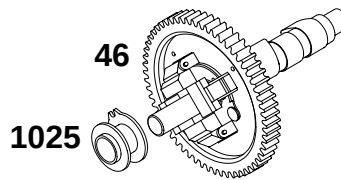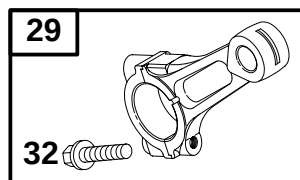


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	691139	Crankshaft ----- Note ----- 692171 Crankshaft Used on Type No(s). 0116, 0065, 0079, 0125, 0126, 0130, 0131, 0141, 0144. 692173 Crankshaft Used on Type No(s). 0042, 0078, 0129, 0139. 693073 Crankshaft Used on Type No(s). 0142. 692170 Crankshaft Used on Type No(s). 0076, 0077.	25	808527	Piston Assembly-Std (Standard) ----- Note ----- 808535 Piston Assembly (.010" O.S.) 808652 Piston Assembly (.020" O.S.) 808653 Piston Assembly (.030" O.S.)	27	806378	Lock-Piston Pin
17	690752	Bearing-Ball	26	808528	Ring Set (Standard) ----- Note ----- 808660 Ring Set (.010" O.S.) 808661 Ring Set (.020" O.S.) 808662 Ring Set (.030" O.S.)	28	808526	Pin-Piston
						29	808646	Rod-Connecting
						32	690698	Screw (Connecting Rod)
						46	808649	Camshaft (Oil Pump Screen)
						146	94196	Key-Timing
						377	806066	Key-Woodruff
						468	★690690	Seal-O Ring (Oil Pump Screen)
						479	692537	Screw (Oil Pump Screen)
						598	807625	Shim-End Play
						741	691530	Gear-Timing
						1017	690900	Screen-Oil Pump
						1025	690689	Spool-Governor

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.

△ Included in Valve Overhaul Kit-Ref. No. 1033.

380400 to 380499

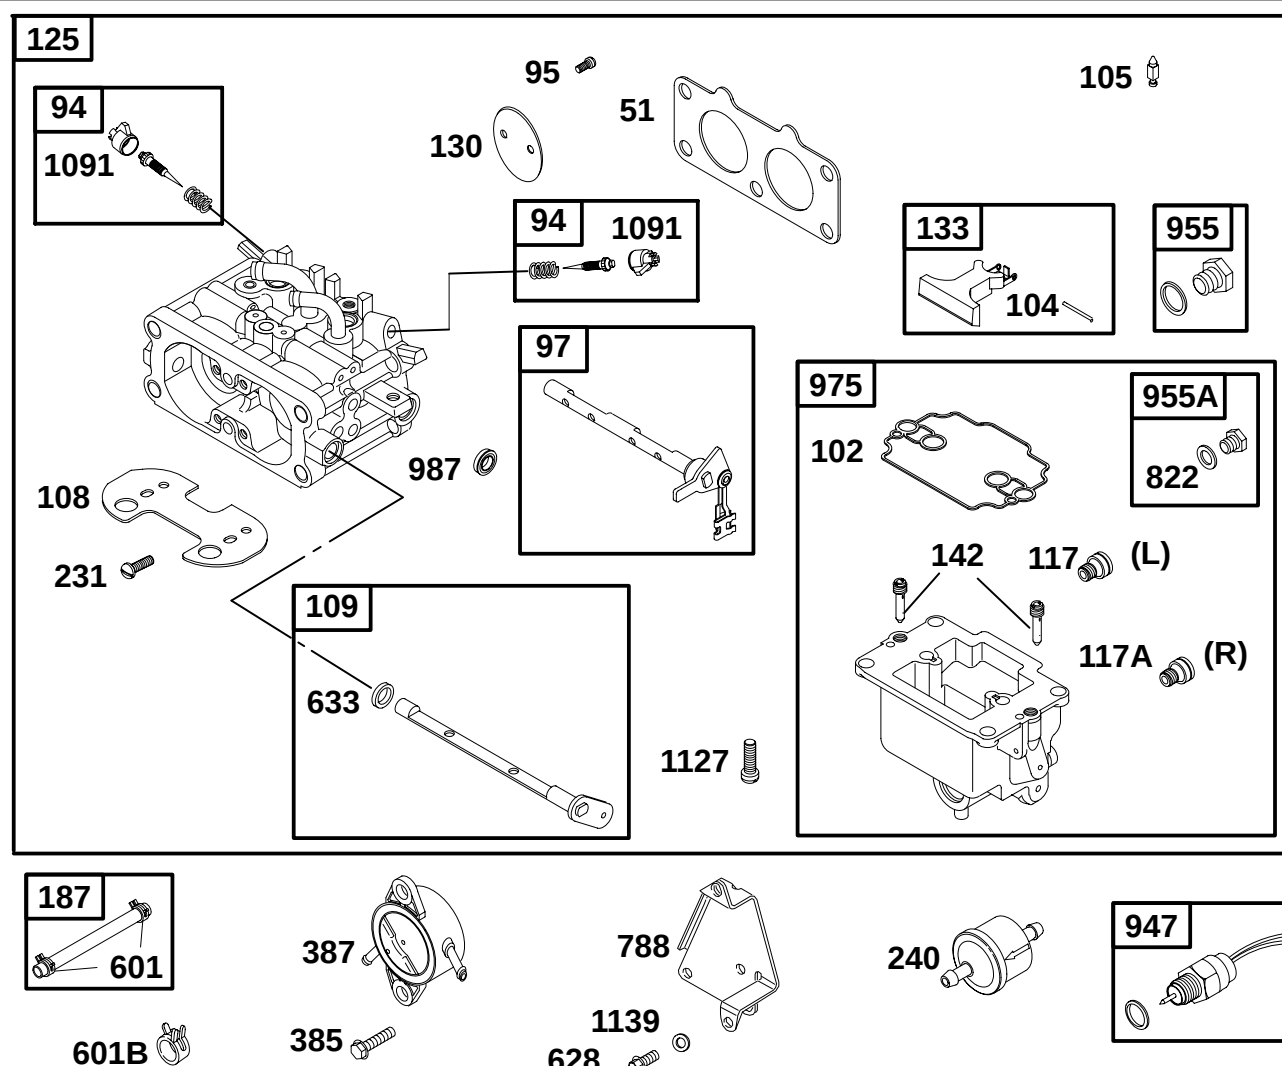


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	★690950	Gasket-Intake (Manifold to Carburetor)	109	808277	Shaft-Choke	633	●690722	Seal-Choke/Throttle Shaft
94	●808257	Kit-Idle Mixture	117	●806438	Jet-Main (L or Cylinder 1)	788	691559	Bracket-Fuel Pump
95	690718	Screw (Throttle Valve)	117A	●806439	Jet-Main (R or Cylinder 2)	822	690724	Seal-O Ring (Carburetor Plug)
97	808182	Shaft-Throttle	125	808626	Carburetor	947	808624	Solenoid-Fuel
102	●693711	Gasket-Carburetor Body	130	690884	Valve-Throttle	955	808176	Plug-Carburetor (Solenoid)
104	●690882	Pin-Float Hinge	133	808180	Float-Carburetor	955A	807723	Plug-Carburetor (Jet)
105	808798	Valve-Float Needle (Used After Code Date 99031600).	142	●806375	Nozzle-Carburetor	975	808627	Bowl-Float
----- Note -----			187	298049	Line-Fuel	97	●806070	Seal-Throttle Shaft
			231	690718	Screw (Choke Valve)	1091	●691516	Cap-Limiter
			240	493629	Filter-Fuel	1127	690885	Screw (Float Bowl)
			385	693169	Screw (Fuel Pump)	1139	806497	Washer (Fuel Pump Bracket)
			387	808656	Pump-Fuel			
			601	95162	Clamp-Hose			
			601B	93807	Clamp-Hose			
108	690883	Valve-Choke	628	806660	Screw (Fuel Pump Bracket)			

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

△ Included in Valve Overhaul Kit-Ref. No. 1033.

380400 to 380499

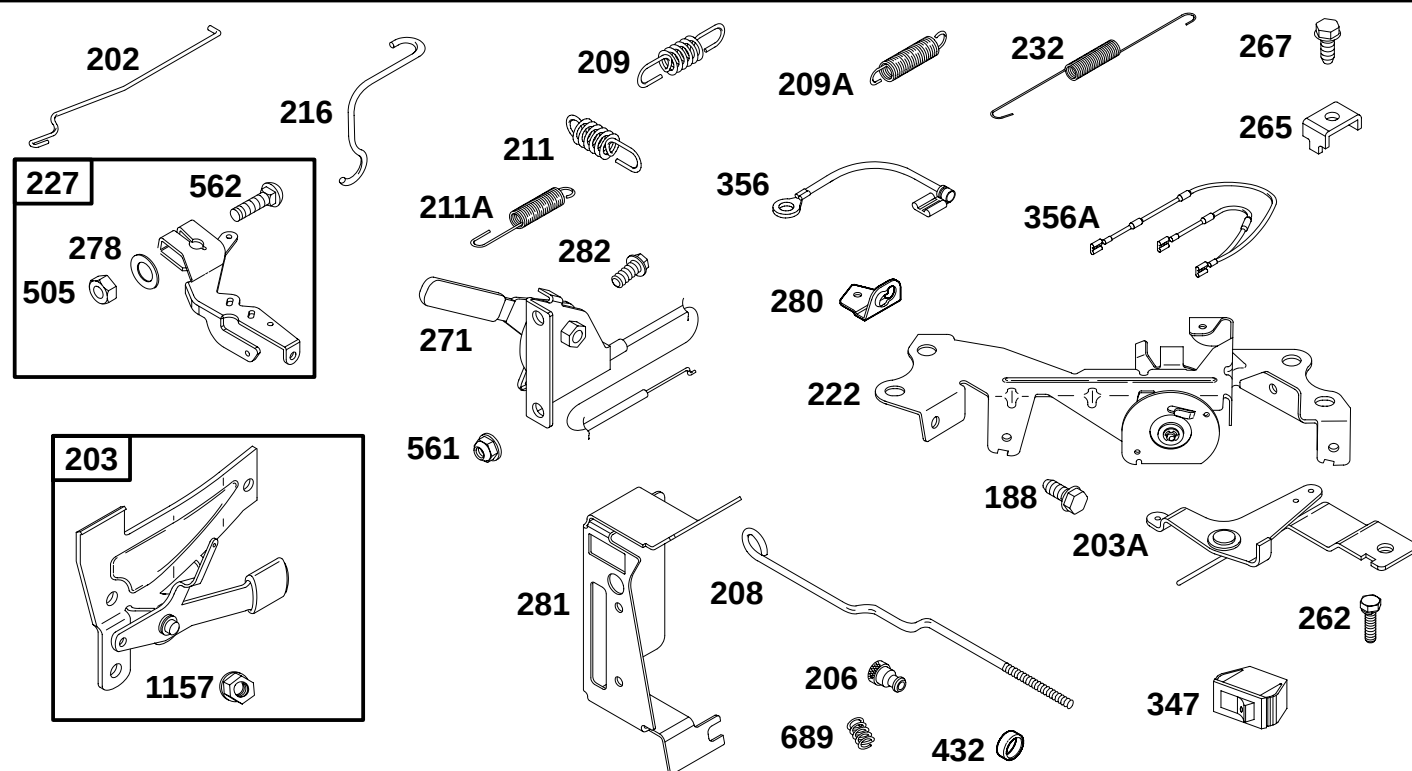


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	805025	Screw (Control Bracket)	211	805453	Spring—Governed Idle	282	805762	Screw (Control Lever)
202	691536	Link—Mechanical Governor	211A	690707	Spring—Governed Idle Used on Type No(s). 0042, 0078, 0139.	347	493521	Switch—Rocker
203	808753	Crank—Bell Used on Type No(s). 0075, 0078, 0102. 0125, 0130, 0139, 0142, 0143, 0144.	----- Note -----			356	690796	Wire—Stop
203A	690923	Crank—Bell	691504	Spring—Governed Idle Used on Type No(s). 0129.	356A	493864	Wire—Stop	
206	691244	Nut—Governor Adjusting	216	691542	Link—Choke	432	691509	Cap—Spring
208	691549	Rod—Governor Control	222	808454	Bracket—Control	505	690238	Nut (Governor Control Lever)
209	805460	Spring—Governor	227	690236	Lever—Governor Control	561	690713	Nut (Control Lever)
209A	691546	Spring—Governor Used on Type No(s). 0042, 0078.	232	691538	Spring—Governor Link	562	690239	Bolt (Governor Control Lever)
----- Note -----			262	805762	Screw (Rod Bracket)	689	691272	Spring—Friction
	690709	Spring—Governor Used on Type No(s). 0129.	265	221535	Clamp—Casing	1157	806447	Nut (Bell Crank)
	690716	Spring—Governor Used on Type No(s). 0142.	267	805762	Screw (Casing Clamp)			
			271	692541	Lever—Control			
			278	690237	Washer (Governor Control Lever)			
			280	691526	Bracket—Rod			
			281	690742	Panel—Control			

★ Included in Engine Overhaul Gasket Set—Ref. No. 358.

△ Included in Valve Overhaul Kit—Ref. No. 1033.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

380400 to 380499

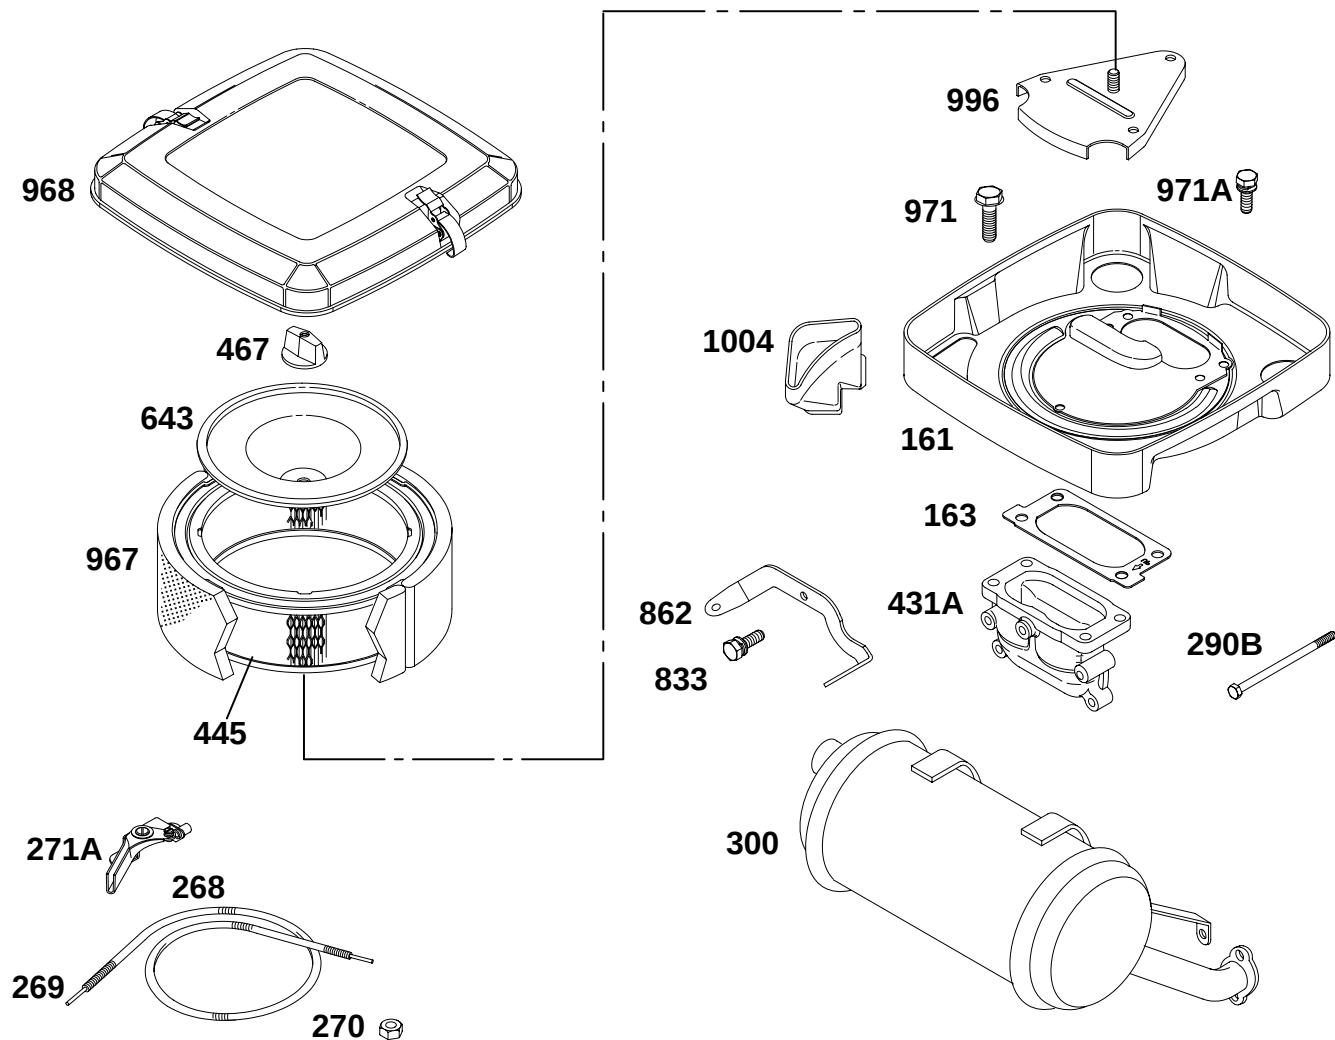


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161	808655	Base-Air Cleaner	290B	690866	Screw (Intake Elbow)	862	691539	Strap/Stud-Air Cleaner Mounting
163	★806013	Gasket-Air Cleaner	300	808705	Muffler	967	692520	Filter-Pre Cleaner
268	65616	Casing-Control Wire (Cut to Required Length)	431A	691534	Elbow-Intake	968	808654	Cover-Air Cleaner
269	26633	Wire-Control (Cut to Required Length)	445	692519	Filter-Air Cleaner Cartridge	971	691492	Screw (Air Cleaner Base)
270	63426	Nut (Control Wire Casing)	467	491875	Knob-Air Cleaner	971A	692539	Screw (Air Cleaner Base)
271A	290568	Lever-Control	643	805631	Retainer-Air Filter	996	690917	Shield-Carburetor
			833	690872	Screw (Air Cleaner Mounting Strap/Stud)	1004	806422	Duct-Air

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

△ Included in Valve Overhaul Kit-Ref. No. 1033.

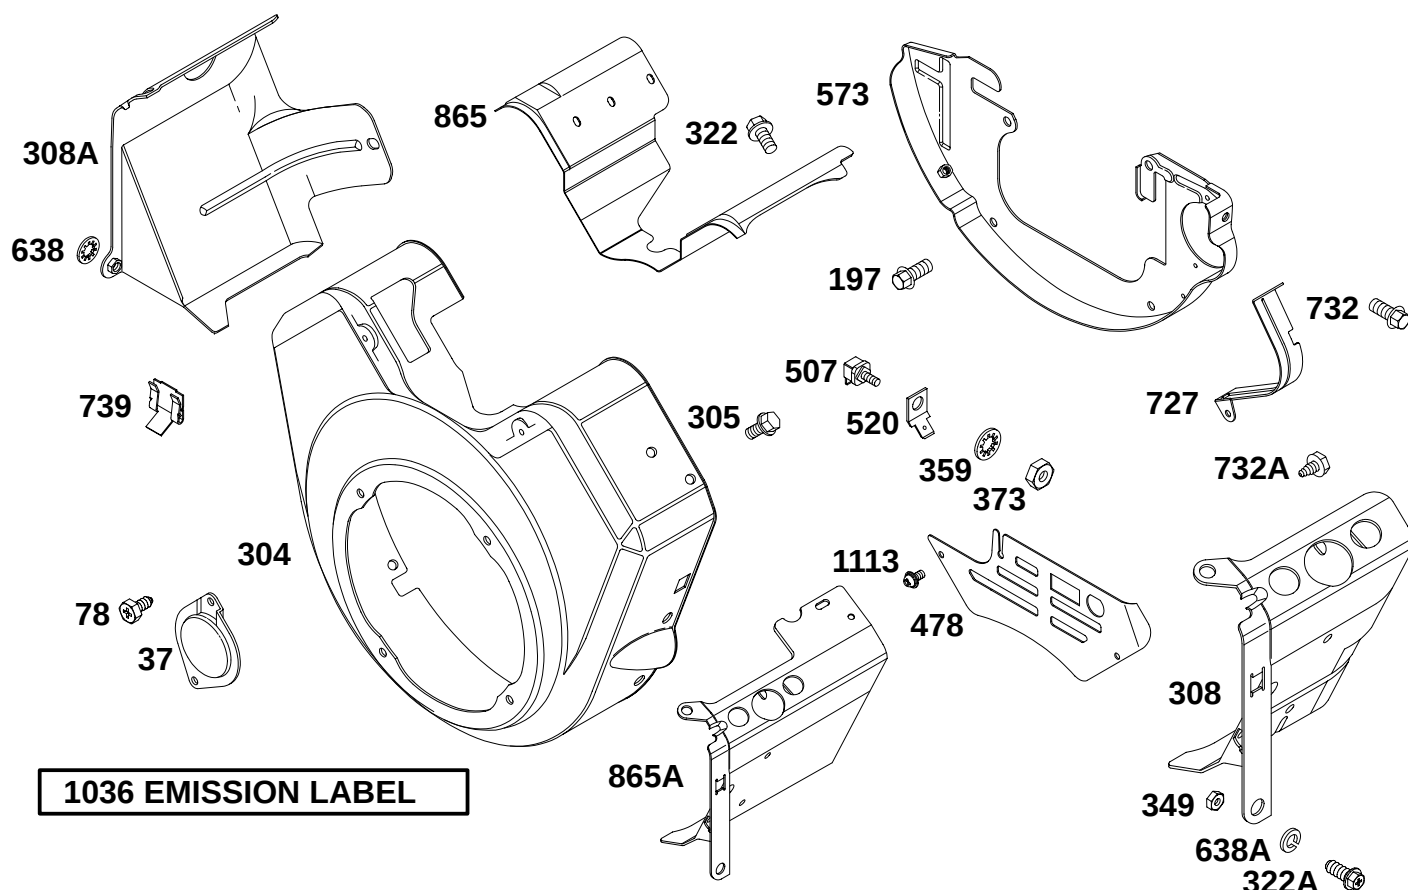








REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
37	690715	Guard-Flywheel	308A	806546	Cover-Cylinder Head (Cylinder 2)	865	690750	Cover-Air Guide
78	690688	Screw (Flywheel Guard)	322	692539	Screw (Cylinder Head Cover)	865	690901	Cover-Air Guide Used on Type No(s). 0144.
197	692539	Screw (Backplate)	322A	805448	Screw (Cylinder Head Cover)	1036	806888	Label-Emissions (Used After Code Date 00063000).
304	808658	Housing-Blower (Red)	349	805383	Nut (Cylinder Head Cover)	----- Note -----		
		----- Note -----	359	691077	Washer (Ground Terminal)	806700 Label-Emissions		
		808651 Housing-Blower (Black)	373	90576	Nut (Ground Terminal)	(Used After Code Date 99093000 and Before Code Date 00070100).		
		Used on Type No(s). 0048, 0139, 0130.	478	691533	Panel	806646 Label-Emissions		
		-----	507	398525	Insulator	(Used Before Code Date 99100100 and After Code Date 98123100).		
		808651 Housing-Blower (Black)	520	691084	Terminal-Ground	692816 Label-Emissions		
		(Used After Code Date 99101300).	573	690902	Plate-Back	(Used Before Code Date 9910100 and After Code Date 98123100).		
		Used on Type No(s). 0130.	638	691551	Washer (Cylinder Head Cover)	692816 Label-Emissions		
305	805025	Screw (Blower Housing) (M8-14)	638A	690706	Washer (Cylinder Head Cover)	(Used Before Code Date 9910100).		
308	806547	Cover-Cylinder Head (Cylinder 1)	727	690714	Cover-Starter Drive	692816 Label-Emissions		
			732	692539	Screw (Starter Drive Cover)	(Used Before Code Date 9910100).		
			732A	690688	Screw (Starter Drive Cover)	692816 Label-Emissions		
			739	690451	Clip-Debris	(Used Before Code Date 9910100).		
						1113	690677	Screw (Panel)

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.

△ Included in Valve Overhaul Kit-Ref. No. 1033.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

 
380400 to 380499

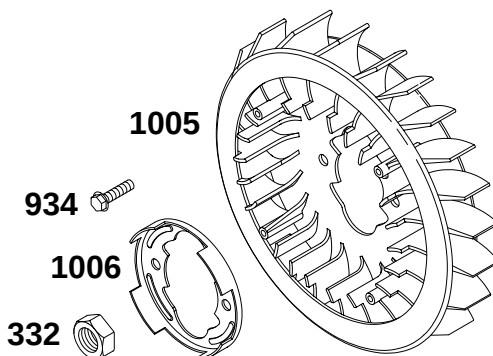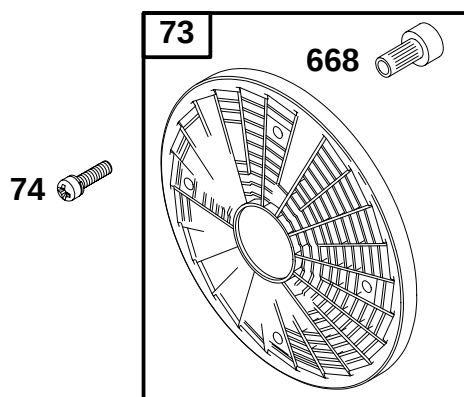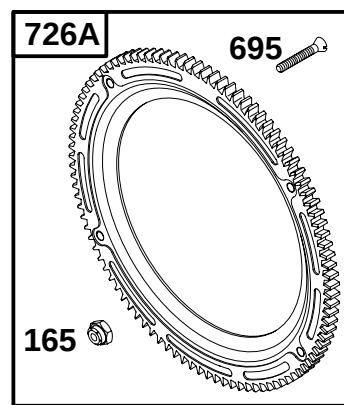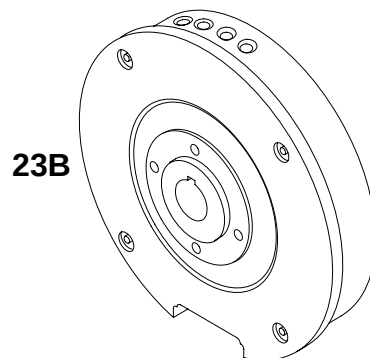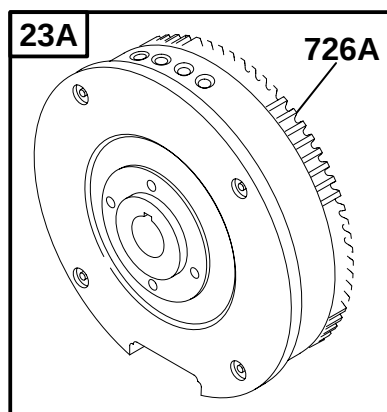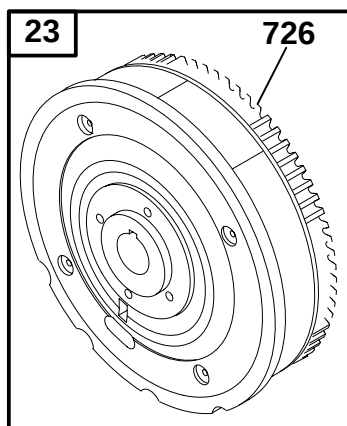

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	808768	Flywheel (Steel Ring Gear)	165	693148	Nut (Ring Gear)	726A	807805	Gear-Ring (Aluminum)
23A	690921	Flywheel (Aluminum Ring Gear)	332	690887	Nut (Flywheel)	934	94627	Screw (Fan Retainer)
23B	690922	Flywheel (For use on engines with rewind starters) Used on Type No(s). 0102, 0130.	363	19203	Flywheel Puller	1005	690911	Fan-Flywheel
73	494439	Screen-Rotating	668	691500	Spacer	1006	690452	Retainer-Fan
74	94417	Screw (Rotating Screen)	695	693109	Screw (Ring Gear)			
			726		Gear-Ring (Steel)(Sold in Ref 23 Flywheel Kit Only)			

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.


△ Included in Valve Overhaul Kit-Ref. No. 1033.

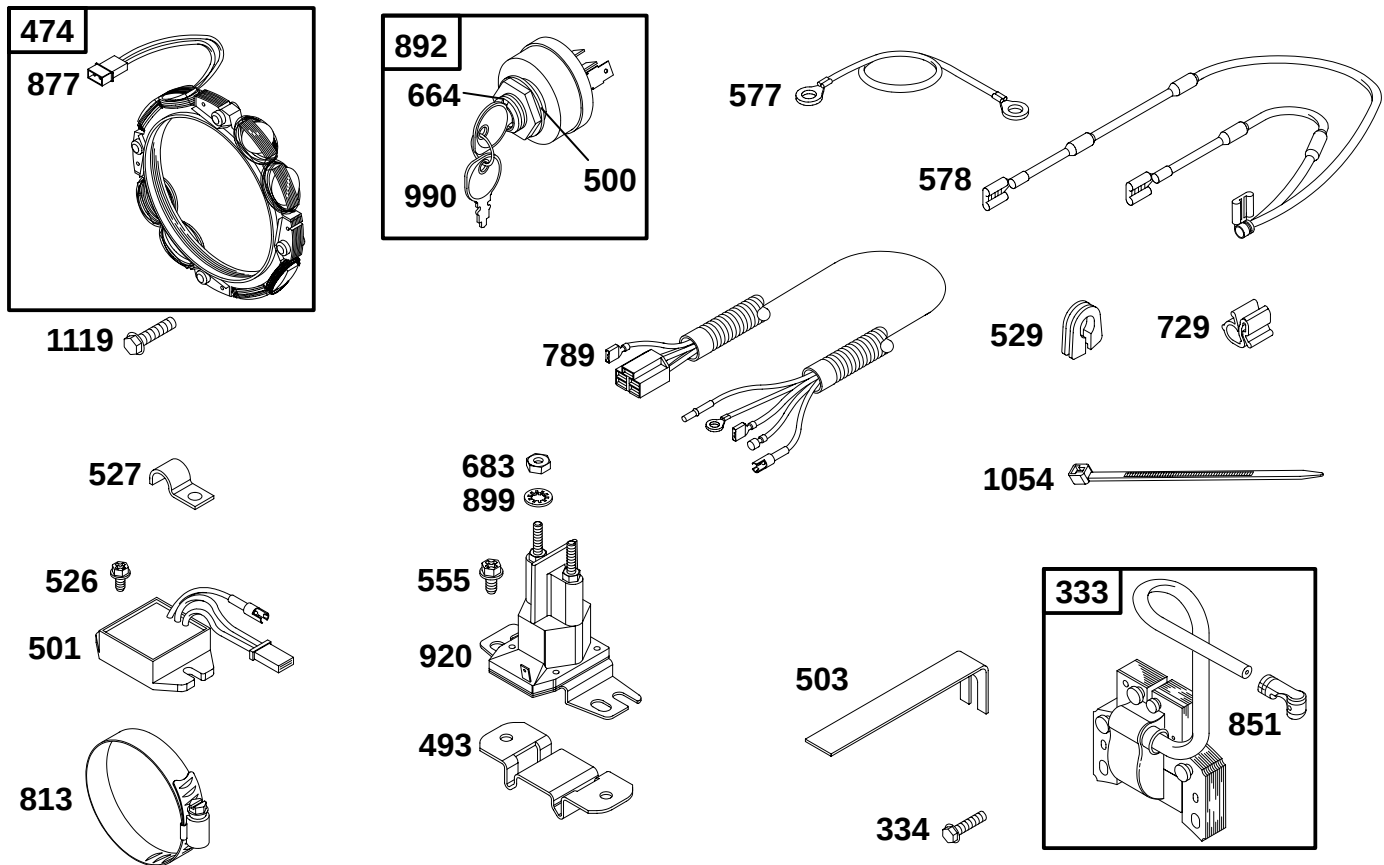

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333	492341	Armature-Magneto	527	690423	Clamp-Tube	813	690635	Clamp
334	805407	Screw (Magneto Armature)	529	690744	Grommet	851	493880	Terminal-Sparkplug
474	393295	Alternator (10 to 16 Amp)	555	805448	Screw (Starter Solenoid)	877	399916	Wire/Connector- Alternator (Yellow Dual Socket)
493	691177	Bracket-Mounting (Solenoid)	577	690795	Cable-Starter	892	493625	Switch-Key
500	691086	Washer (Key Switch)	578	493792	Wire Assembly	899	691077	Washer (Starter Solenoid)
501	394890	Regulator (10 to 16 Amp)	664	691087	Nut (Key Switch)	920	807829	Solenoid-Starter
503	691532	Strap-Starter	683	92278	Nut (Starter Solenoid)	990	392832	Key Set
526	805448	Screw (Regulator) (10 to 16 Amp)	729	690586	Clip-Wire	1054	280275	Tie-Cable
			789	493624	Harness-Wiring	1119	691552	Screw (Alternator)


★ Included in Engine Overhaul Gasket Set-Ref. No. 358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.

△ Included in Valve Overhaul Kit-Ref. No. 1033.

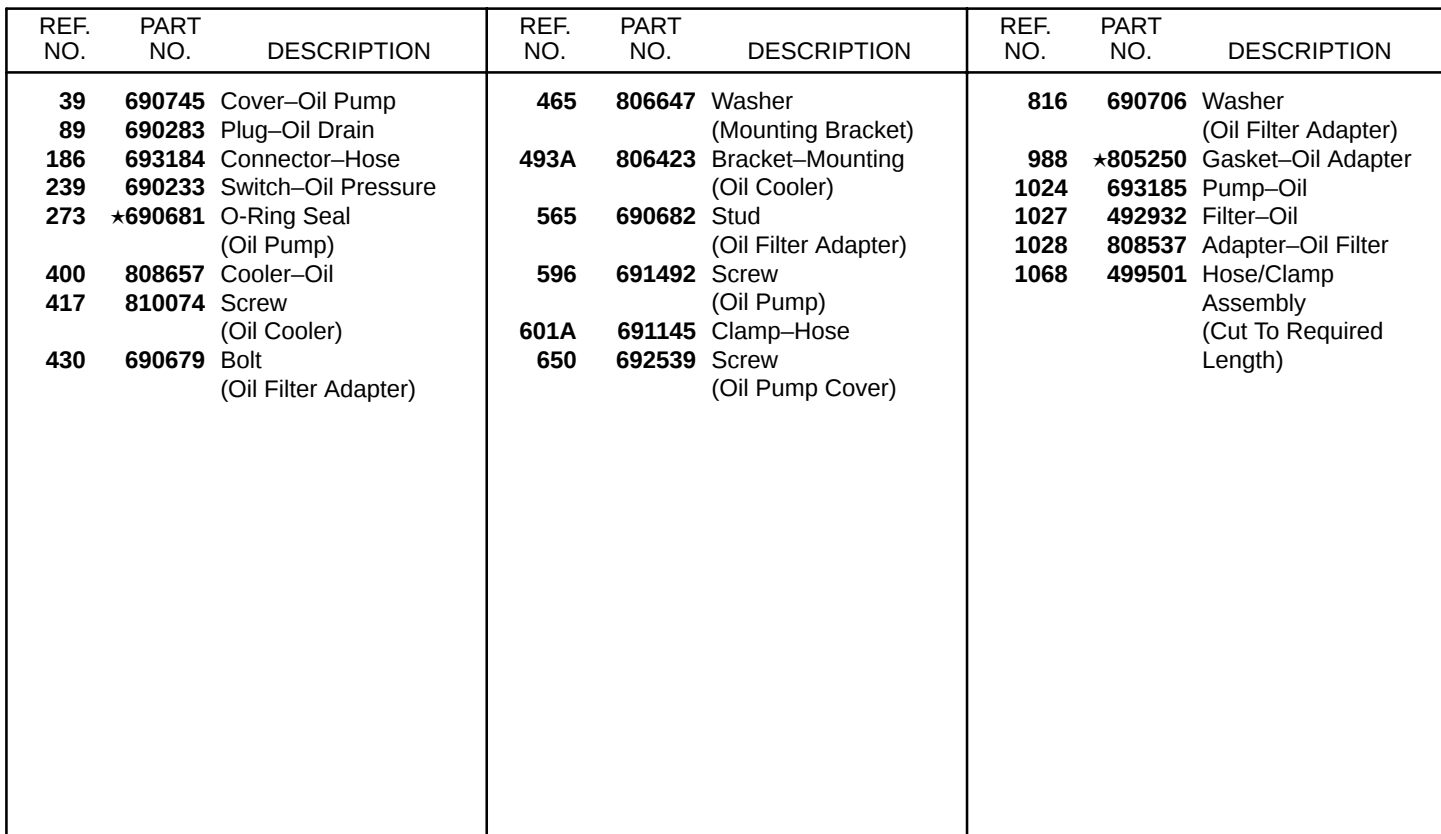

12


K&T Saw Shop 606-678-9623 or 606-561-4983

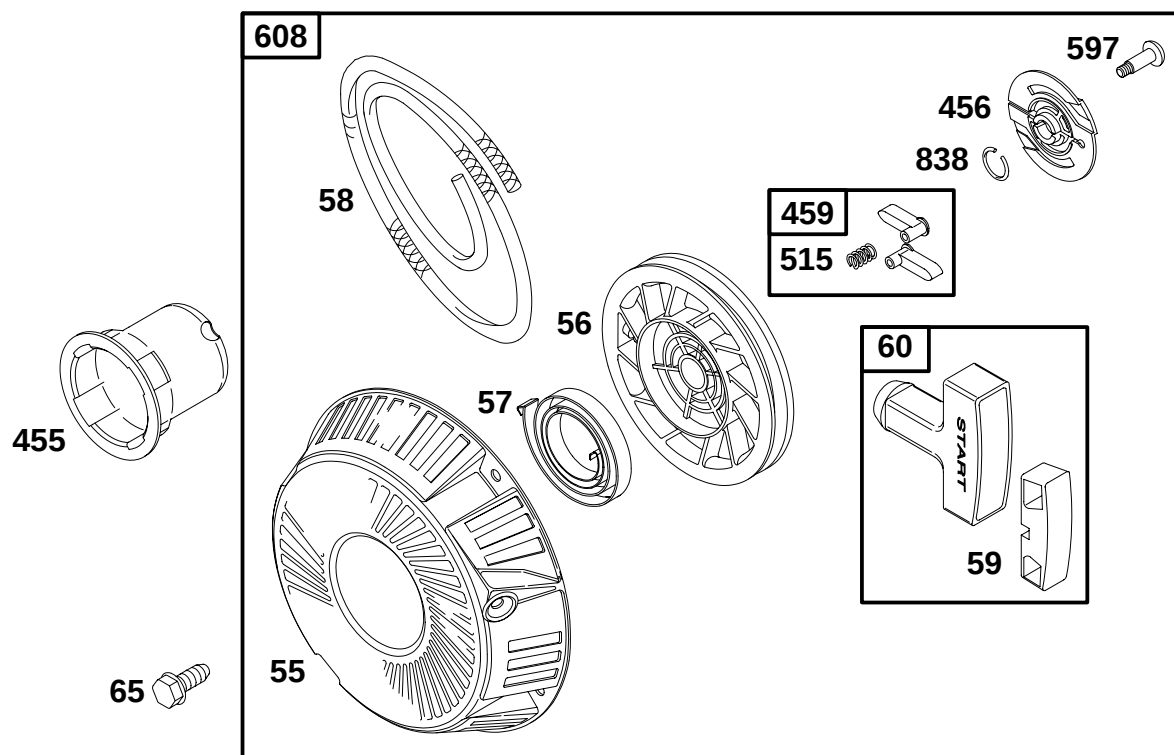

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691568	Housing-Rewind Starter	59	805957	Insert-Grip	515	691528	Spring-Pawl
56	805949	Pulley-Starter	60	808167	Grip-Starter Rope	597	690876	Screw (Pawl Friction Plate)
57	805951	Spring-Rewind Starter	65	805026	Screw (Rewind Starter)	608	808087	Starter-Rewind
58	66574	Rope-Starter (Cut to Required Length)	455	690864	Cup-Flywheel	838	690875	Ring-Rewind Starter
			456	691529	Plate-Pawl Friction			
			459	808166	Pawl-Ratchet			

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.


△ Included in Valve Overhaul Kit-Ref. No. 1033.

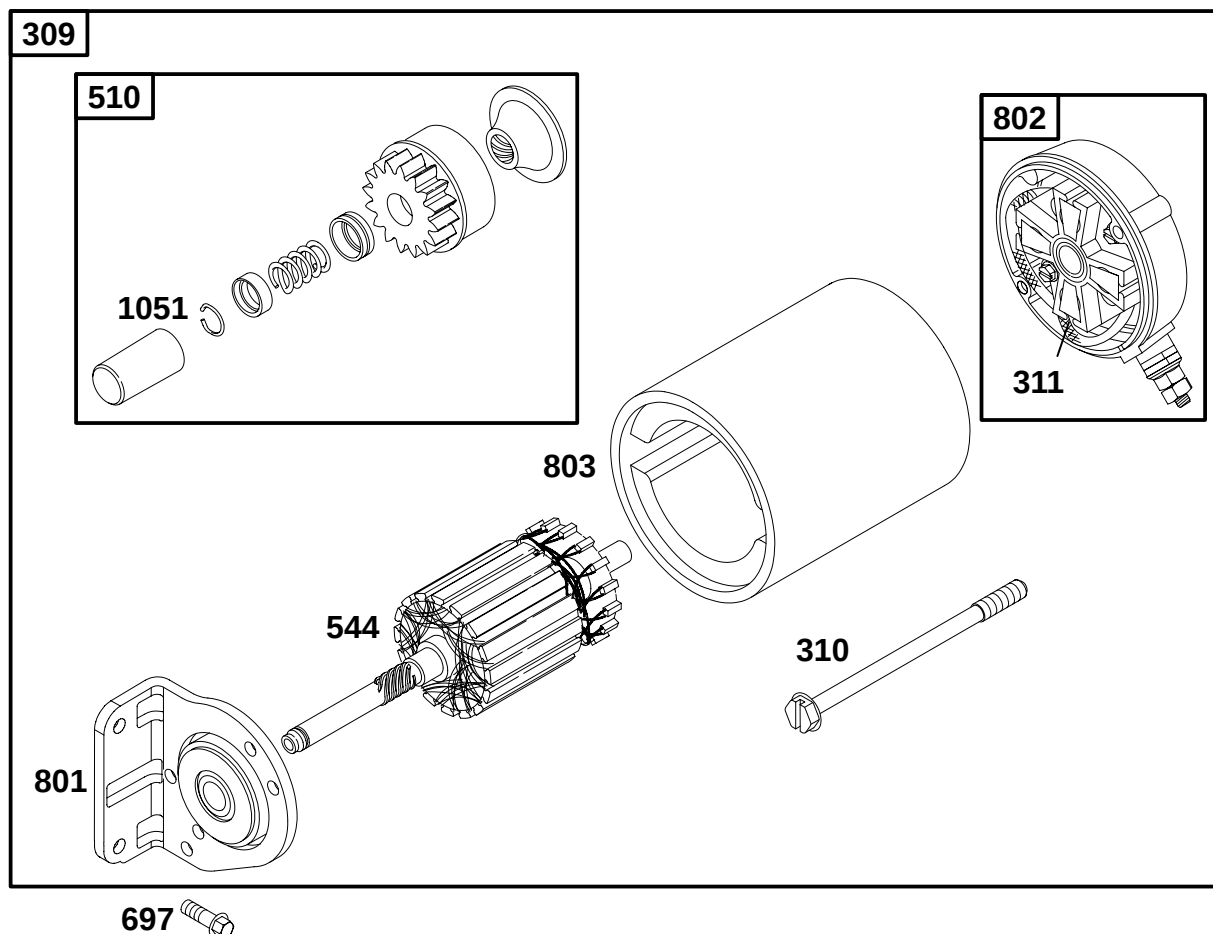380400 to 380499

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	691564	Motor-Starter (Services Steel Ring Gear Only)	510	496881	Drive-Starter (Services Steel Ring Gear Only)	697	805247	Screw (Drive Cap)
310	496880	Bolt (Starter Motor) (1/4-20x4 1/4)	544	690855	Armature-Starter	801	808778	Cap-Drive
311	496887	Brush Set				802	496813	Cap-End
						803	690854	Housing-Starter
						1051	691124	Ring-Retaining

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.
 ● Included in Carburetor Overhaul Kit-Ref. No. 121.

△ Included in Valve Overhaul Kit-Ref. No. 1033.

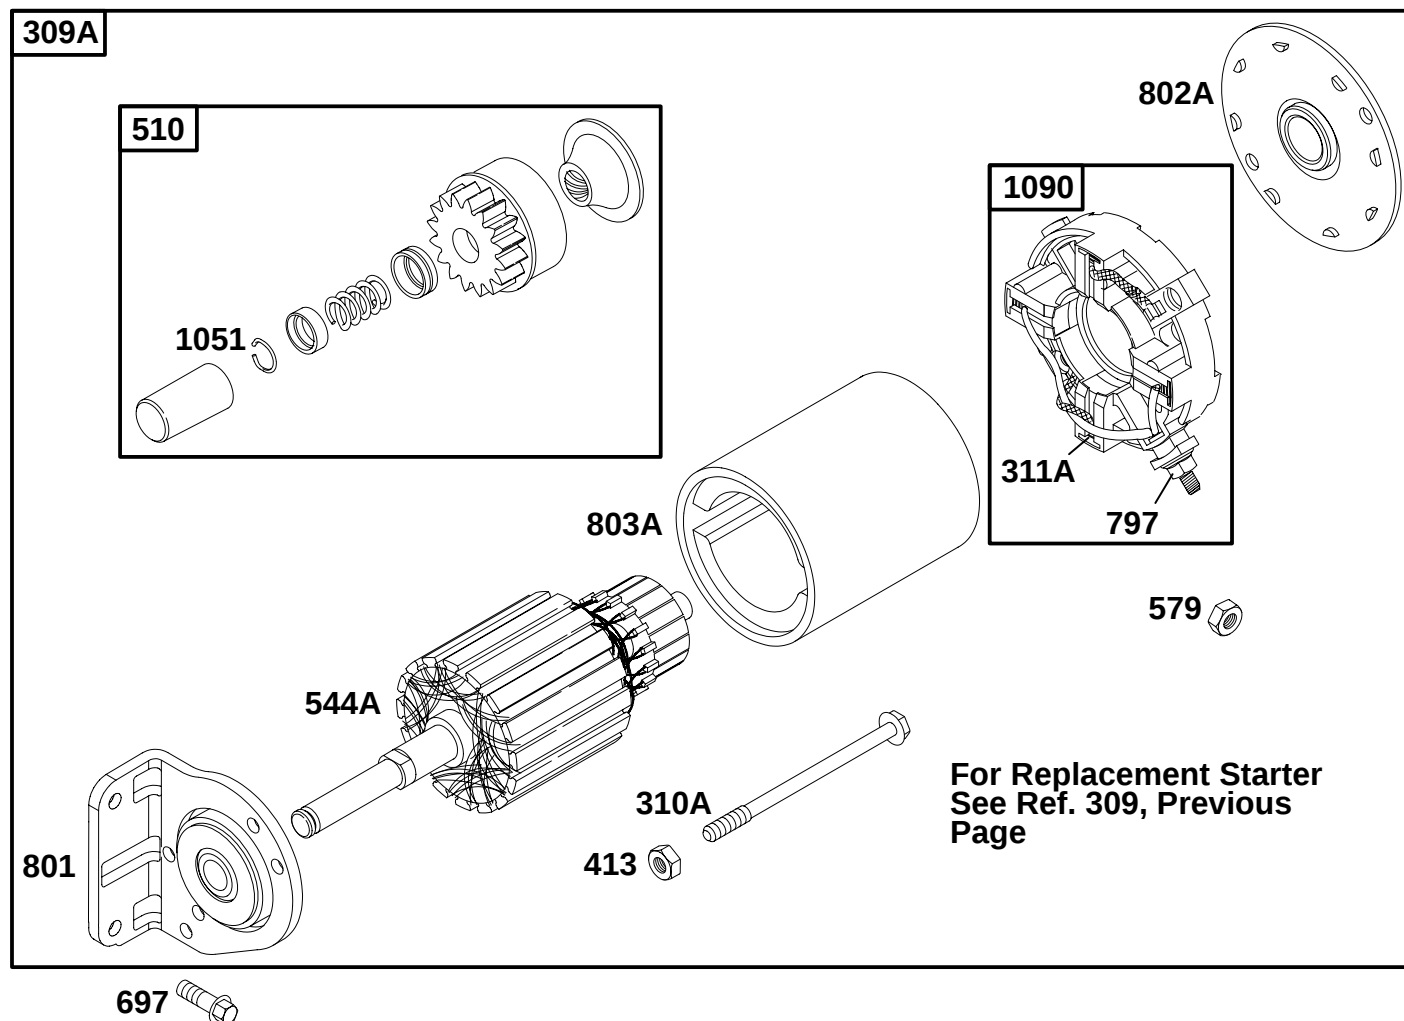


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309A		Motor-Starter (Services Steel Ring Gear Only) (For Replacement Starter Motor, See Ref 309, Previous Page)	311A	497608	Brush Set	697	805247	Screw (Drive Cap)
			413	693587	Nut (Starter Motor)	797	92278	Nut (Brush Retainer)
			510	496881	Drive-Starter Services Steel Ring Gear Only)	801	808778	Cap-Drive
310A	690323	Bolt (Starter Motor) (10-24x4 7/16)	544A	693548	Armature-Starter	802A	497607	Cap-End
			579	693167	Nut (Starter Cable)	803A	693547	Housing-Starter
						1051	691124	Ring-Retaining
						1090	497605	Retainer-Brush

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

△ Included in Valve Overhaul Kit-Ref. No. 1033.

380400 to 380499

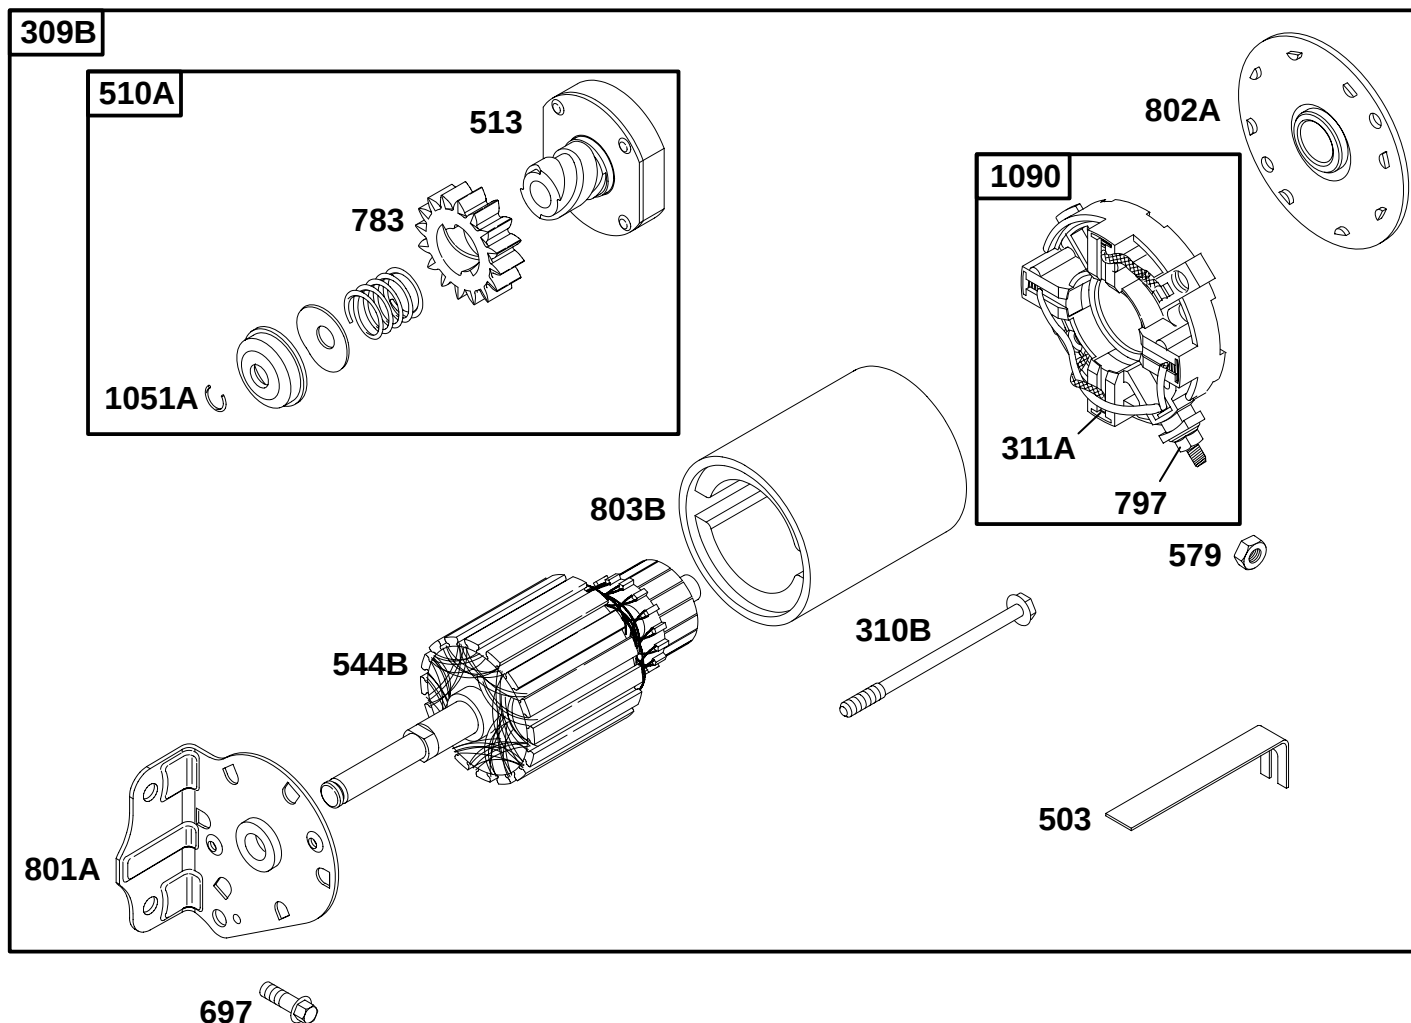


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309B	499521	Motor-Starter (Services Aluminum Ring Gear Only) (Used Before Code Date 98071600). Used on Type No(s). 0100.	510A	497606	Drive-Starter	797	92278	Nut (Brush Retainer)
			513	398003	Clutch-Drive	801A	691429	Cap-Drive
			544B		Armature-Starter (Served By 499521 Starter Motor Only)	802A	497607	Cap-End
						803B		Housing-Starter (Served By 499521 Starter Motor Only)
310B	691263	Bolt (Starter Motor) (10-24x4 13/16)	579	693167	Nut (Starter Cable)	1051A	263080	Ring-Retaining
			697	805247	Screw (Drive Cap)	1090	497605	Retainer-Brush
311A	497608	Brush Set	783	693059	Gear-Pinion Services Aluminum Ring Gear Only)			
503	691532	Strap-Starter						

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.

△ Included in Valve Overhaul Kit-Ref. No. 1033.

● Included in Carburetor Overhaul Kit-Ref. No. 121.


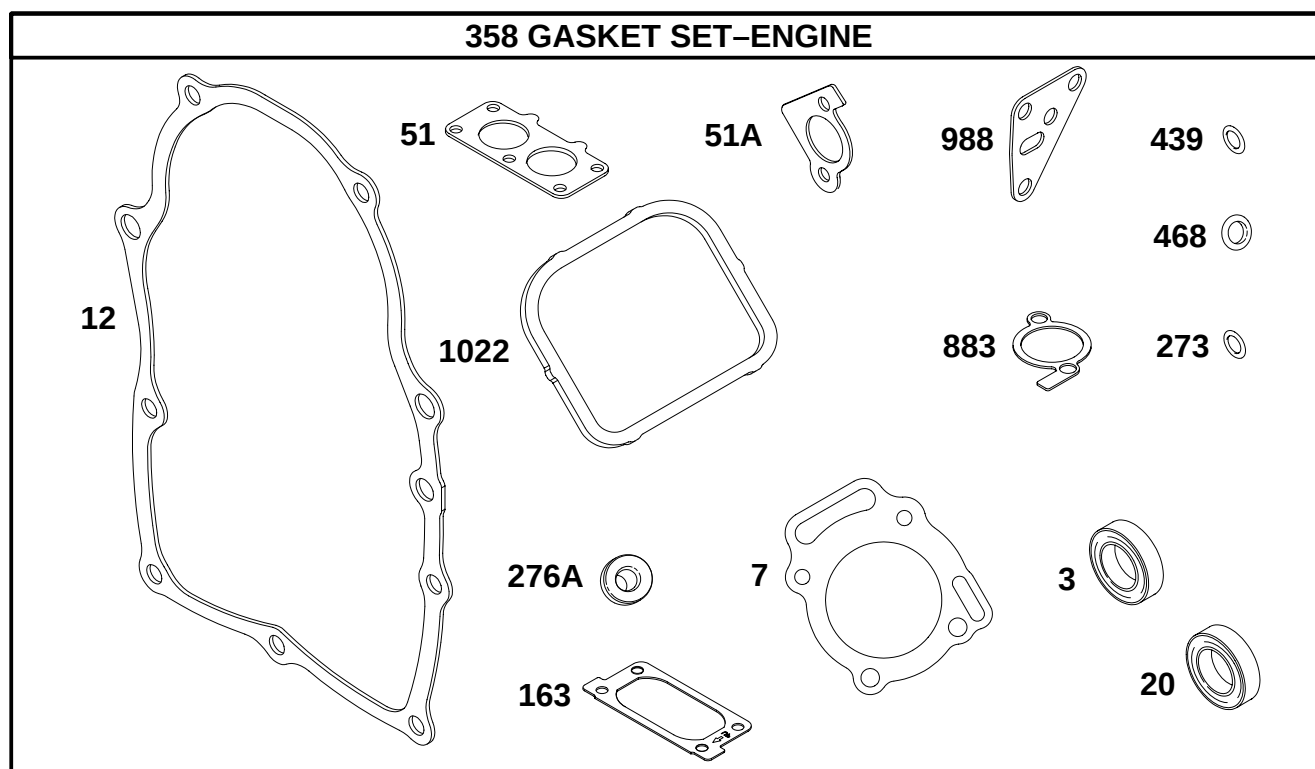


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★805101	Seal—Oil (Magneto Side)	51A	★Δ806418	Gasket—Intake (Manifold to Cylinder Head)	439	★692154	Seal—O Ring (Crankcase Cover)
7	★Δ806377	Gasket—Cylinder Head	163	★806013	Gasket—Air Cleaner	468	★690690	Seal—O Ring (Oil Pump Screen)
12	★806190	Gasket—Crankcase	273	★690681	Seal—O Ring (Oil Pump)	883	★Δ806425	Gasket—Exhaust
20	★805049	Seal—Oil (PTO Side)	276A	★Δ805420	Washer—Sealing (Rocker Arm Cover)	988	★805250	Gasket—Oil Adapter
51	★690950	Gasket—Intake (Manifold to Carburetor)	358	808617	Gasket Set—Engine	1022	★Δ806039	Gasket—Rocker Cover

★ Included in Engine Overhaul Gasket Set—Ref. No. 358.
● Included in Carburetor Overhaul Kit—Ref. No. 121.

Δ Included in Valve Overhaul Kit—Ref. No. 1033.

380400 to 380499

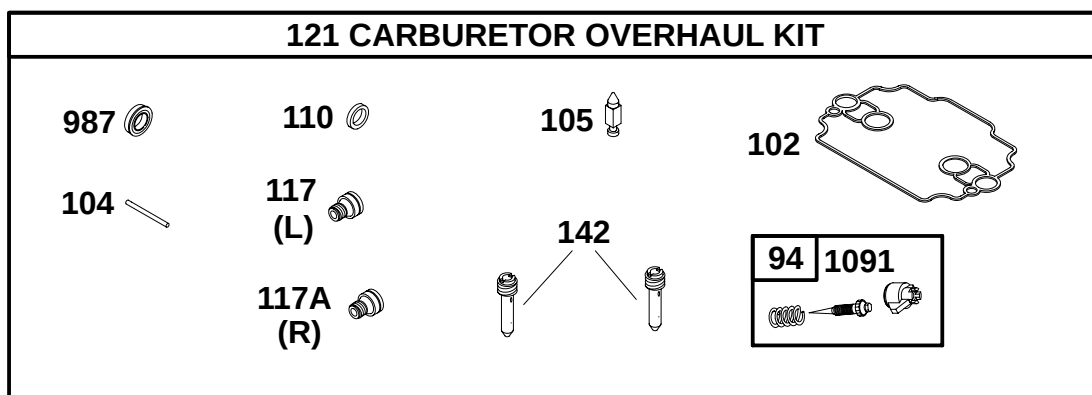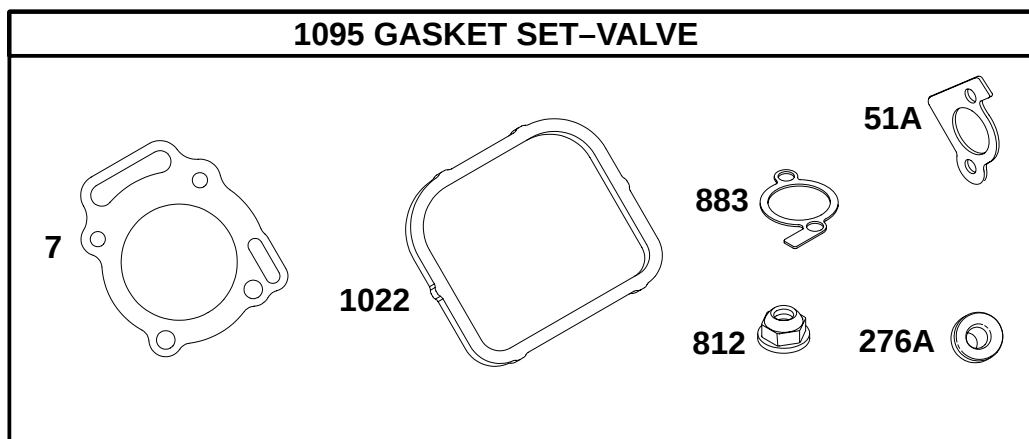

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
7	★ 806377	Gasket-Cylinder Head	117	● 806438	Jet-Main (L or Cylinder 1)	812	Δ 805019	Nut (Rocker Arm Cover)
51A	Δ 806418	Gasket-Intake	117A	● 806439	Jet-Main (R or Cylinder 2)	883	★ 806425	Gasket-Exhaust
94	● 808257	Kit-Idle Mixture	121	808618	Klt-Carburetor Overhaul	987	● 806070	Seal-Throttle Shaft
102	● 693711	Gasket-Carburetor Body	142	● 806375	Nozzle-Carburetor	1022	★ 806039	Gasket-Rocker Cover
104	● 690882	Pin-Float Hinge	276A	★ 805420	Washer-Sealing	1091	● 691516	Cap-Limiter
105	● 805547	Valve-Float Needle (Used Before Code Date 99031700).	633	● 690722	Seal-Choke/Throttle Shaft	1095	808619	Gasket Set-Valve

★ Included in Engine Overhaul Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

Δ Included in Valve Overhaul Kit-Ref. No. 1033.