



**10J900**

# Illustrated Parts List

## Model Series

# 10J900

### TYPE NUMBERS

0130, 0131, 0133, 0137,  
0138, 0139, 0293, 0305,  
0315, 0342, 0520, 0524,  
0527.

## TABLE OF CONTENTS

 
Air Cleaner .....	6
Blower Housing .....	7
Brake .....	5
Cam .....	3
Carburetor .....	4
Controls .....	5
Covers .....	5 & 7
Crankcase Cover/Sump .....	3
Crankshaft .....	3
Cylinder .....	2
Flywheel .....	7
Fuel Tank .....	4
Governor Spring .....	5
Head .....	2
Ignition .....	5
Kits/Gaskets-Engine/Valve .....	2
Muffler Group .....	6
Oil Group .....	2
Piston Group .....	3
Rewind .....	7
Valves .....	3

PRINTED IN U.S.A.










COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


# 10J900

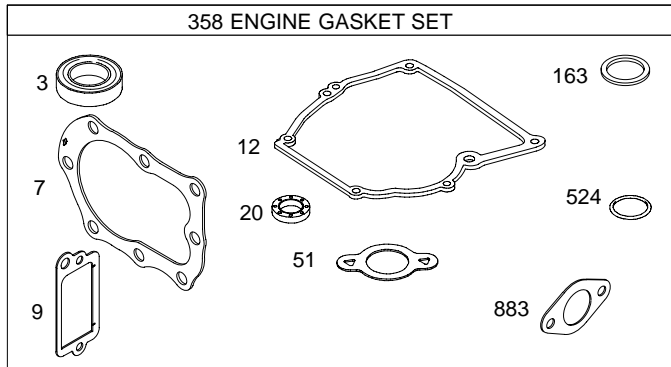



1058 OWNER'S MANUAL

  
 
 
 
 
 
 
1330 REPAIR MANUAL

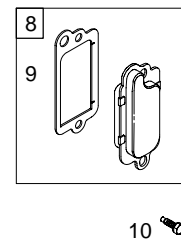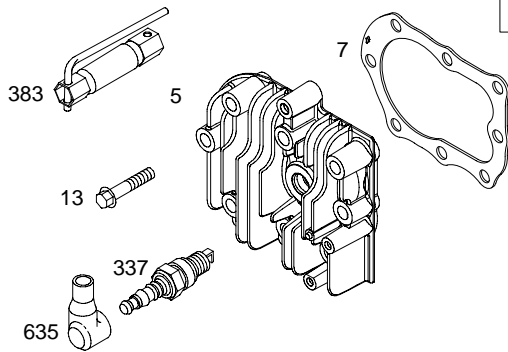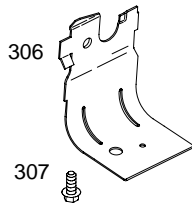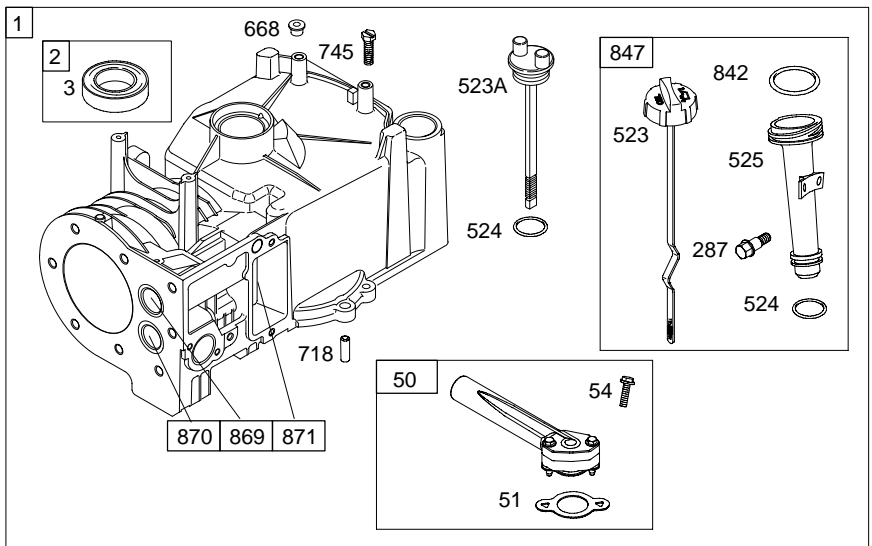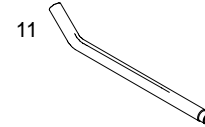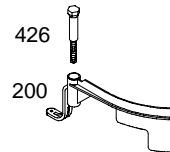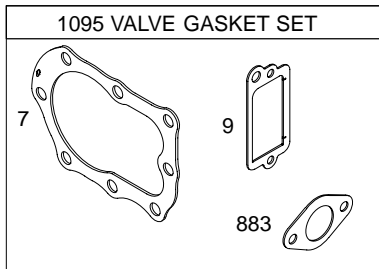






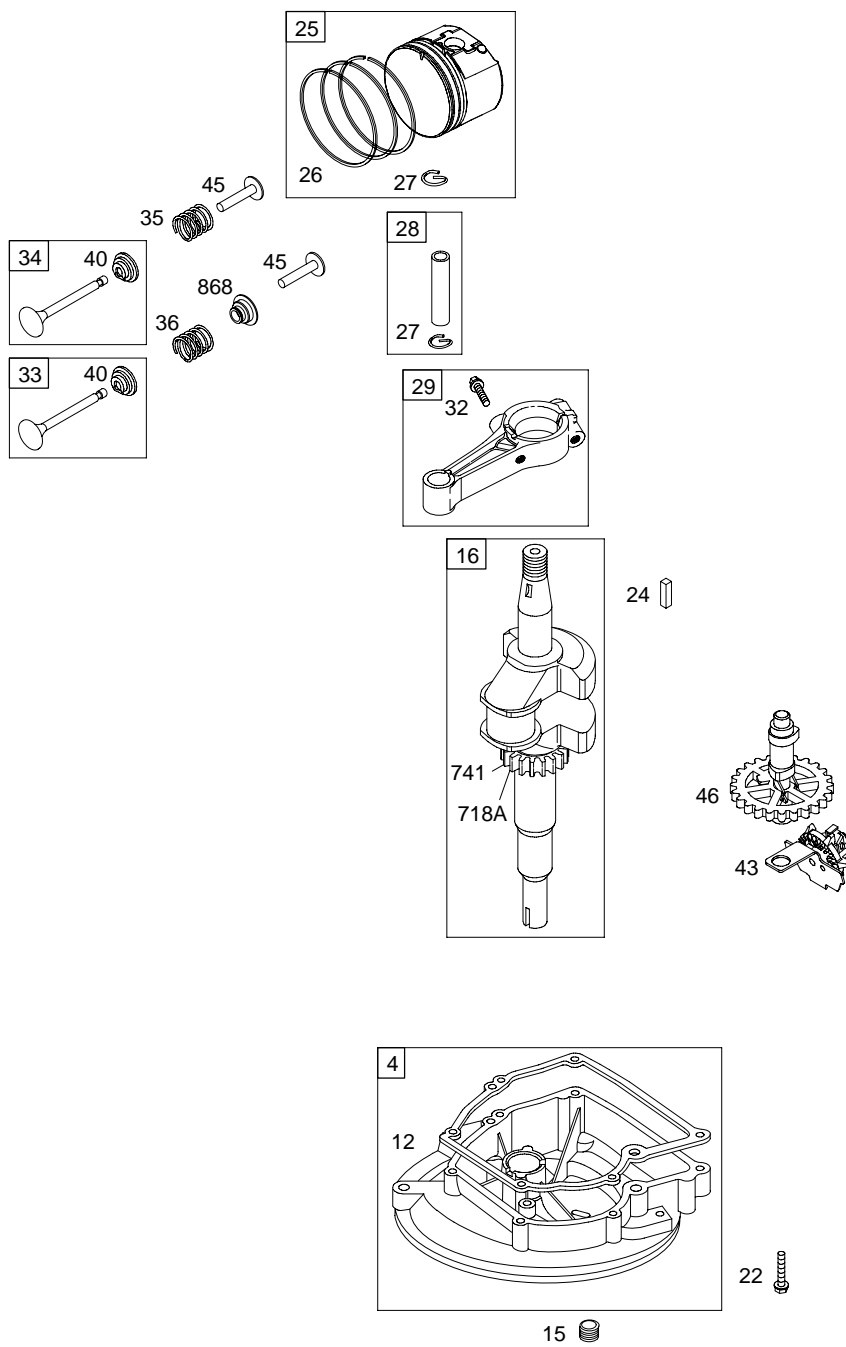


# 10J900

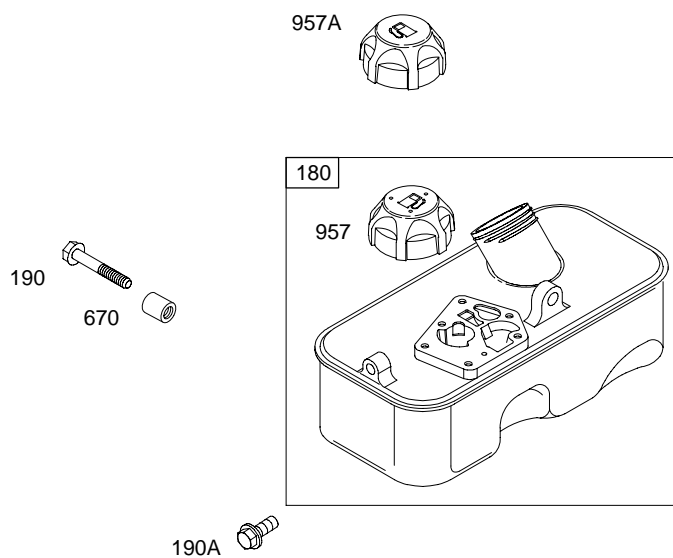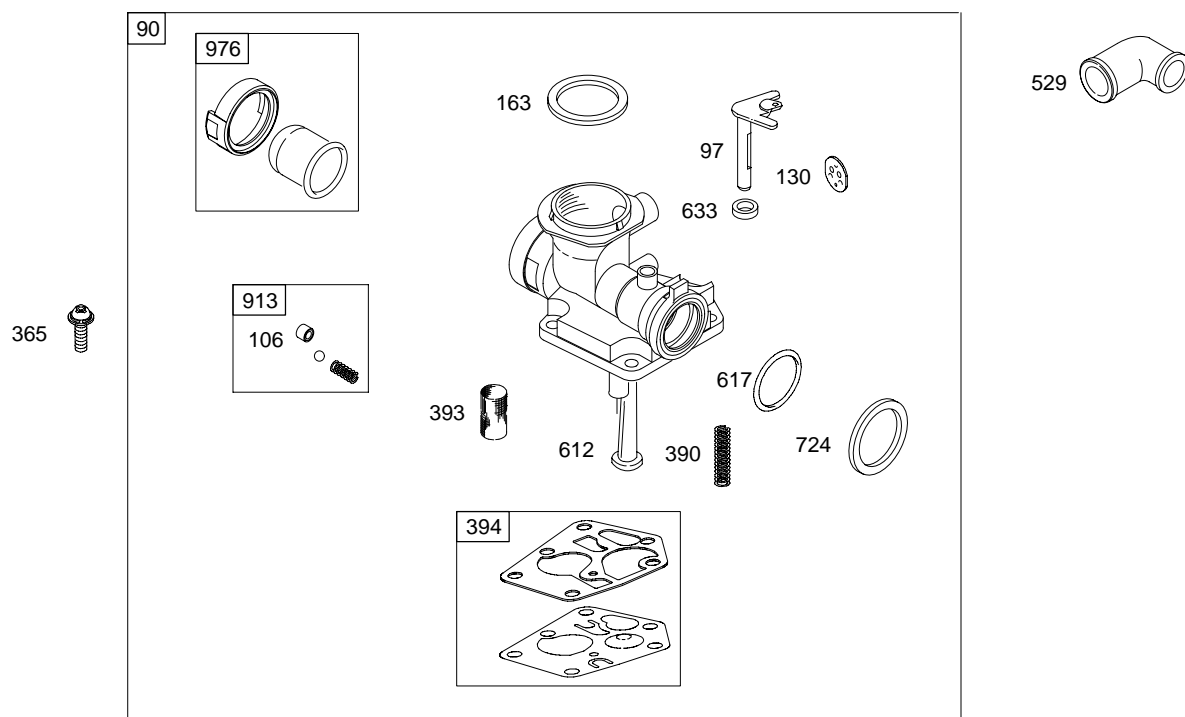  





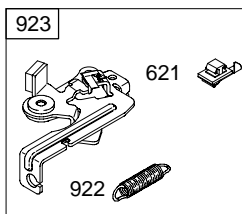 
 
 
 
 
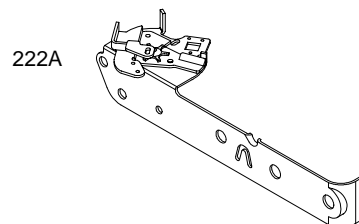 
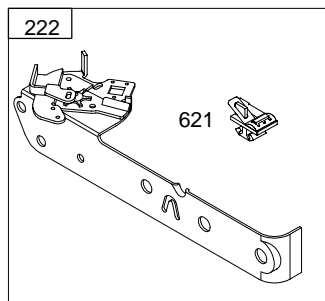 


# 10J900

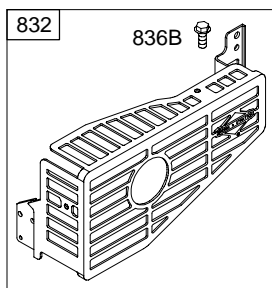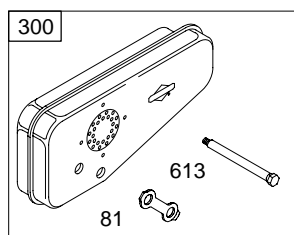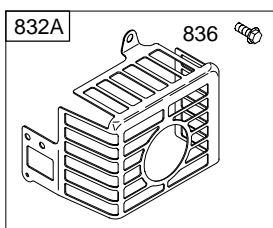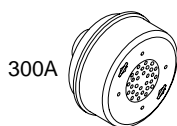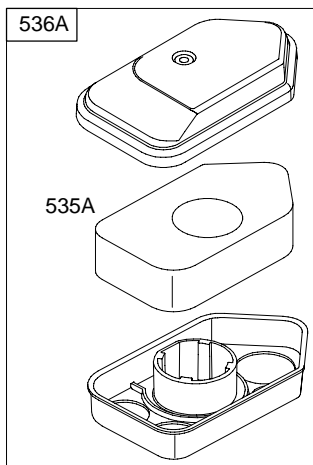      

1019 LABEL KIT

           1036 EMISSIONS LABEL

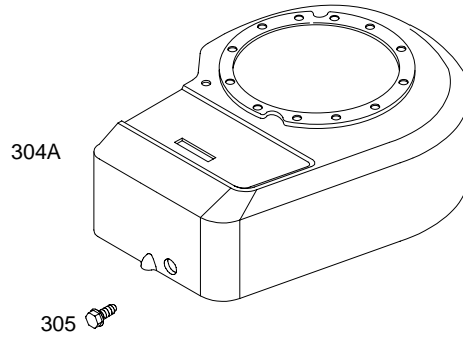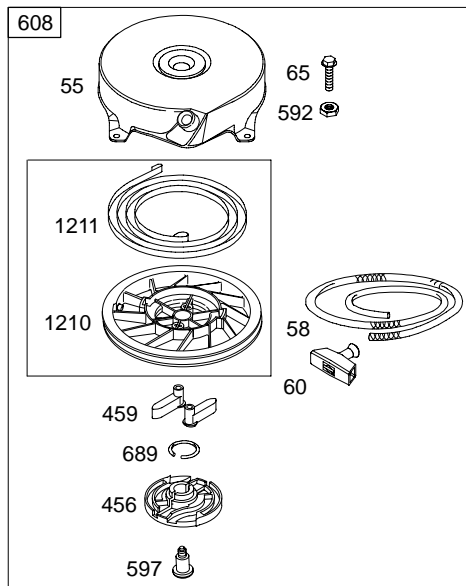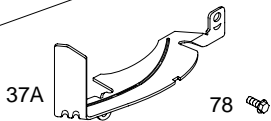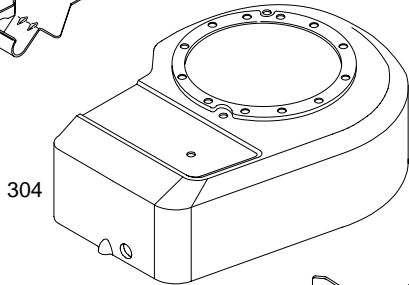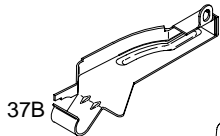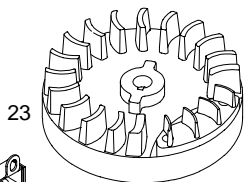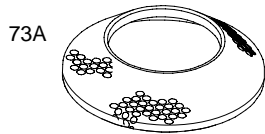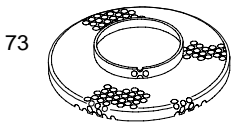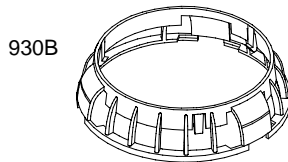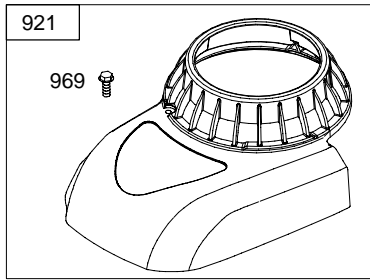

# 10J900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly	25	790908	Piston Assembly (Standard) (Used After Code Date 04111400).	55	692144	Housing-Rewind Starter
2	399269	Kit-Bushing/Seal (Magneto Side)				58	697316	Rope-Starter (88 5/8" Long) Used on Type No(s). 0138, 0293, 0305, 0315, 0342, 0520, 0524, 0524.
3	*299819	Seal-Oil (Magneto Side)			----- <b>Note</b> -----			
4	698691	Sump-Engine ----- <b>Note</b> ----- 699081 Sump-Engine Used on Type No(s). 0137.			699657 Piston Assembly (Standard) (Used After Code Date 03093000 and Before Code Date 04111500).	58A	691921	Rope-Starter (70" Long) Used on Type No(s). 0130, 0131, 0133, 0137, 0139.
5	790169	Head-Cylinder	26	790909	Ring Set (Standard) (Used After Code Date 04111400).	60	691915	Grip-Starter Rope
7	*Δ698717	Gasket-Cylinder Head			----- <b>Note</b> -----	65	690837	Screw (Rewind Starter)
8	699640	Breather Assembly			699658 Ring Set (Standard) (Used After Code Date 03093000 and Before Code Date 04111500).	73	694018	Screen-Rotating (Used Before Code Date 03080800). Used on Type No(s). 0133, 0137.
9	*Δ695890	Gasket-Breather	27	691588	Lock-Piston Pin	73A	699850	Screen-Rotating (Used After Code Date 03080700).
10	691666	Screw (Breather Assembly)	28	699659	Pin-Piston (Standard) (Used After Code Date 03093000).	78	692198	Screw (Flywheel Guard)
11	691245	Tube-Breather			----- <b>Note</b> -----	81	691179	Lock-Muffler Screw Used on Type No(s). 0305.
12	*692218	Gasket-Crankcase (Standard) (.015" Thick)			298909 Pin-Piston (Standard) (Used Before Code Date 03100100).	90	699660	Carburetor
13	691640	Screw (Cylinder Head)	29	699654	Rod-Connecting	97	691931	Shaft-Throttle
15	691680	Plug-Oil Drain	32	691664	Screw (Connecting Rod)	106	691901	Seat-Inlet
16	692989	Crankshaft Used on Type No(s). 0130, 0131, 0133, 0137, 0138, 0139, 0293, 0305, 0315. ----- <b>Note</b> ----- 691472 Crankshaft Used on Type No(s). 0342, 0520, 0527. 691471 Crankshaft Used on Type No(s). 0524.	33	296676	Valve-Exhaust	130	691190	Valve-Throttle
			34	296677	Valve-Intake	163	*271139	Gasket-Air Cleaner
20	*391483	Seal-Oil (PTO Side)	35	690520	Spring-Valve (Intake)	180	494406	Tank-Fuel
22	692551	Screw (Crankcase Cover/Sump)	36	690520	Spring-Valve (Exhaust)	188	692198	Screw (Control Bracket)
23	690843	Flywheel Used on Type No(s). 0130, 0131, 0133, 0137, 0139, 0315. ----- <b>Note</b> ----- 692009 Flywheel Used on Type No(s). 0138, 0293, 0305, 0342, 0520, 0524, 0527.	37A	691209	Guard-Flywheel (Muffler Side)	190	691640	Screw (Fuel Tank) (1 3/4" Long)
			37B	690482	Guard-Flywheel (Carburetor Side)	190A	692198	Screw (Fuel Tank) (1/2" Long)
24	222698	Key-Flywheel	40	692194	Retainer-Valve			
			43	698690	Slinger-Governor/Oil			
			45	691762	Tappet-Valve			
			46	691998	Camshaft			
			50	699644	Manifold-Intake			
			51	*699649	Gasket-Intake			
			54	691111	Screw (Intake Manifold)			

\* Engine Gasket Set-Reference 358

Δ Valve Gasket Set-Reference 1095



**10J900**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
200	691912	Blade-Governor	300	692307	Muffler (Super Lo Tone)	335	691107	Screw (Magneto Armature With Air Vane) (1 15/16" Long)
201	690347	Link-Air Vane			Used on Type No(s). 0305.	337	802592	Plug-Spark ----- <b>Note</b> ----- <b>697451</b> Plug-Spark Used on Type No(s). 0305.
209	691862	Spring-Governor (Dark Green) Used on Type No(s). 0131, 0133. ----- <b>Note</b> ----- <b>690251</b> Spring-Governor (Yellow) Used on Type No(s). 0138, 0305, 0520, 0524, 0527. <b>692211</b> Spring-Governor (No Color) Used on Type No(s). 0130, 0137, 0139. <b>691297</b> Spring-Governor (White) Used on Type No(s). 0293, 0342. <b>690250</b> Spring-Governor (Light Green) Used on Type No(s). 0315.	300A	394569	Muffler (Round Lo Tone)			
			304	692536	Housing-Blower (Non Compliance Engines) Used on Type No(s). 0130, 0131, 0133, 0137, 0315. ----- <b>Note</b> ----- <b>691484</b> Housing-Blower (Compliance Engines) Used on Type No(s). 0138, 0293, 0305, 0342, 0527.	356	692390	Wire-Stop
						358	699933	Gasket Set-Engine
						363	19069	Puller-Flywheel
						365	790029	Screw (Carburetor)
						383	89838	Wrench-Spark Plug
						390	691839	Spring-Choke Diaphragm
						393	691837	Screen-Carburetor
						394	495770	Diaphragm-Carburetor
			304A	694051	Housing-Blower (Non Compliance Engines) Used on Type No(s). 0139.	426	691107	Screw (Governor Blade)
						455	691236	Cup-Flywheel
						456	692299	Plate-Pawl Friction
						459	281505	Pawl-Ratchet
						523	692040	Dipstick Used on Type No(s). 0139, 0520, 0524.
211	691859	Spring-Governed Idle				523A	691913	Dipstick Used on Type No(s). 0130, 0131, 0133, 0137, 0138, 0293, 0305, 0315, 0342, 0527.
222	691446	Bracket-Control Used on Type No(s). 0138, 0293, 0305, 0315, 0342, 0520, 0524, 0527.	305	692198	Screw (Blower Housing)	524	★691876	Seal-Dipstick Tube
222A	691445	Bracket-Control Used on Type No(s). 0130, 0131, 0133, 0137, 0139.	306	690400	Shield-Cylinder (Used Before Code Date 040714000). Used on Type No(s). 0130, 0131, 0133, 0137, 0138.	525	691320	Tube-Dipstick
265A	690798	Clamp-Casing Used on Type No(s). 0130, 0138.				529	692189	Grommet
267	691044	Screw (Casing Clamp)	307	690345	Screw (Cylinder Shield) (Used Before Code Date 040714000). Used on Type No(s). 0130, 0131, 0133, 0137, 0138.	534	691417	Screw (Air Cleaner)
268	691072	Casing-Control Wire (Cut To Required Length)				535A	698369	Filter-Air Cleaner Foam
269	691589	Wire-Control (Cut To Required Length)				536A	698472	Cleaner-Air
270	691027	Nut (Control Wire Casing)	332	690662	Nut (Flywheel)	578	697582	Wire Assembly Used on Type No(s). 0315.
271	691028	Lever-Control	333	496914	Armature-Magneto	592	690800	Nut (Rewind Starter)
287	691002	Screw (Dipstick Tube)	334	691061	Screw (Magneto Armature) (1" Long)	597	691696	Screw (Pawl Friction Plate)

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095

# 10J900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
608	499706	Starter-Rewind	772	691111	Screw (Linkage Cover)	913	494409	Seat-Check Valve
612	496046	Tube-Pick Up	832	790743	Guard-Muffler Used on Type No(s). 0305.	921	699796	Cover-Blower Housing Used on Type No(s). 0520, 0524.
613	691413	Screw (Muffler) Used on Type No(s). 0305.	832A	699670	Guard-Muffler Used on Type No(s). 0130, 0131, 0133, 0137, 0139.	922	692135	Spring-Brake
617	270344	Seal-O Ring (Intake Manifold)	836	690664	Screw (Muffler Guard) (13/32" Long) Used on Type No(s). 0130, 0131, 0133, 0137, 0139.	923	691487	Brake
621	692310	Switch-Stop Used on Type No(s). 0130, 0131, 0133, 0137, 0139, 0527.	836A	691125	Screw (Muffler Guard) (5/8" Long) Used on Type No(s). 0305.	925	691349	Cover-Linkage
633	691321	Seal-Choke/Throttle Shaft (Throttlet)	836B	790745	Screw (Muffler Guard) (1/2" Long) Used on Type No(s). 0305.	930B	691348	Guard-Rewind Used on Type No(s). 0130, 0342.
635	66538	Boot-Spark Plug	842	*691870	Seal-O Ring (Dipstick Tube)	957	497929	Cap-Fuel Tank Used on Type No(s). 0138, 0293, 0305, 0315, 0342, 0520, 0524, 0527.
668	692889	Spacer	847	691440	Dipstick/Tube Assembly Used on Type No(s). 0139, 0520, 0524.	957A	791129	Cap-Fuel Tank Used on Type No(s). 0130, 0131, 0133, 0137, 0139.
670	691633	Spacer-Fuel Tank	851	493880	Terminal-Spark Plug	969	692523	Screw (Blower Housing Cover) Used on Type No(s). 0520, 0524.
689	691855	Spring-Friction	868	697338	Seal-Valve	976	694394	Primer-Carburetor
718	690959	Pin-Locating (Cylinder)	869	699641	Seat-Valve (Intake)	1019	496757	Kit-Label
718A	499047	Pin-Locating (Crankshaft)	870	699642	Seat-Valve (Exhaust)	1036	790713	Label-Emissions (Used After Code Date 04063000). ----- <b>Note</b> -----
724	697478	Retainer-Seal	871	699643	Bushing-Valve Guide (Exhaust Valve) ----- <b>Note</b> -----	699930		Label-Emissions (Used Before Code Date 04070100).
729	690586	Clip-Wire	883	691880	Gasket-Exhaust Used on Type No(s). 0305.	1058	275508	Operator's Manual
741	691805	Gear-Timing				1095	498526	Gasket Set-Valve
745	691146	Screw (Brake) (7/8" Long)				1210	499901	Pulley/Spring Assembly (Pulley)
745A	690859	Screw (Brake) (1/2" Long)				1211	499901	Pulley/Spring Assembly (Spring)
						1330	270962	Repair Manual

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095