



121H00

Illustrated Parts List

Model Series

121H00

TYPE NUMBERS
0100 through 0111.

TABLE OF CONTENTS

Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electrical	4
Engine Sump	2
Exhaust System	4
Flywheel	5
Flywheel Brake	4
Fuel Supply	3
Governor Spring	4
Ignition	4
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2


BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

121H00





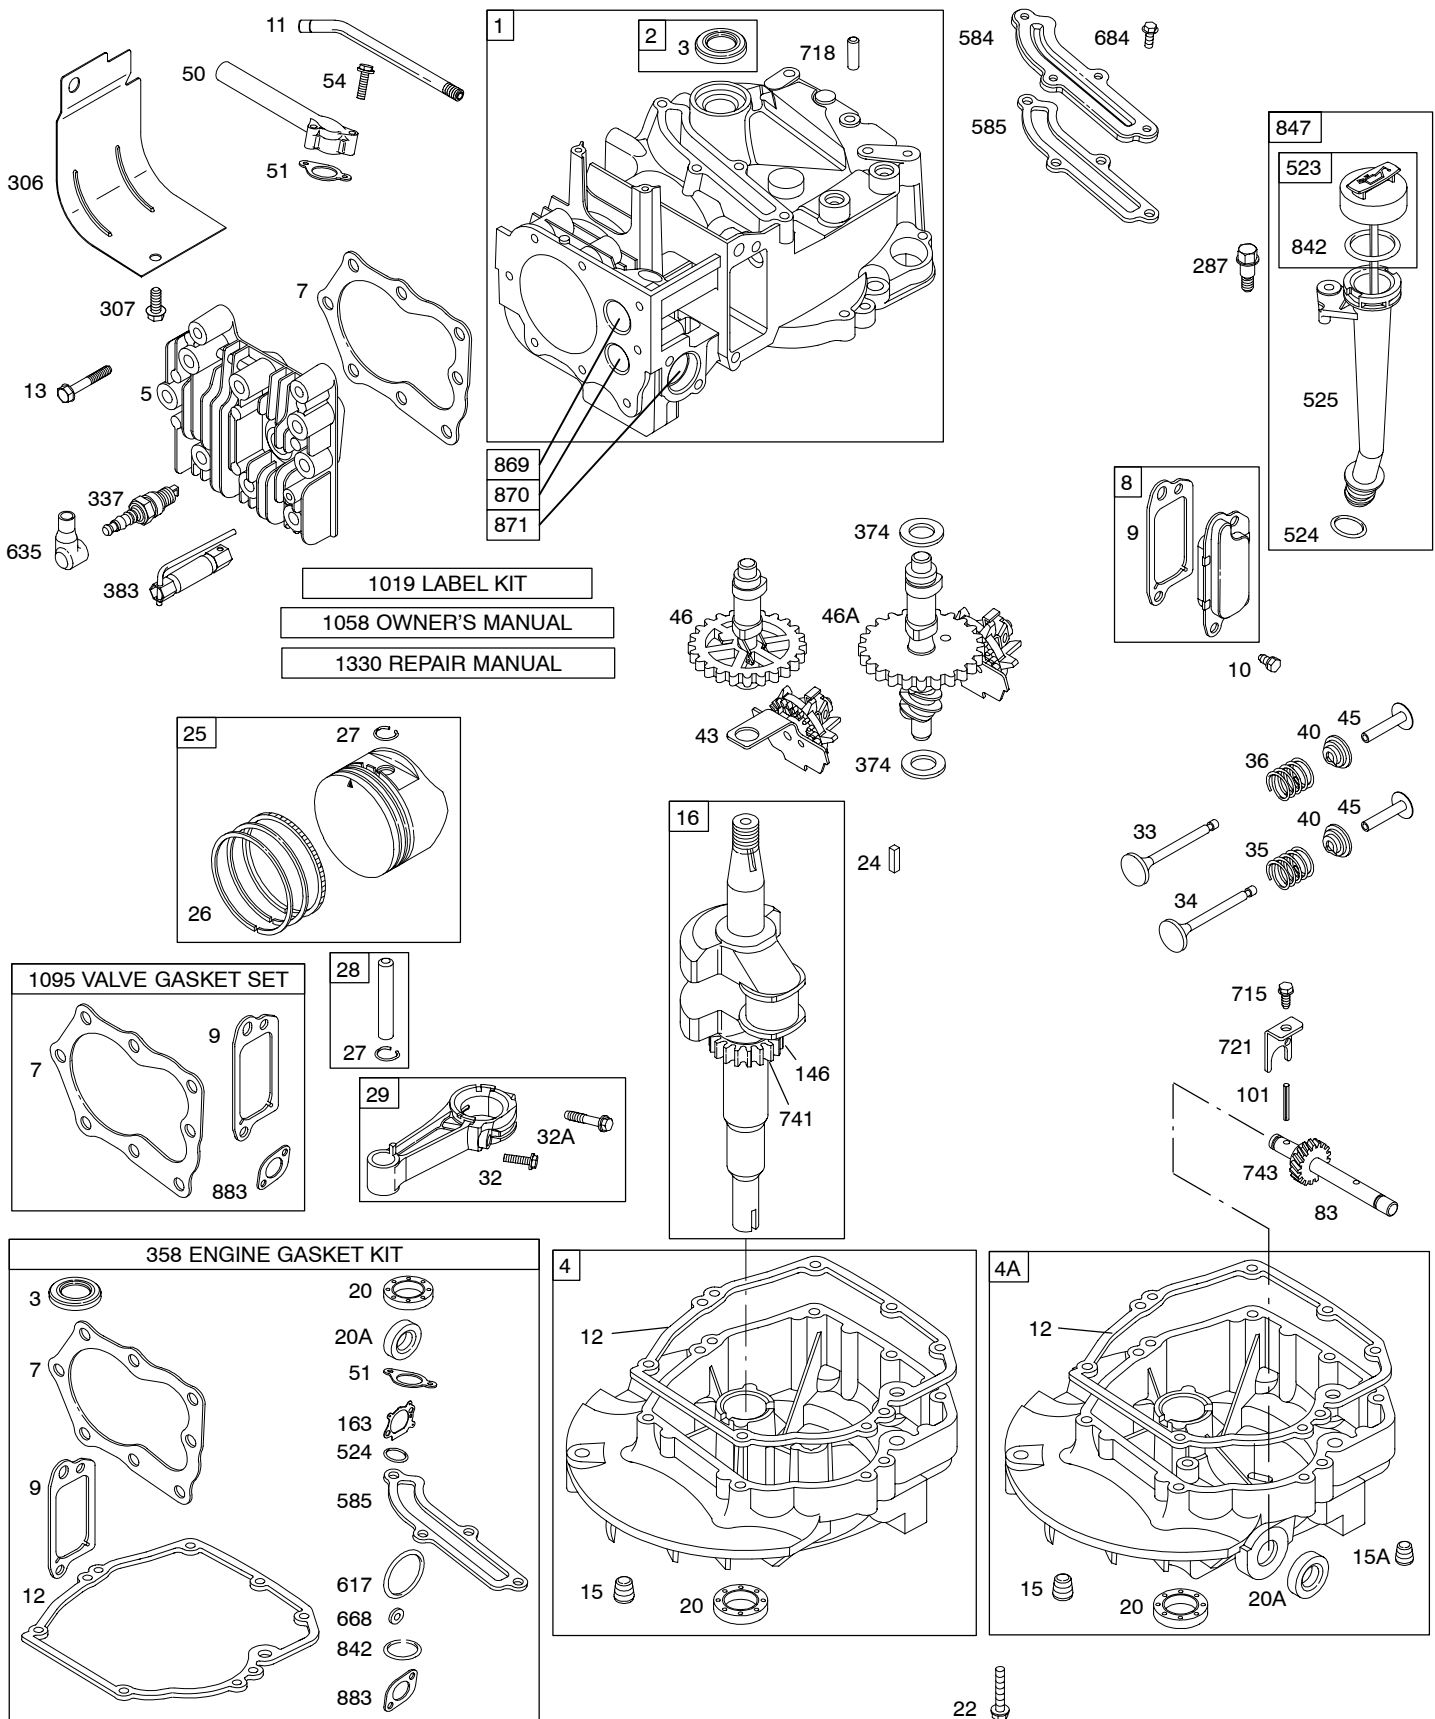


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


5052-2

Assemblies include all parts shown in frames.


10/05/2005

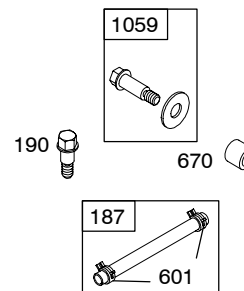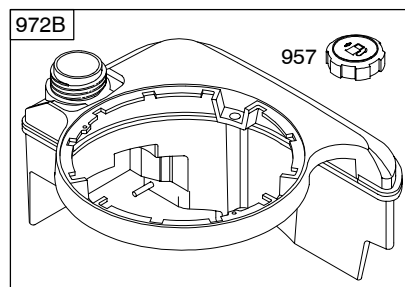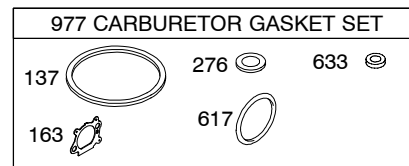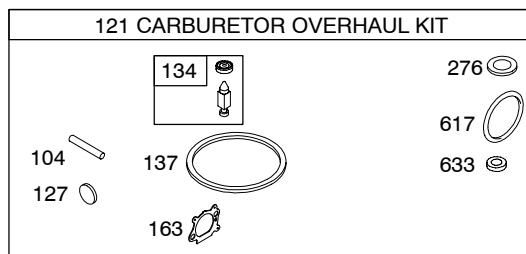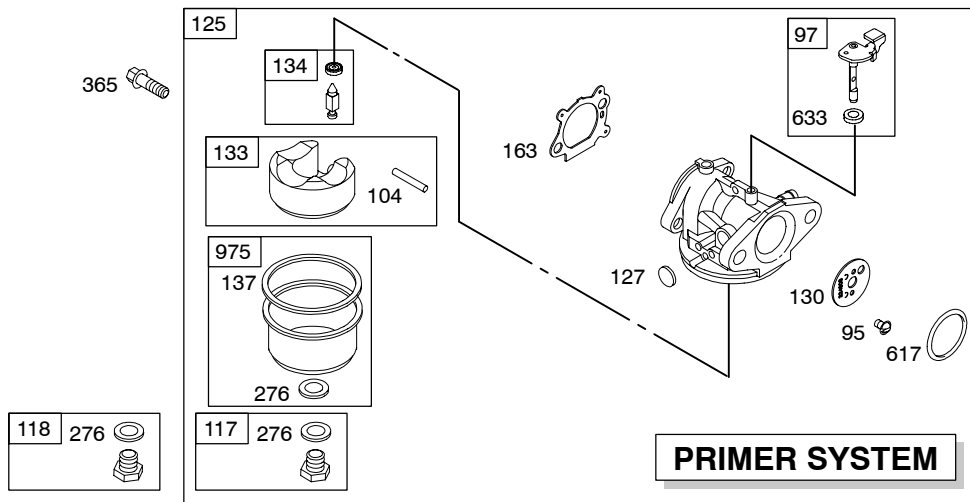

121H00

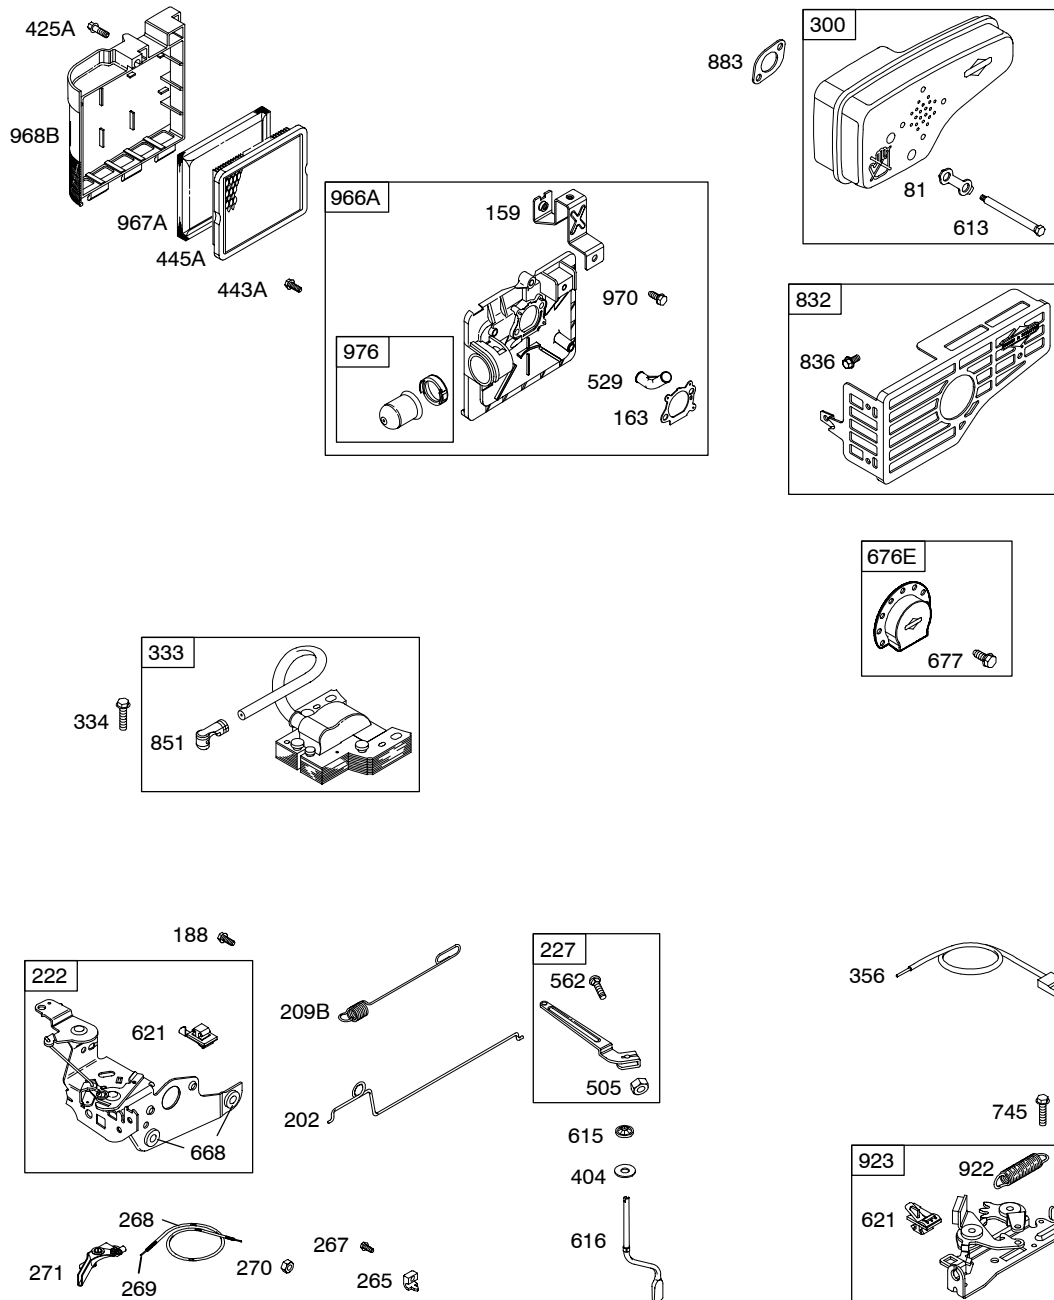

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5052-4 Assemblies include all parts shown in frames. **10/05/2005**

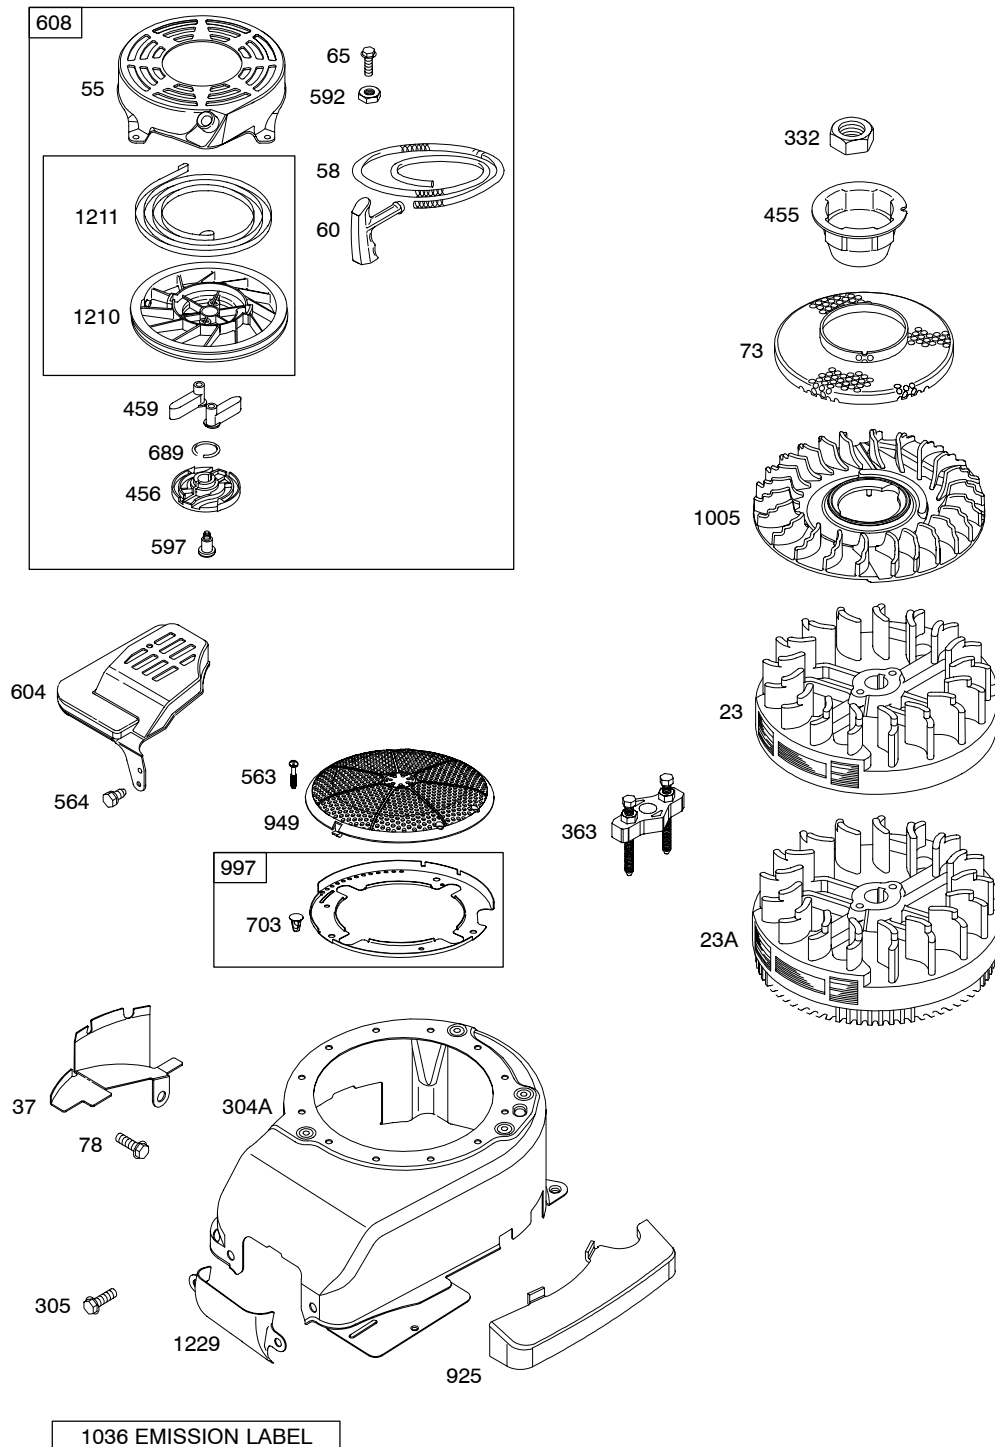

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5052-5 Assemblies include all parts shown in frames. 10/05/2005

121H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	25	790359	Piston Assembly (Standard) (Used After Code Date 04031400). ----- Note -----	27	691866	Lock-Piston Pin
2	399269	Kit-Bushing/Seal (Magneto Side)				28	499423	Pin-Piston (Standard)
3	★299819	Seal-Oil (Magneto Side)				29	499424	Rod-Connecting (Standard)
4	493279	Sump-Engine				32	691664	Screw (Connecting Rod)
4A	493365	Sump-Engine (Auxiliary PTO)				32A	695759	Screw (Connecting Rod)
5	691160	Head-Cylinder				33	262651	Valve-Exhaust
7	★Ø692249	Gasket-Cylinder Head				34	262652	Valve-Intake
8	695250	Breather Assembly				35	691270	Spring-Valve (Intake)
9	★Ø272481	Gasket-Breather				36	691270	Spring-Valve (Exhaust)
10	691125	Screw (Breather Assembly)				37	694086	Guard-Flywheel
11	691781	Tube-Breather				40	692194	Retainer-Valve
12	★692232	Gasket-Crankcase				43	691997	Slinger-Governor/Oil
13	690912	Screw (Cylinder Head)				45	690548	Tappet-Valve
15	691680	Plug-Oil Drain (Square Socket)				46	691449	Camshaft
15A	691093	Plug-Oil Drain (Hex Socket)				46A	691459	Camshaft (Counterclockwise)
16	691451	Crankshaft ----- Note ----- 691452 Crankshaft Used on Type No(s). 0110.				50	497465	Manifold-Intake
20	★399781	Seal-Oil (PTO Side)	26	790360	Ring Set (Standard) (Used After Code Date 04031400). ----- Note -----	51	★272199	Gasket-Intake
20A	★691952	Seal-Oil (PTO Side) (Auxiliary PTO)				54	691650	Screw (Intake Manifold)
22	691092	Screw (Crankcase Cover/Sump)				55	691421	Housing-Rewind Starter
23	692315	Flywheel (Rewind Start) Used on Type No(s). 0111.				58	697316	Rope-Starter (Cut To Required Length)
23A	691992	Flywheel (Electric Start)				60	281434	Grip-Starter Rope
24	222698	Key-Flywheel				65	690837	Screw (Rewind Starter)
						73	691222	Screen-Rotating
						78	691108	Screw (Flywheel Guard)
						81	691740	Lock-Muffler Screw
						83	690522	Shaft-Auxiliary Drive
						95	691636	Screw (Throttle Valve)
						97	696565	Shaft-Throttle
						101	691623	Pin-Shaft
						104	●691242	Pin-Float Hinge

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5052-6

Assemblies include all parts shown in frames.

10/05/2005

121H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	498978	Jet–Main (Standard)	222	790143	Bracket–Control (Remote/Manual Friction)(Primer)	374	691074	Washer (Camshaft)
118	497466	Jet–Main (High Altitude)	227	690783	Lever–Governor Control	383	89838	Wrench–Spark Plug
121	498260	Kit–Carburetor Overhaul	265	690798	Clamp–Casing	404	690272	Washer (Governor Crank)
125	498170	Carburetor	267	691044	Screw (Casing Clamp)	425A	690670	Screw (Air Cleaner Cover)
127	●694468	Plug–Welch (3/8" Diameter)	268	691025	Casing–Control Wire (Cut to Required Length)	443A	692523	Screw (Air Cleaner Primer Base)
130	696564	Valve–Throttle	269	691026	Wire–Control (Cut to Required Length)	445A	491588	Filter–Air Cleaner Cartridge
133	398187	Float–Carburetor	270	691027	Nut (Control Wire Casing)	455	695161	Cup–Flywheel
134	●398188	Kit–Needle/Seat	271	691028	Lever–Control	456	692299	Plate–Pawl Friction
137	●◆693981	Gasket–Float Bowl	276	◆271716	Washer–Sealing	459	281505	Plate–Ratchet
146	690979	Key–Timing	287	690940	Screw (Dipstick Tube)	505	691251	Nut (Governor Control Lever)
159	691753	Bracket–Air Cleaner Primer	300	496106	Muffler (Super Lo Tone Tuned)	523	495264	Dipstick
163	★◆272653	Gasket–Air Cleaner	304A	493294	Housing–Blower	524	★692296	Seal–Dipstick Tube
187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).			----- Note ----- 696420 Housing– Blower Used on Type No(s). 0111.	525	495265	Tube–Dipstick
188	690877	Screw (Control Bracket)	305	691108	Screw (Blower Housing)	529	691923	Grommet
190	690940	Screw (Fuel Tank)	306	690450	Shield–Cylinder	562	92613	Bolt (Governor Control Lever)
202	691829	Link–Mechanical Governor	307	690345	Screw (Cylinder Shield)	563	691138	Screw (Debris Guard Screen)
209B	691292	Spring–Governor (Red) Used on Type No(s). 0105, 0111. ----- Note ----- 691291 Spring– Governor (Black) Used on Type No(s). 0100, 0110.	332	690662	Nut (Flywheel)	564	690664	Screw (Control Cover)
			333	802574	Armature–Magneto	584	697734	Cover–Breather Passage
			334	691061	Screw (Magneto Armature)	585	★691879	Gasket–Breather Passage
			337	802592	Plug–Spark	592	690800	Nut (Rewind Starter)
			356	692390	Wire–Stop	597	691696	Screw (Pawl Friction Plate)
			358	497316	Gasket Set–Engine	601	95162	Clamp–Hose (Green)
			363	19069	Puller–Flywheel	604	691757	Cover–Control
			365	691688	Screw (Carburetor)	608	497680	Starter–Rewind
						613	691340	Screw (Muffler)

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5052–7

Assemblies include all parts shown in frames.

10/05/2005

121H00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
615	690340	Retainer-Governor Shaft	743	691772	Gear-Drive	967A	493537	Filter-Pre Cleaner
616	698801	Crank-Governor	745	691648	Screw (Brake)	968B	692298	Cover-Air Cleaner
617★◆270344		Seal-O Ring (Intake Manifold)	832	499034	Muffler-Guard	970	691681	Screw (Air Cleaner Primer Bracket)
621	692310	Switch-Stop	836	690664	Screw (Muffler Guard)	972B	699374	Tank-Fuel (Plastic)
633●◆691321		Seal-Choke/Throttle Shaft	842	★691031	Seal-O Ring (Dipstick Tube)	975	493640	Bowl-Float
635	66538	Boot-Spark Plug	847	692017	Dipstick/Tube Assembly	976	694395	Primer-Carburetor
668	★493823	Spacer (Includes 2)	851	493880	Terminal-Spark Plug	977	498261	Gasket Set-Carburetor
670	692294	Spacer-Fuel Tank	869	691155	Seat-Valve (Intake)	997	696310	Shield-Debris
676E	393760	Deflector-Muffler (Side Out)	870	690380	Seat-Valve (Exhaust)	1005	691346	Fan-Flywheel
677	690661	Screw (Muffler Deflector)	871	262001	Bushing-Valve Guide (Exhaust)	1019	696438	Kit-Label
684	690345	Screw (Breather Passage Cover)			----- Note -----	1036		Label-Emission (Available From An Authorized Briggs & Statton Service Dealer)
689	691855	Spring-Friction			63709 Bushing-Valve Guide (Intake)	1058	276171	Manual-Owner's
703	696309	Clip	883★Ø691881		Gasket-Exhaust	1059	692311	Kit-Screw/Washer
715	691147	Screw (Stop Shaft)	922	692135	Spring-Brake	1095	498528	Gasket Set-Valve
718	690959	Pin-Locating	923	695891	Brake	1210	498144	Pulley/Spring Assembly (Pulley)
721	690449	Stop-Shaft	925	690595	Cover-Linkage	1211	498144	Pulley/Spring Assembly (Spring)
741	790345	Gear-Timing (Use Without Woodruff Key)	949	696306	Guard-Debris Screen	1229	696308	Extension-Blower Housing
		----- Note -----	957	397974	Cap-Fuel Tank (Plastic)	1330	270962	Manual-Repair
		691830 Gear-Timing (Uses Woodruff Key)	966A	496116	Base-Air Cleaner Primer			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5052-8

Assemblies include all parts shown in frames.

10/05/2005