



122K00

Illustrated Parts List

Model Series

122K00

TYPE NUMBERS
0006 through 3113.

TABLE OF CONTENTS


Alternator	6
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	6
Fuel Supply	4
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

122K00




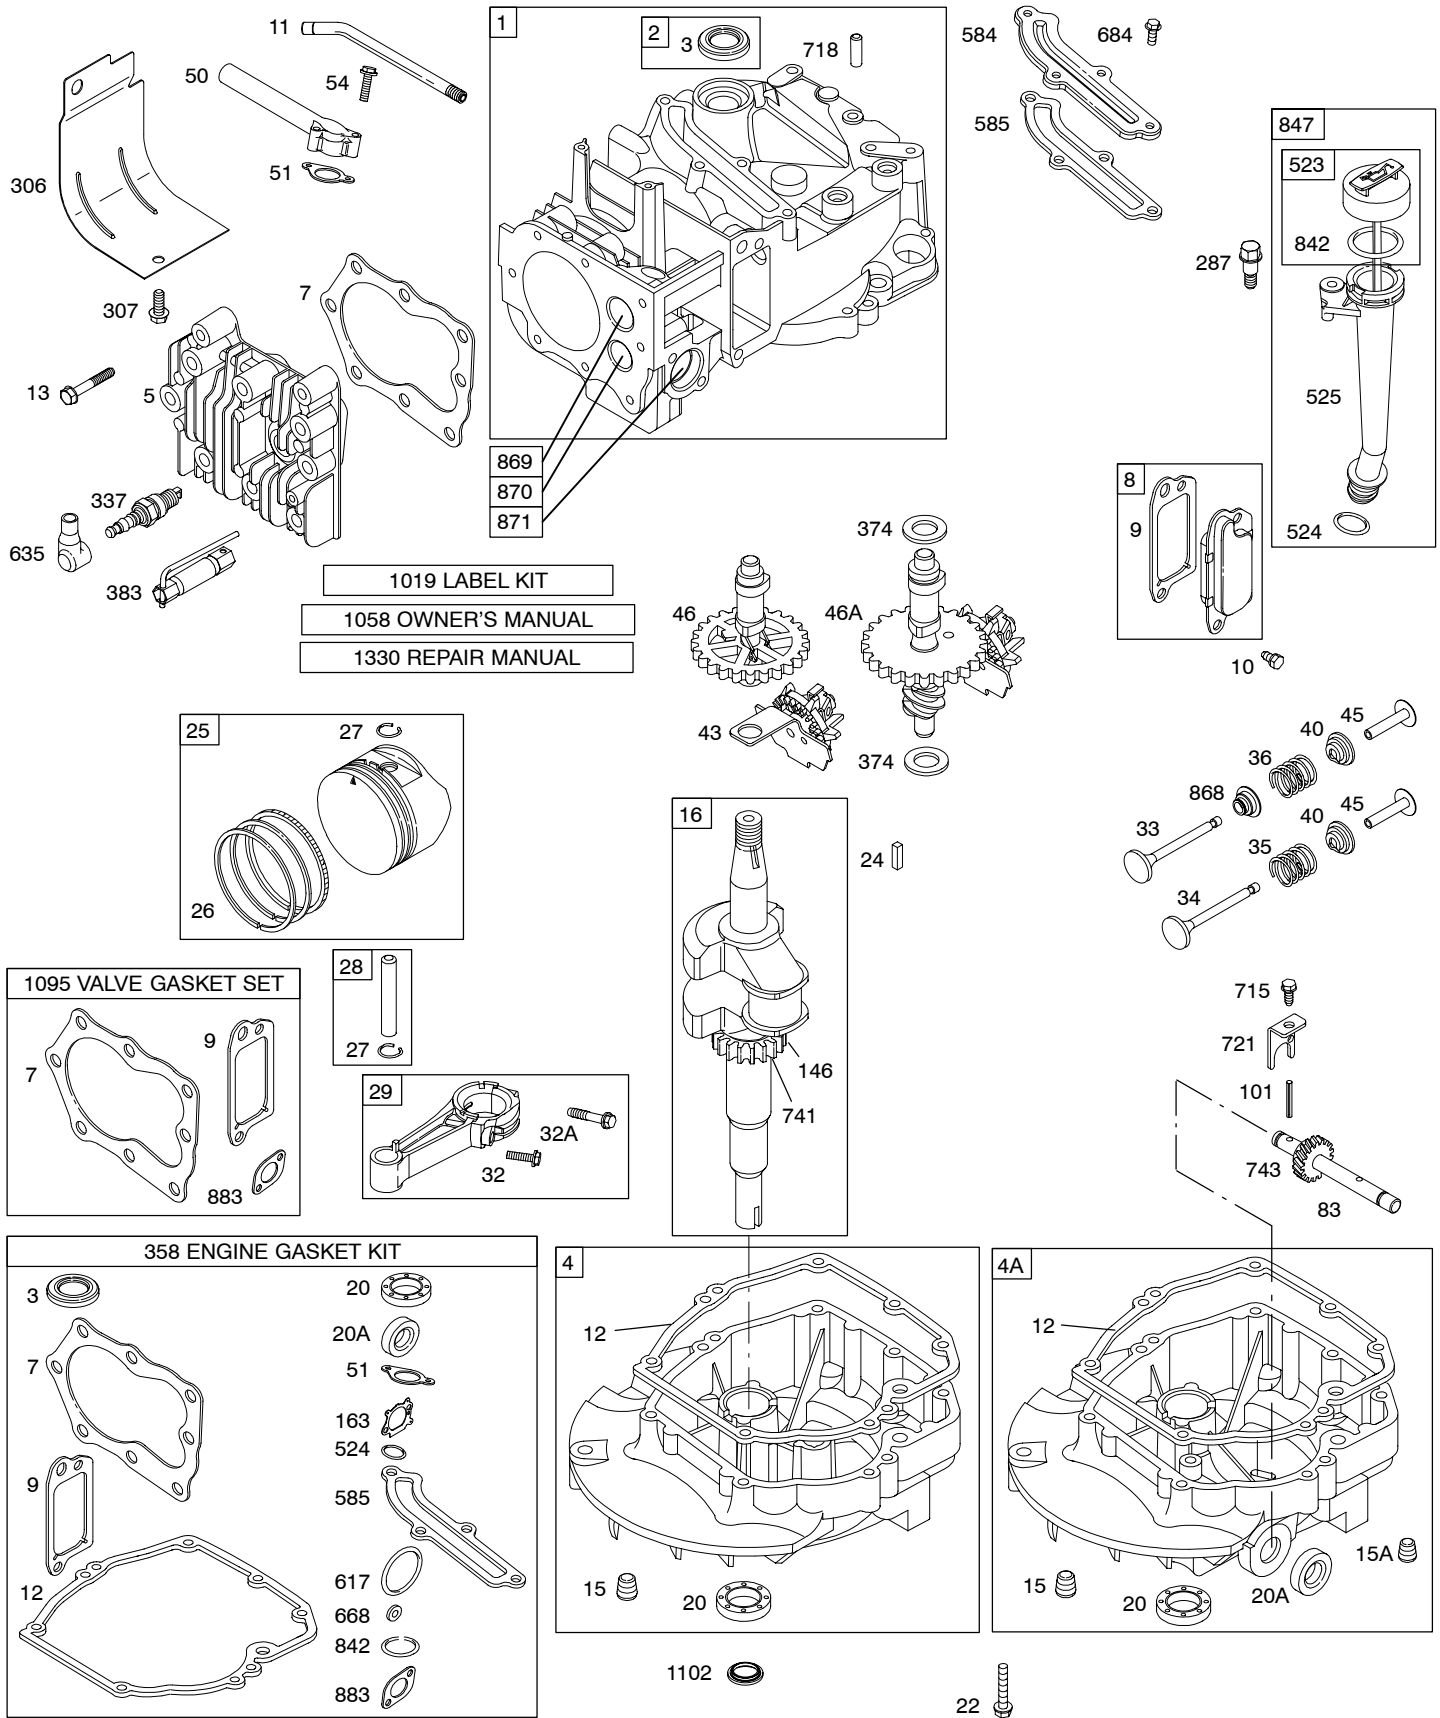


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5053-2


Assemblies include all parts shown in frames.

10/06/2005









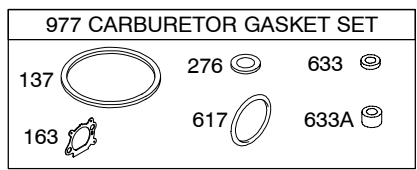
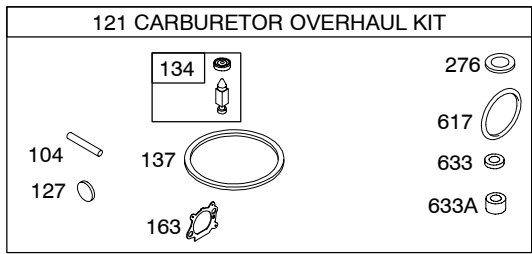
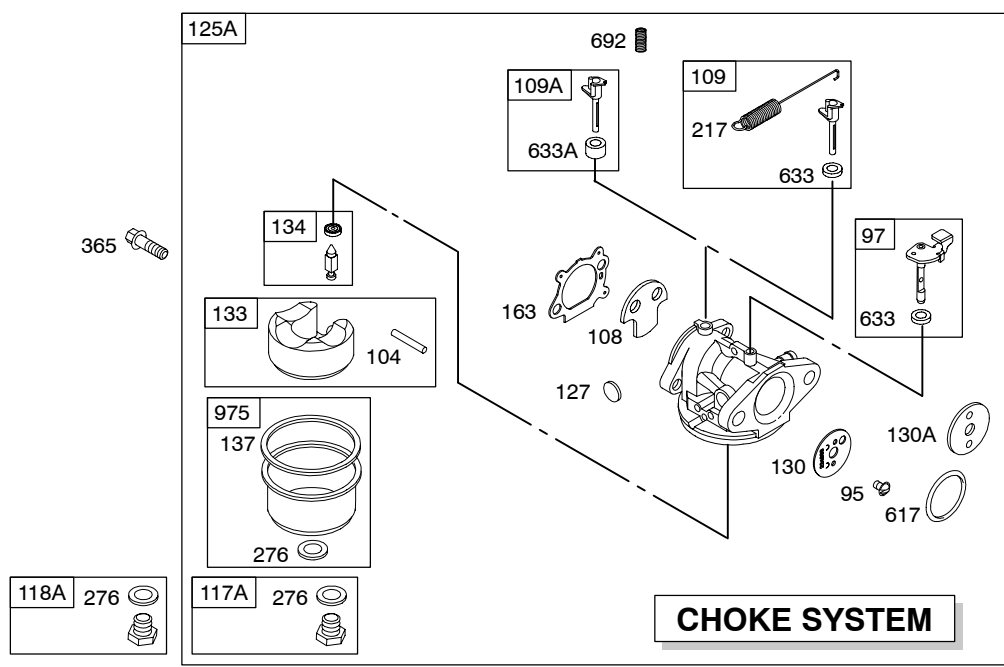
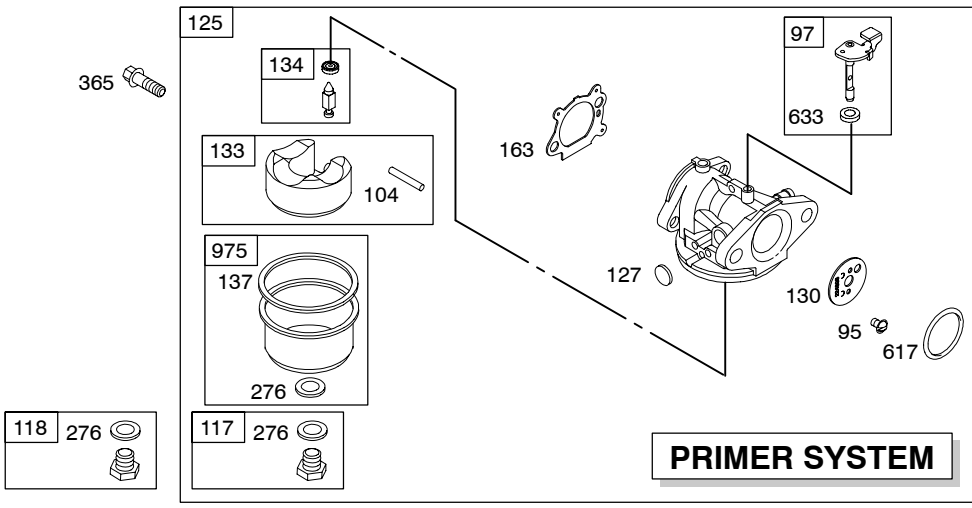


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5053-3 Assemblies include all parts shown in frames. 10/06/2005

122K00

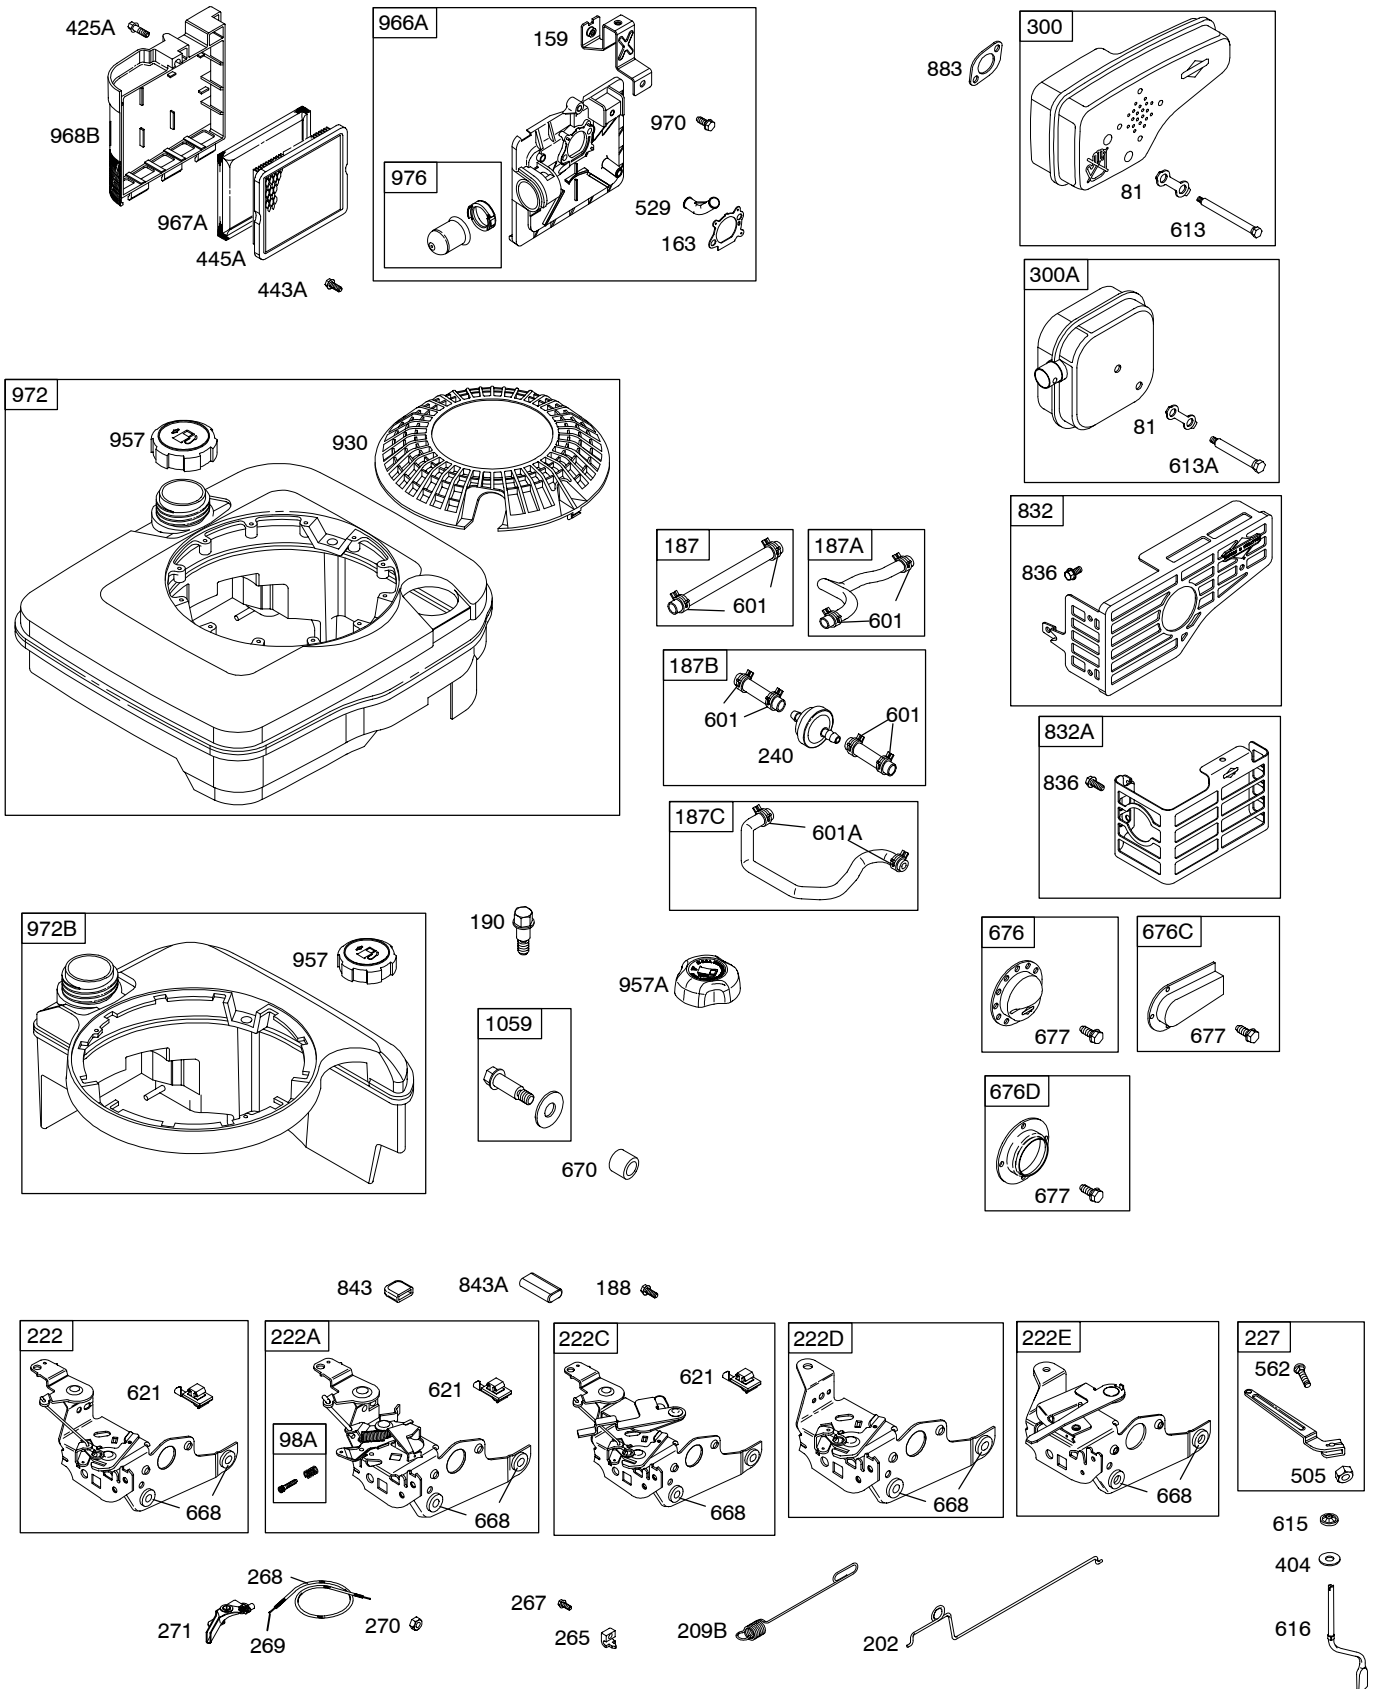


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5053-4 Assemblies include all parts shown in frames. 10/06/2005

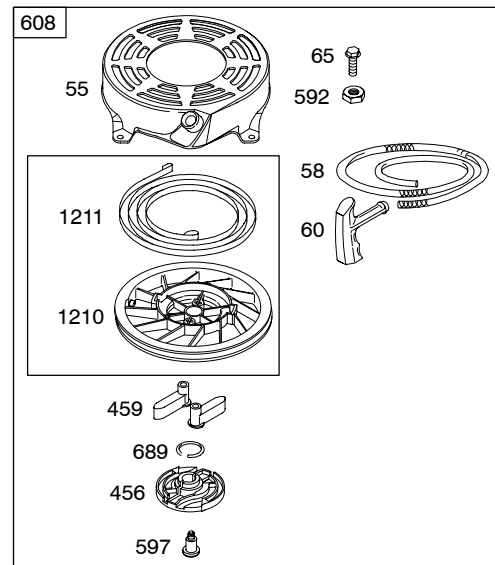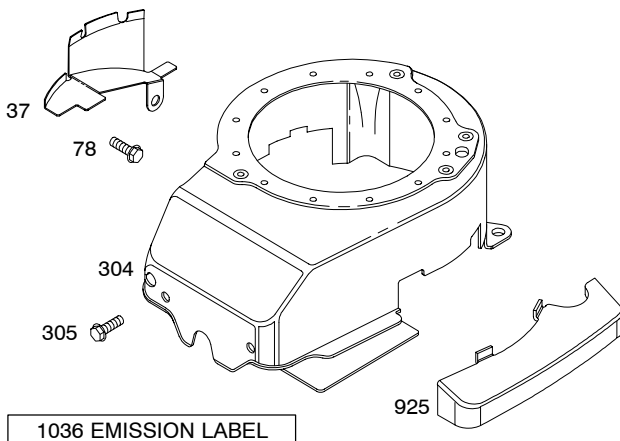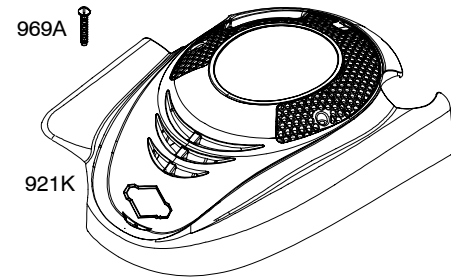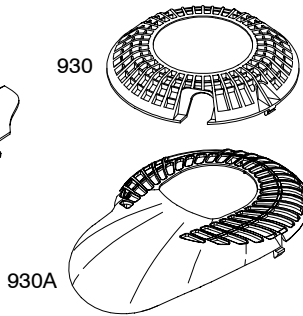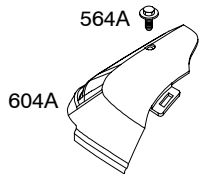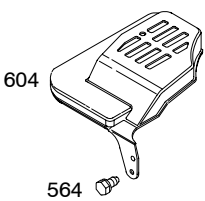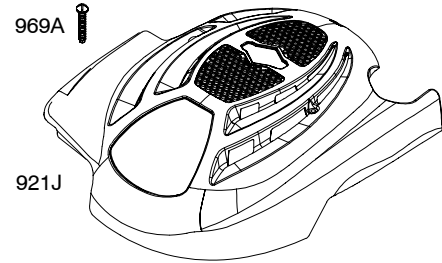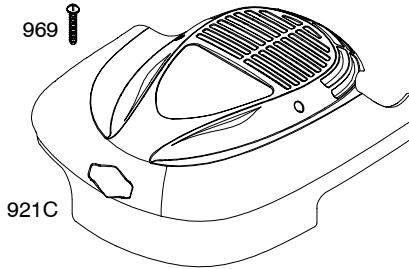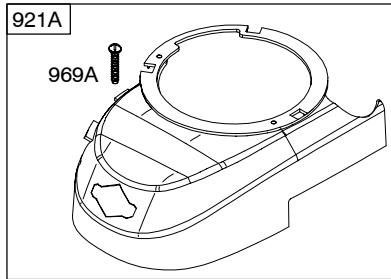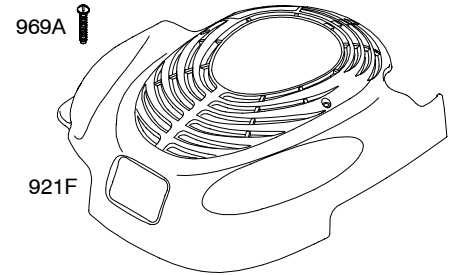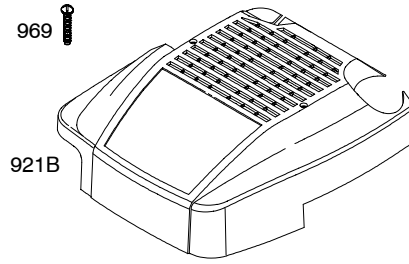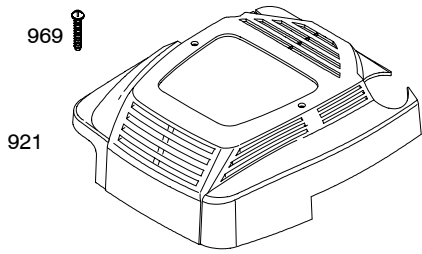

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5053-5 Assemblies include all parts shown in frames. 10/06/2005

122K00

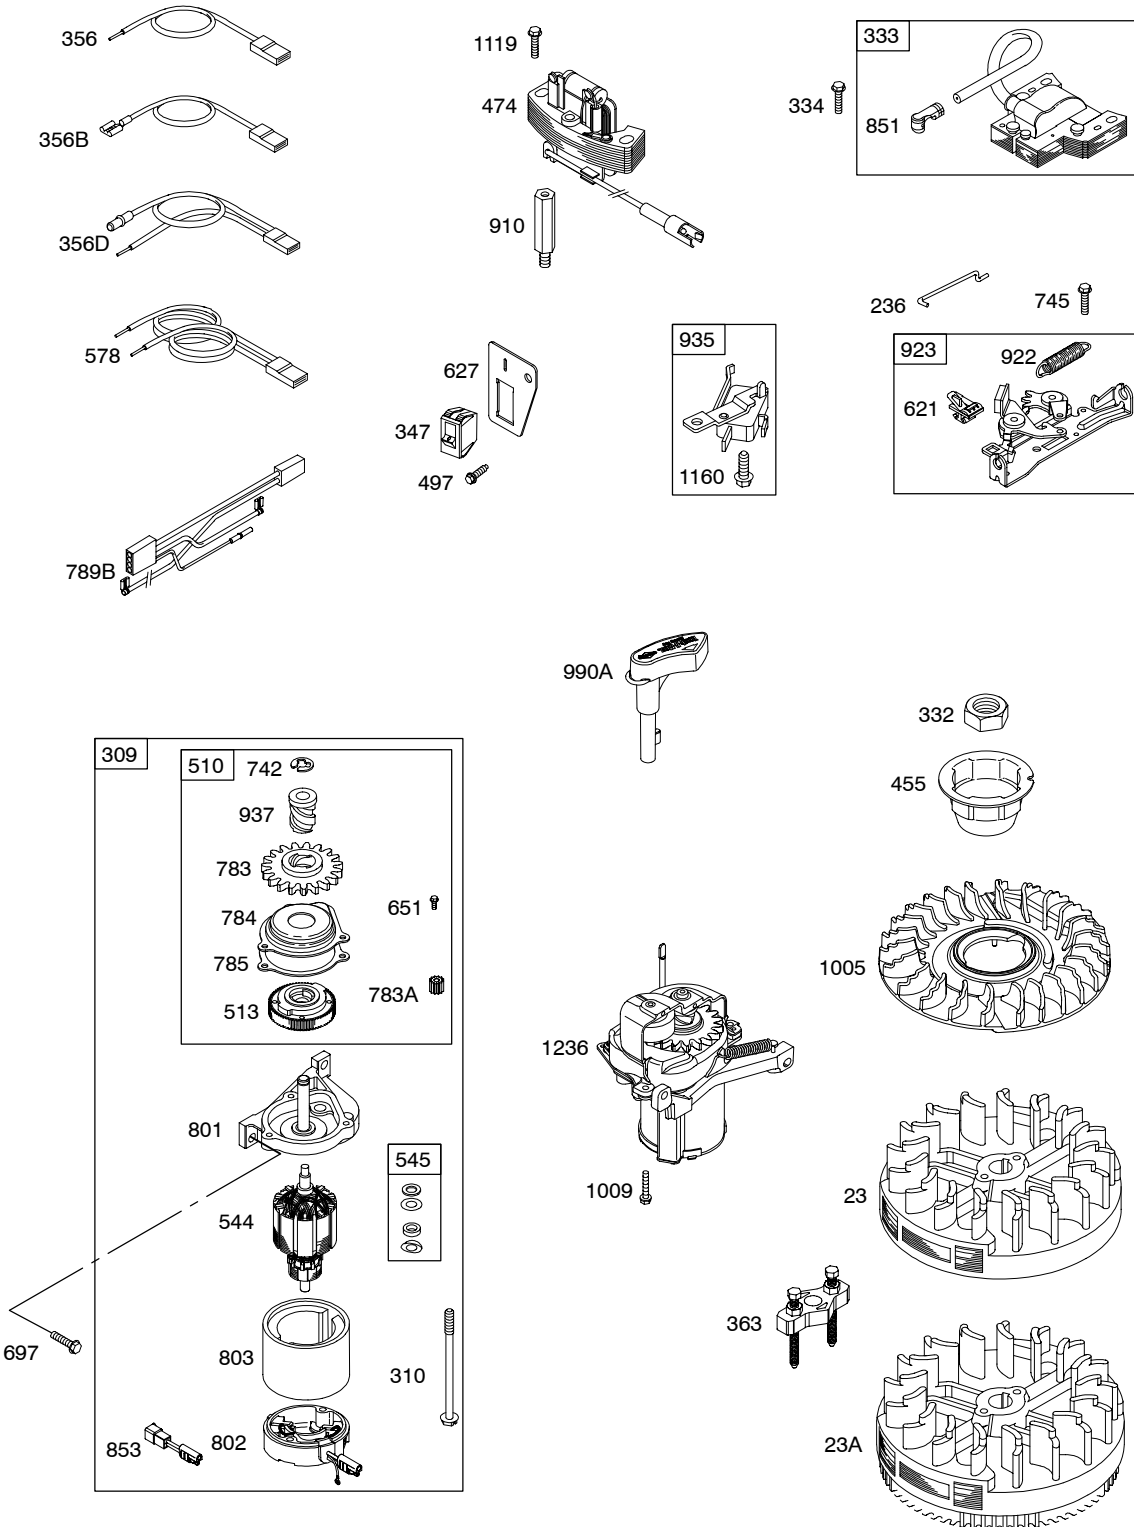

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5053-6 Assemblies include all parts shown in frames. 10/06/2005

122K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691451	Crankshaft	22	691092	Screw (Crankcase Cover/ Sump)
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----	23	692315	Flywheel (Rewind Start)
3	*299819	Seal-Oil (Magneto Side)			691455 Crankshaft Used on Type No(s). 0006, 0018, 0113, 0122, 0149, 0150, 0152, 0153, 0154, 0217, 0290, 0309, 0329, 0356, 0412, 0518, 3112, 3113.	23A	691992	Flywheel (Electric Start)
4	493279	Sump-Engine ----- Note ----- 696340 Sump-Engine Used on Type No(s). 0116. 498983 Sump-Engine Used on Type No(s). 0006, 0131, 0154, 3112, 3113. 696294 Sump-Engine Used on Type No(s). 0302.			691450 Crankshaft Used on Type No(s). 0025, 0101, 0340, 0341, 0525. 691452 Crankshaft Used on Type No(s). 0016, 0516. 691454 Crankshaft Used on Type No(s). 0117, 0119. 696009 Crankshaft Used on Type No(s). 0171, 0172. 691482 Crankshaft Used on Type No(s). 2329, 2334. 694849 Crankshaft Used on Type No(s). 0126, 0134, 0158, 2349. 692717 Crankshaft Used on Type No(s). 0131. 694850 Crankshaft Used on Type No(s). 0132, 0135, 0139. 694478 Crankshaft Used on Type No(s). 0353.			----- Note ----- 691987 Flywheel (Electric Start) Used on Type No(s). 0060, 0171, 0340, 0560. 696291 Flywheel Used on Type No(s). 0302. 24 222698 Key-Flywheel 25 790359 Piston Assembly (Standard) (Used After Code Date 04031400). ----- Note ----- 697339 Piston Assembly (Standard) (Used Before Code Date 04031500). 697340 Piston Assembly (.010" Oversize) 791326 Piston Assembly (.020" Oversize) (Used After Code Date 04102100). 697341 Piston Assembly (.020" Oversize) (Used Before Code Date 04102200). 697342 Piston Assembly (.030" Oversize)
4A	493365	Sump-Engine (Auxiliary PTO)						
5	691160	Head-Cylinder						
7	*Ø692249	Gasket-Cylinder Head						
8	695250	Breather Assembly						
9	*Ø696125	Gasket-Breather						
10	691125	Screw (Breather Assembly)						
11	691781	Tube-Breather						
12	*692232	Gasket-Crankcase						
13	690912	Screw (Cylinder Head)						
15	691680	Plug-Oil Drain (Square Socket)						
15A	691093	Plug-Oil Drain (Hex Socket)						
			20	*399781	Seal-Oil (PTO Side)			
			20A	*691952	Seal-Oil (PTO Side) (Auxiliary PTO)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5053-7

Assemblies include all parts shown in frames.

10/06/2005

122K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
26	790360	Ring Set (Standard) (Used After Code Date 04031400). ----- Note ----- 499425 Ring Set (Standard) (Used Before Code Date 04031500). 499426 Ring Set (.010" Oversize) 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100). 499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200). 499428 Ring Set (.030" Oversize)	46	691449	Camshaft	95	691636	Screw (Throttle Valve)
			46A	691460	Camshaft (Clockwise) Used on Type No(s). 0050. ----- Note ----- 691459 Camshaft (Counterclockwise) Used on Type No(s). 0051, 0117, 0153, 0155.	97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)
			50	497465	Manifold-Intake	98A	493280	Kit-Idle Speed
			51	★272199	Gasket-Intake	101	691623	Pin-Shaft (Drive Gear)
			54	691650	Screw (Intake Manifold)	104	●691242	Pin-Float Hinge
			55	691421	Housing-Rewind Starter	109	494218	Shaft-Choke
			58	697316	Rope-Starter (Cut To Required Length)	108	691182	Valve-Choke
			60	281434	Grip-Starter Rope	109	494218	Shaft-Choke
27	691866	Lock-Piston Pin	65	690837	Screw (Rewind Starter)	109A	498593	Shaft-Choke
28	499423	Pin-Piston (Standard)	78	691108	Screw (Flywheel Guard)	117	498978	Jet-Main (Standard) ----- Note ----- 494870 Jet-Main (Standard) Used on Type No(s). 0515, 0516, 0518, 0525, 0560.
29	499424	Rod-Connecting (Standard)	81	691740	Lock-Muffler Screw	117A	498978	Jet-Main (Standard) ----- Note ----- 498981 Jet-Main (Standard) Used on Type No(s). 0006, 0126, 0131, 0132, 0134, 0135, 0137, 0138, 0139, 0154, 0158, 0217, 0353, 0356, 0412, 2349, 3112, 3113.
32	691664	Screw (Connecting Rod)	83	690522	Shaft-Auxiliary Drive Used on Type No(s). 0050, 0051. ----- Note ----- 690527 Shaft-Auxiliary Drive Used on Type No(s). 0153.			
32A	695759	Screw (Connecting Rod)						
33	262651	Valve-Exhaust						
34	262652	Valve-Intake						
35	691270	Spring-Valve (Intake)						
36	691270	Spring-Valve (Exhaust)						
37	694086	Guard-Flywheel						
40	692194	Retainer-Valve						
43	691997	Slinger-Governor/Oil						
45	690548	Tappet-Valve						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118	497466	Jet–Main (High Altitude) ----- Note ----- 497315 Jet–Main (High Altitude) Used on Type No(s). 0515, 0516, 0518, 0525, 0560.	130	696564	Valve–Throttle	188	693399	Screw (Control Bracket)
118A	498975	Jet–Main (High Altitude) ----- Note ----- 494870 Jet–Main (High Altitude) Used on Type No(s). 0006, 0126, 0131, 0132, 0134, 0135, 0137, 0138, 0139, 0154, 0158, 0217, 0353, 0356, 0412, 2349, 3112, 3113.	130A	691203	Valve–Throttle	190	690940	Screw (Fuel Tank)
121	498260	Kit–Carburetor Overhaul	133	398187	Float–Carburetor	202	691829	Link–Mechanical Governor
125	498170	Carburetor (Primer System) ----- Note ----- 790821 Carburetor (Primer System) Used on Type No(s). 0515, 0516, 0518, 0525, 0560.	134	●398188	Kit–Needle/Seat	209B	699056	Spring–Governor ----- Note ----- 691851 Spring– Governor Used on Type No(s). 0110, 0132, 0135. 691291 Spring– Governor Used on Type No(s). 0006, 0111, 0114, 0115, 0116, 0117, 0126, 0131, 0134, 0154, 0155, 0158, 0217, 0353, 0356, 2349, 3112. 691292 Spring– Governor Used on Type No(s). 0119, 0302, 0309, 0330, 0340, 0341. 691852 Spring– Governor Used on Type No(s). 0171, 0172. 691290 Spring– Governor Used on Type No(s). 3113. 691275 Spring– Governor Used on Type No(s). 0138, 0139. 790944 Spring– Governor Used on Type No(s). 0412.
125A	499059	Carburetor (Choke System) ----- Note ----- 790978 Carburetor (Choke System) Used on Type No(s). 0138, 0139. 792253 Carburetor (Choke System) Used on Type No(s). 0006, 0126, 0131, 0132, 0134, 0135, 0137, 0154, 0158, 0217, 0353, 0356, 0412, 2349, 3112, 3113.	146	690979	Key–Timing	217	690354	Spring–Choke Return
127	●694468	Plug–Welch	159	691753	Bracket–Air Cleaner Primer			
			163★●●272653	Gasket–Air Cleaner				
			187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).			
			187A	791873	Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 691371 Line–Fuel (Molded) (Used Before Code Date 05070100).			
			187B	791891	Line–Fuel (Includes Filter) (Used After Code Date 05063000). ----- Note ----- 692042 Line–Fuel (Includes Filter) (Used Before Code Date 05070100).			
			187C	791875	Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 696292 Line–Fuel (Molded) (Used Before Code Date 05070100).			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	304	695892	Housing-Blower ----- Note -----	334	691061	Screw (Magneto Armature)
222A	692021	Bracket-Control (Remote Choke A Matic, Non Compliance)	493293		Housing-Blower Used on Type No(s). 0015, 0016, 0018, 0025, 0050, 0051, 0060, 0113, 0117, 0119, 0122, 0155, 0171, 0172, 0340, 0515, 0516, 0518, 0525, 0560.	337	802592	Plug-Spark (Resistor) ----- Note -----
222C	692150	Bracket-Control (Variable Speed) (5 Position Manual Choke)	493294		Housing-Blower Used on Type No(s). 0006, 0111, 0114, 0115, 0116, 0131, 0132, 0134, 0135, 0139, 0154, 0155, 0158, 0217, 0353, 0356, 0412, 2329, 2334, 2349, 3112, 3113.	347	691396	Switch-Rocker
222D	692467	Bracket-Control (Fixed Speed)	696298		Housing-Blower Used on Type No(s). 0302.	356	692390	Wire-Stop
222E	692982	Bracket-Control (Manual Friction 5 Position Manual Choke)	305	691108	Screw (Blower Housing)	356B	693010	Wire-Stop
227	690783	Lever-Governor Control	306	690450	Shield-Cylinder	356D	496381	Wire-Stop
236	691826	Link-Lockout	307	690345	Screw (Cylinder Shield)	358	497316	Gasket Set-Engine
240	298090	Filter-Fuel	309	695550	Motor-Starter	363	19069	Flywheel Puller
265	690798	Clamp-Casing	310	692327	Bolt (Starter Motor)	365	691688	Screw (Carburetor)
267	691044	Screw (Casing Clamp)	332	690662	Nut (Flywheel)	374	691074	Washer (Camshaft)
268	691072	Casing-Control Wire (Cut to Required Length)	333	802574	Armature-Magneto ----- Note -----	383	89838	Wrench-Spark Plug
269	691026	Wire-Control (Cut to Required Length)	790817		Armature-Magneto Used on Type No(s). 0515, 0516, 0518, 0525, 0560.	404	690272	Washer (Governor Crank)
270	691027	Nut (Control Wire Casing)				425A	690670	Screw (Air Cleaner Cover)
271	691028	Lever-Control				443A	692523	Screw (Air Cleaner Primer Base)
276	◆271716	Washer-Sealing (Main Jet)				513	692358	Clutch-Drive
287	690940	Screw (Dipstick Tube)				523	495264	Dipstick ----- Note -----
300	692038	Muffler (Super Lo Tone)				499621		Dipstick Used on Type No(s). 0171, 0172.
300A	494343	Muffler (Square Lo Tone)				524	★692296	Seal-Dipstick Tube
						525	495265	Tube-Dipstick
						529	691923	Grommet
						544	690786	Armature-Starter
						545	492919	Washer Set (Starter Motor)
						564	690664	Screw (Control Cover)
						564A	691142	Screw (Control Cover)
						578	398153	Wire Assembly
						584	697734	Cover-Breather Passage

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
585	★691879	Gasket-Breather Passage	718	690959	Pin-Locating	847	692017	Dipstick/Tube Assembly
592	690800	Nut (Rewind Starter)	721	690449	Stop-Shaft			----- Note -----
597	691696	Screw (Pawl Friction Plate)	741	790345	Gear-Timing (Use Without Woodruff Key)			692047 Dipstick/Tube Assembly
601	95162	Clamp-Hose			----- Note -----			Used on Type No(s). 0171, 0172.
601A	691038	Clamp-Hose			691830 Gear-Timing (Uses Woodruff Key)	851	493880	Terminal-Spark Plug
604	691757	Cover-Control	742	93941	Retainer-E Ring	853	695268	Adapter-Wire
604A	691344	Cover-Control	743	690516	Gear-Drive (Clockwise)	868	697338	Seal-Valve
608	497680	Starter-Rewind			Used on Type No(s). 0050.	869	691155	Seat-Valve (Intake)
613	691340	Screw (Muffler)			----- Note -----	870	690380	Seat-Valve (Exhaust)
613A	691653	Screw (Muffler)			691772 Gear-Drive (Counterclockwise)	871	262001	Bushing-Valve Guide (Exhaust)
615	690340	Retainer-Governor Shaft			Used on Type No(s). 0051, 0117, 0153, 0155.			----- Note -----
616	698801	Crank-Governor						63709 Bushing-Valve Guide (Intake)
617★◆	270344	Seal-O Ring (Intake Manifold)	745	691648	Screw (Brake)	883 ★∅	691881	Gasket-Exhaust
621	692310	Bracket-Stop Switch	783	691918	Gear-Pinion	910	691094	Stud (Alternator)
627	692872	Switch-Stop	783A	691269	Gear-Pinion			921 497233 Cover-Blower Housing
633	◆691321	Seal-Choke/Throttle Shaft	784	692341	Cover-Starter Gear	921A	695886	Cover-Blower Housing
633A	◆693867	Seal-Choke/Throttle Shaft	785	692352	Gasket-Starter Cover	921B	692931	Cover-Blower Housing
635	66538	Boot-Spark Plug	789B	696547	Harness-Wiring			----- Note -----
651	691660	Screw (Starter Gear Cover)			----- Note -----			692932 Cover-Blower Housing
668	★493823	Spacer (Includes 2)			Used on Type No(s). 0135.			Used on Type No(s). 0132, 0135, 0139, 2329, 2334.
670	692294	Spacer-Fuel Tank	801	690782	Cap-Drive	921C	695889	Cover-Blower Housing
676	396548	Deflector-Muffler	802	695267	Cap-End	921F	697343	Cover-Blower Housing
676C	493871	Deflector-Muffler	803	695266	Housing-Starter	921J	790036	Cover-Blower Housing
676D	497682	Deflector-Muffler	832	499034	Guard-Muffler	921K	699984	Cover-Blower Housing
677	690661	Screw (Muffler Deflector)	832A	691424	Guard-Muffler	922	691831	Spring-Brake
684	690345	Screw (Breather Passage Cover)	836	690664	Screw (Muffler Guard)			----- Note -----
689	691855	Spring-Detent	842	★691031	Seal-O Ring (Dipstick Tube)			692135 Spring-Brake
692	690572	Spring-Friction	843	691884	Sleeve-Lever (Control Bracket)			Used on Type No(s). 0101, 0110, 0112, 0149, 0150, 0152, 0153, 0167, 0290, 0308, 0309, 0329, 0330, 0337, 0341.
697	691127	Screw (Drive Cap)	843A	691895	Sleeve-Lever (Choke)			
715	691147	Screw (Stop Shaft)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

122K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
923	691994	Brake ----- Note ----- 695891 Brake Used on Type No(s). 0101, 0110, 0112, 0149, 0150, 0152, 0153, 0167, 0290, 0308, 0309, 0329, 0330, 0337, 0341.	970	691669	Screw (Air Cleaner Primer Bracket)	1059	692311	Kit-Screw/Washer ----- Note -----
925	690595	Cover-Linkage	972	699392	Tank-Fuel (Plastic)			696293 Kit-Screw/ Washer (Touch N Mow)
930	691919	Guard-Rewind (Round)	972B	699374	Tank-Fuel ----- Note ----- 699387 Tank-Fuel (Plastic) Used on Type No(s). 0302.	1095	498528	Gasket Set-Valve
930A	691345	Guard-Rewind (Tear Drop)	975	493640	Bowl-Float	1102	691255	Pilot-Guide
935	499421	Switch-Interlock	976	694395	Primer-Carburetor	1119	692979	Screw (Alternator)
937	691325	Spline-Starter	977	498261	Gasket Set-Carburetor	1160	691627	Screw (Interlock Switch)
957	397974	Cap-Fuel Tank (Plastic)	990A	695951	Key Set	1210	498144	Pulley/Spring Assembly (Pulley)
957A	692046	Cap-Fuel Tank (Plastic)	1005	691346	Fan-Flywheel	1211	498144	Pulley/Spring Assembly (Spring)
966A	496116	Base-Air Cleaner Primer	1009	696255	Screw (Starter Motor)	1236	695959	Starter-Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
967A	493537	Filter-Pre Cleaner	1019	494256	Kit-Label ----- Note ----- 790231 Kit-Label (Touch N Mow)	1330	270962	Manual-Repair
968B	692298	Cover-Air Cleaner	1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)			
969	690700	Screw (Blower Housing Cover)	1058	276171	Manual-Owner's ----- Note ----- 275054 Manual- Owner's (Touch N Mow)			
969A	691138	Screw (Blower Housing Cover)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.