



123K00

Illustrated Parts List

Model Series

123K00

TYPE NUMBERS
0005 through 0625.

TABLE OF CONTENTS

 
Alternator	6
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	6
Fuel Supply	4
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	6
Valves	2

BRIGGS & STRATTON








PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.




123K00

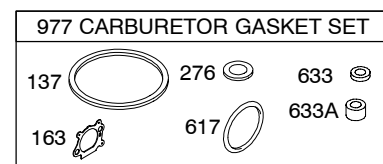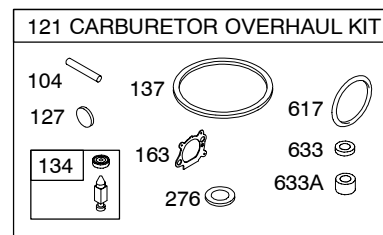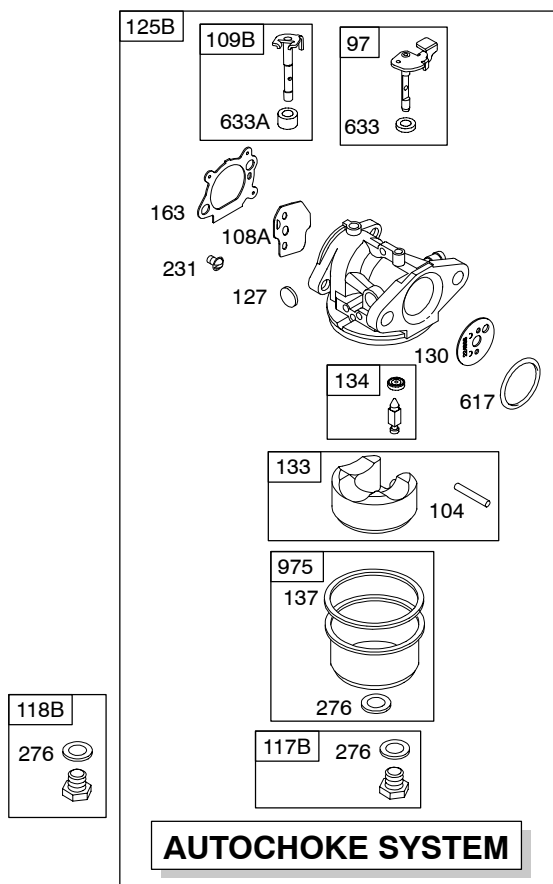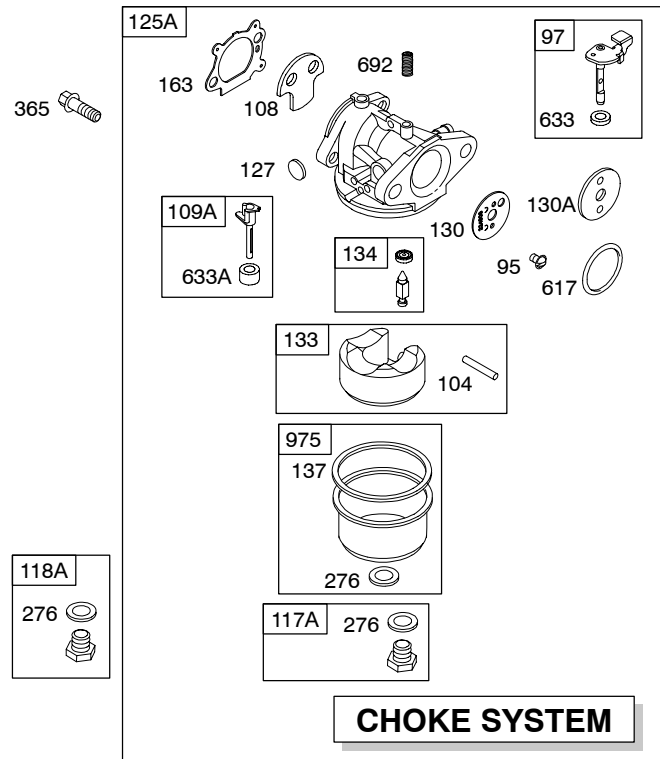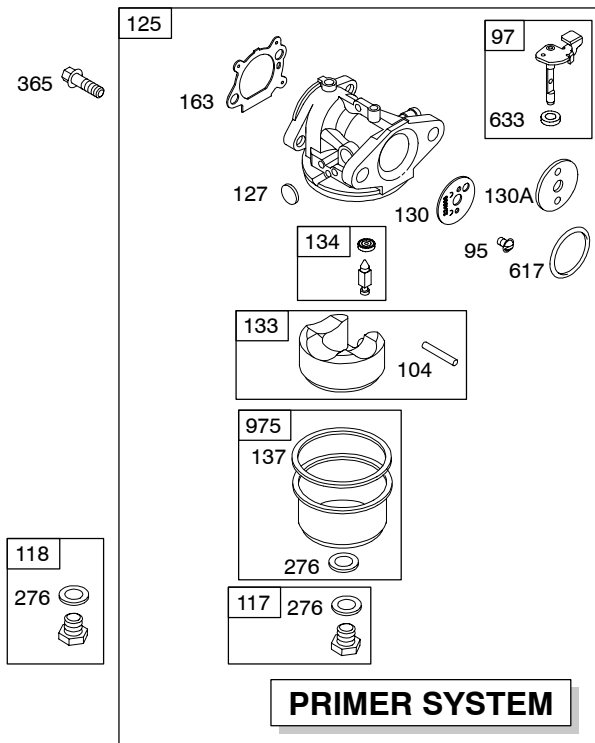

123K00

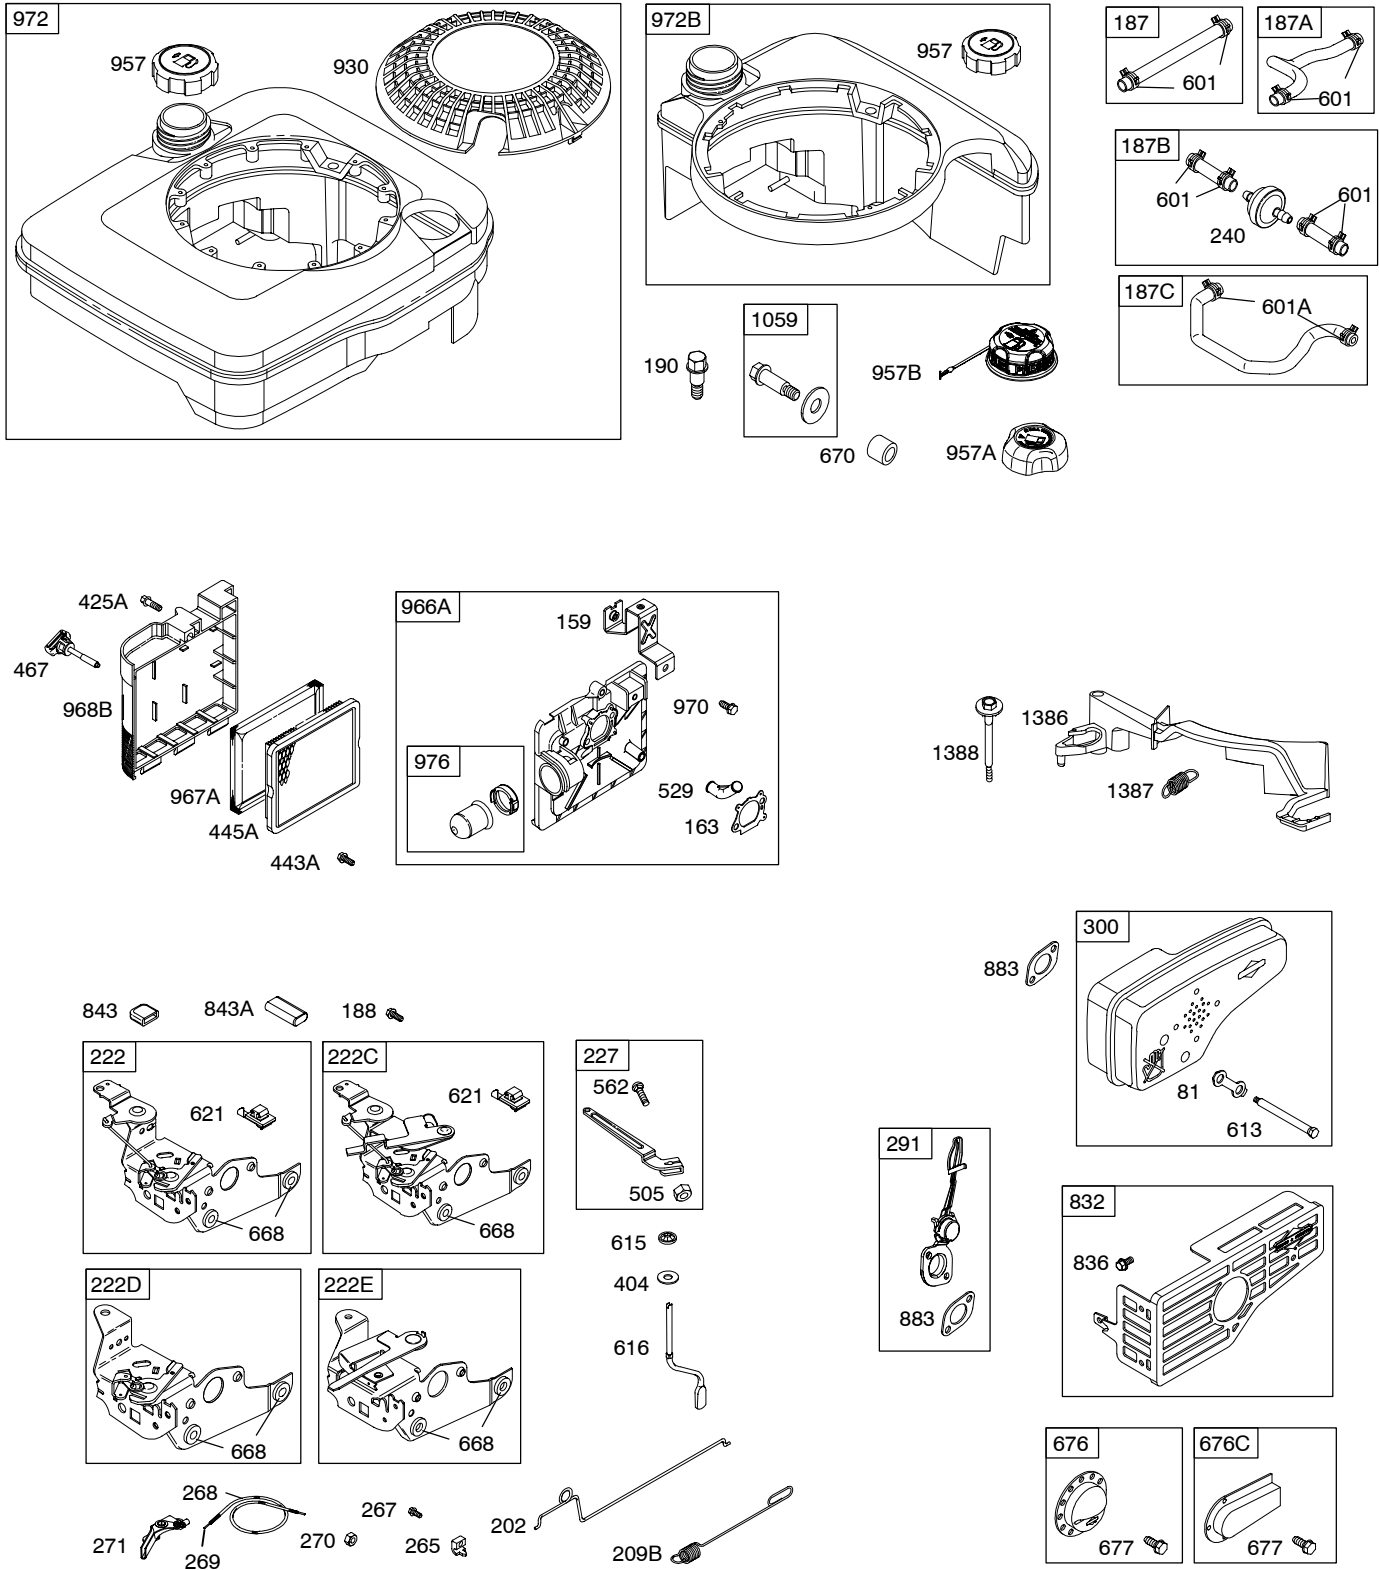

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5054-4 Assemblies include all parts shown in frames. 10/06/2005

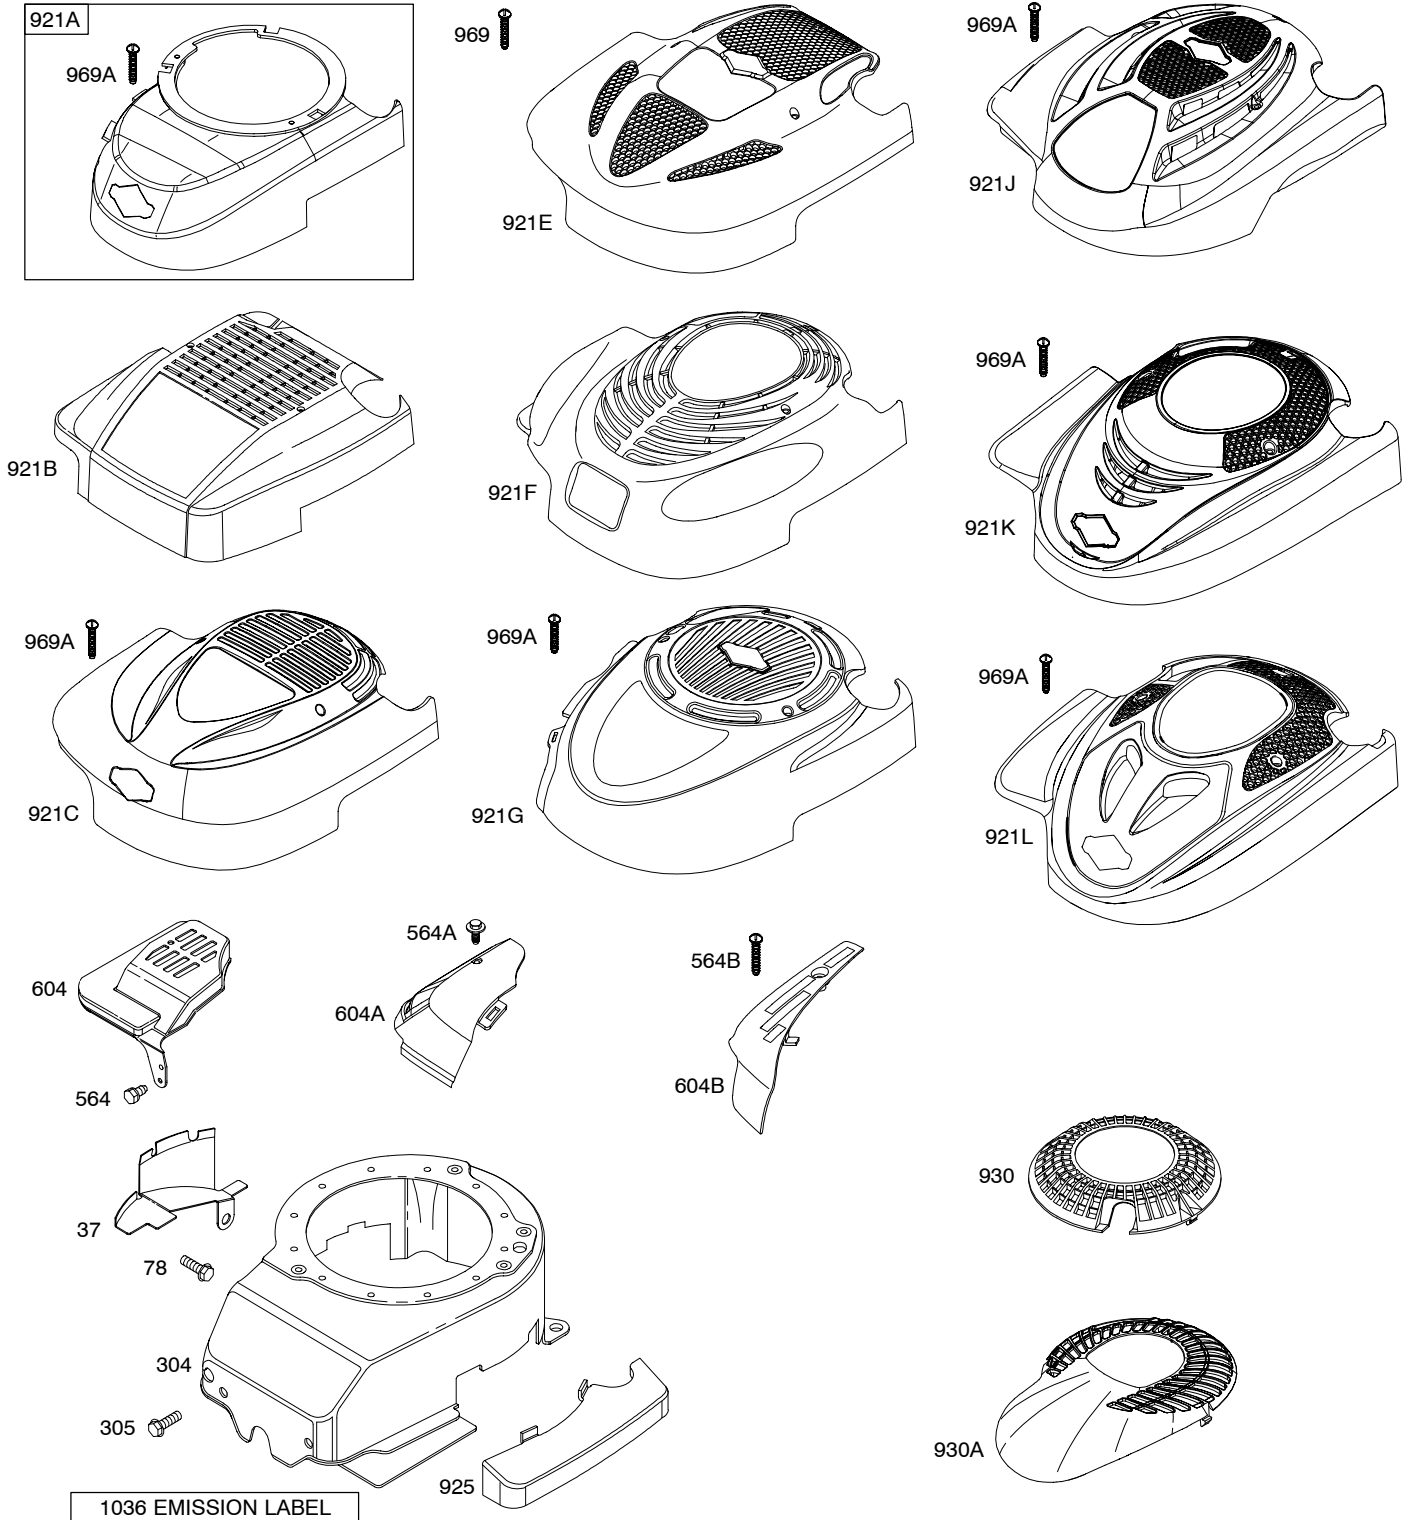


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-5

Assemblies include all parts shown in frames.

10/06/2005

123K00

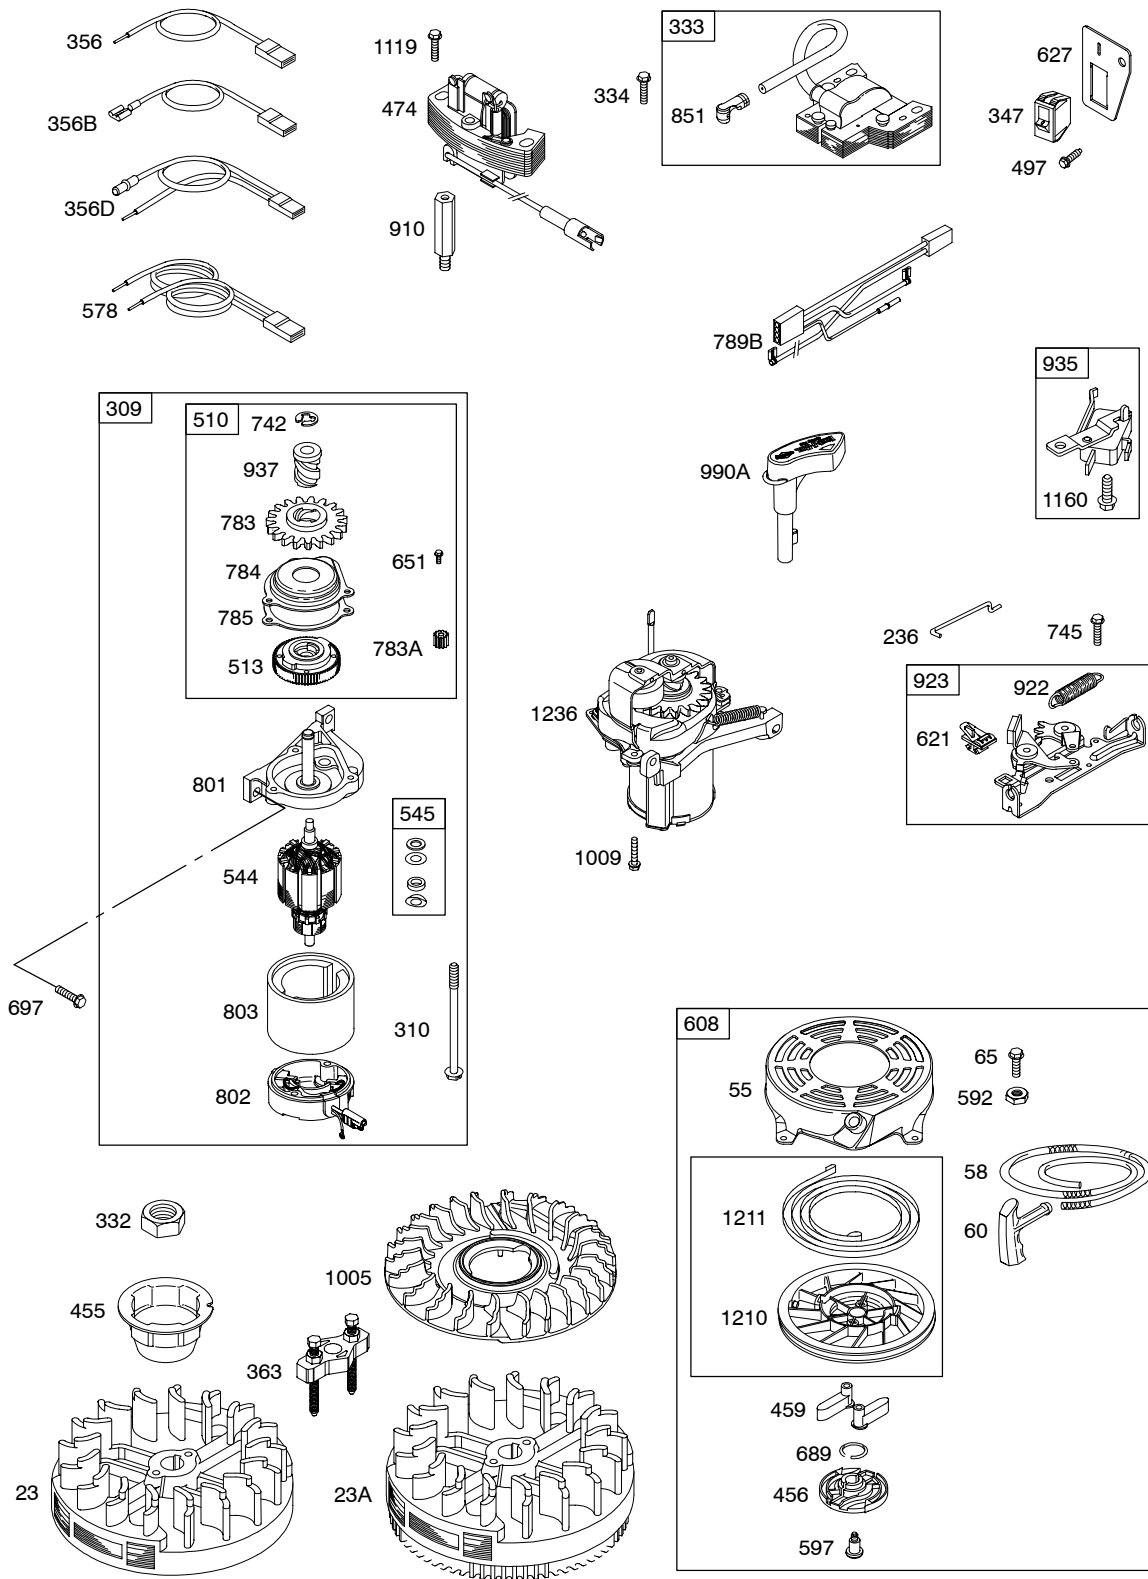

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5054-6 Assemblies include all parts shown in frames. 10/06/2005

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691451	Crankshaft	22	691092	Screw
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----			(Crankcase Cover/ Sump)
3	★299819	Seal-Oil (Magneto Side)		691450	Crankshaft	23	692315	Flywheel
4	493279	Sump-Engine			Used on Type No(s).			(Rewind Start)
		----- Note -----			0025, 0101, 0119,			----- Note -----
		696294 Sump-Engine			0122, 0123, 0124,			696291 Flywheel
		Used on Type No(s).			0125, 0126, 0135,			Used on Type No(s).
		0121, 0194, 0244.			0141, 0142, 0153,			0121, 0194, 0244.
		498983 Sump-Engine			0258, 0265, 0267,	23A	691992	Flywheel
		Used on Type No(s).			0268, 0275, 0281,			(Electric Start)
		0131, 0134, 0138.			0301, 0302, 0306,			----- Note -----
5	691160	Head-Cylinder			0309, 0311, 0312,			691987 Flywheel
7	★Ø692249	Gasket-Cylinder Head			0313, 0314, 0315,			(Electric Start)
8	695250	Breather Assembly			0324, 0326, 0327,			Used on Type No(s).
9	★Ø696125	Gasket-Breather			0328, 0329, 0330,			0060, 0062, 0107,
10	691125	Screw			0337, 0338, 0344,			0153, 0184, 0210,
		(Breather Assembly)			0347, 0350, 0357,			0218, 0223, 0225,
11	691781	Tube-Breather			0424, 0425, 0438,			0265, 0273, 0275,
12	★692232	Gasket-Crankcase			0440, 0444, 0447,			0302, 0330, 0344,
13	690912	Screw			0450, 0454, 0456,			0478, 0560, 0562.
		(Cylinder Head)			0478, 0479, 0481,	24	222698	Key-Flywheel
15	691680	Plug-Oil Drain (Square Socket)			0484, 0490, 0498,	25	790359	Piston Assembly
					0501, 0507, 0508,			(Standard)
					0511, 0513, 0525,			(Used After Code Date
					0541, 0547, 0562,			04031400).
					0563, 0564, 0625.			----- Note -----
					696009 Crankshaft			697339 Piston
					Used on Type No(s).			Assembly
					0114.			(Standard)
					691455 Crankshaft			(Used Before Code
					Used on Type No(s).			Date 04031500).
					0018, 0126, 0131,			697340 Piston
					0134, 0138, 0219,			Assembly
					0230, 0234, 0238,			(.010" Oversize)
					0243, 0289, 0518.			791326 Piston
					694849 Crankshaft			Assembly
					Used on Type No(s).			(.020" Oversize)
					0005, 0137, 0236,			(Used After Code Date
					0269.			04102100).
					694478 Crankshaft			697341 Piston
					Used on Type No(s).			Assembly
					0240, 0332.			(.020" Oversize)
					696290 Crankshaft			(Used Before Code
					Used on Type No(s).			Date 04102200).
					0130.			(.010" Oversize)
					694850 Crankshaft			697342 Piston
					Used on Type No(s).			Assembly
					0132.			(.030" Oversize)
			20	★399781	Seal-Oil (PTO Side)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***5054-7**

Assemblies include all parts shown in frames.

10/06/2005

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
26	790360	Ring Set (Standard) (Used After Code Date 04031400). ----- Note ----- 499425 Ring Set (Standard) (Used Before Code Date 04031500). 499426 Ring Set (.010" Oversize) 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100). 499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200). 499428 Ring Set (.030" Oversize)	55	691421	Housing-Rewind Starter	118	497466	Jet-Main (High Altitude) ----- Note ----- 497315 Jet-Main (High Altitude) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563.
27	691866	Lock-Piston Pin	58	697316	Rope-Starter (Cut To Required Length)	118A	497466	Jet-Main (High Altitude) ----- Note ----- 494870 Jet-Main (High Altitude) Used on Type No(s). 0005, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332.
28	499423	Pin-Piston (Standard)	60	281434	Grip-Starter Rope	118B	692677	Jet-Main (High Altitude)
29	499424	Rod-Connecting (Standard)	65	690837	Screw (Rewind Starter)	121	498260	Kit-Carburetor Overhaul
32	691664	Screw (Connecting Rod)	78	691108	Screw (Flywheel Guard)	125	498170	Carburetor (Primer System) ----- Note ----- 790821 Carburetor (Primer System) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563.
32A	695759	Screw (Connecting Rod)	81	691740	Lock-Muffler Screw	125A	499059	Carburetor (Choke System) ----- Note ----- 792253 Carburetor (Choke System) Used on Type No(s). 0005, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332.
33	262651	Valve-Exhaust	95	691636	Screw (Throttle Valve)	125B	790845	Carburetor (Autochoke System)
34	262652	Valve-Intake	97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)			
35	691270	Spring-Valve (Intake)	104	691242	Pin-Float Hinge			
36	691270	Spring-Valve (Exhaust)	108	691182	Valve-Choke			
37	694086	Guard-Flywheel	108A	790844	Valve-Choke			
40	692194	Retainer-Valve	109A	498593	Shaft-Choke			
43	691997	Slinger-Governor/Oil	109B	790843	Shaft-Choke			
45	690548	Tappet-Valve	117	498978	Jet-Main (Standard) ----- Note ----- 494870 Jet-Main (Standard) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563.			
46	691449	Camshaft	117A	498978	Jet-Main (Standard) ----- Note ----- 498981 Jet-Main (Standard) Used on Type No(s). 0005, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332.			
50	497465	Manifold-Intake						
51	★272199	Gasket-Intake						
54	691650	Screw (Intake Manifold)	117B	697355	Jet-Main (Standard)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-8

Assemblies include all parts shown in frames.

10/06/2005

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
127	●694468	Plug–Welch	188	693399	Screw (Control Bracket)	222	790143	Bracket–Control (Remote/Manual Friction)(Primer)
130	696564	Valve–Throttle	190	690940	Screw (Fuel Tank)	222C	692150	Bracket–Control (Variable Speed) (5 Postion Manual Choke)
130A	691203	Valve–Throttle	202	691829	Link–Mechanical Governor	222E	692982	Bracket–Control (Manual Friction, 5 Postion Manual Choke)
133	398187	Float–Carburetor	209B	699056	Spring–Governor ----- Note ----- 691292 Spring–Governor	222D	692467	Bracket–Control (Fixed Speed) ----- Note ----- 791128 Bracket–Control (Fixed Speed) Used on Type No(s). 0478, 0479, 0481.
134	●398188	Kit–Needle/Seat			Used on Type No(s). 0114, 0116, 0117, 0125, 0237, 0243, 0277, 0301, 0302, 0307, 0311, 0337, 0338, 0347, 0424, 0425, 0438, 0440, 0484, 0490, 0511, 0513.	227	690783	Lever–Governor Control
137	◆693981	Gasket–Float Bowl			691851 Spring–Governor	231	691636	Screw (Choke Valve)
146	690979	Key–Timing			Used on Type No(s). 0119, 0122, 0123, 0124, 0135, 0141, 0153.	236	691826	Link–Lockout
159	691753	Bracket–Air Cleaner Primer			691852 Spring–Governor	240	298090	Filter–Fuel
163	★◆272653	Gasket–Air Cleaner			Used on Type No(s). 0121, 0142.	265	690798	Clamp–Casing
187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line–Fuel (Cut to Required Length) (Used Before Code Date 05070100).			691290 Spring–Governor	267	691044	Screw (Casing Clamp)
187A	791873	Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 691371 Line–Fuel (Molded) (Used Before Code Date 05070100).			Used on Type No(s). 0005, 0134, 0138, 0236, 0269.	268	691072	Casing–Control Wire (Cut to Required Length)
187B	791891	Line–Fuel (Includes Filter) (Used After Code Date 05063000). ----- Note ----- 692042 Line–Fuel (Includes Filter) (Used Before Code Date 05070100).			691291 Spring–Governor	269	691026	Wire–Control (Cut to Required Length)
187C	791875	Line–Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 696292 Line–Fuel (Molded) (Used Before Code Date 05070100).			Used on Type No(s). 0126, 0130, 0131, 0132, 0137, 0240, 0332.	270	691027	Nut (Control Wire Casing)
					790944 Spring–Governor	271	691028	Lever–Control
					Used on Type No(s). 0238.	276	◆271716	Washer–Sealing (Main Jet)
						287	690940	Screw (Dipstick Tube)
						291	790830	Thermostat
						300	692038	Muffler ----- Note ----- 790828 Muffler Used on Type No(s). 0478, 0479, 0481, 0615, 0625.

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054–9

Assemblies include all parts shown in frames.

10/06/2005

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	493293	Housing-Blower ----- Note ----- 695892 Housing-Blower Used on Type No(s). 0101, 0116, 0119, 0122, 0123, 0124, 0125, 0135, 0139, 0141, 0142, 0181, 0183, 0185, 0193, 0195, 0196, 0197, 0208, 0209, 0217, 0219, 0222, 0224, 0226, 0230, 0231, 0232, 0234, 0235, 0237, 0239, 0243, 0261, 0266, 0267, 0268, 0271, 0277, 0281, 0283, 0289, 0301, 0306, 0307, 0309, 0311, 0312, 0313, 0314, 0315, 0324, 0326, 0327, 0328, 0329, 0336, 0337, 0338, 0347, 0350, 0357, 0424, 0425, 0438, 0440, 0444, 0447, 0450, 0454, 0456, 0484, 0490, 0498, 0501, 0507, 0508, 0511, 0513, 0541, 0547, 0563, 0564. 493294 Housing-Blower Used on Type No(s). 0005, 0126, 0134, 0137, 0236, 0238, 0240, 0269, 0332. 696298 Housing-Blower Used on Type No(s). 0121, 0194, 0244. 790826 Housing-Blower Used on Type No(s). 0479, 0481, 0615, 0625. 790983 Housing-Blower Used on Type No(s). 0478.	305	691108	Screw (Blower Housing)	445A	491588	Filter-Air Cleaner Cartridge
			306	690450	Shield-Cylinder	455	695161	Cup-Flywheel
			306A	790836	Shield-Cylinder	456	692299	Plate-Pawl Friction
			307	690345	Screw (Cylinder Shield)	459	281505	Plate-Ratchet
			309	695550	Motor-Starter	467	790842	Knob-Air Cleaner
			310	692327	Bolt (Starter Motor)	474	691991	Alternator
			332	690662	Nut (Flywheel)	497	690664	Screw (Stopswitch Bracket)
			333	802574	Armature-Magneto ----- Note ----- 790817 Armature-Magnetor Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0615, 0625.	505	691251	Nut (Governor Control Lever)
			334	691061	Screw (Magneto Armature)	510	494147	Drive-Starter
			337	802592	Plug-Spark (Resistor) ----- Note ----- 697451 Plug-Spark (EMS)	513	692358	Clutch-Drive
			347	691396	Switch-Rocker	523	495264	Dipstick
			356	692390	Wire-Stop	524	★692296	Seal-Dipstick Tube
			356B	693010	Wire-Stop	525	495265	Tube-Dipstick
			356D	496381	Wire-Stop	529	691923	Grommet
			358	497316	Gasket Set-Engine	544	690786	Armature-Starter
			363	19069	Flywheel Puller	545	492919	Washer Set
			365	691688	Screw (Carburetor)	562	92613	Bolt (Governor Control Lever)
			383	89838	Wrench-Spark Plug	564	690664	Screw (Control Cover)
			404	690272	Washer (Governor Crank)	564A	691142	Screw (Control Cover)
			425A	690670	Screw (Air Cleaner Cover)	564B	698589	Screw (Control Cover)
			443A	692523	Screw (Air Cleaner Primer Base)	578	398153	Wire Assembly
						584	697734	Cover-Breather Passage
						585	★691879	Gasket-Breather Passage
						592	690800	Nut (Rewind Starter)
						597	691696	Screw (Pawl Friction Plate)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***5054-10**

Assemblies include all parts shown in frames.

10/06/2005

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
601	95162	Clamp-Hose	692	690572	Spring-Detent	910	691094	Stud
601A	691038	Clamp-Hose	697	691127	Screw			(Alternator)
604	691757	Cover-Control			(Drive Cap)	921A	695886	Cover-Blower Housing
604A	691344	Cover-Control	718	690959	Pin-Locating	921B	692931	Cover-Blower Housing
604B	790703	Cover-Control	741	790345	Gear-Timing	921C	695889	Cover-Blower Housing
608	497680	Starter-Rewind			(Use Without Woodruff Key)	921E	696262	Cover-Blower Housing
613	691340	Screw			----- Note -----	921F	697343	Cover-Blower Housing
		(Muffler)			691830 Gear-Timing	921G	790701	Cover-Blower Housing
		----- Note -----			(Uses Woodruff Key)	921J	790036	Cover-Blower Housing
		790833 Screw	742	93941	Retainer-E Ring	921K	699984	Cover-Blower Housing
		(Muffler)	745	691648	Screw	921L	791026	Cover-Blower Housing
		Used on Type No(s).			(Brake)	922	691831	Spring-Brake
		0478, 0479, 0481,						----- Note -----
		0615, 0625.	783	691918	Gear-Pinion			692135 Spring-Brake
615	690340	Retainer-Governor	783A	691269	Gear-Pinion			Used on Type No(s).
		Shaft	784	692341	Cover-Starter Gear			0101, 0116, 0119,
616	698801	Crank-Governor	785	692352	Gasket-Starter Cover			0122, 0123, 0124,
617★◆	270344	Seal-O Ring	789B	696547	Harness-Wiring			0125, 0135, 0139,
		(Intake Manifold)	801	690782	Cap-Drive			0141, 0142, 0181,
621	692310	Switch-Stop	802	695267	Cap-End			0183, 0185, 0193,
627	692872	Bracket-Stops Switch	803	695266	Housing-Starter			0195, 0196, 0197,
633 ◆	691321	Seal-Choke/Throttle	832	499034	Guard-Muffler			0208, 0209, 0217,
		Shaft	836	690664	Screw			0219, 0222, 0224,
		(Throttle)			(Muffler Guard)			0226, 0230, 0231,
633A ◆	693867	Seal-Choke/Throttle	842	★691031	Seal-O Ring			0232, 0234, 0235,
		Shaft			(Dipstick Tube)			0237, 0239, 0243,
		(Choke)	843	691884	Sleeve-Lever			0258, 0261, 0266,
					(Control Bracket)			0267, 0268, 0271,
635	66538	Boot-Spark Plug	843A	691895	Sleeve-Lever			0277, 0281, 0283,
651	691660	Screw			(Choke)			0289, 0301, 0306,
		(Starter Gear Cover)	847	692017	Dipstick/Tube			0307, 0309, 0311,
668	★493823	Spacer			Assembly			0312, 0313, 0314,
		(Includes 2)	851	493880	Terminal-Spark Plug			0315, 0324, 0326,
670	692294	Spacer-Fuel Tank	868	697338	Seal-Valve			0327, 0328, 0329,
676	396548	Deflector-Muffler	869	691155	Seat-Valve			0336, 0337, 0338,
		(Louvered)			(Intake)			0347, 0350, 0357,
676C	493871	Deflector-Muffler	870	690380	Seat-Valve			0424, 0425, 0438,
		(Side Out)			(Exhaust)			0440, 0444, 0447,
		(Extended)	871	262001	Bushing-Valve Guide			0450, 0454, 0456,
677	690661	Screw			(Exhaust)			0479, 0481, 0484,
		(Muffler Deflector)			----- Note -----			0490, 0498, 0501,
684	690345	Screw			63709 Bushing-Valve			0507, 0508, 0511,
		(Breather Passage			Guide			0513, 0541, 0547,
		Cover)			(Intake)			0563, 0564, 0615,
689	691855	Spring-Friction	883 ★	691881	Gasket-Exhaust			0625.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-11

Assemblies include all parts shown in frames.

10/06/2005

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
923	691994	Brake ----- Note ----- 695891 Brake Used on Type No(s). 0101, 0116, 0119, 0122, 0123, 0124, 0125, 0135, 0139, 0141, 0142, 0181, 0183, 0185, 0193, 0195, 0196, 0197, 0208, 0209, 0217, 0219, 0222, 0224, 0226, 0230, 0231, 0232, 0234, 0235, 0237, 0239, 0243, 0258, 0261, 0266, 0267, 0268, 0271, 0277, 0281, 0283, 0289, 0301, 0306, 0307, 0309, 0311, 0312, 0313, 0314, 0315, 0324, 0326, 0327, 0328, 0329, 0336, 0337, 0338, 0347, 0350, 0357, 0424, 0425, 0438, 0440, 0444, 0447, 0450, 0454, 0456, 0479, 0481, 0484, 0490, 0498, 0501, 0507, 0508, 0511, 0513, 0541, 0547, 0563, 0564, 0615, 0625.	957	397974	Cap-Fuel Tank (Plastic)	1019	494256	Kit-Label ----- Note -----
			957A	692046	Cap-Fuel Tank (Plastic)			790231 Kit-Label (Touch N Mow)
			957B	699985	Cap-Fuel Tank (Plastic)	1036		Label-Emission (Available From An Authorized Briggs & Statton Service Dealer)
			966A	496116	Base-Air Cleaner Primer ----- Note ----- 792040 Base-Air, Cleaner Primer Used on Type No(s). 0479, 0481, 0615, 0625.	1058	276171	Manual-Owner's ----- Note -----
			967A	493537	Filter-Pre Cleaner			275054 Manual- Owner's (Touch N Mow)
			968B	692298	Cover-Air Cleaner	1059	692311	Kit-Screw/Washer ----- Note -----
			969	690700	Screw (Blower Housing Cover)			696293 Kit-Screw/ Washer (Touch N Mow)
			969A	691138	Screw (Blower Housing Cover)	1095	498528	Gasket Set-Valve
			970	691669	Screw (Air Cleaner Primer Bracket)	1119	692979	Screw (Alternator)
			972	699392	Tank-Fuel (Plastic)	1160	691627	Screw (Interlock Switch)
			972B	699374	Tank-Fuel (Plastic) ----- Note ----- 699387 Tank-Fuel (Plastic) Used on Type No(s). 0121, 0194, 0244.	1210	498144	Pulley/Spring Assembly (Pulley)
						1211	498144	Pulley/Spring Assembly (Spring)
						1236	695959	Starter-Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
925	690595	Cover-Linkage	975	493640	Bowl-Float	1330	270962	Manual-Repair
930	691919	Guard-Rewind (Round)	976	694395	Primer-Carburetor	1386	790848	Vane-Air (Autochoke System)
930A	691345	Guard-Rewind (Tear Drop)	977	498261	Gasket Set-Carburetor	1387	790849	Spring-Air Vane
935	499421	Switch-Interlock	990A	695951	Key Set	1388	790850	Screw (Air Vane)
937	691325	Spline-Starter	1005	691346	Fan-Flywheel			
			1009	696255	Screw (Starter Motor)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***5054-12**

Assemblies include all parts shown in frames.

10/06/2005