



126300

Illustrated Parts List

Model Series

126300

TYPE NUMBERS
0023 through 0421.

TABLE OF CONTENTS

Air Cleaner	6
Blower Housing	7
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	7
Fuel Supply	5
Gear Reduction	6
Governor Spring	5
Ignition	5
Kits/Gaskets – Carburetor	4
Kits/Gaskets – Engine	2
Kits/Gaskets – Valve	3
Lubrication	5
Piston Group	2
Rewind Starter	7

BRIGGS & STRATTON



PRINTED IN U.S.A.


COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

126300













1019 LABEL KIT

1058 OWNER'S MANUAL

1330 REPAIR MANUAL

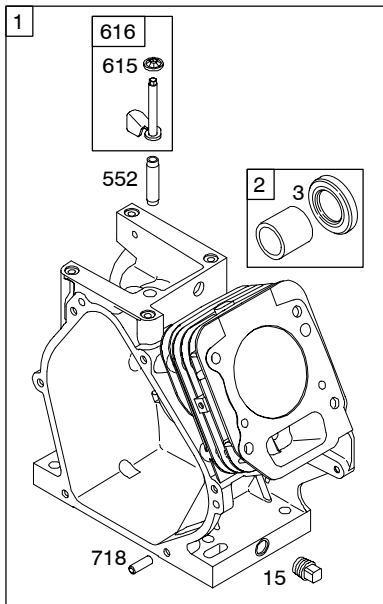

15A

   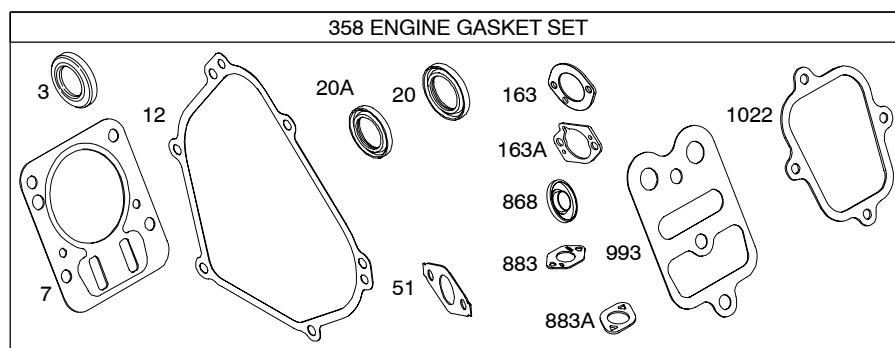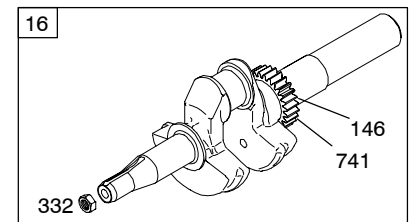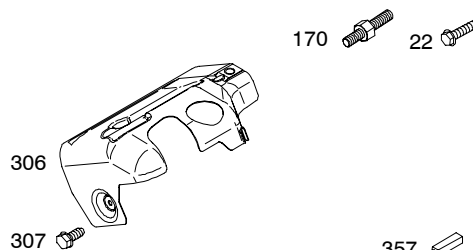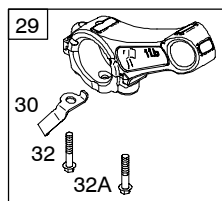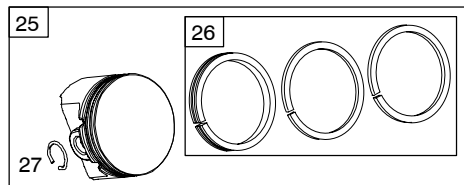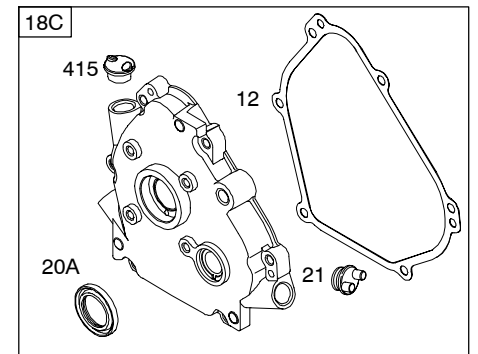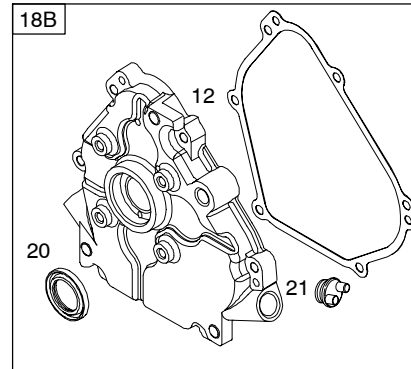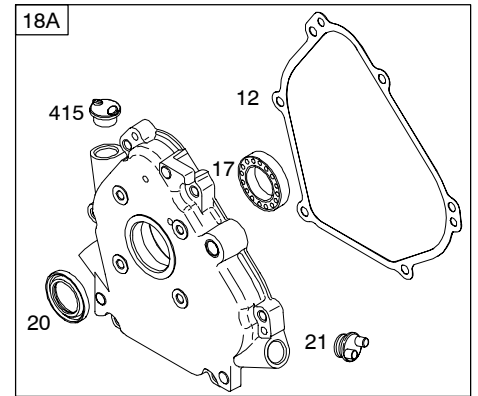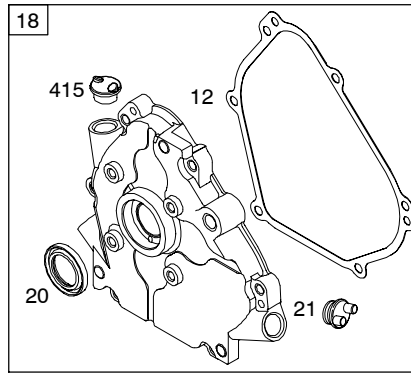


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5718-2

Assemblies include all parts shown in frames.

11/08/2005

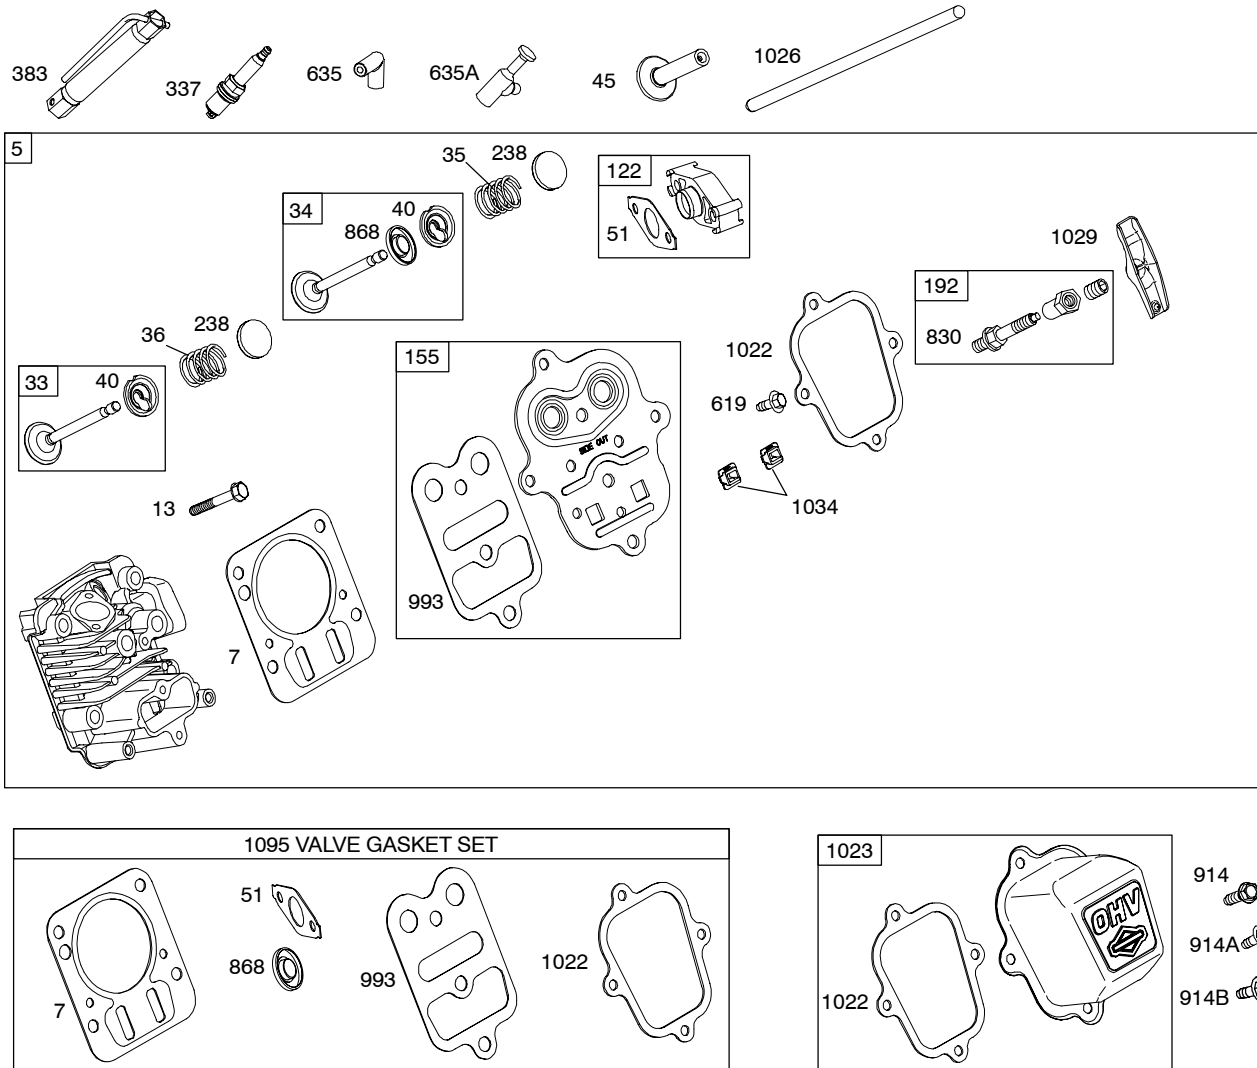


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5718-3

Assemblies include all parts shown in frames.

11/08/2005

126300

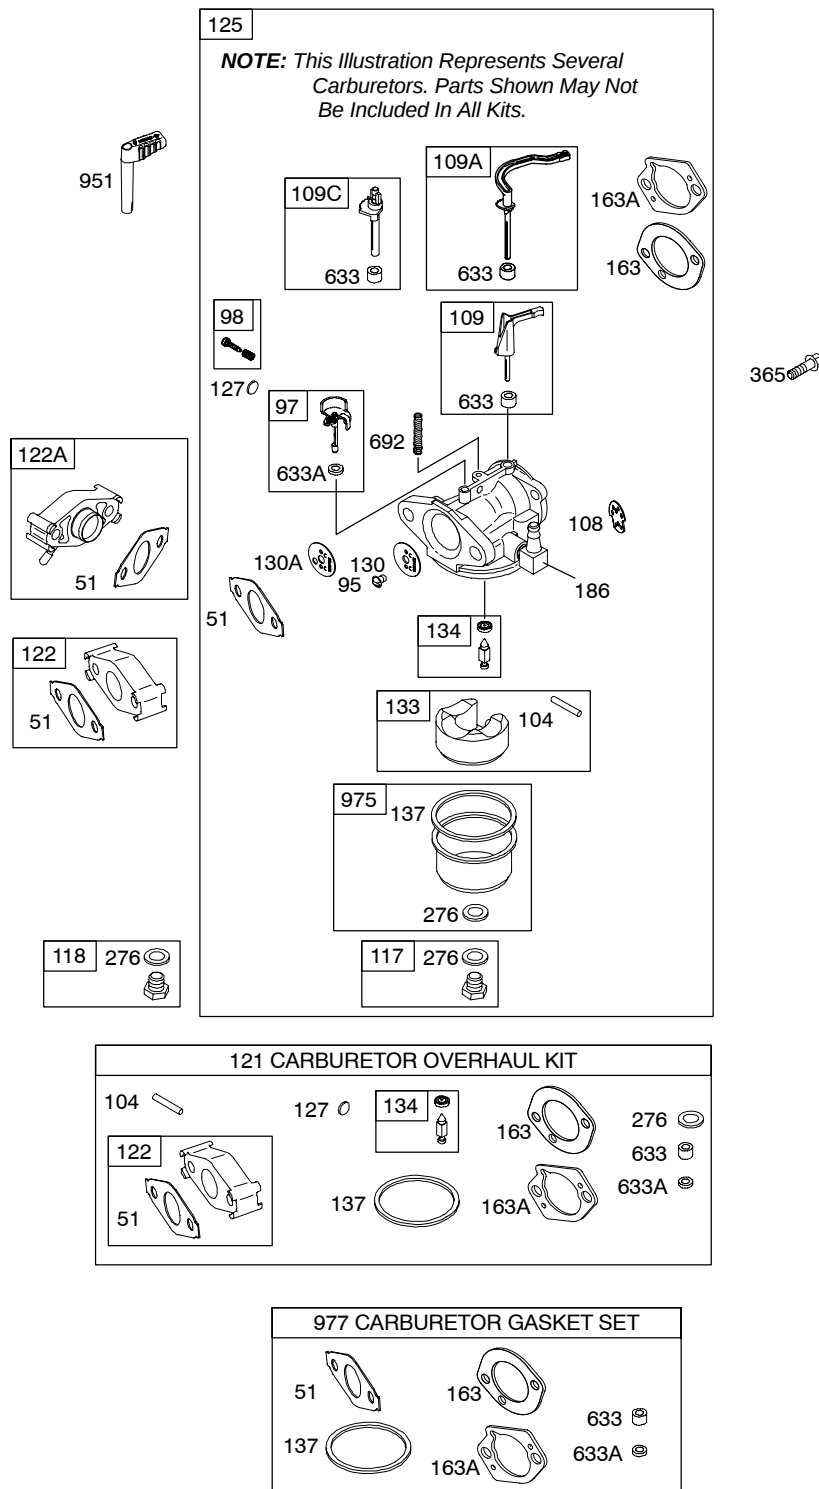


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5718-4

Assemblies include all parts shown in frames.

11/08/2005

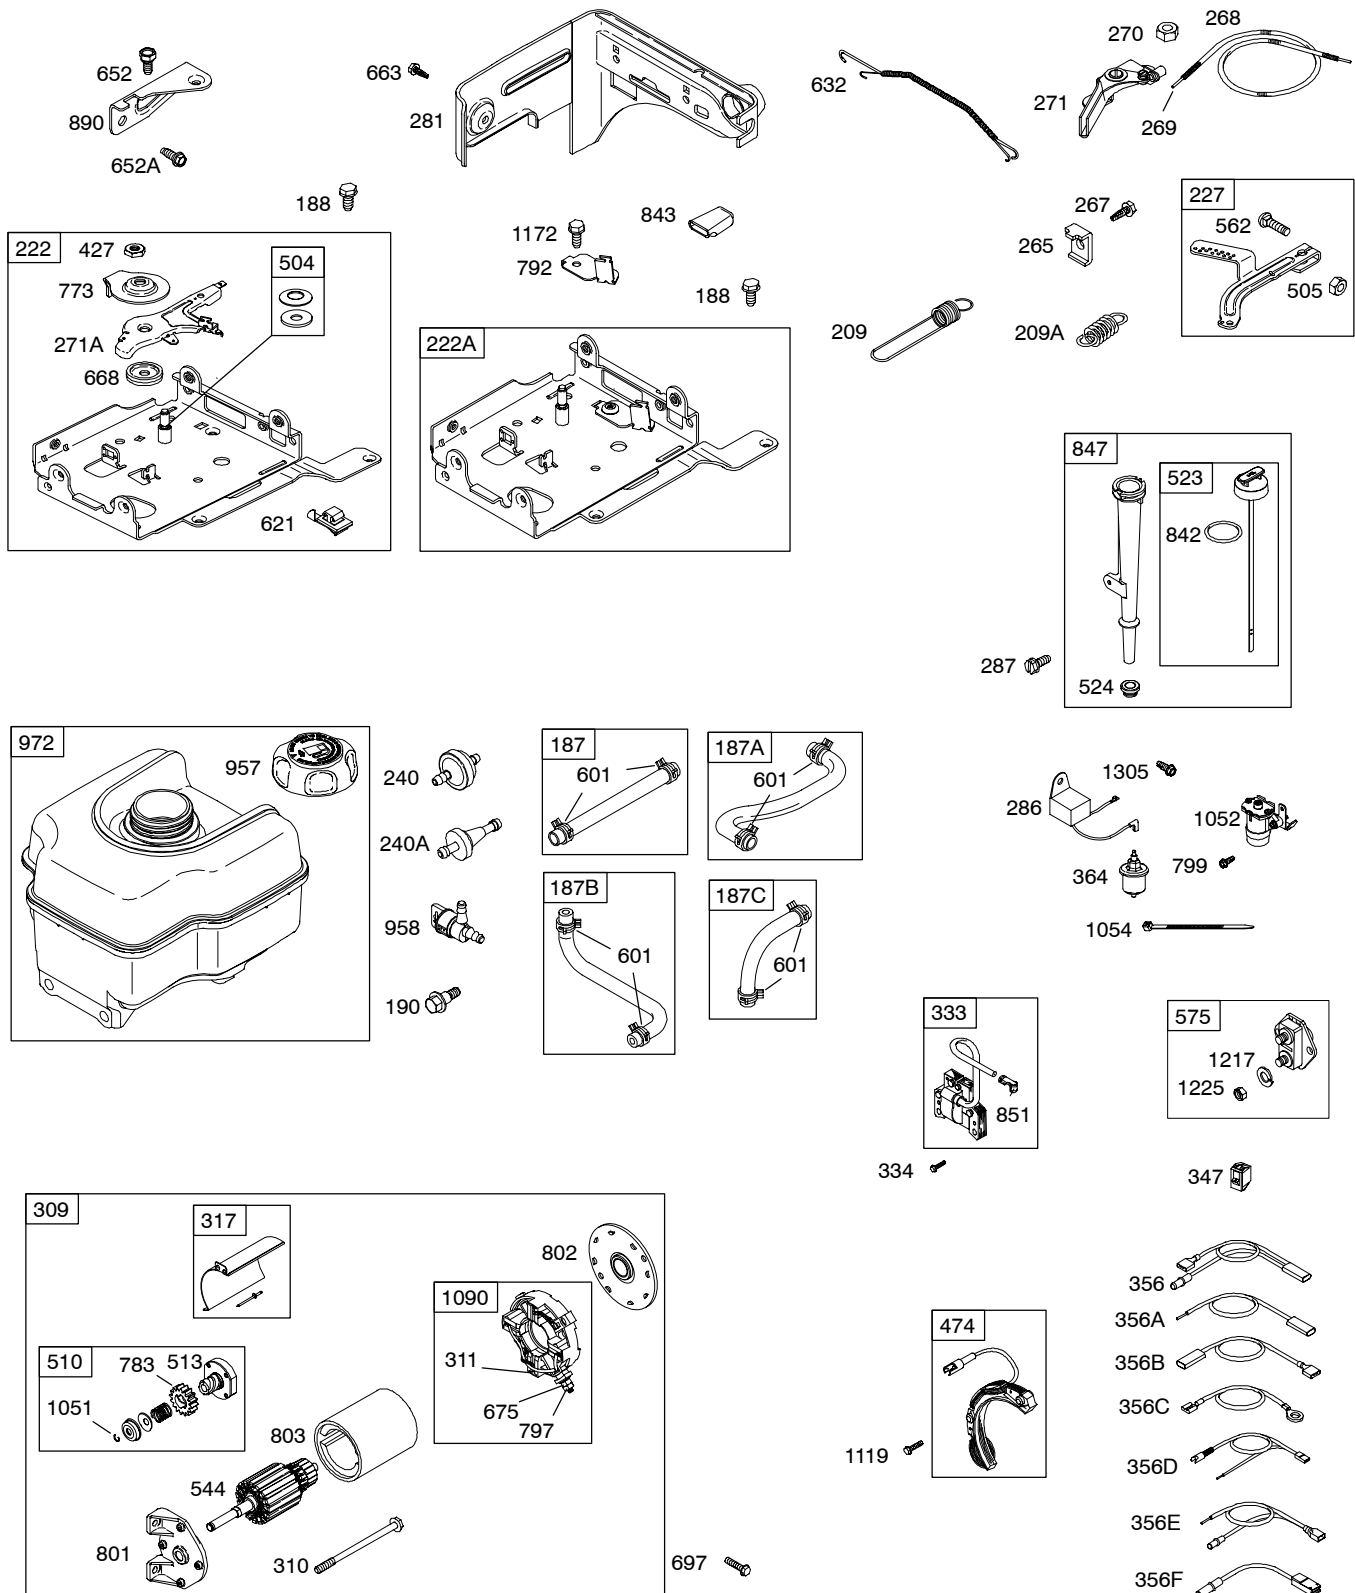





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5718-5

Assemblies include all parts shown in frames.

 11/08/2005



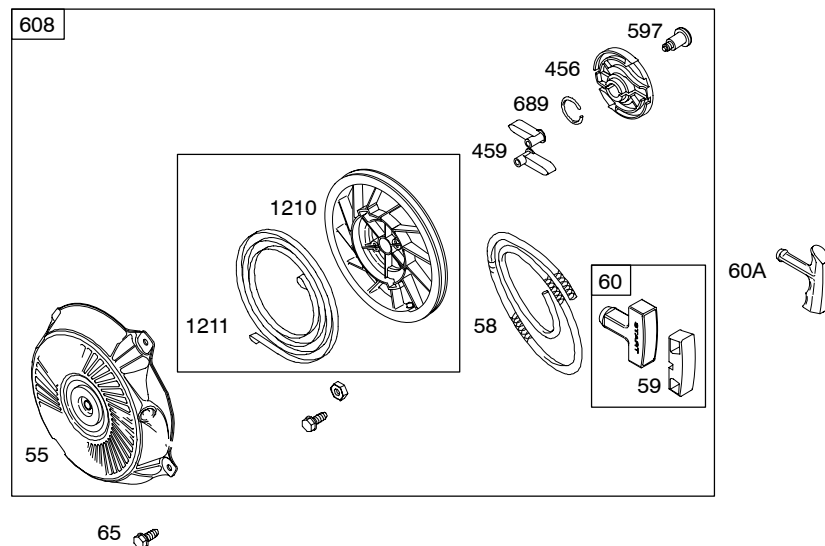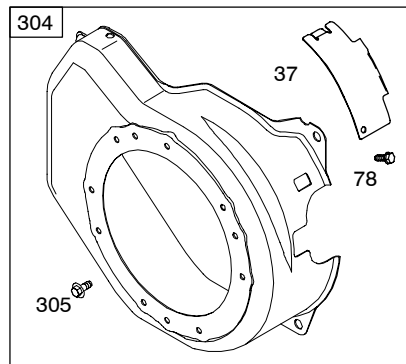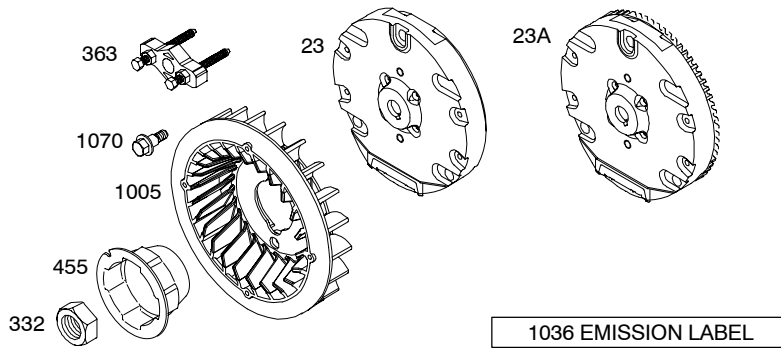

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5718-7

Assemblies include all parts shown in frames.

11/08/2005

126300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699510	Cylinder Assembly	17	692517	Bearing-Ball	25	792004	Piston Assembly (Standard)
2	399269	Kit-Bushing/Seal (Magneto Side)	18	699804	Cover-Crankcase			(Used After Code Date 05030800).
3	★299819S	Seal-Oil (Magneto Side)			----- Note -----			----- Note -----
5	699486	Head-Cylinder			699696 Cover-Crankcase			499627 Piston Assembly
7	★Ø698210	Gasket-Cylinder Head			Used on Type No(s).			(Standard)
11	692600	Tube-Breather (Flat Panel Air Cleaner)			0134, 0161, 0191, 0206, 0245, 0261, 0270, 0279, 0320, 0368, 0396, 0416, 0421.			(Used Before Code Date 05030900).
11A	693647	Tube-Breather (High Mount Air Cleaner)	18A	699672	Cover-Crankcase			791325 Piston Assembly
11B	790632	Tube-Breather (Ultra Low Air Cleaner)			Used on Type No(s).			(.020" Oversize)
12	★699485	Gasket-Crankcase			0035, 0036, 0064, 0135, 0151, 0162, 0176, 0205, 0213, 0215, 0220, 0233, 0237, 0255, 0259, 0285, 0288.			(Used After Code Date 05030800).
13	699482	Screw (Cylinder Head)						692789 Piston Assembly
15	691686	Plug-Oil Drain (Square Head)	18B	699761	Cover-Crankcase			(.020" Oversize)
15A	691682	Plug-Oil Drain (Flush)			Used on Type No(s).	26	791969	(Used Before Code Date 05030900).
16	699445	Crankshaft	18C	699677	Cover-Crankcase			Ring Set
		----- Note -----			Used on Type No(s).			(Standard)
		699444 Crankshaft			0070, 0117, 0165, 0199, 0229, 0232, 0235, 0242, 0243, 0247, 0253, 0271, 0272, 0274.			(Used After Code Date 05030800).
		Used on Type No(s).						----- Note -----
		0049, 0113, 0289.	20	★692550	Seal-Oil (PTO Side)			499631 Ring Set
		699447 Crankshaft						(Standard)
		Used on Type No(s).	20A	★691952	Seal-Oil (PTO Side)			(Used Before Code Date 05030900).
		0038, 0174, 0177, 0216, 0234, 0262.			Used on Type No(s).			791324 Ring Set
		699452 Crankshaft			0070, 0117, 0165, 0199, 0229, 0232, 0235, 0242, 0243, 0247, 0253, 0271, 0272, 0274.			(.020" Oversize)
		Used on Type No(s).						(Used After Code Date 05030800).
		0158, 0245, 0357, 0413.	21	281658S	Cap-Oil Fill			692786 Ring Set
		699449 Crankshaft	22	699478	Screw (Crankcase Cover/ Sump)			(.020" Oversize)
		Used on Type No(s).						(Used Before Code Date 05030900).
		0161, 0261, 0270, 0359, 0386.	23	699488	Flywheel	27	691866	Lock-Piston Pin
		699451 Crankshaft	23A	699514	Flywheel	28	499423	Pin-Piston
		Used on Type No(s).			Used on Type No(s).	29	690124	Rod-Connecting
		0060, 0130, 0163, 0191, 0207, 0212, 0227, 0259, 0275, 0276, 0278, 0280, 0281, 0282.			0146, 0217.	30	692562	Dipper-Connecting Rod
		699441 Crankshaft	24	222698S	Key-Flywheel			32
		Used on Type No(s).						691664 Screw
		0035, 0151, 0285.						(Connecting Rod)
		699443 Crankshaft				32A	695759	Screw
		Used on Type No(s).						(Connecting Rod)
		0036, 0064, 0162, 0176, 0205, 0213, 0215, 0220, 0233, 0237, 0247, 0255, 0288.				33	499642	Valve-Exhaust
						34	499641	Valve-Intake

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5718-8

Assemblies include all parts shown in frames.

11/08/2005

126300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
35	691304	Spring-Valve (Intake)	97	690024	Shaft-Throttle	122	★●693749	Spacer-Carburetor
36	691304	Spring-Valve (Exhaust)	98	398185	Kit-Idle Speed (Carburetor)	122A	695286	Spacer-Carburetor Used on Type No(s). 0231.
37	699661	Guard-Flywheel	104	●691242	Pin-Float Hinge	125	696981	Carburetor
40	692194	Retainer-Valve	108	692567	Valve-Choke			----- Note -----
45	690977	Tappet-Valve			699111 Valve-Choke Used on Type No(s). 0038, 0174, 0177, 0216, 0234, 0262.			791077 Carburetor Used on Type No(s). 0357, 0359, 0386, 0396, 0413, 0416, 0421.
46	693404	Camshaft	109	690023	Shaft-Choke			697028 Carburetor Used on Type No(s). 0125, 0152, 0158, 0161, 0163, 0186, 0205, 0207, 0226, 0237, 0245, 0272, 0276, 0279.
46A	694831	Camshaft Used on Type No(s). 0070, 0165, 0199, 0232, 0235, 0243, 0274.	109A	693628	Shaft-Choke			698859 Carburetor Used on Type No(s). 0038, 0174, 0177, 0216, 0234, 0262.
		----- Note -----	109C	790624	Shaft-Choke	127	●691739	Plug-Welch
		695285 Camshaft Used on Type No(s). 0117, 0229, 0242, 0247, 0253, 0271, 0272.	117	498978	Jet-Main	127A	691585	Plug-Welch
					----- Note -----	130	691181	Valve-Throttle
51★●●	692555	Gasket-Intake			697355 Jet-Main (Standard) Used on Type No(s). 0125, 0152, 0158, 0161, 0163, 0186, 0205, 0207, 0226, 0237, 0245, 0272, 0276, 0279.	130A	691203	Valve-Throttle Used on Type No(s). 0174, 0177, 0216, 0234, 0262.
55	691422	Housing-Rewind Starter			498975 Jet-Main (Standard) Used on Type No(s). 0038, 0174, 0177, 0216, 0234, 0262.			133 398187 Float-Carburetor
58	693389	Rope-Starter (Cut to Required Length)			498975 Jet-Main (High Altitude)			134 ●398188 Kit-Needle/Seat
59	490653	Grip-Insert	118	498975	Jet-Main (High Altitude)			137 ●●693981 Gasket-Float Bowl
60	490652	Grip-Starter Rope (2 Piece)			----- Note -----			146 690979 Key-Timing
60A	281434S	Grip-Starter Rope			494870 Jet-Main (High Altitude) Used on Type No(s). 0125, 0152, 0158, 0161, 0163, 0186, 0205, 0207, 0226, 0237, 0245, 0272, 0276, 0279.			155 ★698214 Plate-Cylinder Head
65	699228	Screw (Rewind Starter)			497466 Jet-Main (High Altitude) Used on Type No(s). 0038, 0174, 0177, 0216, 0234, 0262.			161 699207 Base-Air Cleaner (Flat Panel Air Cleaner)
78	699205	Screw (Flywheel Guard)						161A 790631 Base-Air Cleaner (Ultra Low Air Cleaner)
79	694511	Case-Gear Reduction						163★●●696024 Gasket-Air Cleaner (Flat Panel Air Cleaner)
82	690369	Screw (Gear Reduction Case)						163A★●●696979 Gasket-Air Cleaner (High Mount)
82A	790197	Screw (Gear Reduction Case)						170 699818 Stud (Crankcase Cover)
83	690374	Shaft-Auxiliary Drive						186 692317 Connector-Hose
84	691121	Plug-Breather						
85	692551	Screw (Gear Cover to Gear Reduction)						
86	690608	Cover-Gear						
87	691582	Seal-Gear Reduction						
88	691600	Gasket-Gear Reduction Cover	121	696998	Kit-Carburetor Overhaul			
95	691636	Screw (Throttle Valve)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5718-9

Assemblies include all parts shown in frames.

11/08/2005

126300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	791766	Line-Fuel (Cut to Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut to Required Length) (Used Before Code Date 05070100).	219	693578	Gear-Governor	332	699359	Nut (Flywheel)
187A	791867	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 692601 Line-Fuel (Molded) (Used Before Code Date 05070100).	220	691724	Washer (Governor Gear)	333	695711	Armature-Magneto
187B	791874	Line-Fuel (Molded)	222	699589	Bracket-Control	334	699477	Screw (Magneto Armature)
187C	791866	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 694486 Line-Fuel (Molded) (Used Before Code Date 05070100).	222A	699590	Bracket-Control Used on Type No(s). 0038, 0174, 0177, 0216, 0234, 0262.	337	491055S	Plug-Spark (Resistor) ----- Note ----- 691043 Plug-Spark (EMS)
188	699479	Screw (Control Bracket)	227	692573	Lever-Governor Control	347	697854	Switch-Rocker ----- Note ----- 698338 Switch-Rocker Used on Type No(s). 0038, 0043, 0188, 0211, 0213, 0217, 0234, 0237.
190	699220	Screw (Fuel Tank)	238	691300	Valve-Cap	356	693651	Wire-Stop
192	694543	Adjuster-Rocker Arm	240	298090S	Filter-Fuel ----- Note ----- 394358S Filter-Fuel Used on Type No(s). 0215.	356A	692390	Wire-Stop
209	692571	Spring-Governor ----- Note ----- 693206 Spring-Governor Used on Type No(s). 0023, 0035, 0038, 0060, 0070, 0135, 0151, 0163, 0191, 0212, 0234, 0262, 0273, 0278, 0282, 0285. 693710 Spring-Governor Used on Type No(s). 0117, 0152, 0243, 0256, 0274.	240A	694485	Filter-Fuel	356B	692602	Wire-Stop
209A	691278	Spring-Governor	265	691024	Clamp-Casing	356C	695630	Wire-Stop
			267	699492	Screw (Casing Clamp)	356D	695283	Wire-Stop
			268	691025	Casing-Control Wire (Cut to Required Length)	356E	695814	Wire-Stop
			269	691026	Wire-Control (Cut to Required Length)	356F	694372	Wire-Stop
			270	691027	Nut (Control Wire Casing)	357	691483	Key-Drive Pulley Used on Type No(s). 0207, 0276. ----- Note ----- 692191 Key-Drive Pulley Used on Type No(s). 0162.
			271	691028	Lever-Control	357A	690339	Key-Drive Pulley Used on Type No(s). 0274.
			271A	694256	Lever-Control	358	699638	Gasket Set-Engine
			276	271716	Washer-Sealing	363	19069	Puller-Flywheel
			281	699639	Panel-Control	364	695693	Terminal-Oil Plug
			286	698611	Module-Oil Sensor	365	699484	Screw (Carburetor)
			287	699629	Screw (Dipstick Tube)	383	19374S	Wrench-Spark Plug
			300	693593	Muffler	415	693463	Plug
			300A	699231	Muffler	425	699208	Screw (Air Cleaner Cover)
			304	699598	Housing-Blower	425A	699492	Screw (Air Cleaner Cover)
			305	699480	Screw (Blower Housing)	427	694255	Nut (Control Bracket)
			306	693610	Shield-Cylinder			
			307	699483	Screw (Cylinder Shield)			
			309	694504	Motor-Starter			
			310	690323	Screw (Starter Motor)			
			311	497608	Brush Set			
			317	695494	Cover-Starter			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***5718-10**

Assemblies include all parts shown in frames.

11/08/2005

126300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
445	491588S	Filter–Air Cleaner Cartridge (Flat Panel)	619	699230	Screw (Cylinder Head Plate)	783	692353	Gear–Pinion
445A	697029	Filter–Air Cleaner Cartridge (High Mount)	621	692310	Switch–Stop	792	694259	Bracket–Fixed Speed
455	692591	Cup–Flywheel	632	693408	Spring/Link–Mechanical Governor	797	691029	Nut (Brush Retainer)
456	692299	Plate–Pawl Friction	633	♦♦693867	Seal–Choke/Throttle Shaft	799	699202	Screw (Oil Sensor)
459	281505S	Pawl–Ratchet	633A	♦♦691321	Seal–Choke/Throttle Shaft	801	694482	Cap–Drive
467	691668	Knob–Air Cleaner	635	692076	Boot–Spark Plug	802	691286	Cap–End
474	694457	Alternator	635A	692927	Boot–Spark Plug	803	693757	Housing–Starter
504	694254	Washer Set–Friction	652	699755	Screw (Support Bracket)	819	699233	Screw (Muffler Bracket)
505	691251	Nut (Governor Control Lever)	652A	699230	Screw (Support Bracket)	823	699209	Screw (Muffler Adapter)
510	499308	Drive–Starter	663	699206	Screw (Control Panel)	830	694544	Stud–Rocker Arm
513	692024	Drive–Clutch	668	694257	Spacer	832	693583	Guard–Muffler
523	693618	Dipstick	675	691261	Washer (Brush Retainer)	832A	697818	Guard–Muffler
		----- Note -----	676	393757	Deflector–Muffler	832B	696516	Guard–Muffler
		790546 Dipstick Used on Type No(s). 0359.	676A	697816	Deflector–Muffler	836	699203	Screw (Muffler Guard)
524	281370S	Seal–Dipstick Tube	676B	395700	Deflector–Muffler	836A	699632	Screw (Muffler Guard)
544	692966	Armature–Starter	677	690661	Screw (Muffler Deflector)	836B	699209	Screw (Muffler Guard)
552	692346	Bushing–Governor Crank	677A	699776	Screw (Muffler Deflector)	836C	699234	Screw (Muffler Guard)
562	691119	Bolt (Governor Control Lever)	689	691855	Spring–Friction	836D	699204	Screw (Muffler Guard)
575	692303	Switch–Starting	692	690572	Spring–Detent	842	691031	Seal–O Ring (Dipstick Tube)
597	691696	Screw (Pawl Friction Plate)	697	790537	Screw (Starter Motor) (Used After Code Date 04110800).	843	695588	Sleeve–Lever
601	95162S	Clamp–Hose			----- Note -----	847	693617	Dipstick/Tube Assembly
608	693394	Starter–Rewind			699773 Screw (Starter Motor) (Used Before Code Date 04110900).			----- Note -----
		----- Note -----						790545 Dipstick/Tube Assembly Used on Type No(s). 0326.
		497680 Starter–Rewind Used on Type No(s). 0206, 0217.	717	693462	Bracket–Air Cleaner	851	493880S	Terminal–Spark Plug
613	699209	Screw (Muffler)	718	690959	Pin–Locating	863	699229	Bracket–Muffler
613A	699230	Screw (Muffler)	727	698039	Cover–Starter Drive	864	699232	Adapter–Muffler
613B	697812	Screw (Muffler)	732	699200	Screw (Starter Drive Cover)	868	★Ø692044	Seal–Valve
615	692576	Retainer–Governor Shaft	741	695087	Gear–Timing	875	697030	Base–Air Cleaner (High Mount)
616	692547	Crank–Governor	742	692564	Retainer–E Ring	883	★691893	Gasket–Exhaust
			746	692566	Gear–Idler	883A	★692237	Gasket–Exhaust (Adapter Mounting)
			773	694258	Retainer	890	790203	Bracket–Support

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

♦ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5718–11

Assemblies include all parts shown in frames.

11/08/2005

126300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
914	699481	Screw (Rocker Cover) (Bottom)	971	690370	Screw (Air Cleaner Base)	1052	790141	Sensor–Oil
914A	692557	Screw (Rocker Cover) (Top)	971A	690349	Screw (Air Cleaner Base)	1054	280275	Cable–Tie
914B	697551	Screw (Rocker Cover) (Center)	971B	699629	Screw (Air Cleaner Base)	1058	276355	Owner's Manual
951	790630	Lever–Choke	972	694260	Tank–Fuel	1070	699201	Screw (Flywheel Fan)
957	694261	Cap–Fuel Tank	975	493640	Bowl–Float	1090	691293	Retainer–Brush
958	698180	Valve–Fuel Shut Off	977	697001	Gasket Set–Carburetor	1095	698215	Gasket Set–Valve
961	698304	Screw (Air Cleaner Bracket)	993	Ø694088	Gasket–Cylinder Head Plate	1119	699772	Screw (Alternator)
967	493537S	Filter–Pre Cleaner (Flat Panel)	994	790153	Arrester–Spark	1172	699230	Screw (Fixed Speed Bracket)
967A	273356S	Filter–Pre Cleaner (High Mount)	1005	692592	Fan–Flywheel	1210	498144	Pulley/Spring Assembly (Pulley)
968	692584	Cover–Air Cleaner (Flat Panel Air Cleaner)	1019	694852	Kit–Label	1211	498144	Pulley/Spring Assembly (Spring)
968A	693460	Cover–Air Cleaner (High Mount)	1022	★Ø691890	Gasket–Rocker Cover	1217	691075	Washer (Starting Switch)
968B	791082	Cover–Air Cleaner (Ultra Low Air Cleaner)	1023	499924	Cover–Rocker Arm	1225	696198	Nut (Starting Switch)
			1026	790287	Rod–Push	1305	699691	Screw (Oil Sensor Module)
			1029	691230	Arm–Rocker	1330	272147	Repair Manual
			1034	691343	Guide–Push Rod			
			1036		Label–Emission (Available From An Authorized Briggs & Statton Service Dealer)			
			1051	691265	Ring–Retaining			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Ø Included in Valve Gasket Set–Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.***5718–12**

Assemblies include all parts shown in frames.

11/08/2005