



**127600**

# Illustrated Parts List

## Model Series

# 127600

TYPE NUMBERS  
0100 through 0406.

### TABLE OF CONTENTS


<b>Air Cleaner</b> .....	6
<b>Blower Housing/Shrouds</b> .....	7
<b>Camshaft</b> .....	2
<b>Carburetor</b> .....	4
<b>Controls</b> .....	5
<b>Crankshaft</b> .....	2
<b>Cylinder</b> .....	2
<b>Cylinder Head</b> .....	3
<b>Electric Starter</b> .....	7
<b>Engine Sump</b> .....	2
<b>Exhaust System</b> .....	6
<b>Flywheel</b> .....	7
<b>Flywheel Brake</b> .....	5
<b>Fuel Supply</b> .....	4
<b>Governor Spring</b> .....	5
<b>Ignition</b> .....	5
<b>Lubrication</b> .....	2
<b>Piston Group</b> .....	2
<b>Rewind Starter</b> .....	7






PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 127600

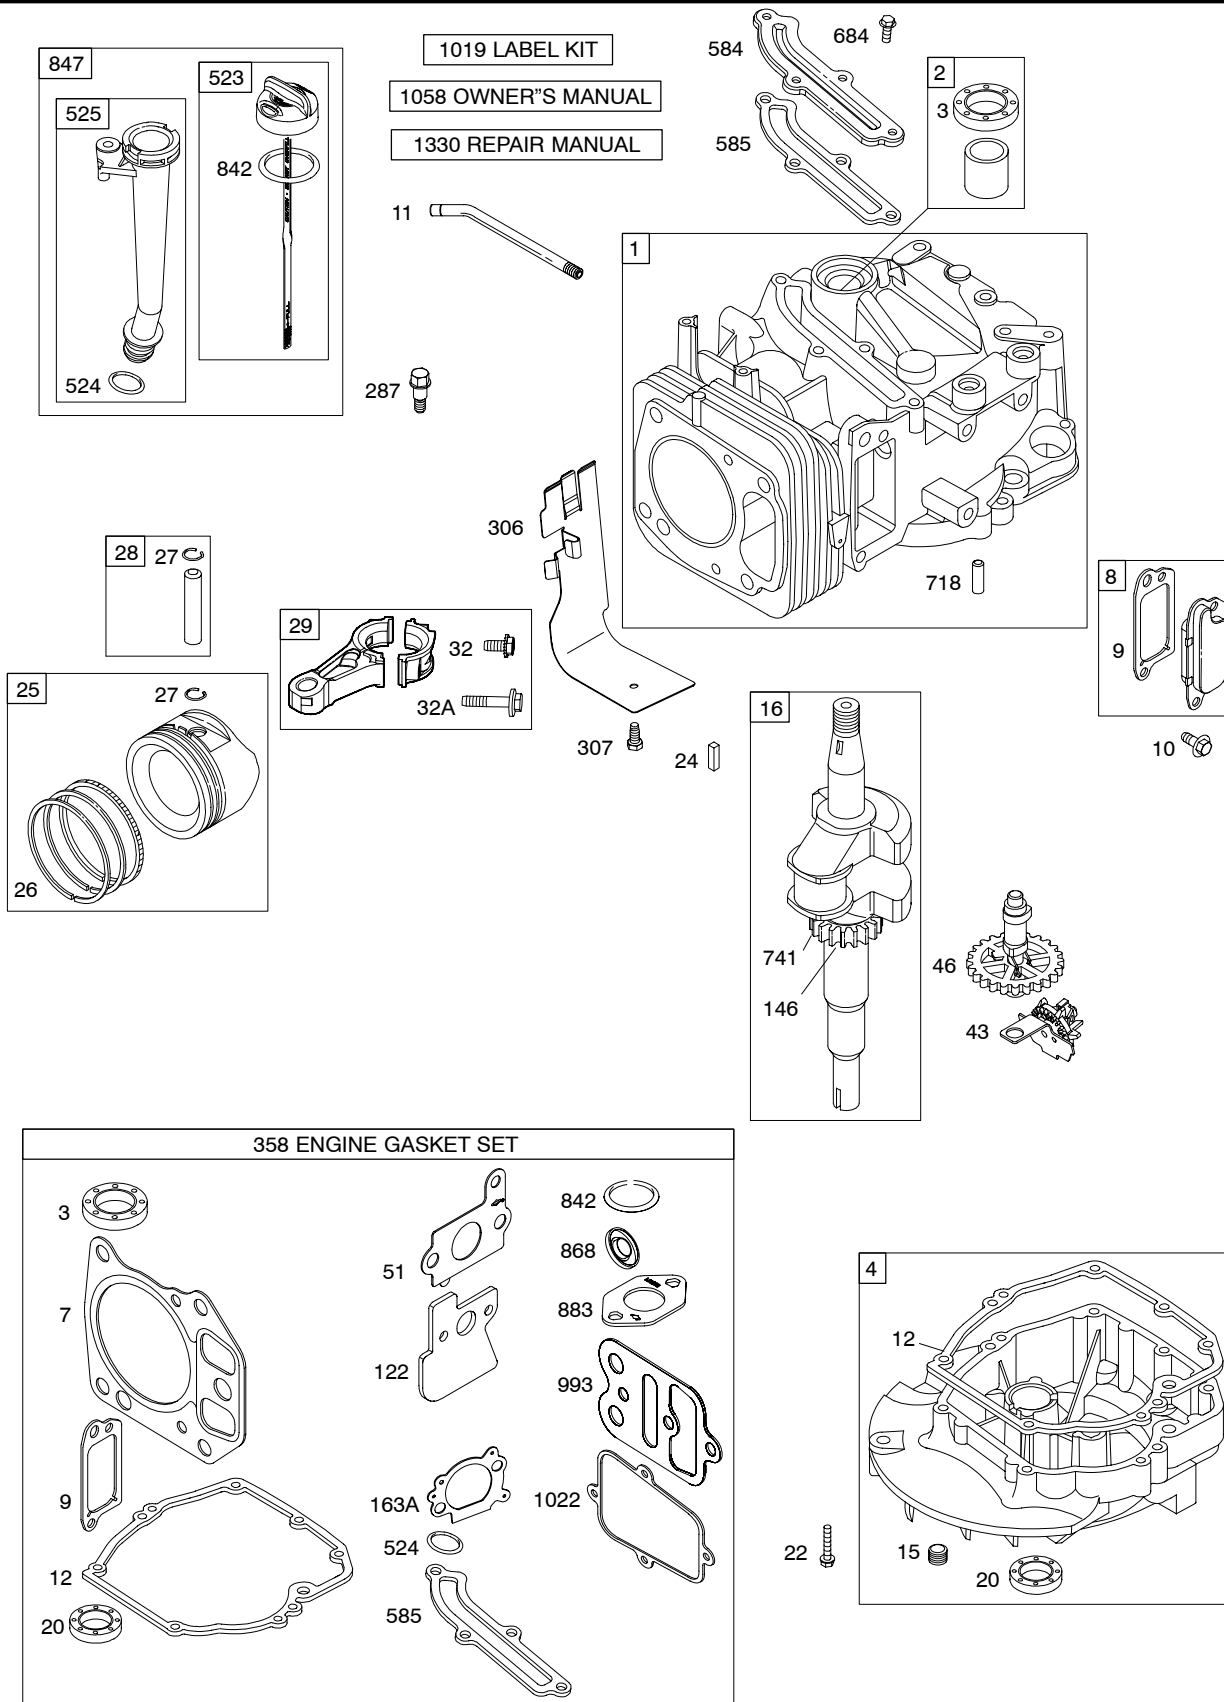


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5115-2 Assemblies include all parts shown in frames. 10/12/2005









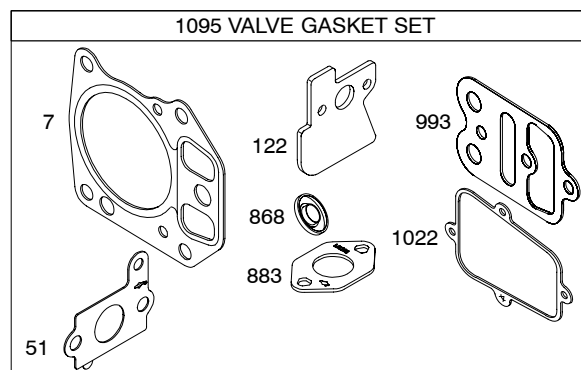
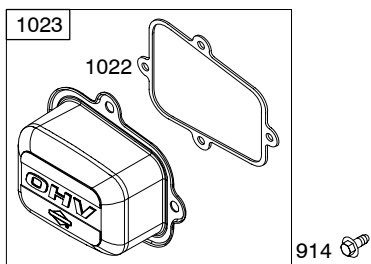
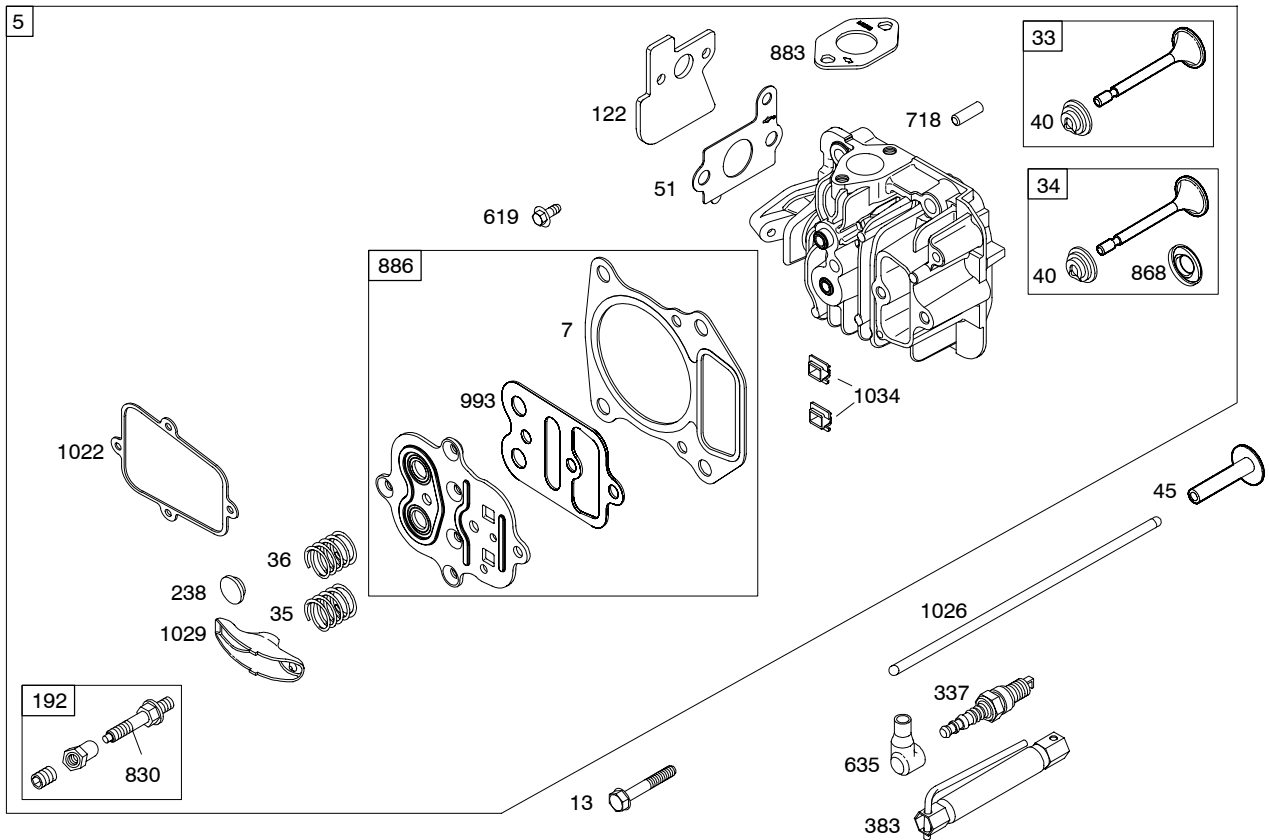


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5115-3 Assemblies include all parts shown in frames. 10/12/2005

# 127600






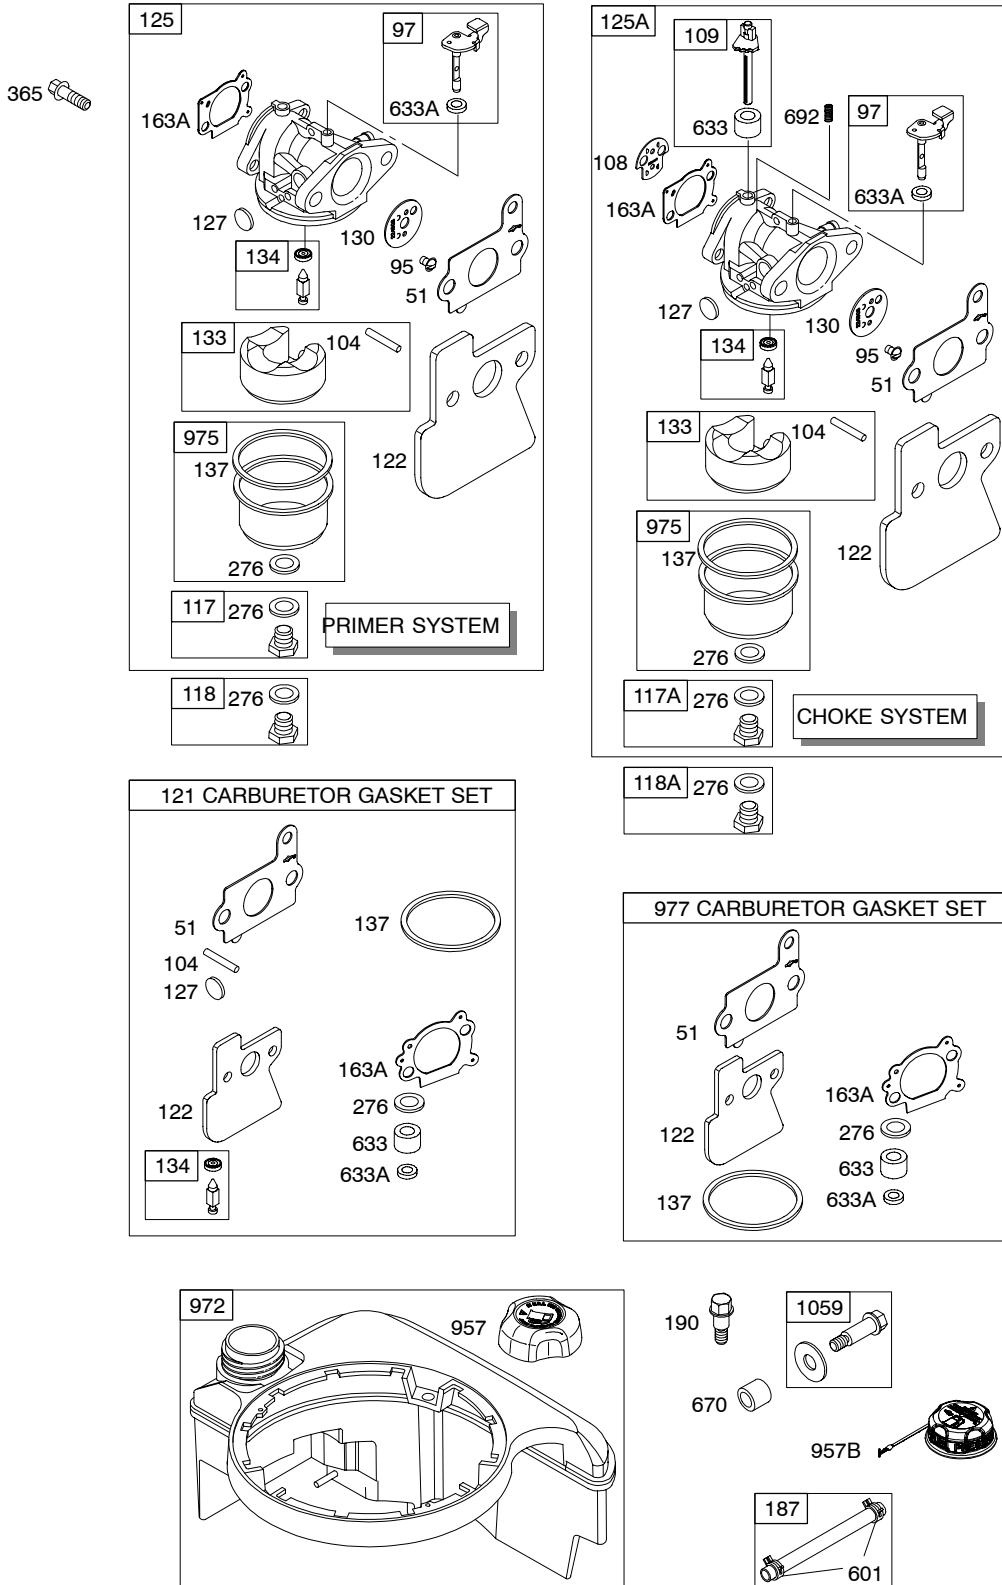


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

  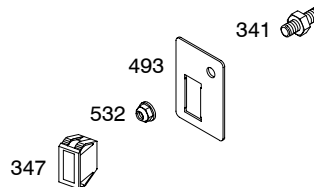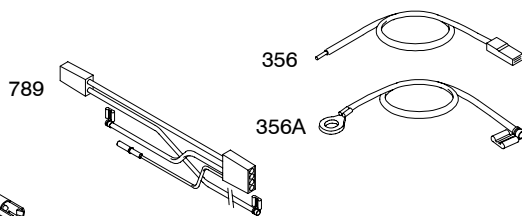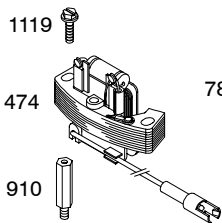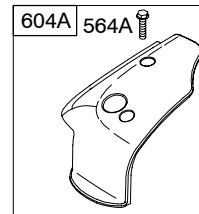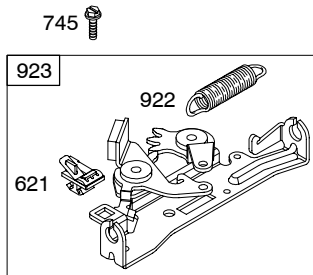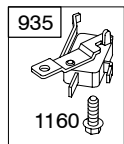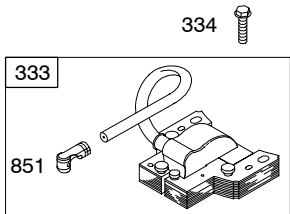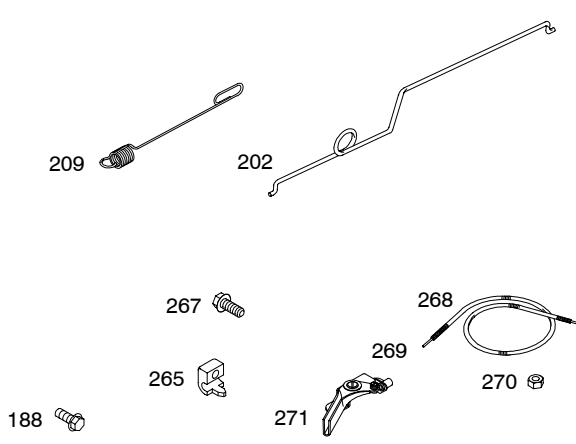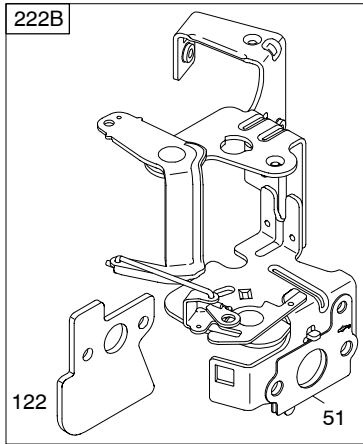


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5115-5 Assemblies include all parts shown in frames. 10/12/2005

# 127600

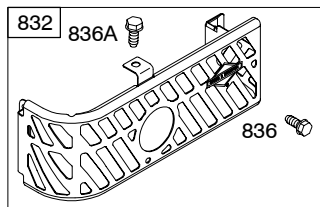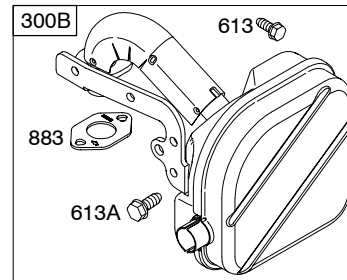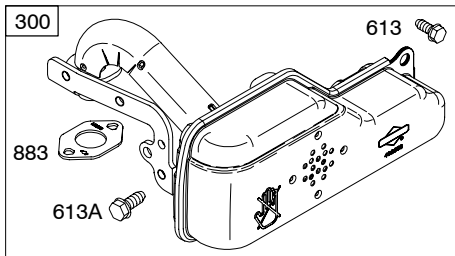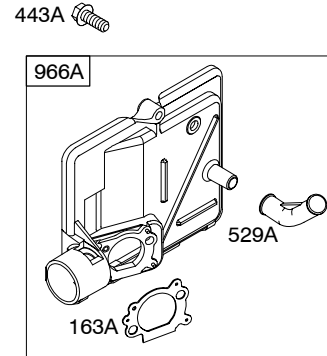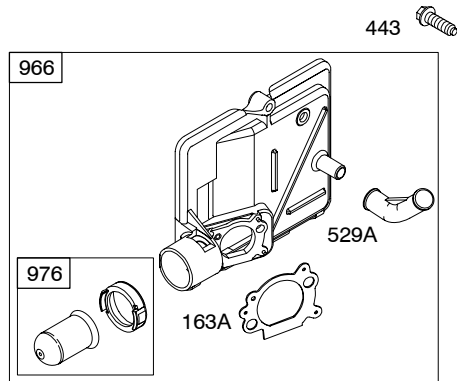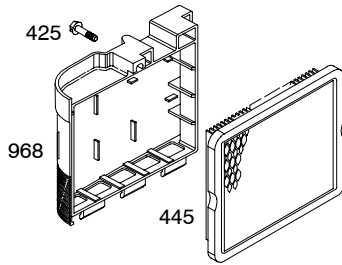

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
5115-6 Assemblies include all parts shown in frames. 10/12/2005

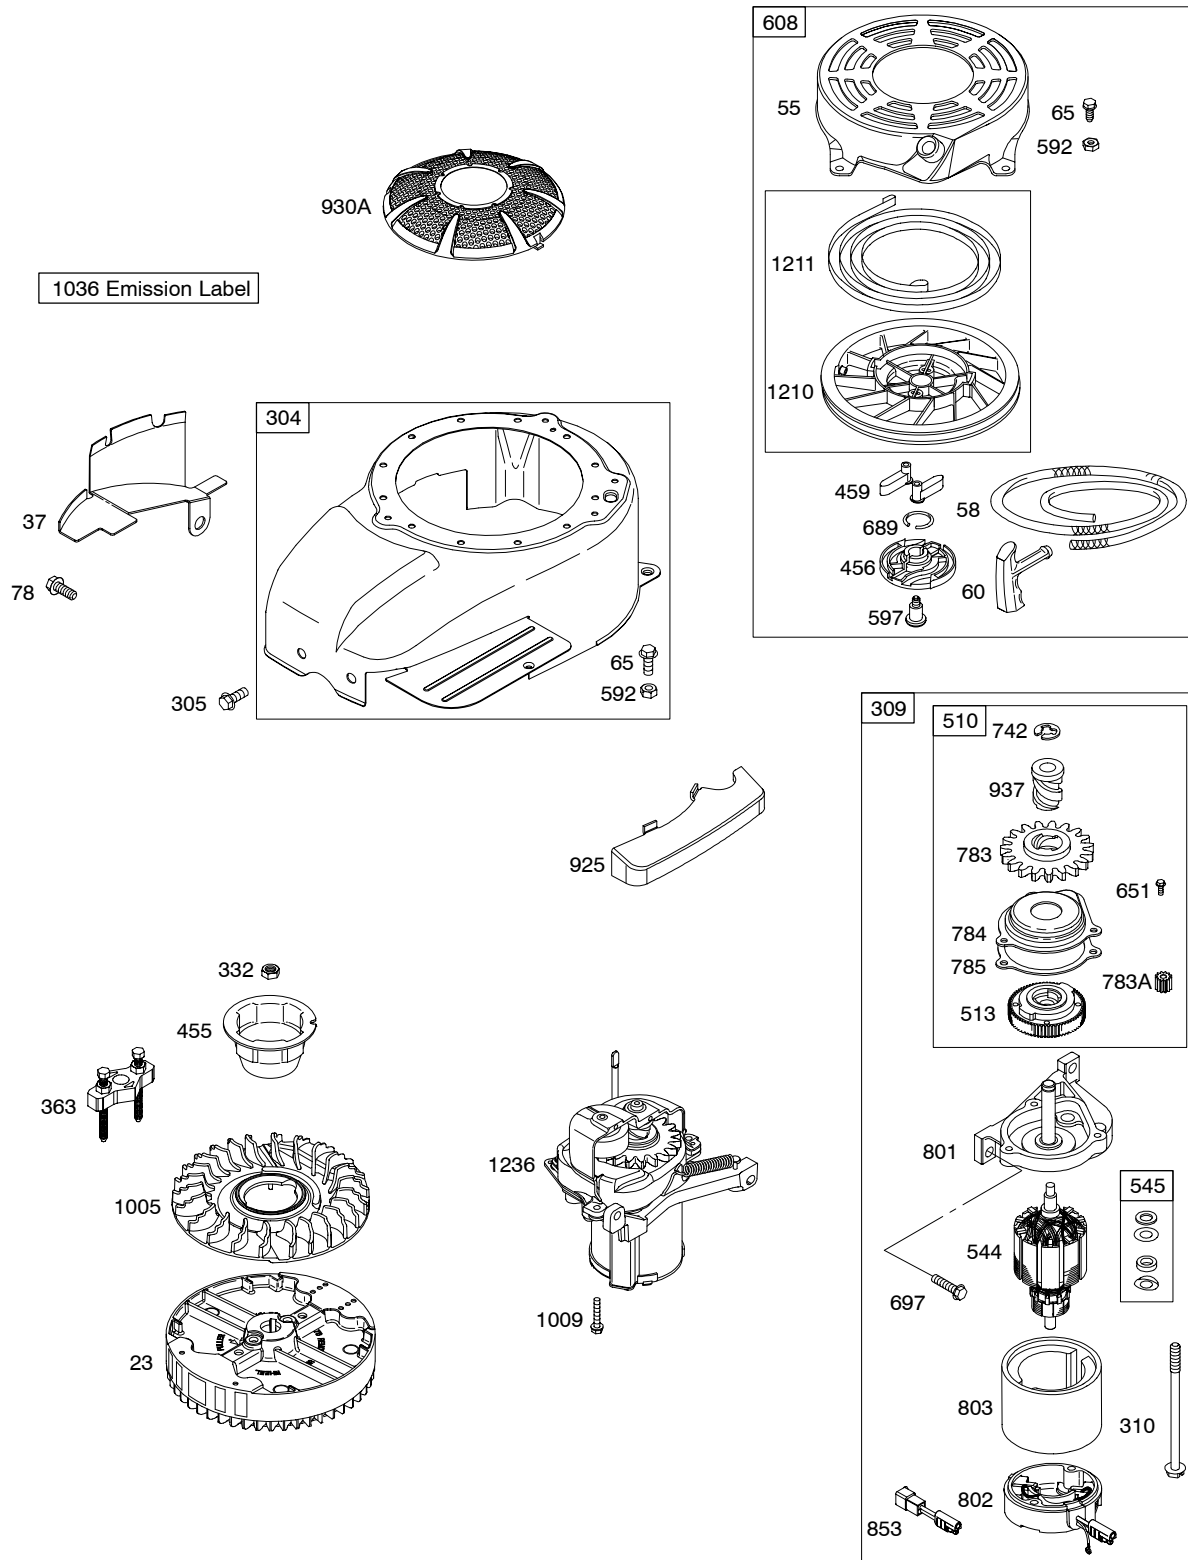

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5115-7 Assemblies include all parts shown in frames. 10/12/2005

# 127600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692670	Cylinder Assembly	25	791968	Piston Assembly (Standard) (Used After Code Date 04040400).	27	691866	Lock-Piston Pin
2	399269	Kit-Bushing/Seal (Magneto Side)				28	499423	Pin-Piston
3	★299819	Seal-Oil (Magneto Side)				29	499424	Rod-Connecting
4	493279	Sump-Engine				32	691664	Screw (Connecting Rod)
		----- <b>Note</b> -----				32A	695759	Screw (Connecting Rod)
		696294 Sump-Engine Used on Type No(s). 0325.				33	499642	Valve-Exhaust
5	695276	Head-Cylinder				34	499641	Valve-Intake
7	★△695166	Gasket-Cylinder Head				35	691304	Spring-Valve (Intake)
8	495786	Breather Assembly				36	691304	Spring-Valve (Exhaust)
9	★272481	Gasket-Breather				37	694086	Guard-Flywheel
10	691125	Screw (Breather Assembly)				40	692194	Retainer-Valve
11	499675	Tube-Breather				43	691997	Slinger-Governor/Oil
12	★692232	Gasket-Crankcase						----- <b>Note</b> -----
13	691137	Screw (Cylinder Head)						691486 Slinger-Governor/Oil Used on Type No(s). 0100.
15	691680	Plug-Oil Drain (Square Socket)				45	690977	Tappet-Valve
16	691457	Crankshaft				46	694039	Camshaft
		----- <b>Note</b> -----				51★◆△	692668	Gasket-Intake
		692803 Crankshaft Used on Type No(s). 0100.				55	691421	Housing-Rewind Starter
		692823 Crankshaft Used on Type No(s). 0331.	26	791969	Ring Set (Standard) (Used After Code Date 04040400).	58	697316	Rope-Starter (Cut To Required Length)
20	★399781	Seal-Oil (PTO Side)				60	281434	Grip-Starter Rope
22	691092	Screw (Crankcase Cover/Sump)				65	690837	Screw (Rewind Starter)
23	697610	Flywheel				78	691108	Screw (Flywheel Guard)
		----- <b>Note</b> -----				95	691636	Screw (Throttle Valve)
		697271 Flywheel Used on Type No(s). 0325.				97	499682	Shaft-Throttle (Metal)
		790116 Flywheel Used on Type No(s). 0331.						----- <b>Note</b> -----
24	222698	Key-Flywheel						790121 Shaft-Throttle (Plastic)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*



**127600**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
104	●691242	Pin-Float Hinge	187	791766	Line-Fuel (Cut to Required Length)	270	691027	Nut (Control Wire Casing)
108	691182	Valve-Choke				271	691028	Lever-Control
109	693866	Shaft-Choke				276	●271716	Washer-Sealing
117	498981	Jet-Main (Standard) (Used After Code Date 03110600).				287	690940	Screw (Dipstick Tube)
		----- <b>Note</b> -----				300	697590	Muffler-Exhaust
		498978 Jet-Main (Standard) (Used Before Code Date 03110700).				300B	699769	Muffler-Exhaust
117A	692677	Jet-Main (Standard)	188	691147	Screw (Control Bracket)	304	499676	Housing-Blower Used on Type No(s). 0100, 0331.
118	497466	Jet-Main (High Altitude) (Used After Code Date 03110600).	190	690940	Screw (Fuel Tank)			----- <b>Note</b> -----
		----- <b>Note</b> -----	192	694543	Adjuster-Rocker Arm			499677 Housing-Blower Used on Type No(s). 0249, 0369, 0406.
		498975 Jet-Main (High Altitude) (Used Before Code Date 03110700).	202	691303	Link-Mechanical Governor			695976 Housing-Blower Used on Type No(s). 0247, 0287, 0370.
118A	497315	Jet-Main (High Altitude)	209	691851	Spring-Governor			697270 Housing-Blower Used on Type No(s). 0325.
121	692703	Kit-Carburetor Overhaul						
122	◆●692799	Spacer-Carburetor				305	691108	Screw (Blower Housing)
125	790120	Carburetor				306	691232	Shield-Cylinder
125A	694505	Carburetor	222B	693897	Bracket-Control	307	690345	Screw (Cylinder Shield)
127	●694468	Plug-Welch	227	691467	Lever-Governor Control	309	695550	Motor-Starter
130	691203	Valve-Throttle	238	691300	Cap-Valve	310	692327	Bolt (Starter Motor)
		----- <b>Note</b> -----	265	690798	Clamp-Casing	332	690662	Nut (Flywheel)
		696564 Valve-Throttle (Used With Plastic Throttle Shaft)	267	691044	Screw (Casing Clamp)	333	802574	Armature-Magneto
133	398187	Float-Carburetor	268	691025	Casing-Control Wire (Cut To Required Length)	334	691061	Screw (Magneto Armature)
134	●398188	Kit-Needle/Seat	269	691026	Wire-Control (Cut To Required Length)	337	692051	Plug-Spark
137	◆693981	Gasket-Float Bowl				341	690368	Stud (Mounting Bracket)
146	690979	Key-Timing				347	691396	Switch-Rocker
163A	◆●692667	Gasket-Air Cleaner						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

5115-9

Assemblies include all parts shown in frames.

10/12/2005

# 127600

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
356	692390	Wire-Stop	564A	693808	Screw (Control Cover)	692	690572	Spring-Detent
356A	693010	Wire-Stop	584	697734	Cover-Breather Passage	697	691127	Screw (Drive Cap)
358	694090	Gasket Set-Engine	585	*691879	Gasket-Breather Passage	718	690959	Pin-Locating
363	19069	Puller-Flywheel	592	690800	Nut (Rewind Starter)	741	790345	Gear-Timing (Use Without Woodruff Key)
365	691136	Screw (Carburetor)	597	691696	Screw (Pawl Friction Plate)	----- Note -----		
383	19374	Wrench-Spark Plug	601	95162	Clamp-Hose	742	93941	Retainer-E Ring
404	690272	Washer (Governor Crank)	604A	692669	Cover-Control ----- Note -----	745	691648	Screw (Brake)
425	690670	Screw (Air Cleaner Cover)		693807	Cover-Control Used on Type No(s). 0100, 0331.	783	691918	Gear-Pinion
443	691637	Screw (Air Cleaner Primer Base)	608	497680	Starter-Rewind	783A	691269	Gear-Pinion
443A	692523	Screw (Air Cleaner Primer Base)	613	691108	Screw (Muffler)	784	692341	Cover-Starter Gear
445	491588	Filter-Air Cleaner Cartridge	613A	691140	Screw (Muffler)	785	692352	Gasket-Starter Cover
455	695161	Cup-Flywheel	615	690340	Retainer-Governor Shaft	789	696547	Harness-Wiring
456	692299	Plate-Pawl Friction	616	698801	Crank-Governor	801	690782	Cap-Drive
459	281505	Ratchet-Pawl	619	691108	Screw (Cylinder Head Plate)	802	695267	Cap-End
472	693809	Knob-Choke Bracket	621	692310	Switch-Stop	803	695266	Housing-Starter
474	691991	Alternator	633	◆693867	Seal-Choke/Throttle Shaft	830	694544	Stud-Rocker Arm
493	692877	Bracket-Mounting		633A◆691321	Seal-Choke/Throttle Shaft (Throttle Shaft)	832	691466	Guard-Muffler
505	691251	Nut (Governor Control Lever)	635	66538	Boot-Spark Plug	836	691147	Screw (Muffler Guard)
510	494147	Drive-Starter	651	691660	Screw (Starter Gear Cover)	836A	697551	Screw (Muffler Guard)
513	692358	Clutch-Drive	670	692294	Spacer-Fuel Tank	842	*691031	Seal-O Ring (Dipstick Tube)
523	499621	Dipstick	684	690345	Screw (Breather Passage Cover)	847	692047	Dipstick/Tube Assembly
524	*692296	Seal-Dipstick Tube	689	691855	Spring-Friction	851	493880	Terminal-Spark Plug
525	495265	Tube-Dipstick				853	695268	Adapter-Wire
529A	691923	Grommet				868	*Δ692044	Seal-Valve
532	692851	Nut (Mounting Bracket)				883	*Δ691893	Gasket-Exhaust
544	690786	Armature-Starter				886	696268	Gasket Set-Cylinder Head/Plate
545	492919	Washer Set (Starter Motor)				910	691094	Stud (Alternator)
562	691119	Bolt (Governor-Control Lever)				914	691108	Screw (Rocker Cover)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
922	691831	Spring-Brake Used on Type No(s). 0249, 0369, 0406. ----- <b>Note</b> ----- 692135 Spring-Brake Used on Type No(s). 0247, 0287, 0370.	968	692298	Cover-Air Cleaner	1058	276348	Manual-Owner's ----- <b>Note</b> ----- 276347 Manual- Owner's (Touch N Mow)
923	691994	Brake Used on Type No(s). 0249, 0369, 0406. ----- <b>Note</b> ----- 695891 Brake Used on Type No(s). 0247, 0287, 0370.	972	699374	Tank-Fuel (Plastic)	1059	692311	Kit-Screw/Washer ----- <b>Note</b> ----- 696293 Kit-Screw/ Washer (Touch N Mow)
925	690595	Cover-Linkage	975	493640	Bowl-Float	1095	694091	Gasket Set-Valve
930A	692675	Guard-Rewind	976	694395	Primer-Carburetor	1119	692979	Screw (Alternator)
935	499421	Switch-Interlock	977	692704	Gasket Set-Carburetor	1160	691627	Screw (Interlock Switch)
937	691325	Spline-Starter	990	695951	Key Set	1210	498144	Pulley/Spring Assembly (Pulley)
957	692046	Cap-Fuel Tank (Plastic)	993	★△694088	Gasket-Cylinder Head Plate	1211	498144	Pulley/Spring Assembly (Spring)
957B	699985	Cap-Fuel Tank (Plastic)	1005	691346	Fan-Flywheel	1236	695959	Starter-Mechanical
966	692673	Base-Air Cleaner Primer	1009	696255	Screw (Starter Motor)	1330	272147	Manual-Repair
966A	693863	Base-Air Cleaner Primer	1019	695247	Kit-Label ----- <b>Note</b> ----- 790231 Kit-Label (Touch N Mow)			
			1022	★△691890	Gasket-Rocker Cover			
			1023	499624	Cover-Rocker Arm			
			1026	692045	Rod-Push			
			1029	691230	Arm-Rocker			
			1034	691343	Guide-Push Rod			
			1036		Label-Emission (Available From An Authorized Briggs & Statton Sevice Dealer)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*