



Illustrated Parts List

Model Series

212400

TYPE NUMBERS
0036 thru 0120.

TABLE OF CONTENTS

Air Cleaner	5
Blower Housing/Shrouds	7
Cams	2
Carburetor #1	4
Controls	7
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder	2
Flywheel	6
Fuel Tank	8
Governor Spring	7
Head/Valves	3
Kit/Gasket Sets-Carburetor	4
Kit/Gasket Sets-Engine	2
Kit/Gasket Sets-Valve	3
Muffler	5
Oil	2
Piston Group	2
Rewind	6


BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

212400

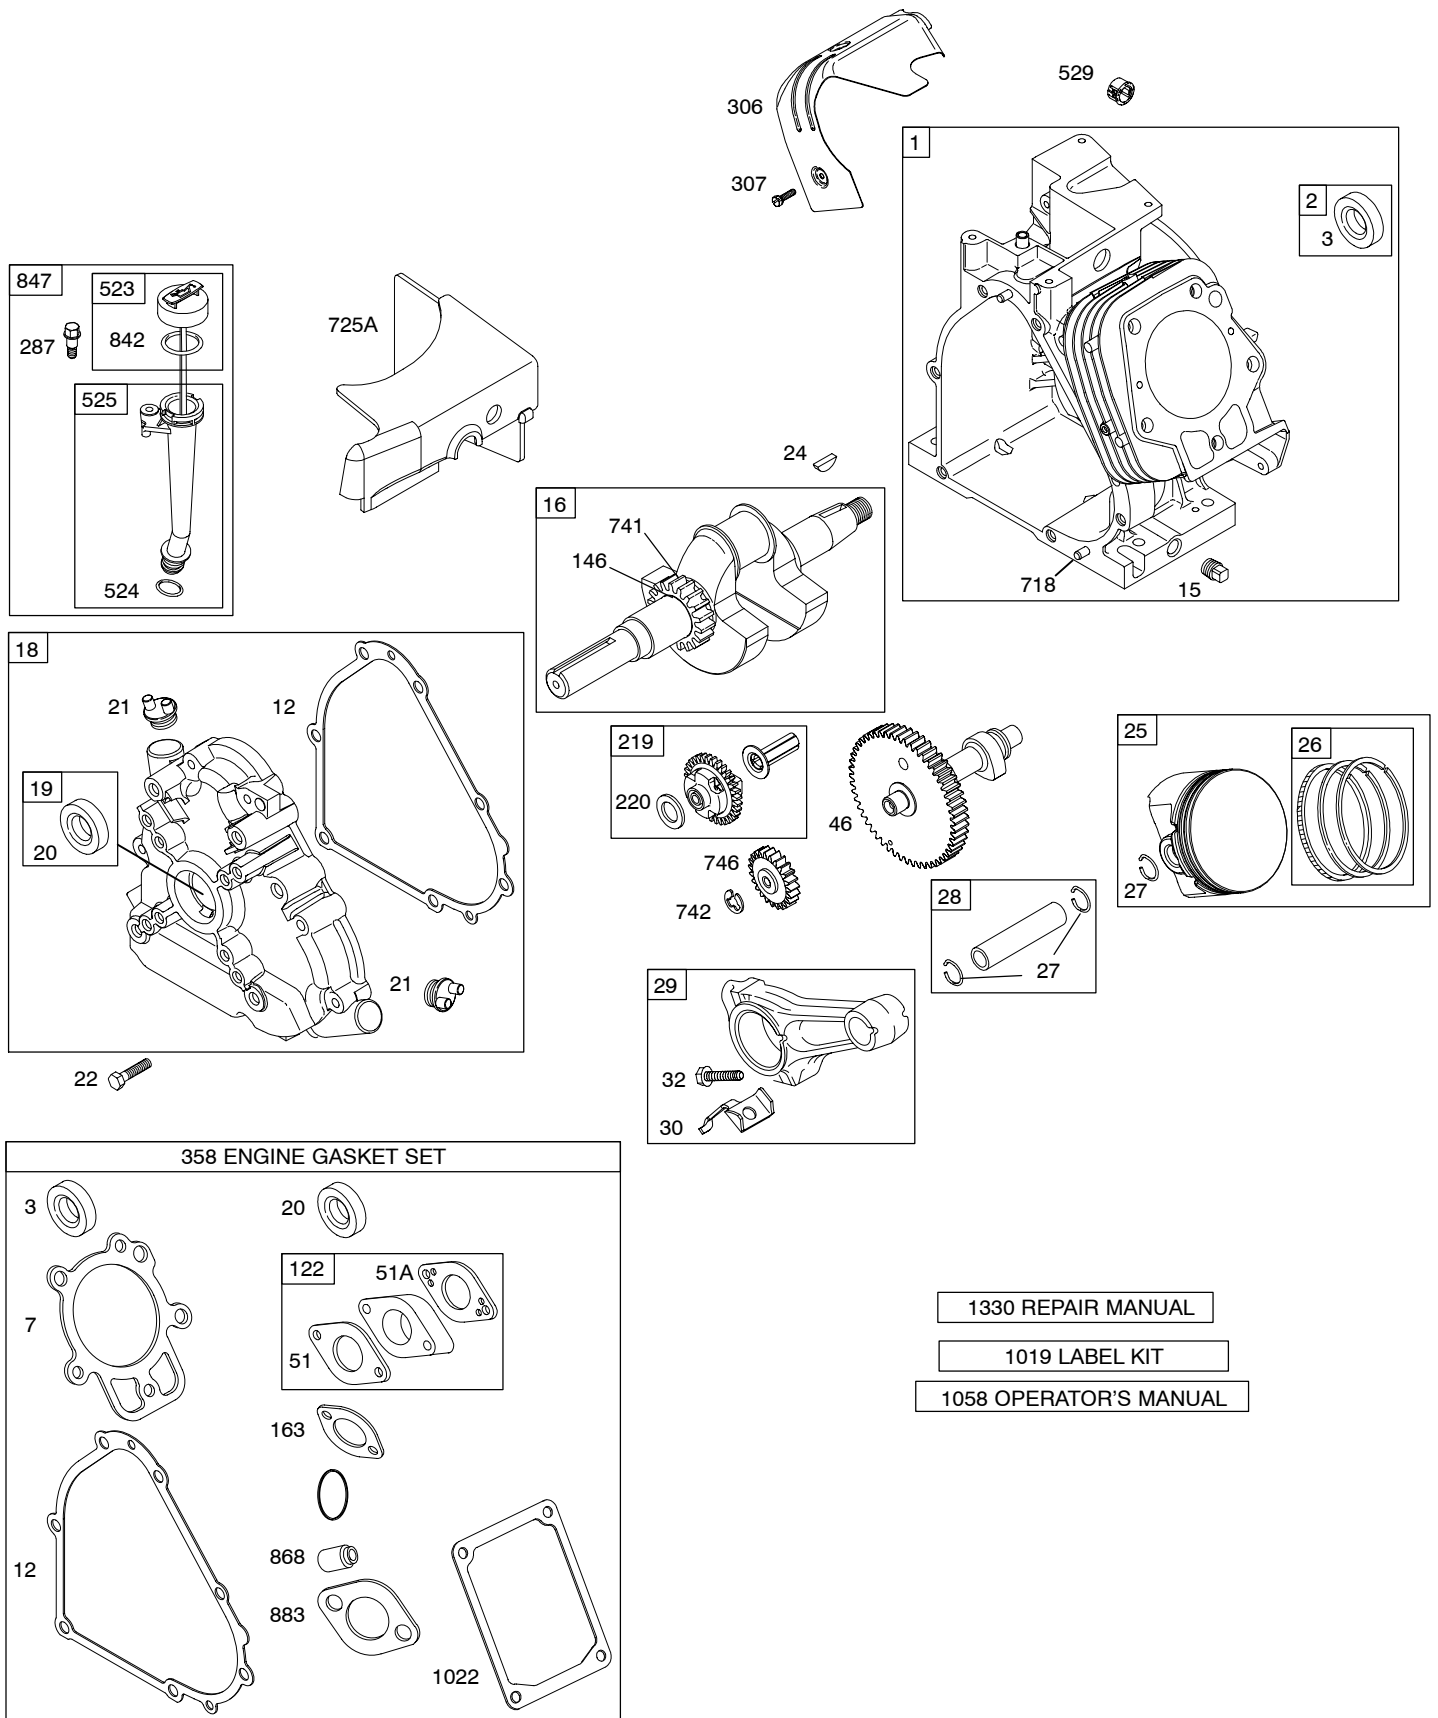


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5854-2

Assemblies include all parts shown in frames.

09/14/2005

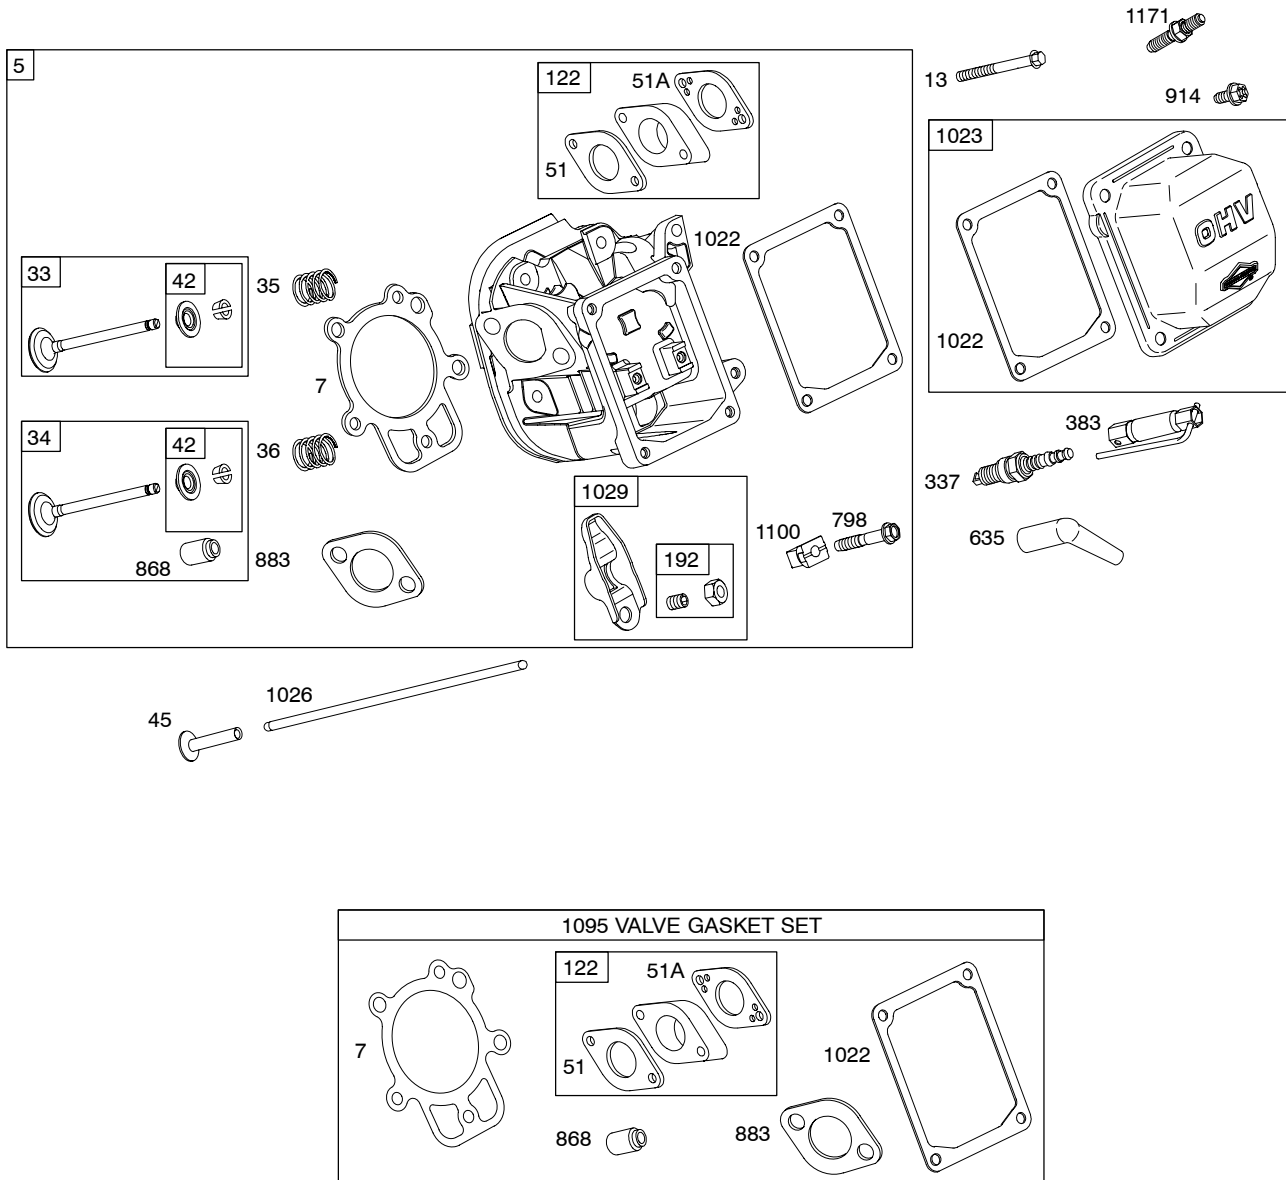





Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.


5854-3

Assemblies include all parts shown in frames.

09/14/2005

212400

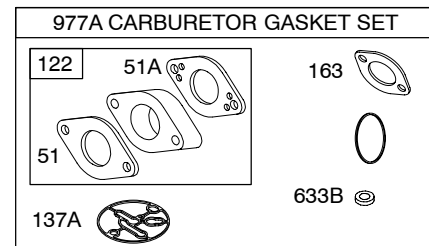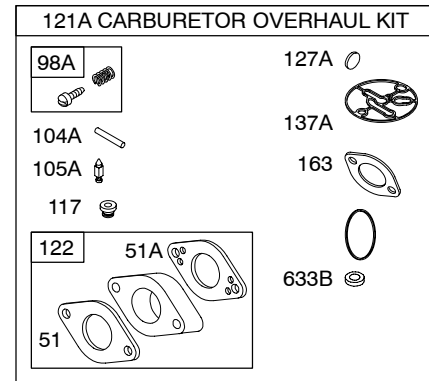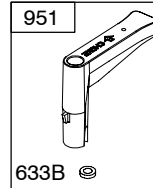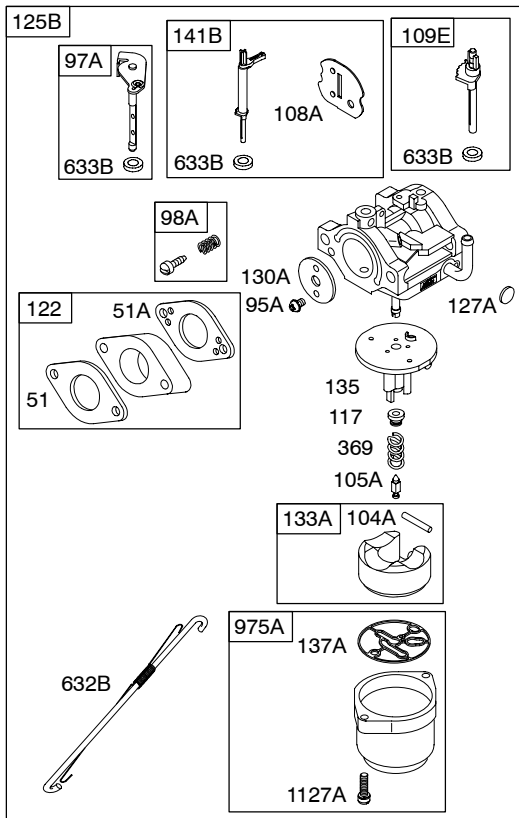

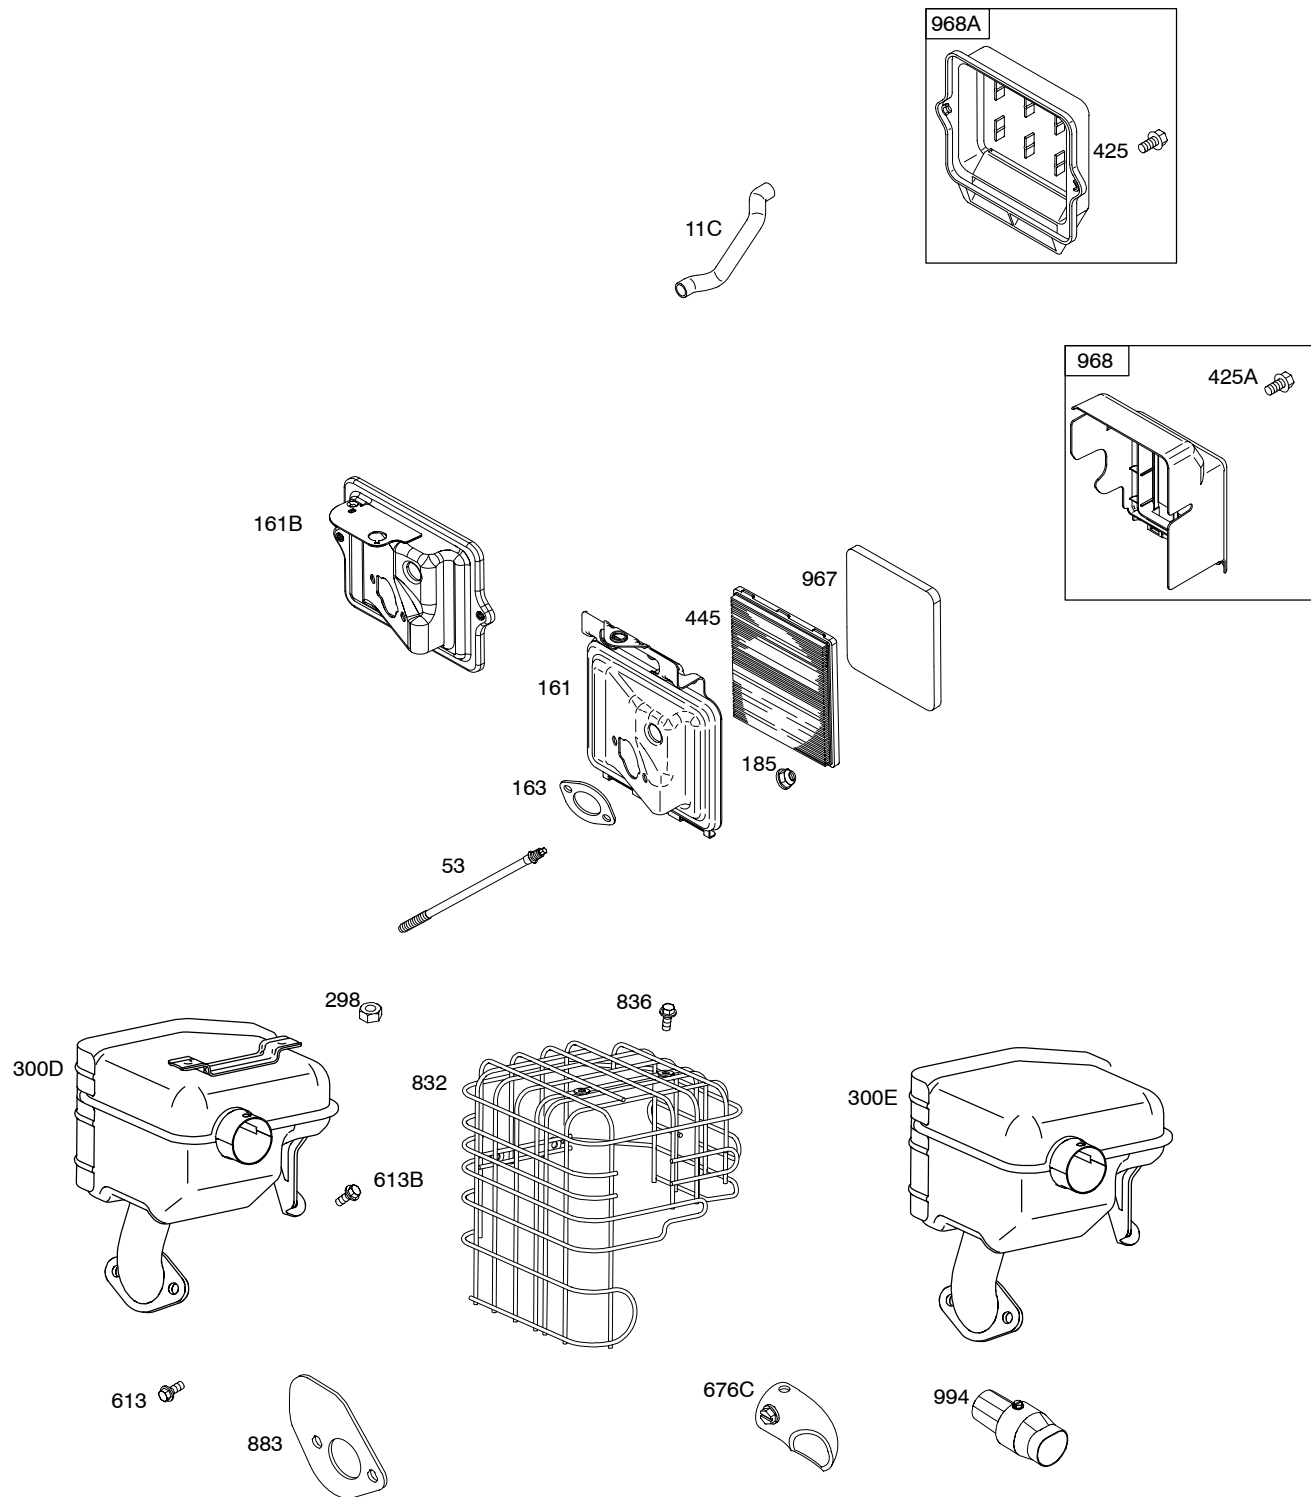

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.



5854-5

Assemblies include all parts shown in frames.


09/14/2005

212400

1036 EMISSION LABEL

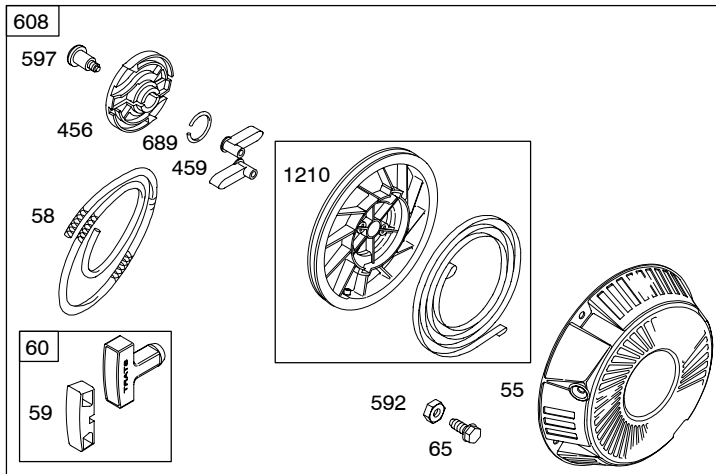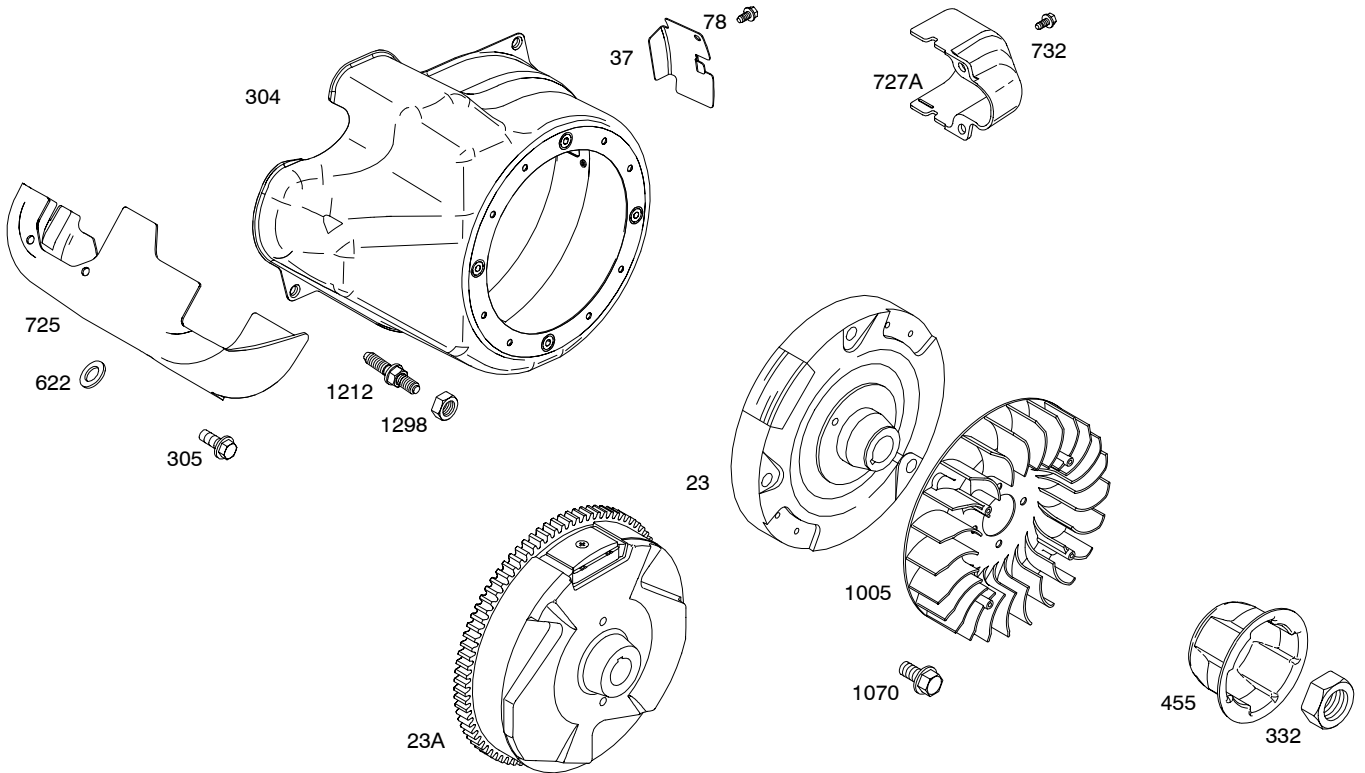

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
5854-6 Assemblies include all parts shown in frames. **09/14/2005**

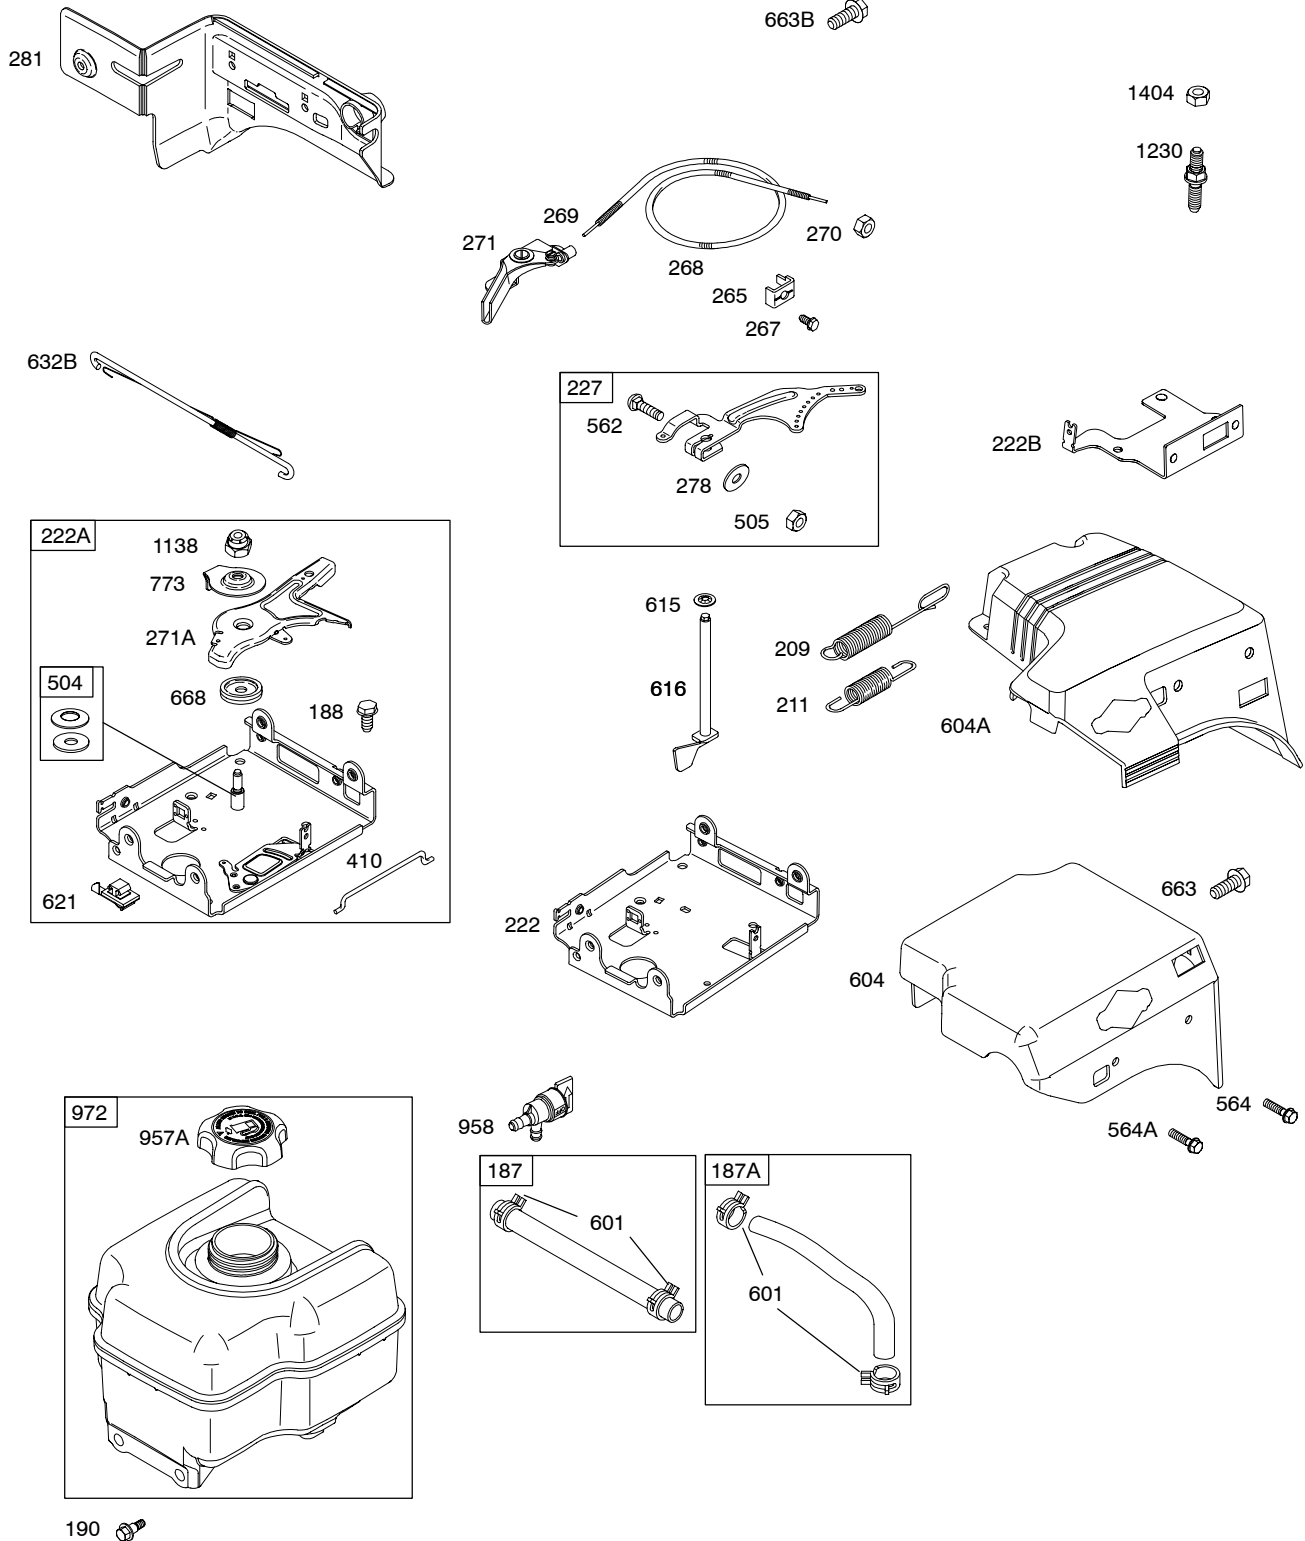


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5854-7

Assemblies include all parts shown in frames.

09/14/2005

212400

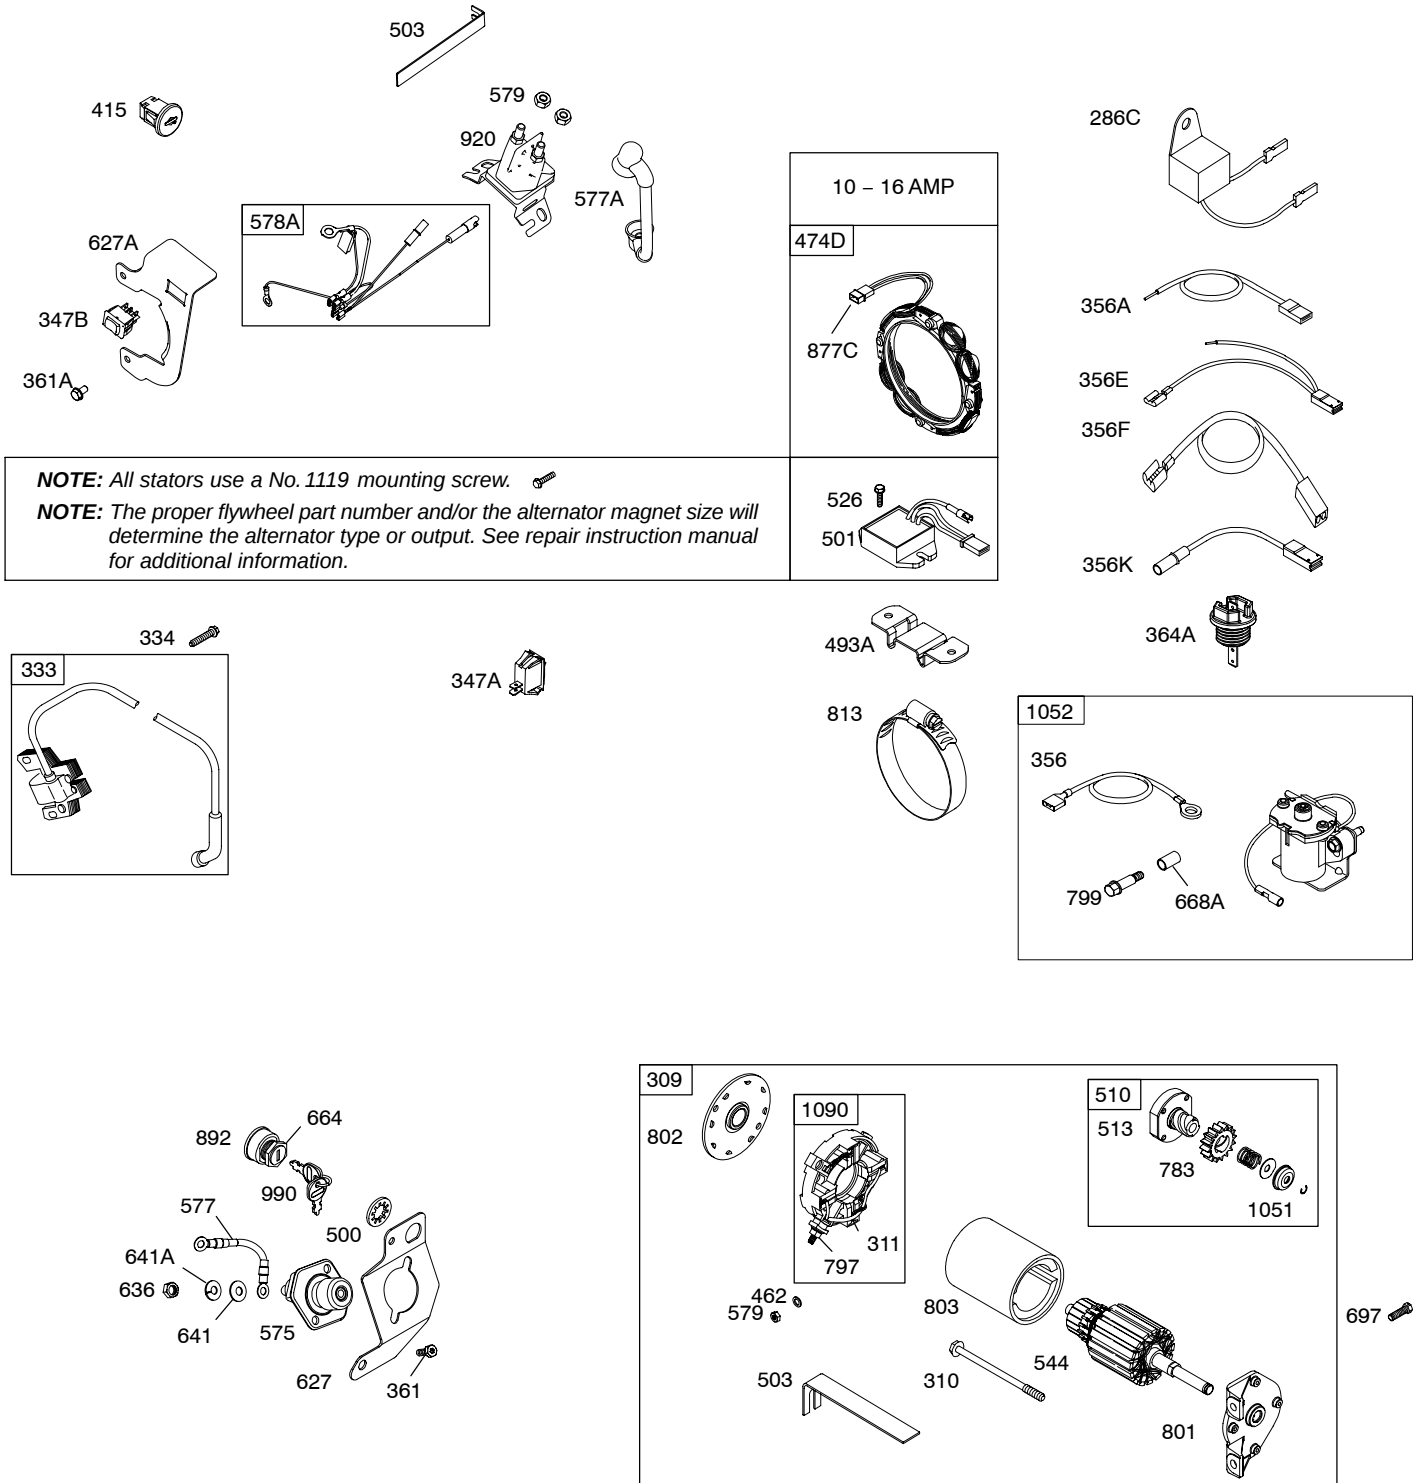

024847113938

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.

5854-8

Assemblies include all parts shown in frames.

09/14/2005

212400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	790038	Cylinder Assembly	26	697692	Ring Set (Standard)	121A	696146	Kit-Carburetor Overhaul (Nikki Carburetor)
2	698340	Kit-Bushing/Seal (Magneto Side)			----- Note -----			
3	★391086	Seal-Oil (Magneto Side)		697698	Ring Set (.020" Oversize)	122★△◆694876		Spacer-Carburetor
5	697233	Head-Cylinder	27	690975	Lock-Piston Pin	125B	695919	Carburetor
7	★△697690	Gasket-Cylinder Head	28	696581	Pin-Piston			----- Note -----
11C	696796	Tube-Breather	29	694691	Rod-Connecting		699966	Carburetor
12	694953	Gasket-Crankcase	30	694692	Dipper-Connecting Rod			Used on Type No(s). 0041, 0070, 0112, 0115, 0116.
13	690360	Screw (Cylinder Head)	32	690976	Screw (Connecting Rod)	127A	690727	Plug-Welch
15	691686	Plug-Oil Drain	33	499596	Valve-Exhaust	130A	696139	Valve-Throttle
16	695462	Crankshaft	34	697464	Valve-Intake	133A	694914	Float-Carburetor
		----- Note -----	35	694865	Spring-Valve (Intake)	135	696142	Tube-Fuel Transfer
	695369	Crankshaft Used on Type No(s). 0041, 0100, 0112, 0116, 0117, 0118, 0119, 0120.	36	694865	Spring-Valve (Exhaust)	137A	◆◆695426	Gasket-Float Bowl
	694678	Crankshaft Used on Type No(s). 0070, 0115.	37	790730	Guard-Flywheel	141B	696145	Kit-Choke Shaft
18	791965	Cover-Crankcase	42	499586	Keeper-Valve	146	690979	Key-Timing
		----- Note -----	45	690977	Tappet-Valve	161	695384	Base-Air Cleaner (Metal)
	791412	Cover- Crankcase (Ball Bearing Cover)	46	790958	Camshaft	161B	699960	Base-Air Cleaner (Metal)
19	698340	Kit-Bushing/Seal (PTO Side)	51★△◆694874		Gasket-Intake	163◆★◆692277		Gasket-Air Cleaner
20	391086	Seal-Oil (PTO Side)	51A◆★△◆694875		Gasket-Intake	185	690958	Nut (Air Cleaner Base)
21	281658	Cap-Oil Fill	53	694869	Stud (Carburetor)	187	791766	Line-Fuel (Cut To Required Length) (Used After Code Date 05070100)
22	695174	Screw (Crankcase Cover/Sump)	55	695288	Housing-Rewind Starter			----- Note -----
23	694954	Flywheel	58	693389	Rope-Starter		691050	Line-Fuel (Cut To Required Length) (Used Before Code Date 05063000)
23A	695485	Flywheel (Electric Start)	59	805957	Insert-Grip	187A	791869	Line-Fuel (Used After Code Date 05070100)
		----- Note -----	60	490652	Grip-Starter Rope			----- Note -----
	790116	Flywheel Used on Type No(s). 0070, 0115.	65	690837	Screw (Rewind Starter)		695429	Line-Fuel (Used Before Code Date 05063000)
24	222698	Key-Flywheel	78	690372	Screw (Flywheel Guard)	188	690877	Screw (Control Bracket)
25	790041	Piston Assembly (Standard)	95A	690718	Screw (Throttle Valve)	190	692127	Screw (Fuel Tank)
		----- Note -----	97A	696387	Shaft-Throttle	192	690083	Adjuster-Rocker Arm
	791435	Piston Assembly (.020" Oversize)	98A	695408	Kit-Idle Speed			
			104A	694918	Pin-Float Hinge			
			105A	696136	Valve-Float Needle			
			108A	696143	Valve-Choke			
			109E	696735	Shaft-Choke			
			117	696134	Jet-Main (Standard)			
			118	696135	Jet-Main (High Altitude)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5854-9**

Assemblies include all parts shown in frames.

09/14/2005

212400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	694867	Spring-Governor ----- Note ----- 696638 Spring-Governor Used on Type No(s). 0116.	305	691108	Screw (Blower Housing)	459	281505	Pawl-Ratchet
211	695307	Spring-Governed Idle	306	697240	Shield-Cylinder	462	691261	Washer (Starter Cable)
219	693578	Gear-Governor	307	691660	Screw (Cylinder Shield)	474D	695466	Alternator Used on Type No(s). 0041, 0112, 0116, 0117, 0118, 0119, 0120.
220	691724	Washer (Governor Gear)	309	695479	Motor-Starter	493A	691177	Bracket-Mounting
222	694866	Bracket-Control Used on Type No(s). 0070.	310	690323	Screw (Starter Motor)	500	691086	Washer (Key Switch)
222A	695380	Bracket-Control	311	497608	Brush Set	501	691185	Regulator Used on Type No(s). 0041, 0112, 0116, 0117, 0118, 0119, 0120.
222B	791753	Bracket-Control	332	694685	Nut (Flywheel)	503	691532	Strap-Starter
227	694864	Lever-Governor Control	333	715231	Armature-Magneto	504	695383	Washer Set-Friction
265	691024	Clamp-Casing	334	691061	Screw (Magneto Armature)	505	691251	Nut (Governor Control Lever)
267	692577	Screw (Casing Clamp)	337	491055	Plug-Spark	510	693699	Drive-Starter
268	691025	Casing-Control Wire	347A	697854	Switch-Rocker	513	692024	Clutch-Drive
269	691026	Wire-Control	347B	790949	Switch-Rocker	523	695344	Dipstick
270	691027	Nut (Control Wire Casing)	356	692603	Wire-Stop	524	691876	Seal-Dipstick Tube
271	691028	Lever-Control	356A	692390	Wire-Stop Used on Type No(s). 0036, 0041, 0100.	525	695343	Tube-Dipstick
271A	695381	Lever-Control	356E	696328	Wire-Stop Used on Type No(s). 0041.	526	690297	Screw (Regulator)
278	792008	Washer (Governor Control Lever)	356F	696482	Wire-Stop Used on Type No(s). 0070, 0113, 0115, 0117, 0118, 0119, 0120.	529	791822	Grommet
281	697268	Panel-Control	356K	694372	Wire-Stop Used on Type No(s). 0041.	544	692034	Armature-Starter
286C	699951	Module-Oil Sensor Used on Type No(s). 0112, 0115, 0116, 0117, 0118, 0119, 0120. ----- Note ----- 699952 Module-Oil Sensor Used on Type No(s). 0041.	358	695438	Gasket Set-Engine	562	691119	Bolt (Governor Control Lever)
287	691693	Screw (Dipstick Tube)	361	691681	Screw (Starting Switch)	564	692577	Screw (Control Cover)
298	696757	Locknut-Muffler/Elbow	361A	690297	Screw (Starting Switch)	564A	692198	Screw (Control Cover)
300D	791407	Muffler	364A	699947	Terminal-Oil Plug	575	692303	Switch-Starting
300E	790729	Muffler	369	695422	Spring-Float Bowl	577	690630	Cable-Starter
304	697250	Housing-Blower (Black) ----- Note ----- 697267 Housing-Blower (Electric Start)	383	19374	Wrench-Spark Plug	577A	690795	Cable-Starter
			410	695382	Link-Control	578A	790948	Wire Assembly
			415	691363	Plug	579	691029	Nut (Starter Cable)
			425	790043	Screw (Air Cleaner Cover)	592	690800	Nut (Rewind Starter)
			425A	694515	Screw (Air Cleaner Cover)	597	691696	Screw (Pawl Friction Plate)
			445	491588	Filter-Air Cleaner Cartridge	601	95162	Clamp-Hose
			455	694683	Cup-Flywheel	604	697326	Cover-Control
			456	692299	Plate-Pawl Friction	604A	791752	Cover-Control
						608	695287	Starter-Rewind

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5854-10**

Assemblies include all parts shown in frames.

09/14/2005

212400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
613	696705	Screw (Muffler)	741	691288	Gear-Timing	972	694260	Tank-Fuel (Plastic)
613B	695312	Screw (Muffler)	742	692564	Retainer-E Ring	975A	696138	Bowl-Float
615	694676	Retainer-Governor Shaft	746	694679	Gear-Idler	977A	696147	Gasket Set-Carburetor (Use With Nikki Carburetor)
616	694675	Crank-Governor	773	694258	Retainer	990	691959	Key Set
621	692310	Switch-Stop	783	693713	Gear-Pinion	994	790153	Arrestor-Spark
622	698839	Washer (Heat Shield)	797	693167	Nut (Brush Retainer)	1005	694684	Fan-Flywheel
627	696064	Bracket-Stopswitch	798	697890	Screw (Rocker Arm)	1019	695442	Kit-Label
627A	790952	Bracket-Stopswitch	799	690297	Screw (Oil Sensor)	1022	★△690971	Gasket-Rocker Cover
632B	695917	Spring/Link-Mechanical Governor (Use With Nikki Carburetor)	801	694482	Cap-Drive	1023	697691	Cover-Rocker
633B	◆690998	Seal-Choke/Throttle Shaft	802	691286	Cap-End	1026	695177	Rod-Push
635	710901	Boot-Spark Plug	803	693757	Housing-Starter	1029	690972	Arm-Rocker
636	691029	Nut (Starting Switch)	813	690635	Clamp	1036	790466	Label-Emissions
641	691075	Washer (Starting Switch)	832	791408	Guard-Muffler	1051	691265	Ring-Retaining
641A	690282	Washer (Starting Switch)	836	691003	Screw (Muffler Guard)	1052	790274	Sensor-Oil Used on Type No(s). 0041, 0112, 0115, 0116, 0117, 0118, 0119, 0120.
663	691125	Screw (Control Panel) Used on Type No(s). 0115.	842	691031	Seal-O Ring (Dipstick Tube)	1058	276355	Operator's Manual
663B	◆692577	Screw (Control Panel)	847	695342	Dipstick/Tube Assembly	1070	690364	Screw (Flywheel Fan)
664	691087	Nut (Key Switch)	868	★△690968	Seal-Valve	1090	691293	Retainer-Brush
668	694257	Spacer (Control Bracket)	877C	399916	Wire/Connector-Alternator	1095	695440	Gasket Set-Valve
668A	693604	Spacer	883	★△697255	Gasket-Exhaust	1100	690973	Pivot-Rocker Arm
676C	697816	Deflector-Muffler	892	392833	Switch-Key	1119	691183	Screw (Alternator)
689	691855	Spring-Friction	914	693732	Screw (Rocker Cover)	1127A	695407	Screw (Float Bowl)
697	690372	Screw (Drive Cap)	920	691656	Solenoid-Starter	1138	694255	Nut (Control Bracket)
718	690959	Pin-Locating	951	699961	Lever-Choke	1171	696754	Stud (Rocker Cover)
725	791158	Shield-Heat ----- Note ----- 792260 Shield-Heat Used on Type No(s). 0070, 0115.	957A	694261	Cap-Fuel Tank (Plastic)	1210	498144	Pulley/Spring Assembly (Pulley)
725A	698837	Shield-Heat	958	698180	Valve-Fuel Shut Off (Plastic)	1212	791754	Stud (Blower Housing)
727A	697465	Cover-Starter Drive	967	491435	Filter-Pre Cleaner	1230	791754	Stud (Control Bracket)
732	691097	Screw (Starter Drive Cover)	968	692321	Cover-Air Cleaner Used on Type No(s). 0041, 0070, 0112, 0115, 0116. ----- Note ----- 790959 Cover-Air Cleaner Used on Type No(s). 0117, 0118, 0119, 0120.	1298	696757	Nut (Heat Shield)
			968A	697061	Cover-Air Cleaner	1330	272147	Repair Manual
						1404	696757	Nut (Control Cover)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**5854-11**

Assemblies include all parts shown in frames.

09/14/2005