

286700

Illustrated Parts List

Model Series

286700

TYPE NUMBERS
0102 through 4529.

TABLE OF CONTENTS


Air Cleaner	4
Alternator	8
Blower Housing/Shrouds	7
Cams	2
Carburetor	3
Controls	5
Crankcase Cover/Sump	2
Crankshaft	2
Cylinder	2
Electric Starter	9
Flywheel	6
Fuel Tank	5
Governor Spring	5
Head	2
Ignition	8
Kits/Gaskets-Carburetor	3
Kits/Gaskets-Engine	2
Kits/Gaskets-Valve	2
Muffler	4
Oil	2
Piston Group	2
Rewind	6
Valves	2

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION
 All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.






286700

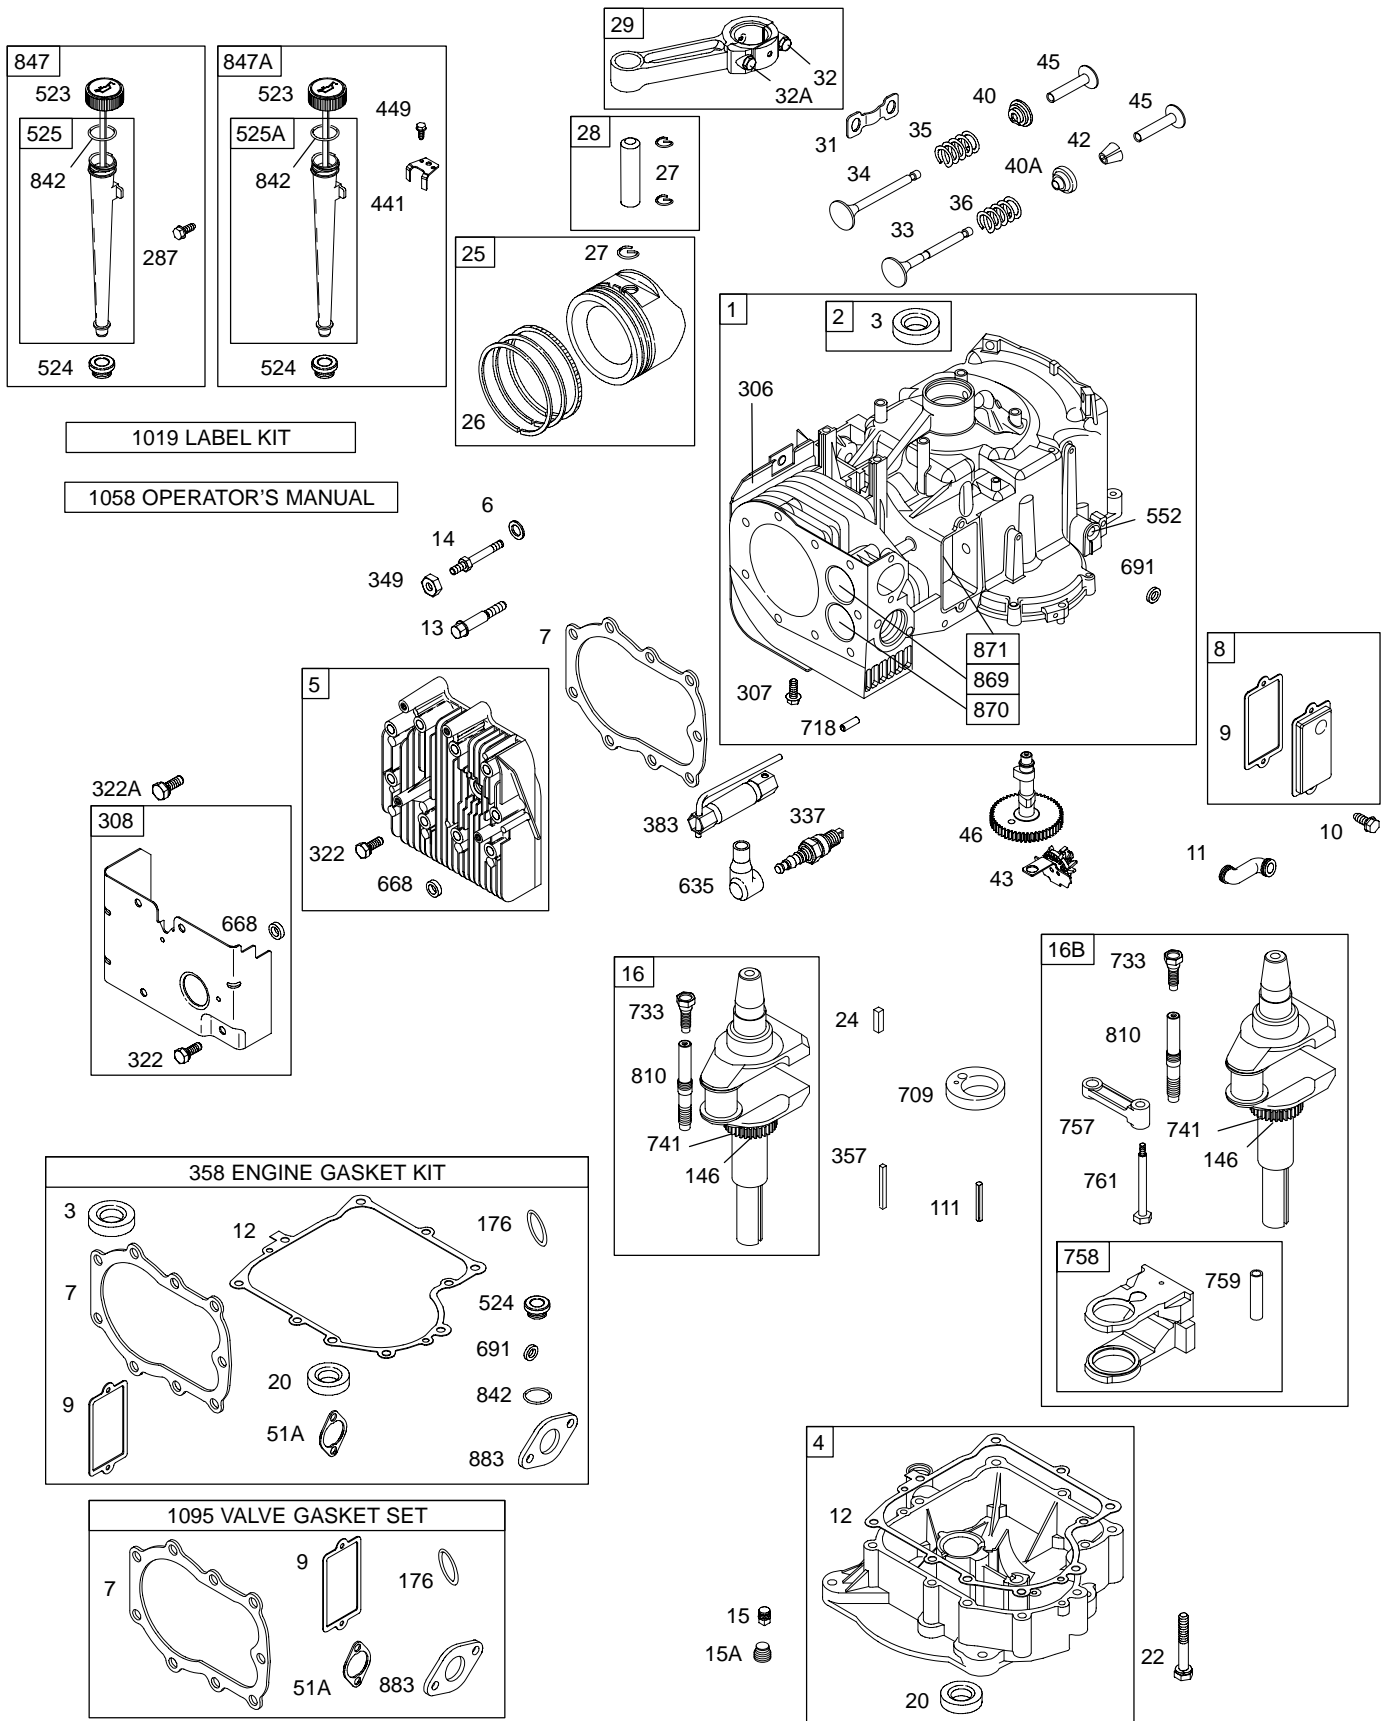

NIKKI

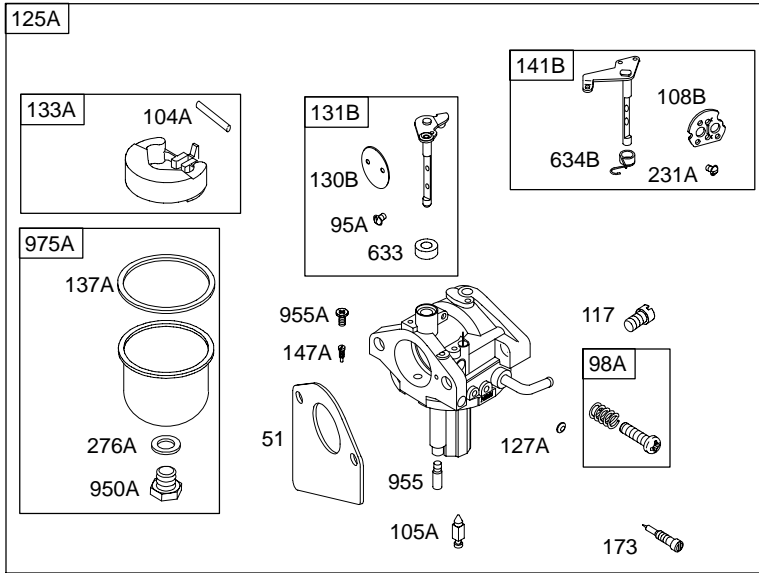


WALBRO

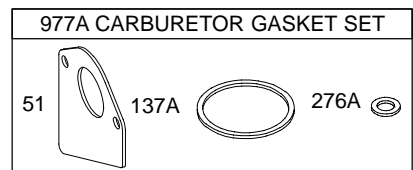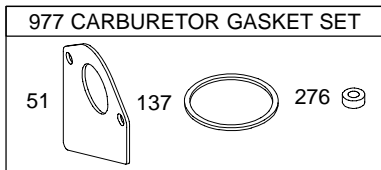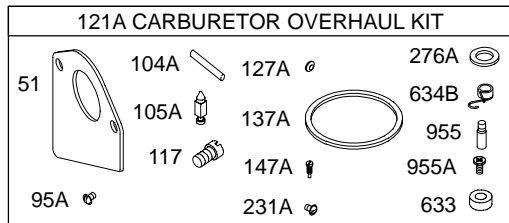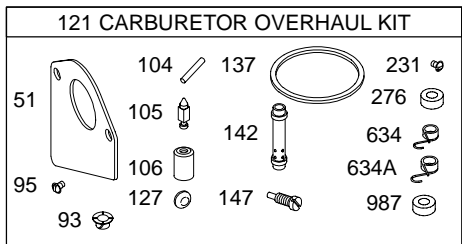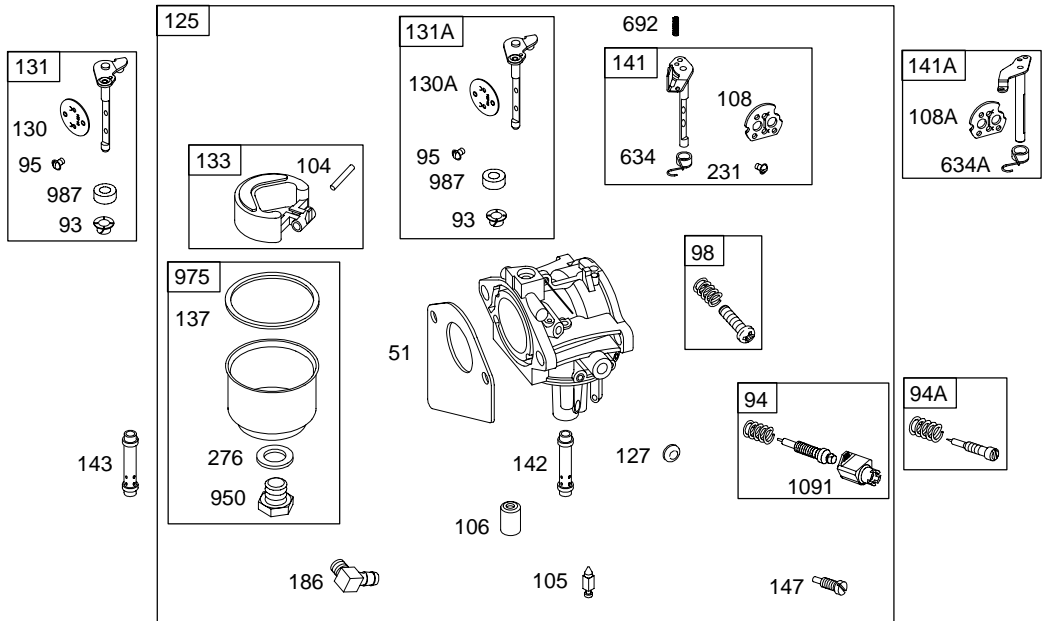


WALBRO








NIKKI





286700

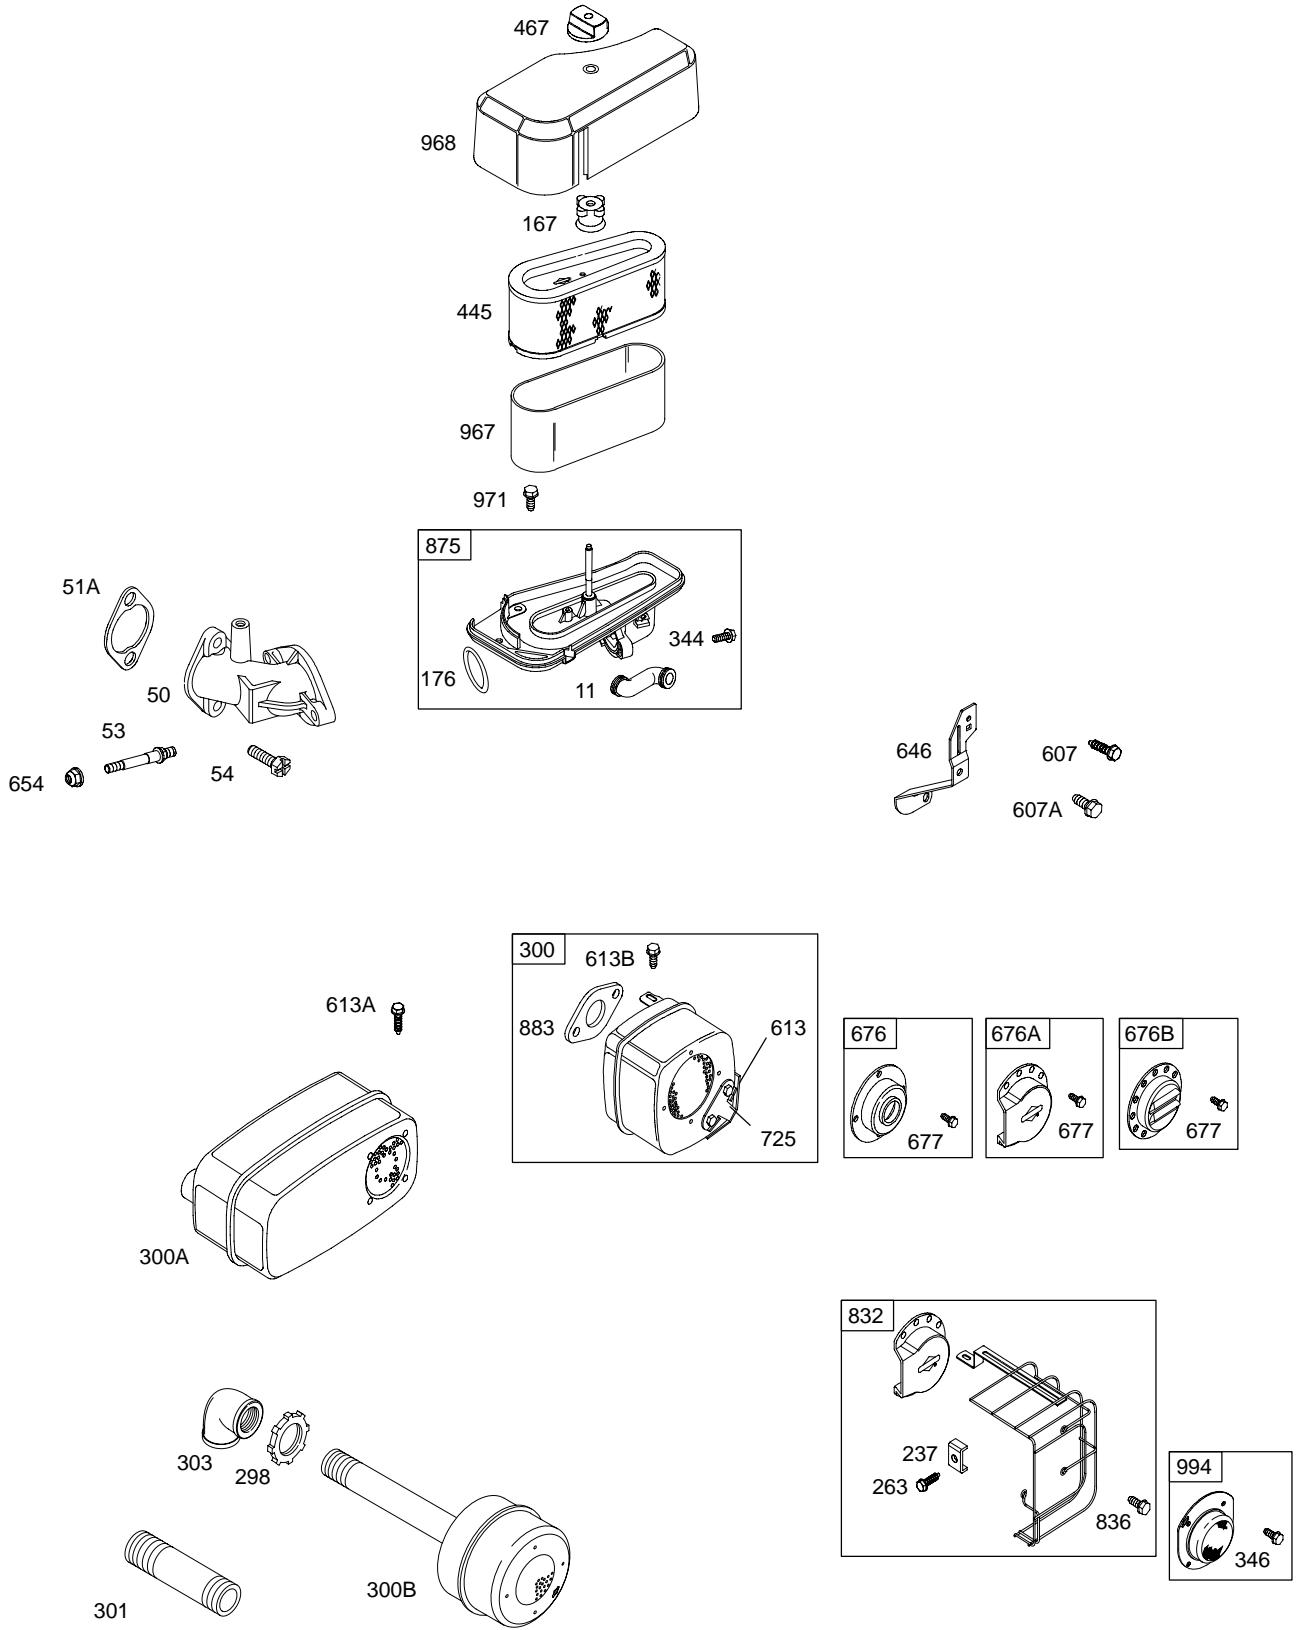

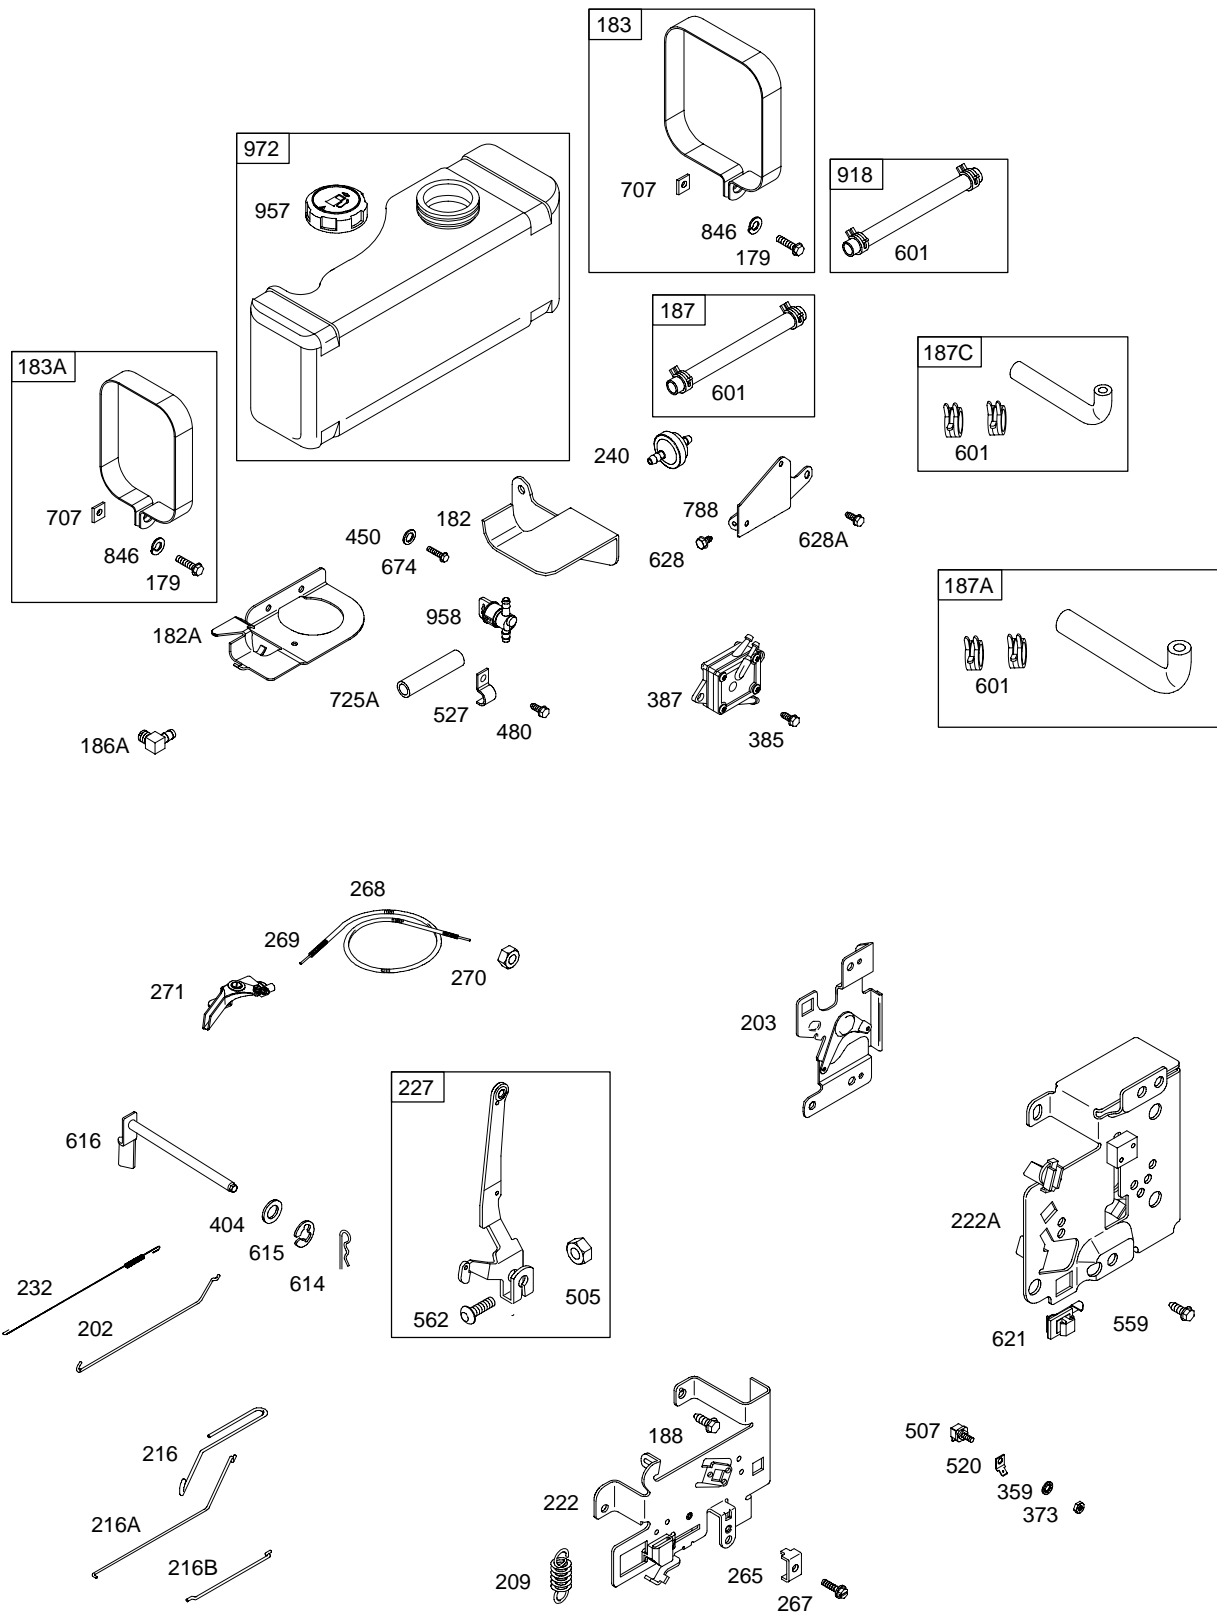


286700

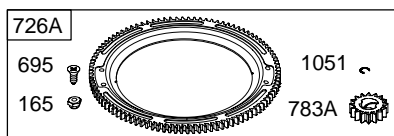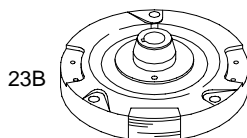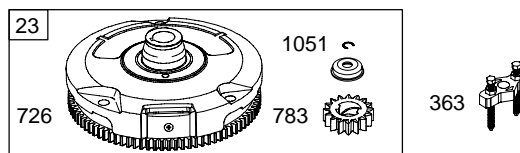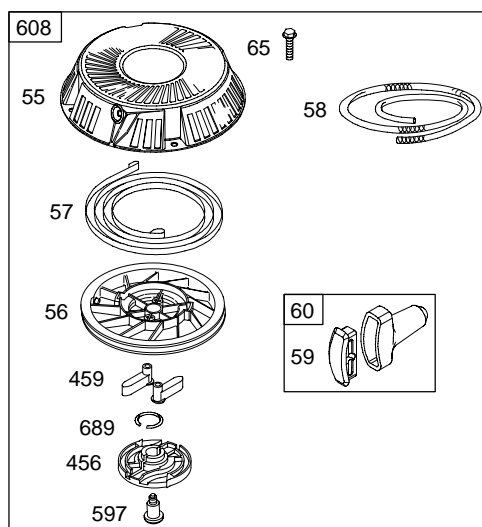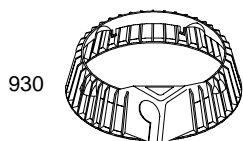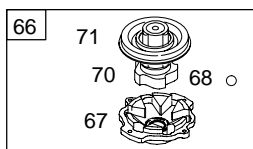
 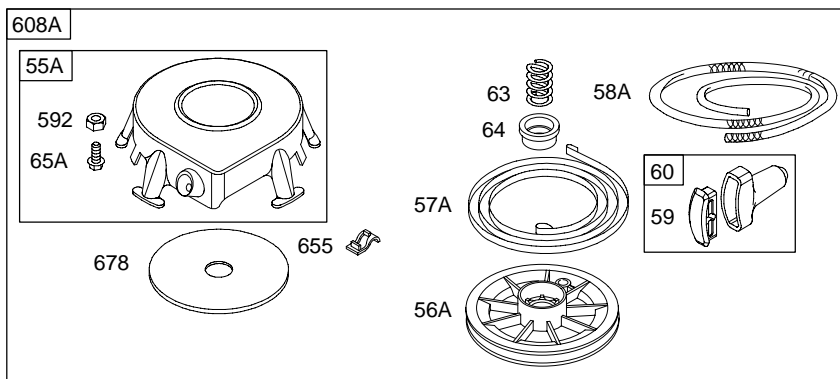

 

 

 


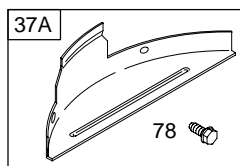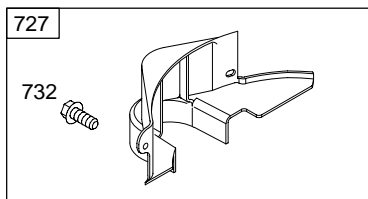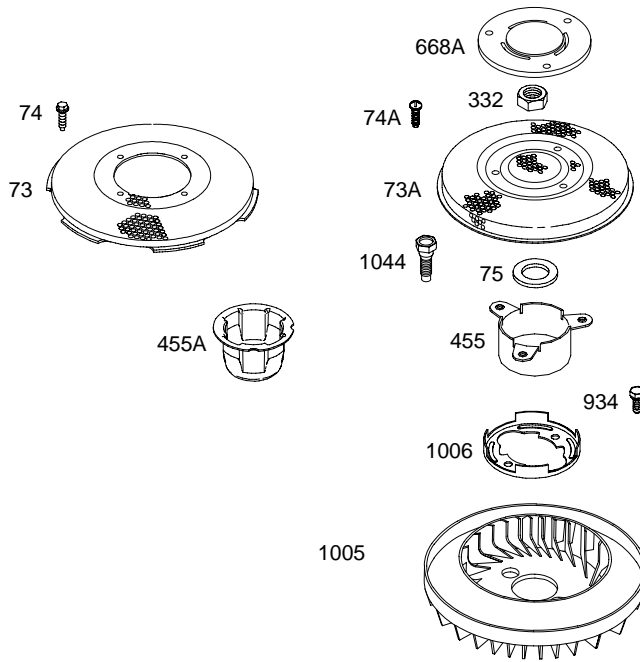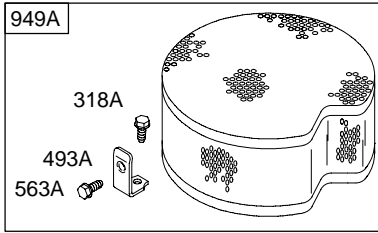



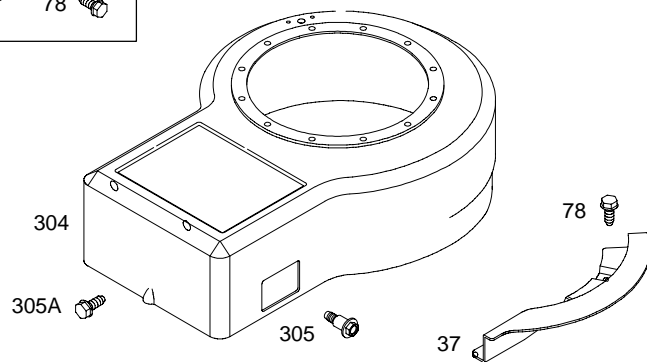



 
 
 

 
 
 
1036 EMISSIONS LABEL


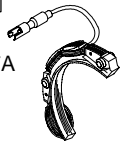



286700

DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	10/16 AMP
474  877A  1059	474A  877  1059	474B  877B  1059	474C  877C  1059
578 	878 	878A 	578 

NOTE: ALL OLD STYLE STATORS USE REFERENCE NUMBER 119 MOUNTING SCREW

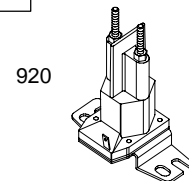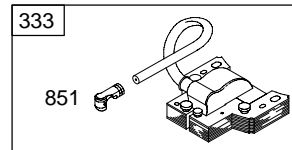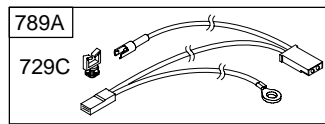

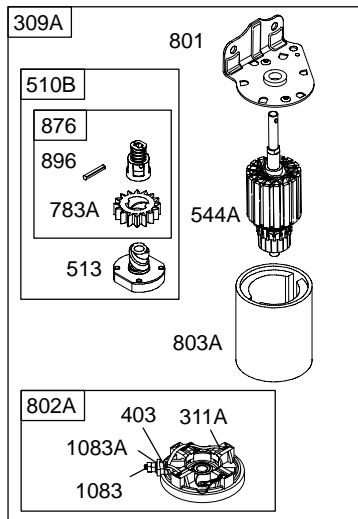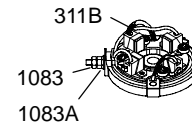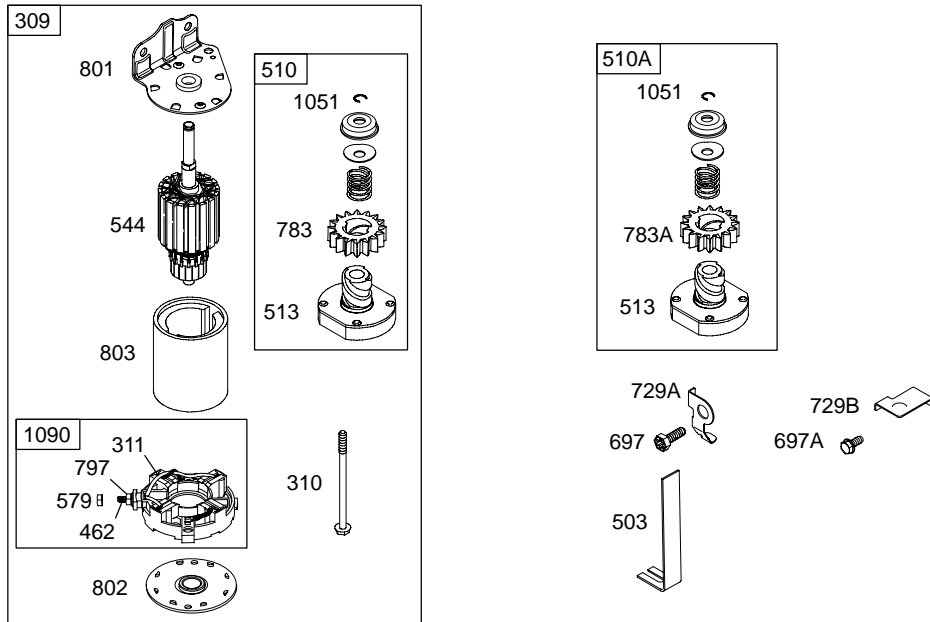

NOTE: For Replacement Starter Motor, See Reference 309.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
27	691299	Lock-Piston Pin (Used After Code Date 95101500). ----- Note ----- 691792 Lock-Piston Pin (Used Before Code Date 95101600).	40	690656	Retainer-Valve (Intake)	93	690602	Bushing-Throttle Shaft
28	498319	Pin-Piston (Standard) (Used After Code Date 95101500). ----- Note ----- 299691 Pin-Piston (Standard) (Used Before Code Date 95101600). ----- 498320 Pin-Piston (.005" Oversize) (Used After Code Date 95101500). 391286 Pin-Piston (.005" Oversize) (Used Before Code Date 95101600).	40A	691939	Retainer-Valve (Exhaust)	94	498030	Kit-Idle Mixture
29	494504	Rod-Connecting (Standard) ----- Note ----- 495490 Rod-Connecting (.020" Undersize)	42	494553	Keeper-Valve	94A	494383	Kit-Idle Mixture
31	222299	Rod Screw Lock	43	691968	Slinger-Governor/Oil	95	691636	Screw (Throttle Valve)
32	690356	Screw (Connecting Rod) (1 7/8" Long)	45	691811	Tappet-Valve	95A	690718	Screw (Throttle Valve)
32A	690348	Screw (Connecting Rod) (1 5/8" Long)	46	697668	Camshaft	98	495800	Kit-Idle Speed
33	262246	Valve-Exhaust	50	691711	Manifold-Intake	98A	694907	Kit-Idle Speed
34	262247	Valve-Intake	51	692284	Gasket-Intake	104	690525	Pin-Float Hinge
35	691605	Spring-Valve (Intake)	51A	272554	Gasket-Intake	104A	694918	Pin-Float Hinge
36	691597	Spring-Valve (Exhaust)	53	690227	Stud (Carburetor)	105	231855	Valve-Float Needle
37	690456	Guard-Flywheel	54	690953	Screw (Intake Manifold)	105A	694922	Valve-Float Needle
37A	690806	Guard-Flywheel Used on Type No(s). 0131, 0139, 0418, 1015, 1107, 1122, 1139, 4015, 4016, 4515.	55	695130	Housing-Rewind Starter	106	690577	Seat-Inlet (Gravity Feed) (Used After Code Date 92071900). ----- Note ----- 691901 Seat-Inlet (Gravity Feed) (Used Before Code Date 92072000). 691780 Seat-Inlet (Pump Feed) (Used After Code Date 92071900).
			55A	393576	Housing-Rewind Starter	108	690464	Valve-Choke (Manual Choke)
			56	695129	Pulley-Starter	108A	692344	Valve-Choke (Choke A Matic)
			56A	295871	Pulley-Starter	108B	694923	Valve-Choke
			57	695131	Spring-Rewind Starter	111	691679	Pin-Retainer
			57A	490179	Spring-Rewind Starter	117	690880	Jet-Main (Standard)
			58	695132	Rope-Starter (59" Long)	121	697884	Kit-Carburetor Overhaul (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906) ----- Note ----- 497481 Kit-Carburetor Overhaul (LMT 63, 65, 66) 499220 Kit-Carburetor Overhaul (LMT 92, 93, 96, 108, 111, 162, 165, 169) 499231 Kit-Carburetor Overhaul (LMT 97, 99, 133, 135, 136, 166, 168) 497535 Kit-Carburetor Overhaul (LMT 2 3, 7, 37, 77, 157, 161)
			58A	695002	Rope-Starter (99" Long) (Cut to Required Length)			
			59	490653	Insert-Grip			
			60	490652	Grip-Starter Rope			
			63	690547	Spring-Ratchet			
			64	691920	Adapter-Ratchet Spring			
			65	695453	Screw (Rewind Starter)			
			65A	690837	Screw (Rewind Starter)			
			66	399671	Clutch-Starter			
			67	394897	Housing-Clutch			
			68	691604	Ball-Clutch			
			70	691945	Ratchet-Clutch			
			71	691359	Cover-Ratchet			
			73	691191	Screen-Rotating			
			73A	691748	Screen-Rotating			
			74	691627	Screw (Rotating Screen)			
			74A	691655	Screw (Rotating Screen)			
			75	690582	Washer (Flywheel)			
			78	690661	Screw			

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
⊘ Valve Gasket Set-Reference 1095

286700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121A	694930	Kit-Carburetor Overhaul (Nikki Carburetor)			----- Note -----	146	692639	Key-Timing
125	698171	Carburetor (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906) (Gravity Feed)			●496519 Nozzle-Carburetor (Standard) (LMT 63, 65, 66)	147	●497472	Jet-Pilot (LMT 1, 2, 3, 4, 5, 7, 37, 38, 39, 40, 41, 77, 78, 79, 80, 81)
		498027 Carburetor (Walbro) (Gravity Feed)			●497568 Nozzle-Carburetor (Standard) (LMT 97, 99, 100)	147A	●694927	Jet-Pilot
		499158 Carburetor (Walbro) (Pump Feed)			●497860 Nozzle-Carburetor (Standard) (LMT 133, 134, 135, 136)	165	693148	Nut (Ring Gear)
125A	694941	Carburetor (Nikki)			●498545 Nozzle-Carburetor (Standard) (LMT 108, 111)	167	692297	Seal-Air Cleaner Nut
127	●695005	Plug-Welch			●499037 Nozzle-Carburetor (Standard) (LMT 162, 165, 169)	173	694926	Valve-Idle Mixture
		----- Note -----			●499039 Nozzle-Carburetor (Standard) (LMT 166, 167, 168)	176	★∅691917	Seal-O Ring (Air Cleaner Base)
		●694524 Plug-Welch (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)			●691434 Nozzle-Carburetor (Standard) (LMT 92, 93, 94, 96)	179	692331	Screw (Fuel Tank Strap)
127A	●694916	Plug-Welch			691425 Nozzle-Carburetor (Standard) (LMT 5)	182	690443	Bracket-Fuel Tank (Right Hand)
130	690468	Valve-Throttle (LMT 111, 169)			143	499040	Nozzle-Carburetor (High Altitude) (LMT 166, 167, 168)	----- Note -----
130A	694917	Valve-Throttle			498258 Nozzle-Carburetor High Altitude (LMT 66, 100, 133, 134, 136)			222980 Bracket-Fuel Tank (Right Hand) Used on Type No(s). 0186.
130B	691750	Valve-Throttle			497737 Nozzle-Carburetor (High Altitude) (LMT 92, 93, 94, 96)	182A	692535	Bracket-Fuel Tank (Left Hand)
131	494885	Kit-Throttle Shaft (LMT 111, 169)			497970 Nozzle-Carburetor (High Altitude) (LMT 97, 98)	183	698459	Strap-Fuel Tank (Right Hand)
131A	494379	Kit-Throttle Shaft			497567 Nozzle-Carburetor (High Altitude) (LMT 5)	183A	692030	Strap-Fuel Tank (Left Hand)
131B	694909	Kit-Throttle Shaft				186	692317	Connector-Hose
133	494381	Float-Carburetor				186A	691609	Connector-Hose
133A	694914	Carburetor Float				187	691050	Line-Fuel (Cut to Required Length)
134	494788	Kit-Needle/Seat (LMT 5, 6)				187A	699332	Line-Fuel (Formed) (21" Long) (Cut to Required Length)
137	●♦281165	Gasket-Float Bowl				187C	697907	Line-Fuel (Formed) (Cut to Required Length)
137A	●♦694920	Gasket-Float Bowl				188	691693	Screw (Control Bracket)
141	495097	Kit-Choke Shaft (Manual Choke)				202	691841	Link-Mechanical Governor
141A	495931	Kit-Choke Shaft (Choke A Matic)				203	691381	Crank-Bell
141B	694913	Kit-Choke Shaft						
142	●697592	Nozzle-Carburetor (Standard) (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)						

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
∅ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
209	691278	Spring-Governor (Platinum) ----- Note ----- 692208 Spring-Governor (Green) Used on Type No(s). 0129, 0137, 0138, 0146, 0149, 0150, 0155, 0157, 0159, 0160, 0161, 0162, 0163, 0164, 0167, 0169, 0172, 0424, 0425, 1137, 1143, 1160, 1162, 1172, 1194, 1425, 4027, 4527. 690480 Spring-Governor (Red) Used on Type No(s). 0102, 0103, 0114, 0116, 0119, 0130, 0131, 0134, 0140, 0147, 0177, 0183, 0401, 0403, 0411, 0412, 0420, 0437, 0438, 0439, 0441, 0442, 0443, 0450, 0452, 0453, 0454, 0455, 0604, 0634, 1103, 1107, 1183, 1197, 1198, 1200, 1202. 691795 Spring-Governor (Yellow) Used on Type No(s). 0184, 0185, 0422, 1163, 1184, 1185, 1205, 1206.			691798 Spring-Governor (Brown) Used on Type No(s). 0115, 0120, 0122, 0124, 0136, 0141, 0144, 0151, 0152, 0166, 0173, 0186, 0413, 0414, 0416, 0417, 0622, 1021, 1025, 1026, 1028, 1029, 1122, 1141, 1152, 1186, 4020, 4021, 4025, 4026, 4028, 4029, 4520, 4521, 4525, 4526, 4528, 4529. 690576 Spring-Governor (Gold) Used on Type No(s). 0118, 0126, 0176, 0182, 0187, 0418, 0419, 0423, 1182, 1187.				265 691024 Clamp-Casing 267 690804 Screw (Casing Clamp) 268 691025 Casing-Control Wire (Cut to Required Length) 269 691026 Wire-Control (Cut to Required Length) 270 691027 Nut (Control Wire Casing) 271 691028 Lever-Control 276 ●● 692255 Washer-Sealing 276A ●● 690997 Washer-Sealing 287 691002 Screw (Dipstick Tube) 298 691808 Locknut-Muffler/Elbow 300 691874 Muffler 300A 498984 Muffler 300B 391569 Muffler 301 93768 Pipe-Exhaust 303 690281 Elbow-Exhaust 304 695065 Housing-Blower (Black) (Used After Code Date 99102400). Used on Type No(s). 1029, 1122, 1190, 1193, 4515, 4516, 4521, 4528, 4529. ----- Note ----- 494268 Housing-Blower (Red) (Used Before Code Date 93071900). 690846 Housing-Blower (Black) (Used Before Code Date 99102500 and After Code Date 93071800). 305 692198 Screw (Blower Housing) 305A 692127 Screw (Blower Housing)
			216 691840 Link-Choke 216A 690574 Link-Choke 216B 691281 Link-Choke 222 694042 Bracket-Control 222A 692002 Bracket-Control 227 691374 Lever-Governor Control 231 ●● 691636 Screw (Choke Valve) 231A ●● 690718 Screw (Choke Valve) 232 691842 Spring-Governor Link 237 690409 Retainer-Muffler Guard 240 298090 Filter-Fuel (Red) ----- Note ----- 394358 Filter-Fuel (White) 263 691083 Screw (Muffler Guard Retainer)						

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
⊘ Valve Gasket Set-Reference 1095

286700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
306	698477	Shield-Cylinder	311	497608	Brush Set	449	691678	Screw
307	691003	Screw (Cylinder Shield)	311A	395538	Brush Set (3 5/8" Housing Length)			(Oil Fill Bracket)
308	491490	Cover-Cylinder Head	311B	490311	Brush Set (4 9/16" Housing Length)	450	690259	Washer (Fuel Tank)
309	693551	Motor-Starter (3 5/8" Housing Length) (Steel Ring Gear Only)	318A	691617	Screw (Mounting Bracket) (Debris Screen Guard)	455	691173	Cup-Flywheel
		----- Note -----	322	692198	Screw (Cylinder Head Cover)	455A	695113	Cup-Flywheel
		693552 Motor-Starter (4 3/8" Housing Length) (Steel Ring Gear Only)	322A	691681	Screw (Cylinder Head Cover)	456	695128	Plate-Pawl Friction
		497595 Motor-Starter (3 5/8" Housing Length) (Plastic Ring Gear Only)	332	690662	Nut (Flywheel)	459	281505	Pawl-Ratchet
		497401 Motor-Starter (4 3/8" Housing Length) (Plastic Ring Gear Only)	333	492341	Armature-Magneto	462	691261	Washer (Starter Cable)
		693054 Motor-Starter (3 5/8" Housing Length) (Aluminum Ring Gear Only)	334	691061	Screw (Magneto Armature)	467	691668	Knob-Air Cleaner
		499521 Motor-Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	337	802592	Plug-Spark	474	696578	Alternator (DC Only)
		Motor-Starter (For Replacement Starter Motor, See Reference 309)	344	693675	Screw (Cable Clamp) (Air Cleaner Base)	474A	696459	Alternator (Dual Circuit)
309A			346	690661	Screw (Spark Arrestor)	474B	696457	Alternator (Tri Circuit)
			349	691105	Nut (Cylinder Head Cover)	474C	696458	Alternator (10/16 Amp)
			356	690807	Wire-Stop	480	690664	Screw (Tube Clamp)
			356A	398808	Wire-Stop	493	694475	Bracket-Mounting (Regulator)
			356D	690799	Wire-Stop	493A	692825	Bracket-Mounting (Debris Screen Guard)
			357	691483	Key-Drive Pulley	501	691185	Regulator
			358	494241	Gasket Set-Engine	501A	691188	Regulator
			359	691077	Washer (Ground Terminal)	503	691532	Strap-Starter
			363	19203	Puller-Flywheel	505	691251	Nut (Governor Control Lever)
			373	691612	Nut (Ground Terminal)	507	691972	Insulator
			383	89838	Wrench-Spark Plug	510	693699	Drive-Starter (Steel Ring Gear)
			385	692198	Screw (Fuel Pump)	510A	696541	Drive-Starter (Aluminum And Plastic Ring Gears)
			387	808656	Pump-Fuel	510B	696540	Drive-Starter
			403	690288	Washer (End Cap)	513	692024	Clutch-Drive
			404	691691	Washer (Governor Crank)	520	691084	Terminal-Ground
			441	224390	Bracket-Oil Fill	523	692014	Dipstick
			445	496894	Filter-Air Cleaner Cartridge	524	★281370	Seal-Dipstick Tube
						525	691398	Tube-Dipstick
						525A	495768	Tube-Dipstick
						526	690326	Screw (Regulator)
						526A	692198	Screw (Regulator)
						527	690394	Clamp-Tube

★ Engine Gasket Set-Reference 358
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
⊗ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
544	692034	Armature–Starter (3 5/8" Housing Length)	634	●690801	Spring/Seal Assembly	757	691714	Link–Counterweight
544A	390837	Starter Armature (3 5/8" Housing Length)	634A	●690802	Spring/Seal Assembly	758	692423	Counterweight
		----- Note -----	634B	●694912	Spring/Seal Assembly	759	691239	Pin–Counterweight
		490309 Armature–Starter (4 3/8" Housing Length)	635	66538	Boot–Spark Plug	761	691096	Screw (Counterweight)
552	491986	Bushing–Governor Crank	646	690460	Brace–Air Cleaner	783	693713	Gear–Pinion (Steel Ring Gear Only)
559	690661	Screw (Remote Choke Stop)	654	690958	Nut (Carburetor)	783A	695708	Gear–Pinion
562	691119	Bolt (Governor Control Lever)	655	691734	Anchor–Rewind Spring	788	690458	Bracket–Fuel Pump
563A	690370	Screw (Debris Screen Guard)	668	690510	Spacer	789A	692037	Harness–Wiring
578	692306	Wire Assembly	668A	691323	Spacer (Rotating Screen)	797	693167	Nut (Brush Retainer)
579	691029	Nut (Starter Cable)	674	691058	Screw (Fuel Tank Bracket)	801	691283	Cap–Drive
592	690800	Nut (Rewind Starter)	676	396903	Deflector–Muffler	802	691286	Cap–End
597	691696	Screw (Pawl Friction Plate)	676A	393761	Deflector–Muffler	802A	395537	Cap–End (3 5/8" Housing Length)
601	95162	Clamp–Hose	676B	397630	Deflector–Muffler	803	693757	Housing–Starter (3 5/8" Housing Length)
607	690703	Screw (Air Cleaner Brace)	677	690661	Screw (Muffler Deflector)			----- Note -----
607A	691693	Screw (Air Cleaner Brace)	678	490817	Spacer–Rewind			(4 3/8" Housing Length)
608	695058	Starter–Rewind (Used After Code Date 99102400).	689	691855	Spring–Friction			(Serviced by Reference 309)
608A	390391	Starter–Rewind (Used Before Code Date 99102500).	691	★692407	Seal–Governor Shaft	803A	398159	Housing–Starter (3 5/8" Housing Length)
613	691416	Screw (Muffler)	692	262820	Spring–Detent			----- Note -----
613A	691693	Screw (Muffler)	695	693109	Screw (Ring Gear)			494205 Housing–Starter (4 3/8" Housing Length)
613B	692661	Screw (Muffler)	697	690372	Screw (Drive Cap)	810	691779	Extension–Crankshaft
614	691620	Pin–Cotter	697A	691058	Screw (Drive Cap)	832	692361	Guard–Muffler
615	93307	Retainer–Governor Shaft	707	690279	Nut (Fuel Tank Strap)	836	690367	Screw (Muffler Guard)
616	692012	Crank–Governor	709	262243	Eccentric	842	★691870	Seal–O Ring (Dipstick Tube)
621	692310	Switch–Stop	718	690959	Pin–Locating	846	690371	Washer (Fuel Tank Strap)
628	690661	Screw (Fuel Pump Bracket) (13/32" Long)	725	690403	Shield–Heat	847	496415	Dipstick/Tube Assembly
628A	692198	Screw (Fuel Pump Bracket) (2 5/16" Long)	725A	690420	Shield–Heat	847A	490474	Dipstick/Tube Assembly
633	●695414	Seal–Choke/Throttle Shaft	726		Gear–Ring (Steel) (See Reference 23 for Service)	851	493880	Terminal–Spark Plug
			726A	696537	Gear–Ring (Aluminum) (Services Plastic Ring Gear Only)	869	691802	Seat–Valve (Intake)
			727	490324	Cover–Starter Drive	870	691844	Seat–Valve (Exhaust)
			729	690596	Clip–Wire	871	261961	Bushing–Valve Guide (Exhaust)
			729A	691224	Clip–Wire			----- Note -----
			729B	224723	Clip–Wire			231218 Bushing–Valve Guide (Intake)
			729C	691335	Clip–Wire (Wiring Harness)			(Brass)
			732	691002	Screw (Starter Drive Cover)			
			733	691658	Screw (Crankshaft Extension)			
			741	691284	Gear–Timing			

★ Engine Gasket Set–Reference 358
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977
∅ Valve Gasket Set–Reference 1095

286700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
875	696129	Base–Air Cleaner	972	390225	Tank–Fuel (3 Quart)	1044	691658	Screw (Flywheel)
876	696539	Kit–Pinion Spring	975	495933	Bowl–Float	1051	691265	Ring–Retaining
877	393456	Wire/Connector– Alternator	975A	694908	Bowl–Float	1054	280275	Tie–Cable
877A	393814	Wire/Connector– Alternator	977	690192	Gasket Set–Carburetor	1058	274787	Operator’s Manual
877B	393537	Wire/Connector– Alternator	977A	694931	Gasket Set–Carburetor	1059	698516	Kit–Screw/Washer (Alternator)
877C	399916	Wire/Connector– Alternator	987	691326	Seal–Throttle Shaft	1083	691626	Nut (End Cap)
878	691237	Harness–Alternator	994	392390	Arrestor–Spark	1083A	690958	Nut (End Cap) (Serrated)
878A	691955	Harness–Alternator	1005	695056	Fan–Flywheel (Used After Code Date 99102400).	1090	691293	Retainer–Brush
883	692236	Gasket–Exhaust			----- Note -----	1091	691333	Cap–Limiter
896	691641	Pin–Drive Retainer			691905 Fan–Flywheel (Used Before Code Date 99102500).	1095	498539	Gasket Set–Valve
918	393815	Hose–Vacuum (Cylinder To Impulse Pump) (Cut to Required Length)	1006	690452	Retainer–Fan	1119	691183	Screw (Alternator)
920	691656	Solenoid–Starter	1019	491255	Kit–Label			
930	691904	Guard–Rewind	1036	696770	Label–Emissions (Used After Code Date 01093000).			
934	691058	Screw (Fan Retainer)			----- Note -----			
949A	397530	Guard–Debris Screen			695699 Label– Emissions (Used After Code Date 00070200 and Before Code Date 01100100).			
950	691657	Screw–Float Bowl			695036 Label– Emissions (Used After Code Date 99093000 and Before Code Date 00070300).			
950A	694919	Screw–Float Bowl			694325 Label– Emissions (Used After Code Date 99010300 and Before Code Date 99100100).			
955	694924	Plug–Carburetor (Idle Chamber)			499362 Label– Emissions (Used After Code Date 97063000 and Before Code Date 99010400).			
955A	694921	Plug–Carburetor (Pilot Jet)			499361 Label– Emissions (Used Before Code Date 97070100).			
957	493988	Cap–Fuel Tank						
958	698183	Valve–Fuel Shut Off						
967	272403	Filter–Pre Cleaner						
968	692916	Cover–Air Cleaner						
971	691108	Screw (Air Cleaner Base to Carburetor) (Used After Code Date 98091300).						
		----- Note ----- 692198 Screw (Air Cleaner Base to Carburetor) (Used Before Code Date 98091400.)						

★ Engine Gasket Set–Reference 358
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977
⊘ Valve Gasket Set–Reference 1095