

**289700**

# Illustrated Parts List

## Model Series

# 289700

TYPE NUMBERS  
0102 through 4529.

### TABLE OF CONTENTS


Air Cleaner .....	4
Alternator .....	8
Blower Housing/Shrouds .....	7
Cams .....	2
Carburetor .....	3
Controls .....	5
Crankcase Cover/Sump .....	2
Crankshaft .....	2
Cylinder .....	2
Electric Starter .....	9
Flywheel .....	6
Fuel Tank .....	5
Governor Spring .....	5
Head .....	2
Ignition .....	8
Kits/Gaskets-Carburetor .....	3
Kits/Gaskets-Engine .....	2
Kits/Gaskets-Valve .....	2
Muffler .....	4
Oil .....	2
Piston Group .....	2
Rewind .....	6
Valves .....	2

PRINTED IN U.S.A.




COPYRIGHT by BRIGGS & STRATTON CORPORATION  
 All rights reserved. No part of this material may be reproduced or transmitted,  
 in any form or by any means, electronic or mechanical, including photocopying,  
 recording or by any information storage and retrieval system, without permission  
 in writing from Briggs & Stratton Corporation.





# 289700

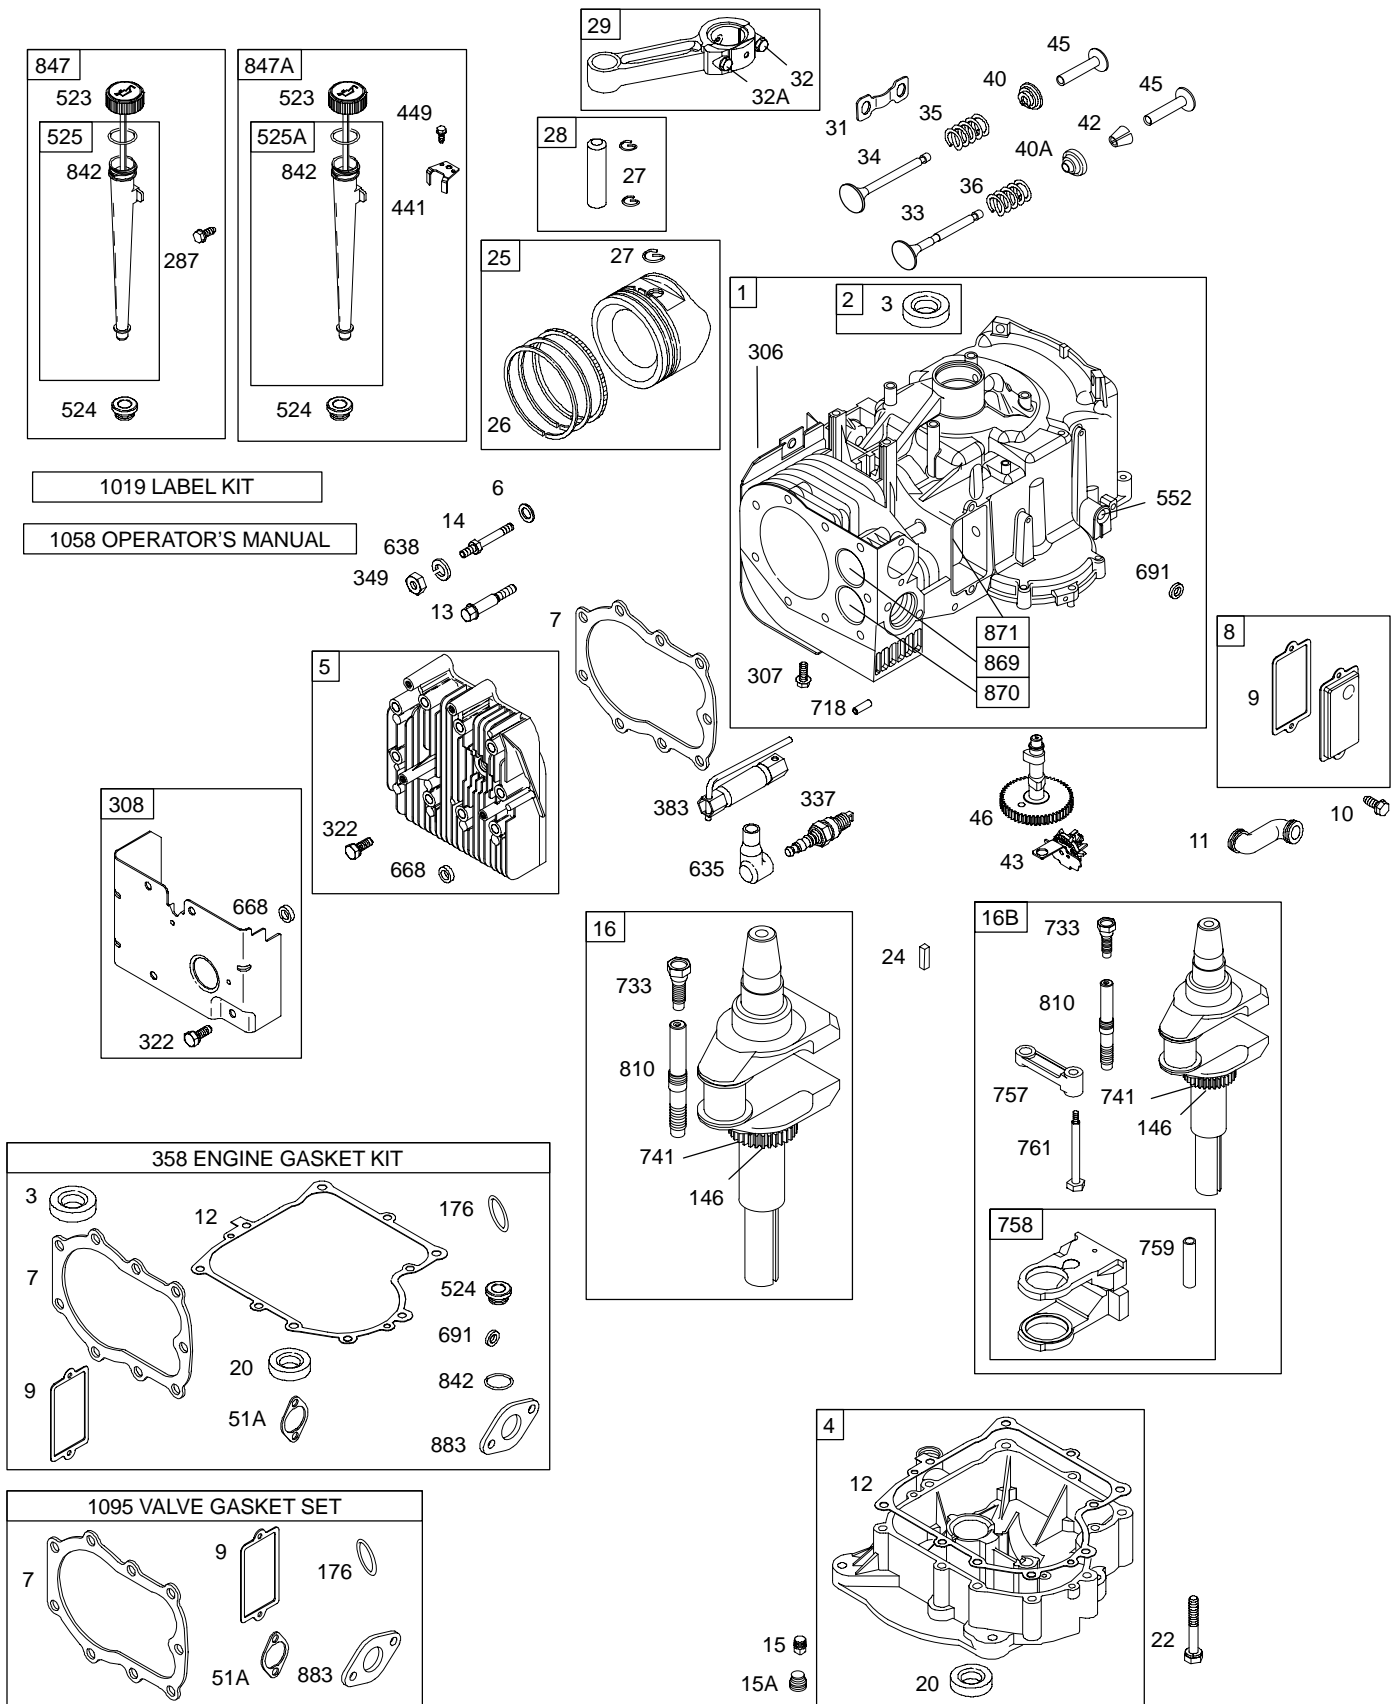

**NIKKI**

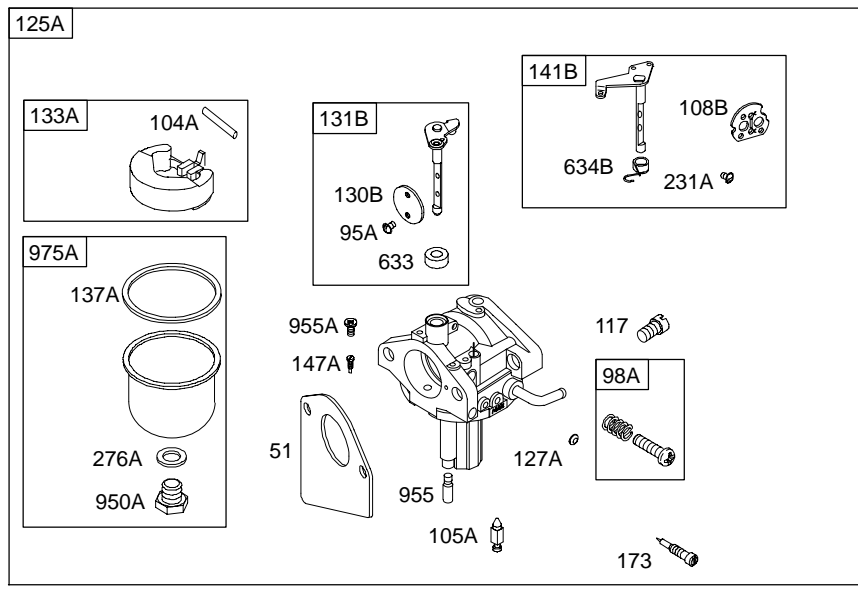


**WALBRO**

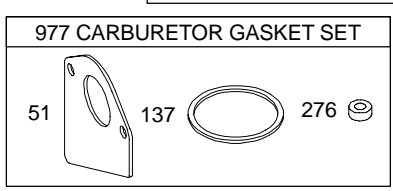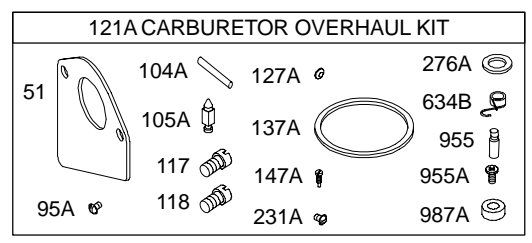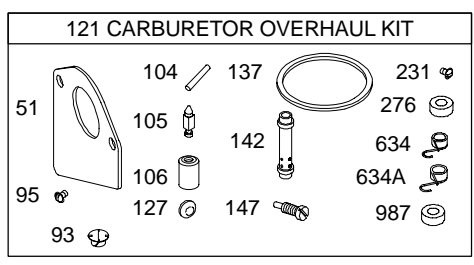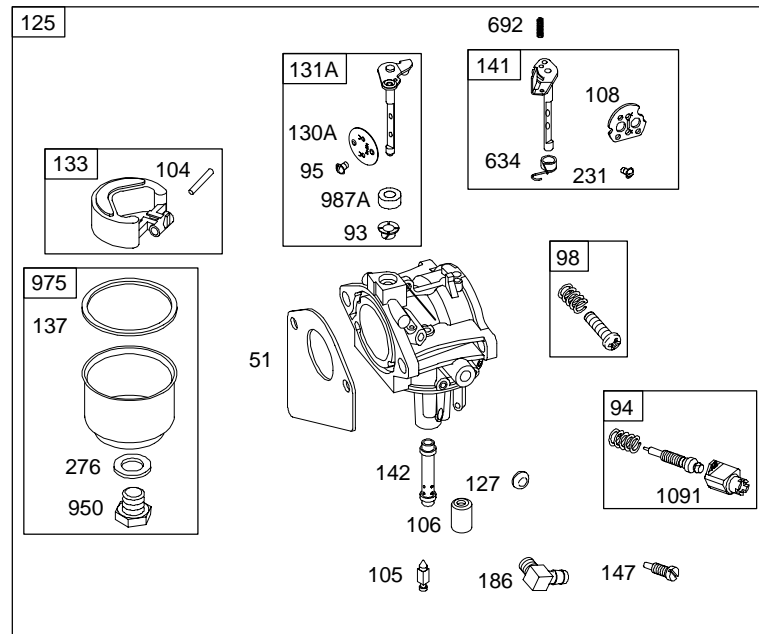



**WALBRO**

**NIKKI**






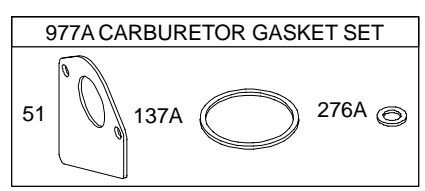



# 289700

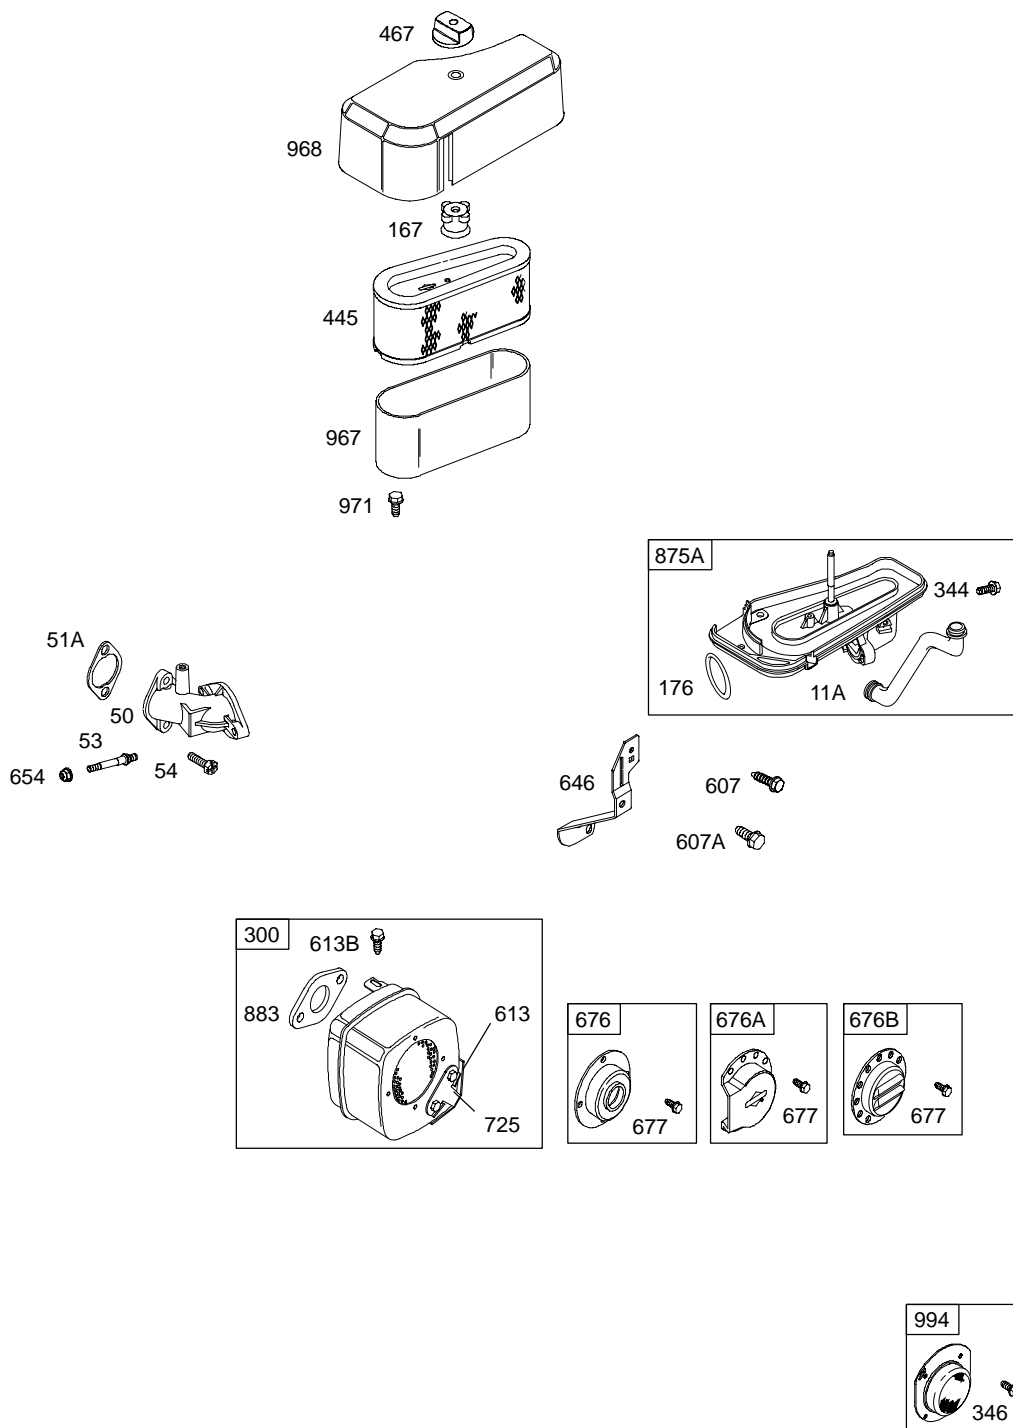

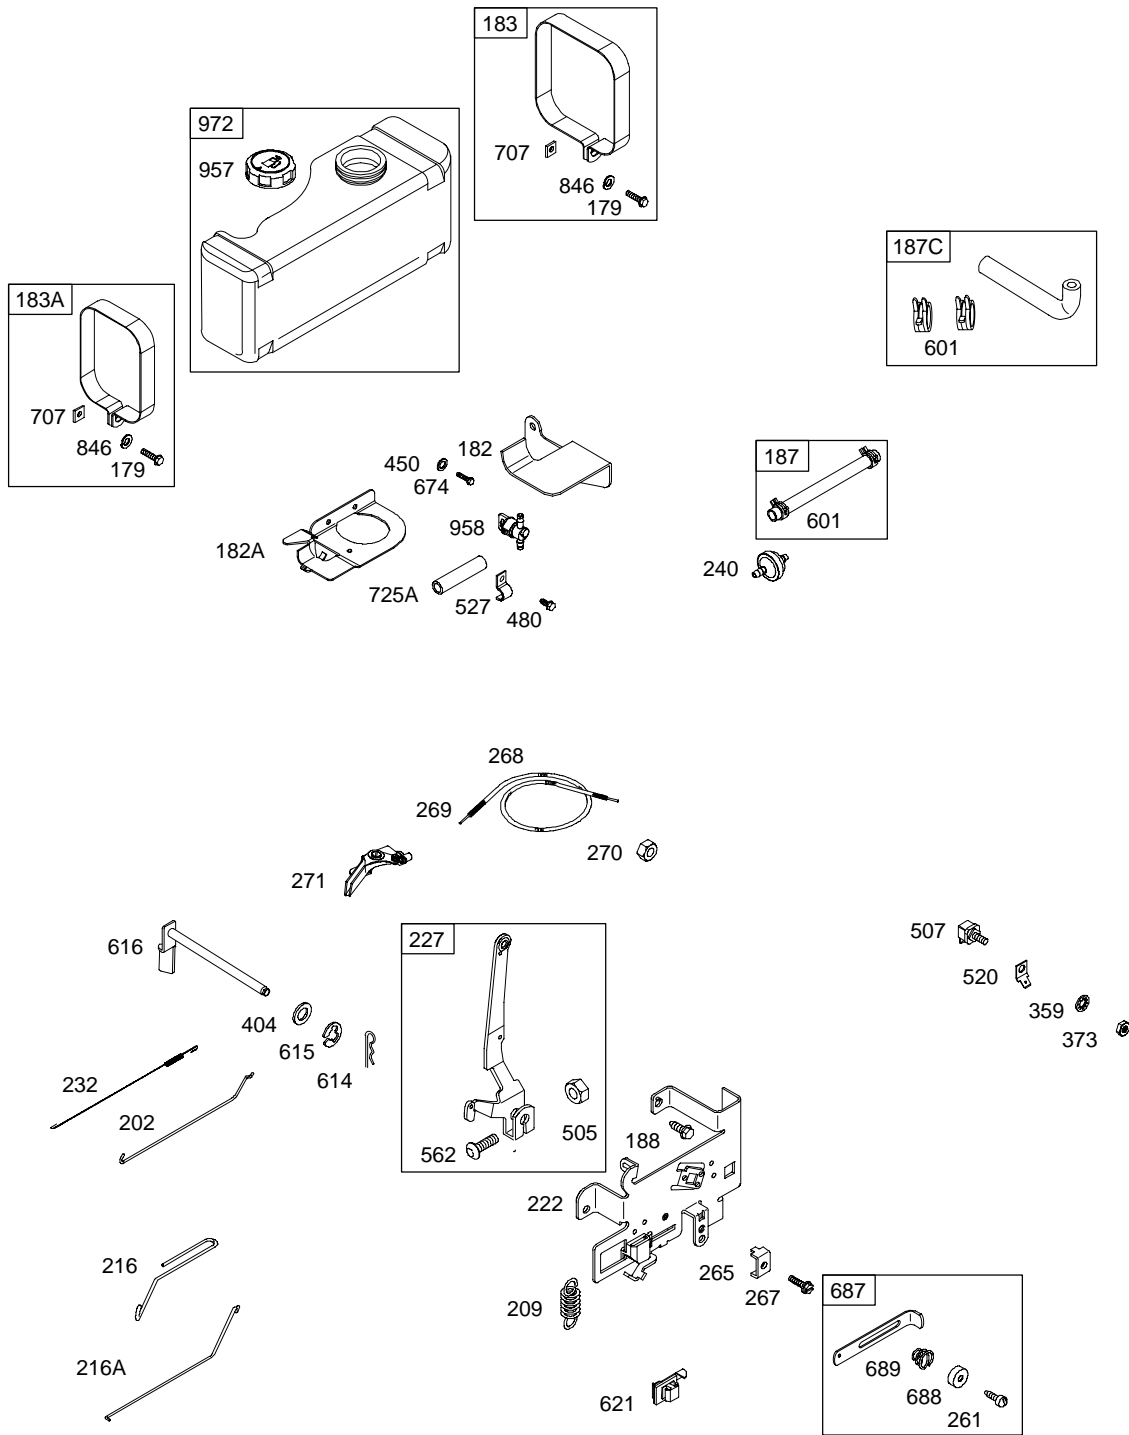



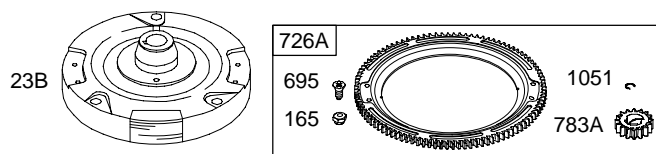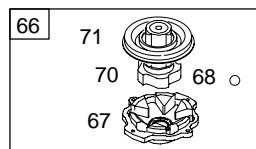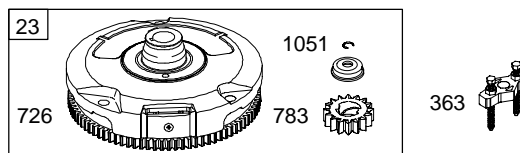
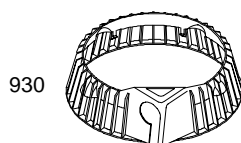
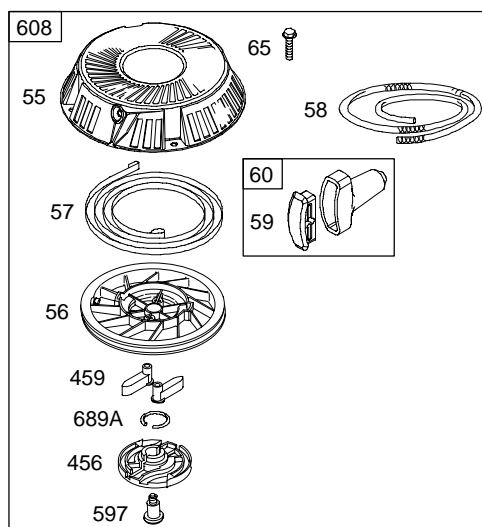
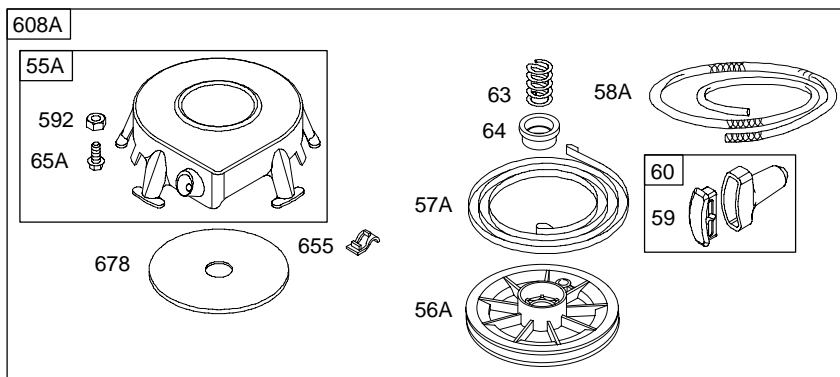


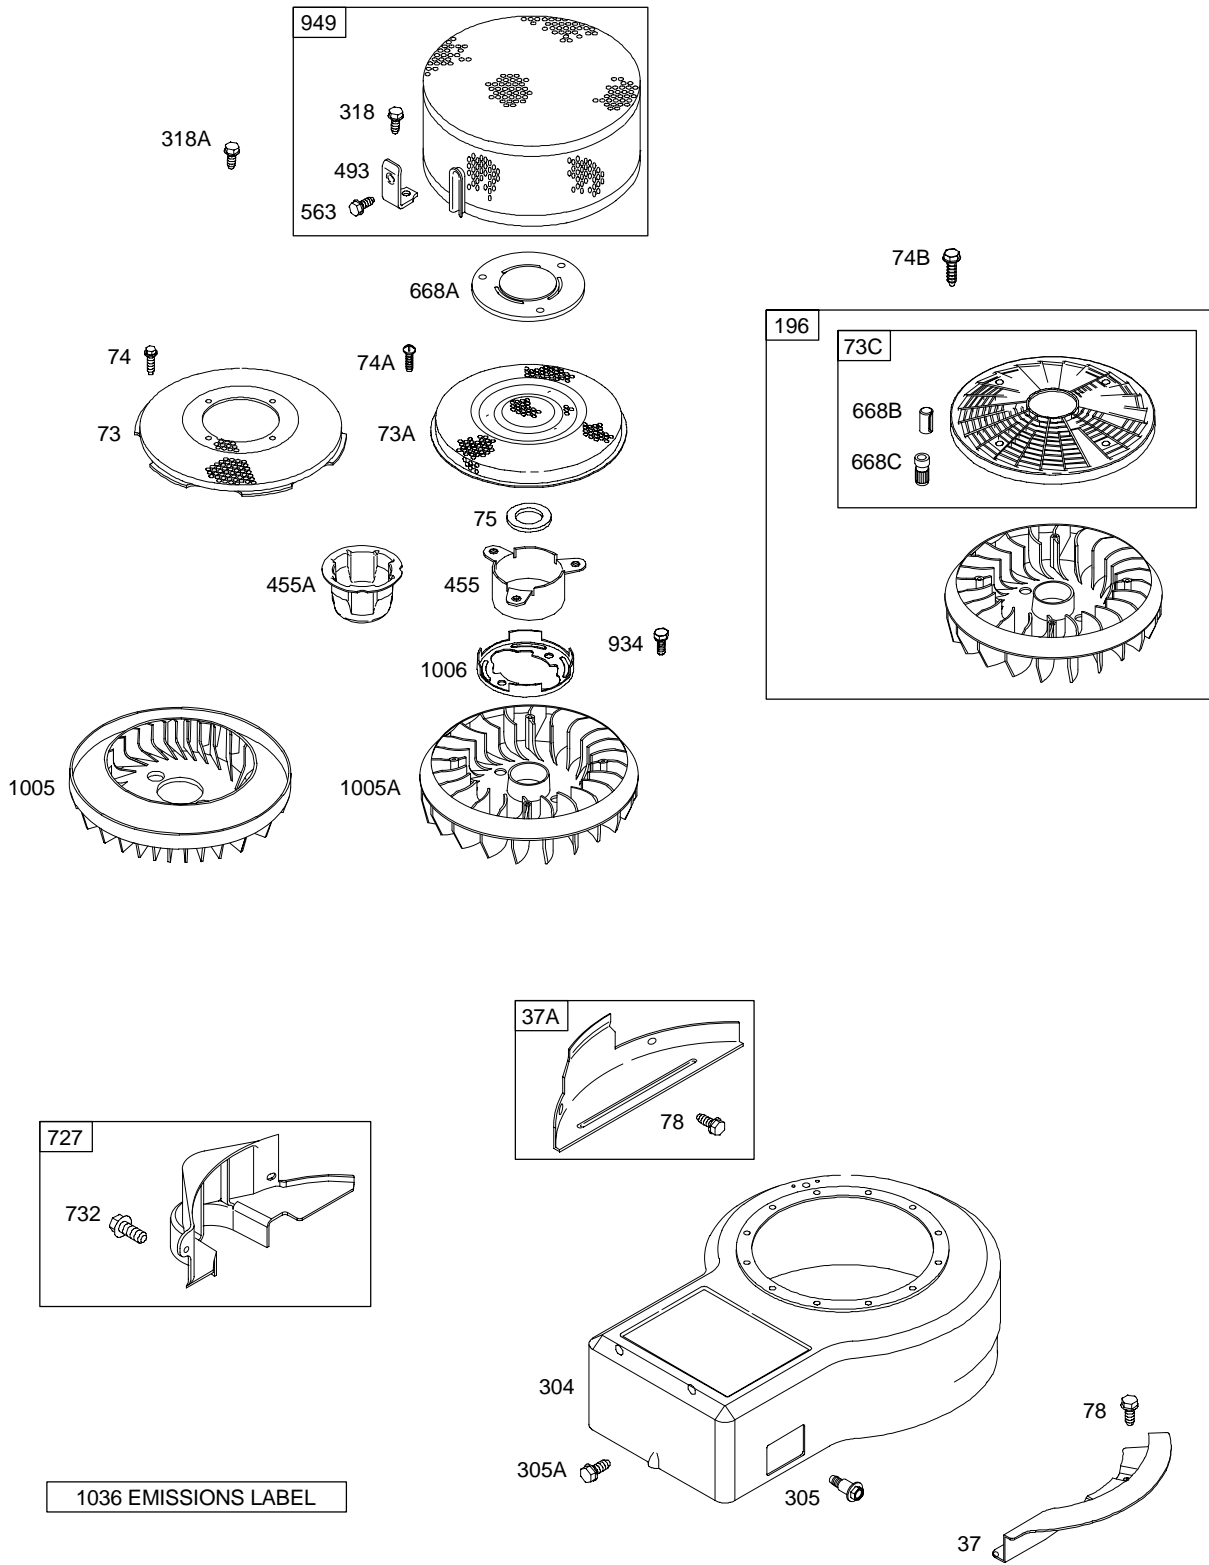



# 289700




    






# 289700

DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	10/16 AMP
474  877A	474A  877	474B  877B	474C  877C
1059 	1059 	1059 	1059 
578 	878 	878A 	578 

 **NOTE:** All Stators use Reference 1119 Mounting Screw.

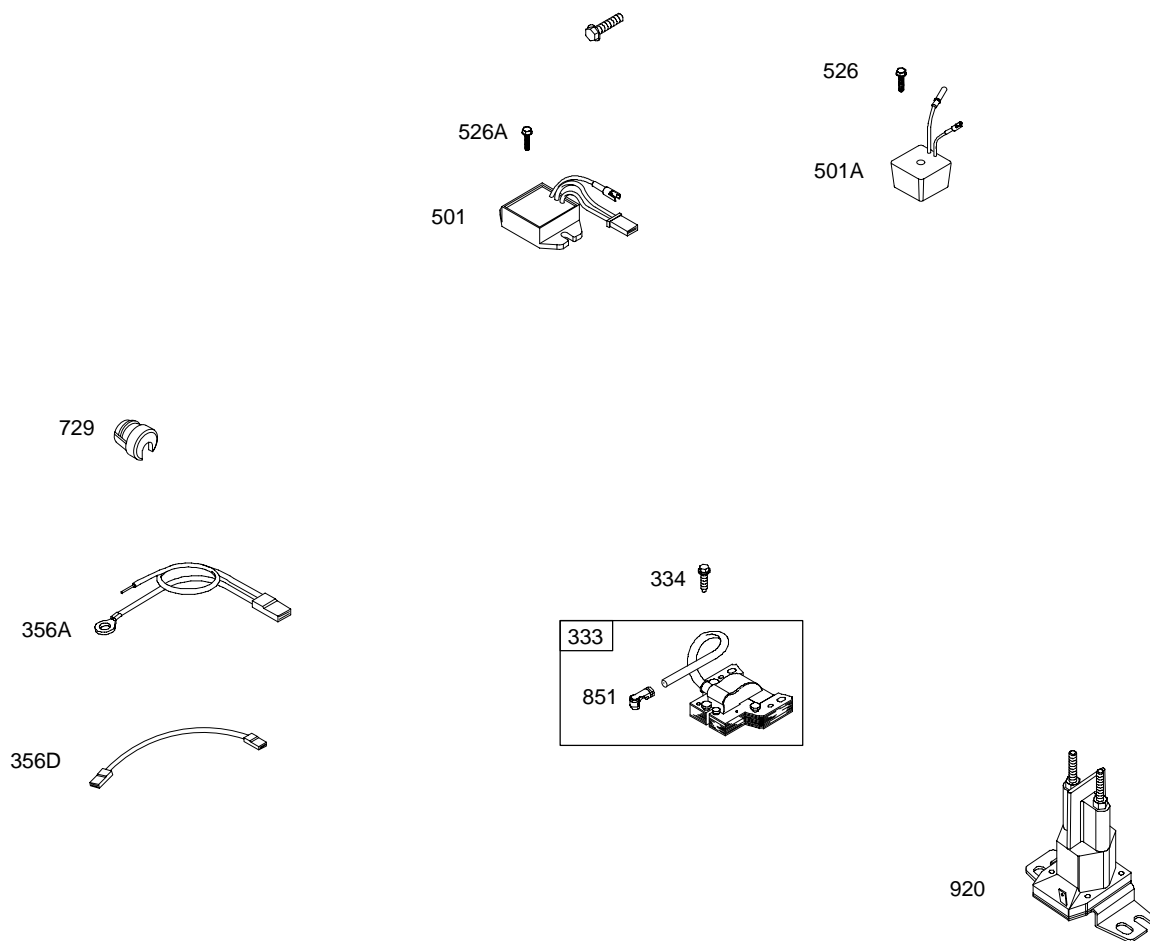



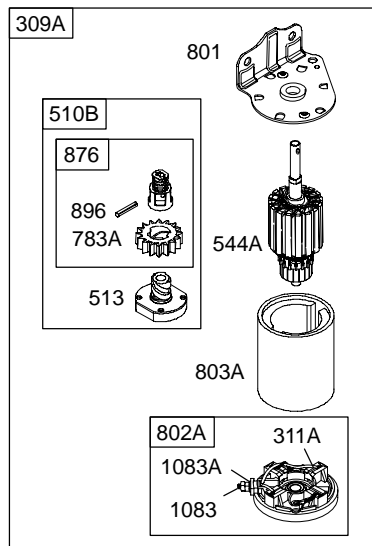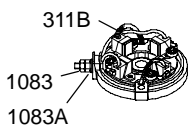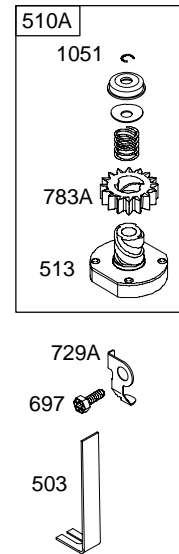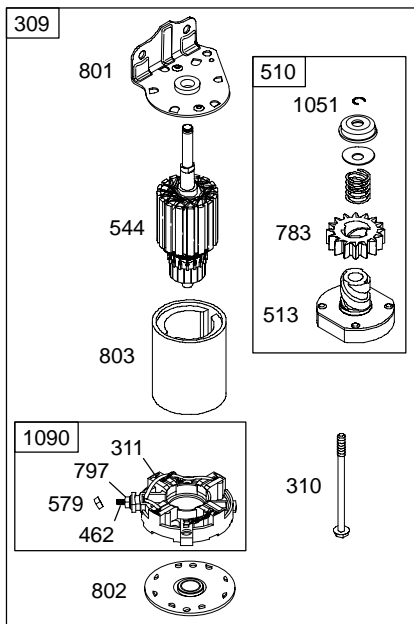

**NOTE:** For Replacement Starter Motor, See Reference 309.

# 289700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	496413	Cylinder Assembly	24	222698	Key-Flywheel			———— <b>Note</b> ————
2	399265	Kit-Bushing/Seal (Magneto Side)	25	696397	Piston Assembly (Standard) (Used After Code Date 01060600).			<b>499996</b> Ring Set (Standard) (Used Before Code Date 01060700).
3	*391086	Seal-Oil (Magneto Side)			<b>696399</b> Piston Assembly (.020" Oversize) (Used After Code Date 01060600).			<b>392331</b> Ring Set (Standard Chrome) (Used Before Code Date 01060700).
4	494238	Sump-Engine			<b>696400</b> Piston Assembly (.030" Oversize) (Used After Code Date 01060600).			<b>498998</b> Ring Set (.020" Oversize) (Used Before Code Date 01060700).
5	494240	Head-Cylinder				27	691299	Lock-Piston Pin (Used After Code Date 95101500).
6	691261	Washer (Cylinder Head)						———— <b>Note</b> ————
7	*Ø271866	Gasket-Cylinder Head						<b>691792</b> Lock-Piston Pin (Used Before Code Date 95101600).
8	495735	Breather Assembly						
9	*Ø27803	Gasket-Breather						
10	691666	Screw (Breather Assembly)						
11	692253	Tube-Breather						
11A	691328	Tube-Breather						
12	*692226	Gasket-Crankcase (.015" Thick, Standard) ———— <b>Note</b> ———— *692406 Gasket-Crankcase (.005" Thick) *692405 Gasket-Crankcase (.009" Thick)						
13	690904	Screw (Cylinder Head)	26	696403	Ring Set (Standard) (Used After Code Date 01060600).			<b>299691</b> Pin-Piston (Standard) (Used Before Code Date 95101600).
14	691109	Stud (Cylinder Head)						<b>498319</b> Pin-Piston (Standard) (Used After Code Date 95101500).
15	690946	Plug-Oil Drain						———— <b>Note</b> ————
15A	691680	Plug-Oil Drain Used on Type No(s). 0154, 0654.						<b>299691</b> Pin-Piston (Standard) (Used Before Code Date 95101600).
16	693944	Crankshaft (Used After Code Date 95073100).						<b>498320</b> Pin-Piston (.005" Oversize) (Used After Code Date 95101500).
16B	693653	Crankshaft (Used Before Code Date 95080100).						<b>391286</b> Pin-Piston (.005" Oversize) (Used Before Code Date 95101600).
20	*291675	Seal-Oil (PTO Side)				29	494504	Rod-Connecting (Standard) ———— <b>Note</b> ————
22	692125	Screw (Crankcase Cover/Sump)						<b>495490</b> Rod-Connecting (.020" Undersize)
23	693557	Flywheel (Steel Ring Gear) ———— <b>Note</b> ———— <b>693556</b> Flywheel (Steel Ring Gear) Used on Type No(s). 0150, 1119, 1150, 1200.				31	222299	Lock-Rod Screw
23B	693555	Flywheel Used on Type No(s). 1151.				32	690348	Screw (Connecting Rod) (1 5/8" Long)
						32A	690356	Screw (Connecting Rod) (1 7/8" Long)

\* Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
Ø Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
33	262246	Valve-Exhaust	64	691920	Adapter-Ratchet Spring	95	●691636	Screw (Throttle Valve)
34	262247	Valve-Intake			(Used Before Code Date 99102500).	95A	●690718	Screw (Throttle Valve)
35	691605	Spring-Valve (Intake)	65	695453	Screw (Rewind Starter)	98	495800	Kit-Idle Speed
36	691597	Spring-Valve (Exhaust)			(Used After Code Date 99102400).	98A	694907	Kit-Idle Speed
37	690456	Guard-Flywheel	65A	690837	Screw (Rewind Starter)	104	●690525	Pin-Float Hinge
37A	690806	Guard-Flywheel			(Used Before Code Date 99102500).	104A	●694918	Pin-Float Hinge
40	690656	Retainer-Valve			(Used Before Code Date 99102500).	105	●231855	Valve-Float Needle
40A	691939	Retainer-Valve	66	399671	Clutch-Starter	105A	●694922	Valve-Float Needle
42	494553	Keeper-Valve			(Used Before Code Date 99102500).	106	●690577	Seat-Inlet (Gravity Feed)
43	691968	Slinger-Governor/Oil			(Used Before Code Date 99102500).	————— <b>Note</b> —————		
45	691811	Tappet-Valve	67	394897	Clutch-Housing		●691780	Seat-Inlet (Pump Feed)
46	697668	Camshaft			(Used Before Code Date 99102500).			(LMT 5, 6)
50	691711	Manifold-Intake	68	691604	Ball-Clutch	108	690464	Choke Valve (Manual Choke)
51	●692284	Gasket-Intake			(Used Before Code Date 99102500).	108A	692344	Valve-Choke (Choke A Matic)
51A	★∅272554	Gasket-Intake	70	691945	Ratchet-Clutch	108B	694923	Valve-Choke
53	690227	Stud (Carburetor)			(Used Before Code Date 99102500).	117	●690880	Main Jet (Standard)
54	690953	Screw (Intake Manifold)	71	691359	Cover-Ratchet	121	697884	Kit-Carburetor Overhaul
55	695130	Housing-Rewind Starter			(Used Before Code Date 99102500).			(LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)
55A	393576	Housing-Rewind Starter	73	691191	Screen-Rotating	————— <b>Note</b> —————		
		(Used Before Code Date 99102500).	73A	691748	Screen-Rotating	497481	Kit-Carburetor Overhaul	
56	695129	Pulley-Starter	73C	494439	Screen-Rotating		(LMT 63, 65, 66)	
		(Used After Code Date 99102400).	74	691627	Screw (Rotating Screen)	497535	Kit-Carburetor Overhaul	
56A	295871	Pulley-Starter			(Used Before Code Date 99102500).		(LMT 5, 37, 77)	
		(Used Before Code Date 99102500).	74A	691655	Screw (Rotating Screen)	499220	Kit-Carburetor Overhaul	
57	695131	Spring-Rewind Starter	74B	698425	Screw (Rotating Screen)		(LMT 92, 93, 94, 95, 96, 108, 111, 162, 165, 169)	
		(Used After Code Date 99102400).			(1 1/4" Long)	499231	Kit-Carburetor Overhaul	
57A	490179	Spring-Rewind Starter			————— <b>Note</b> —————		(LMT 97, 99, 133, 135, 136, 157, 158, 159, 160, 166, 168)	
		(Used Before Code Date 99102500).	75	690582	Washer (Flywheel)	121A	694930	Kit-Carburetor Overhaul
58	695132	Rope-Starter			(Used After Code Date 99102400).		(Nikki)	
		(Used After Code Date 99102400).	78	690661	Screw (Flywheel Guard)			
58A	692188	Rope-Starter			(Used Before Code Date 99102500).			
		(Used Before Code Date 99102500).	93	690602	Bushing-Throttle Shaft			
59	490653	Insert-Grip	94	498030	Kit-Idle Mixture			
60	490652	Grip-Starter Rope	94A	494383	Kit-Idle Mixture			
63	690547	Spring-Ratchet			(Used Before Code Date 99102500).			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
∅ Valve Gasket Set-Reference 1095

# 289700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
125	698171	Carburetor (LMT 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906) <b>Note</b> 498027 Carburetor (LMT 5, 6, 77, 78, 79, 80, 81, 92, 93, 94, 96, 97, 99, 100, 108, 109, 111, 133, 134, 135, 136, 157, 158, 162, 165) (Gravity Feed) 499158 Carburetor (LMT 162, 165, 166, 167, 168, 169) (Pump Feed)	143	497737	Nozzle-Carburetor (High Altitude) (LMT 92, 96) <b>Note</b> 497567 Nozzle-Carburetor (High Altitude) (LMT 5, 6, 37, 41, 77, 81, 157)	209	690480	Spring-Governor (Red) <b>Note</b> 692208 Spring-Governor (Green) Used on Type No(s). 0117, 0171, 1171. 691795 Spring-Governor (Yellow) Used on Type No(s). 0120, 1120. 691798 Spring-Governor (Brown) Used on Type No(s). 0113, 0121, 0150, 0615 1121, 1150. 691278 Spring-Governor (Platinum) Used on Type No(s). 0116, 0169, 0170, 1151, 1201, 1202.
125A	694941	Carburetor (Nikki)	146	691639	Key-Timing	216	690480	Link-Choke
127	695005	Plug-Welch	147	497472	Jet-Pilot (LMT 37, 41, 77, 81)	216A	690574	Link-Choke Used on Type No(s). 0115.
127A	694916	Plug-Welch	147A	694927	Jet-Pilot	222	694042	Bracket-Control <b>Note</b> 692002 Bracket-Control Used on Type No(s). 0115.
130	690468	Valve-Throttle	165	693148	Nut (Ring Gear)	227	691374	Lever-Governor Control
130A	694917	Valve-Throttle	167	692297	Seal-Air Cleaner Nut	231	691636	Screw (Choke Valve)
130B	691750	Valve-Throttle	173	694926	Valve-Idle Mixture	231A	690718	Screw (Choke Valve)
131	494885	Kit-Throttle Shaft (LMT 111,169)	176	691917	Seal-O Ring (Air Cleaner Base)	232	691842	Spring-Governor Link
131A	494379	Kit-Throttle Shaft	179	692331	Screw (Fuel Tank Strap)	240	298090	Filter-Fuel (Red) <b>Note</b> 394358 Filter-Fuel (White)
131B	694909	Kit-Throttle Shaft	182	690443	Bracket-Fuel Tank (Right Hand)	261	690278	Screw (Control Slide)
133	494381	Float-Carburetor	182A	692535	Bracket-Fuel Tank (Left Hand)			
133A	694914	Float-Carburetor	183	698459	Strap-Fuel Tank (Right Hand)			
134	494788	Kit-Needle/Seat (LMT 5, 6)	183A	692030	Strap-Fuel Tank (Left Hand)			
137	281165	Gasket-Float Bowl	186	692317	Connector-Hose			
137A	694920	Gasket-Float Bowl	187	296004	Line-Fuel (Cut to Required Length)			
141	495097	Kit-Choke Shaft (Manual Choke)	187C	699331	Line-Fuel (Formed) (10 1/4" Long) (Cut to Required Length)			
141A	495931	Kit-Choke Shaft (Choke A Matic)	188	692693	Screw (Control Bracket)			
141B	694913	Kit-Choke Shaft	196	695493	Fan/Screen Assembly Used on Type No(s). 1186.			
142	691434	Nozzle-Carburetor (Standard) (LMT 92, 96) <b>Note</b> 691425 Nozzle-Carburetor (Standard) (LMT 5, 6, 37, 41, 77, 81, 157)	202	691841	Link-Mechanical Governor			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
∅ Valve Gasket Set-Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
265	691024	Clamp—Casing	309	693551	Motor—Starter (3 5/8" Housing Length) (Steel Ring Gear Only)	318	694476	Screw (Mounting Bracket) (Debris Screen Guard)	
267	690840	Screw (Casing Clamp)				318A	691617	Screw (Mounting Bracket) (Debris Screen Guard)	
268	691025	Casing—Control Wire			<b>Note</b>				
269	691026	Wire—Control			693552	Motor—Starter (4 3/8" Housing Length) (Steel Ring Gear Only)	322	692198	Screw (Cylinder Head Cover)
270	691027	Nut (Control Wire Casing)			497595	Motor—Starter (3 5/8" Housing Length) (Plastic Ring Gear Only)	332	492341	Armature—Magneto
271	691028	Lever—Control			497401	Motor—Starter (4 3/8" Housing Length) (Plastic Ring Gear Only)	334	691061	Screw (Magneto Armature)
276	◆692255	Washer—Sealing			497401	Motor—Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	337	802592	Plug—Spark
276A	◆690997	Washer—Sealing			693054	Motor—Starter (3 5/8" Housing Length) (Aluminum Ring Gear Only)	344	693675	Screw (Cable Clamp) (Air Cleaner Base)
287	691602	Screw (Dipstick Tube)			499521	Motor—Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	346	690661	Screw (Spark Arrestor)
300	691874	Muffler			691263	Bolt (Starter Motor) (4 3/8" Housing Length)	349	691105	Nut (Cylinder Cover)
304	690846	Housing—Blower (Black) (Used After Code Date 93071800).	309A		692329	Bolt (Starter Motor) (4 9/16" Housing Length)	356A	398808	Wire—Stop
		<b>Note</b>					356D	690799	Wire—Stop
		494268					358	494241	Gasket Set—Engine
		Housing—Blower (Red) (Used Before Code Date 93071900).					359	691077	Washer (Ground Terminal)
		695065					363	19203	Puller—Flywheel
		Housing—Blower (Black) (Used After Code Date 00022000). Used on Type No(s). 1107, 1151, 1202.	310	690323	Bolt (Starter Motor) (3 5/8" Housing Length)	373	691612	Nut (Ground Terminal)	
		690846				383	89838	Wrench—Spark Plug	
		Housing—Blower (Black) (Used After Code Date 93071800 and Before Code Date 00022100). Used on Type No(s). 1151.				404	691691	Washer (Governor Crank)	
		690845				441	224390	Bracket—Oil Fill	
		Housing—Blower (Black) Used on Type No(s). 0686, 1186.	311	497608	Brush Set	445	496894	Filter—Air Cleaner Cartridge	
305	692127	Screw (Blower Housing)	311A	395538	Brush Set (3 5/8" Housing Length)	449	691678	Screw (Oil Fill Bracket)	
305A	692198	Screw (Blower Housing)	311B	490311	Brush Set (4 9/16" Housing Length)	450	691261	Washer (Fuel Tank Bracket) (Used on Rewind Start Engines)	
306	698477	Shield—Cylinder						<b>Note</b>	
307	691003	Screw (Cylinder Shield)						690259	
308	491490	Cover—Cylinder Head						Washer (Fuel Tank Bracket) (Used on Electric Start Engines)	
						455	691173	Cup—Flywheel	
						455A	695113	Cup—Flywheel	
						456	695128	Plate—Pawl Friction (Used After Code Date 99102400).	
						459	281505	Pawl—Ratchet (Used After Code Date 99102400).	

★ Engine Gasket Set—Reference 358  
● Carburetor Overhaul Kit—Reference 121

◆ Carburetor Gasket Set—Reference 977  
⊗ Valve Gasket Set—Reference 1095

# 289700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
462	691261	Washer (Starter Cable)	552	491986	Bushing—Governor Crank	646	690460	Brace—Air Cleaner
467	691668	Knob—Air Cleaner	562	691119	Bolt (Governor Control Lever)	654	690958	Nut (Carburetor)
474	696578	Alternator (DC Only)	563	690859	Screw (Debris Screen Guard)	655	691734	Anchor—Rewind Spring (Used Before Code Date 99102500).
474A	696459	Alternator (Dual Circuit)	578	692306	Wire Assembly	668	690510	Spacer (Cylinder Head Cover)
474B	696457	Alternator (Tri Circuit)	579	691029	Nut (Starter Cable)	668A	691323	Spacer (Rotating Screen)
474C	696458	Alternator (10/16 AMP)	592	690800	Nut (Rewind Starter) (Used Before Code Date 99102500).	668B	691215	Spacer (Fan/Screen Assembly)
480	690664	Screw (Tube Clamp)	597	691696	Screw (Pawl Friction Plate) (Used After Code Date 99102400).	668C	691500	Spacer (Fan/Screen Assembly)
493	692825	Bracket—Mounting (Debris Screen Guard)	601	95162	Clamp—Hose	674	691058	Screw (Fuel Tank Bracket) (Used on Rewind Start Only Engines)
501	691185	Regulator	607	690703	Screw (Air Cleaner Brace)	———— <b>Note</b> ————		
501A	691188	Regulator	607A	691693	Screw (Air Cleaner Brace)	690341	Screw (Fuel Tank Bracket) (Used on Electric Start Engines)	
503	691532	Strap—Starter	608	695058	Starter—Rewind (Used After Code Date 99102400).	676	396903	Deflector—Muffler
505	691251	Nut (Governor Control Lever)	608A	390391	Starter—Rewind (Used Before Code Date 99102500).	676A	393761	Deflector—Muffler
507	691972	Insulator	613	691416	Screw (Muffler)	676B	397630	Deflector—Muffler
510	693699	Drive—Starter (Used With Steel Ring Gear)	613B	692198	Screw (Muffler)	677	690661	Screw (Muffler Deflector)
510A	696541	Drive—Starter (Used With Aluminum And Plastic Ring Gears)	614	691620	Pin—Cotter	678	490817	Spacer—Rewind (Used Before Code Date 99102500).
510B	696540	Drive—Starter (4 3/8" Housing Length)	615	93307	Retainer—Governor Shaft	687	691949	Slide—Control
513	692024	Clutch—Drive	616	692012	Crank—Governor	688	690395	Cap—Friction
520	691084	Terminal—Ground	621	692310	Switch—Stop	689	690529	Spring—Friction (Control Side)
523	692014	Dipstick	633	690998	Seal—Choke/Throttle Shaft	689A	691855	Spring—Friction (Rewind Starter)
524	★281370	Seal—Dipstick Tube	634	●690801	Spring/Seal Assembly (Manual Choke)	691	★692407	Seal—Governor Shaft
525	691398	Tube—Dipstick	634A	●690802	Spring/Seal Assembly (Choke A Matic)	692	690572	Spring—Detent
525A	495768	Tube—Dipstick	634B	●694912	Spring/Seal Assembly	695	693109	Screw (Ring Gear)
526	690326	Screw (Regulator) (1 1/4" Long)	635	66538	Boot—Spark Plug	697	690372	Screw (Drive Cap)
526A	692198	Screw (Regulator) (1 7/16" Long)	638	691075	Washer (Cylinder Cover)	697A	691058	Screw (Drive Cap)
527	690394	Clamp—Tube						
544	692034	Armature—Starter (3 5/8" Housing Length)						
544A	390837	Armature—Starter (3 5/8" Housing Length)						
		———— <b>Note</b> ————						
		490309 Armature— Starter (4 3/8" Housing Length)						

★ Engine Gasket Set—Reference 358  
● Carburetor Overhaul Kit—Reference 121

◆ Carburetor Gasket Set—Reference 977  
∅ Valve Gasket Set—Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
707	690279	Nut (Fuel Tank Strap)	810	691779	Extension-Crankshaft	975	495933	Bowl-Float
718	690959	Pin-Locating	842	★691870	Seal-O Ring (Dipstick/Tube Assembly)	975A	694908	Bowl-Float
725	690403	Shield-Heat	846	690371	Washer (Fuel Tank Strap)	977	690192	Gasket Set-Carburetor
725A	690420	Shield-Heat	847	496415	Dipstick/Tube Assembly	977A	694931	Gasket Set-Carburetor
726		Gear-Ring (Steel) (See Reference 23 for Service)	847A	490474	Dipstick/Tube Assembly	987	●691326	Seal-Throttle Shaft
726A	696537	Gear-Ring (Aluminum) (Services Plastic Ring Gear Only)	851	493880	Terminal-Spark Plug	987A	●692001	Seal-Throttle Shaft
727	490324	Cover-Starter Drive	869	691802	Seat-Valve (Intake)	994	392390	Arrestor-Spark
729	690596	Clip-Wire	870	691844	Seat-Valve (Exhaust)	1005	691905	Fan-Flywheel (Used Before Code Date 99102500).
729A	691224	Clip-Wire	871	261961	Bushing-Valve Guide (Exhaust)	1005A	695056	Fan-Flywheel (Used After Code Date 99102400).
729B	224723	Clip-Wire	<b>Note</b>			1006	690452	Retainer-Fan
732	691002	Screw (Starter Drive Cover)	875A	696129	Base-Air Cleaner	1019	491255	Kit-Label
733	691658	Screw (Crankshaft Extension)	876	696539	Kit-Pinion Spring	1036	696770	Label-Emissions (Used After Code Date 01093000).
741	691284	Gear-Timing	877	393456	Wire/Connector- Alternator	<b>Note</b>		
757	691714	Link-Counterweight	877A	393814	Wire/Connector- Alternator	695699	Label- Emissions (Used After Code Date 00070200 and Before Code Date 01100100).	
758	692423	Counterweight	877B	393537	Wire/Connector- Alternator	695036	Label- Emissions (Used After Code Date 99093000 and Before Code Date 00070300).	
759	691239	Pin-Counterweight	877C	399916	Wire/Connector- Alternator	694325	Label- Emissions (Used After Code Date 99010300 and Before Code Date 99100100).	
761	691096	Screw (Counterweight)	878	691237	Harness-Alternator	499362	Label- Emissions (Used After Code Date 97063000 and Before Code Date 99010400).	
783	693713	Gear-Pinion (Steel Ring Gear Only)	878A	691955	Harness-Alternator	499361	Label- Emissions (Used Before Code Date 97070100).	
783A	695708	Gear-Pinion	883	★∅692236	Gasket-Exhaust	1051	691265	Ring-Retaining
797	693167	Nut (Brush Retainer)	896	691641	Pin-Drive Retainer	1058	274787	Operator's Manual
801	691283	Cap-Drive	920	691656	Solenoid-Starter	1059	698516	Kit-Screw/Washer (Alternator)
802	691286	Cap-End	930	691904	Guard-Rewind (Used Before Code Date 99102500).	1083	691626	Nut (End Cap)
802A	395537	Cap-End (3 5/8" Housing Length)	934	691058	Screw (Fan Retainer)	1083A	690958	Nut (End Cap) (Serrated)
803	693757	Housing-Starter (3 5/8" Housing Length)	949	397530	Guard-Debris Screen	1090	691293	Retainer-Brush
		<b>Note</b>	950	691659	Screw-Float Bowl	1091	691333	Cap-Limiter
		(4 3/8" Housing Length) (Serviced by Reference 309)	950A	694919	Screw-Float Bowl	1095	498539	Gasket Set-Valve
803A	398159	Housing-Starter (3 5/8" Housing Length)	955	●694924	Plug-Carburetor (Idle Chamber)	1119	691183	Screw (Alternator)
		<b>Note</b>	955A	694921	Plug-Carburetor (Pilot Jet)			
		494205 Housing- Starter (4 3/8" Housing Length)	957	493988	Cap-Fuel Tank			
			958	698183	Valve-Fuel Shutoff			
			967	272403	Filter-Pre Cleaner			
			968	691916	Cover-Air Cleaner			
			971	691108	Screw (Air Cleaner Base to Carburetor)			
			972	390225	Tank-Fuel (3 Quart)			

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
∅ Valve Gasket Set-Reference 1095