

# 28B700

## Illustrated Parts List

### Model Series

# 28B700

TYPE NUMBERS  
0001 through 1201.

### TABLE OF CONTENTS

Air Cleaner .....	4
Alternator .....	8
Blower Housing/Shrouds .....	7
Cams .....	2
Carburetor .....	3
Controls .....	5
Crankcase Cover/Sump .....	2
Crankshaft .....	2
Cylinder .....	2
Electric Starter .....	9
Flywheel .....	6
Fuel Tank .....	5
Governor Spring .....	5
Head .....	2
Ignition .....	8
Kits/Gaskets-Carburetor .....	3
Kits/Gaskets-Valve .....	2
Muffler .....	4
Oil .....	2
Piston Group .....	2
Rewind .....	6
Valves .....	2


PRINTED IN U.S.A.






COPYRIGHT by BRIGGS & STRATTON CORPORATION  
 All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 28B700


1058 OPERATOR'S MANUAL

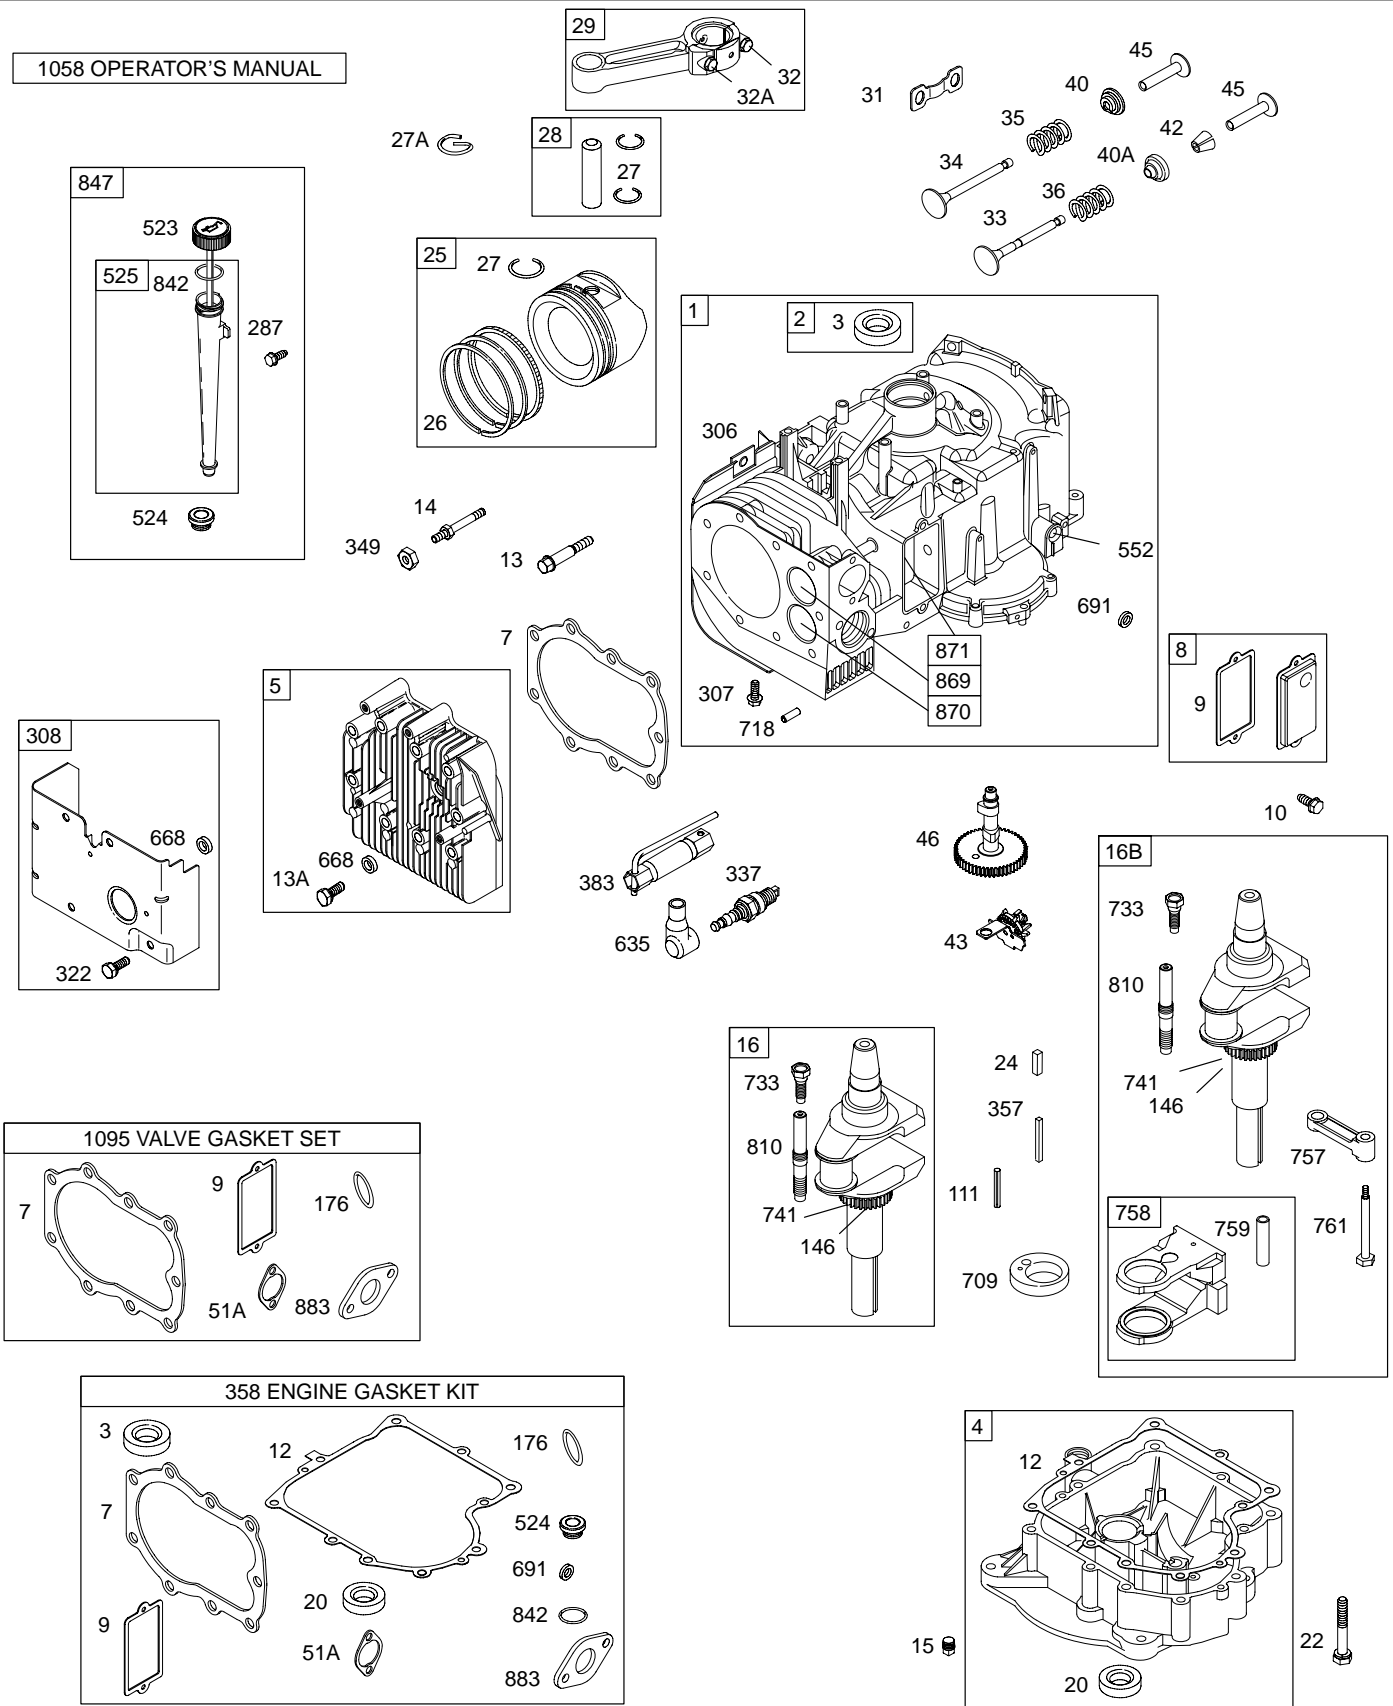


**WALBRO**



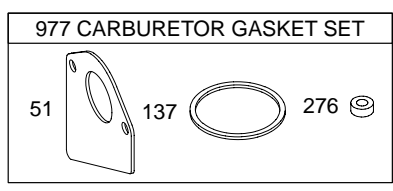
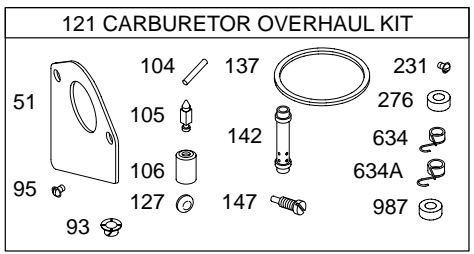
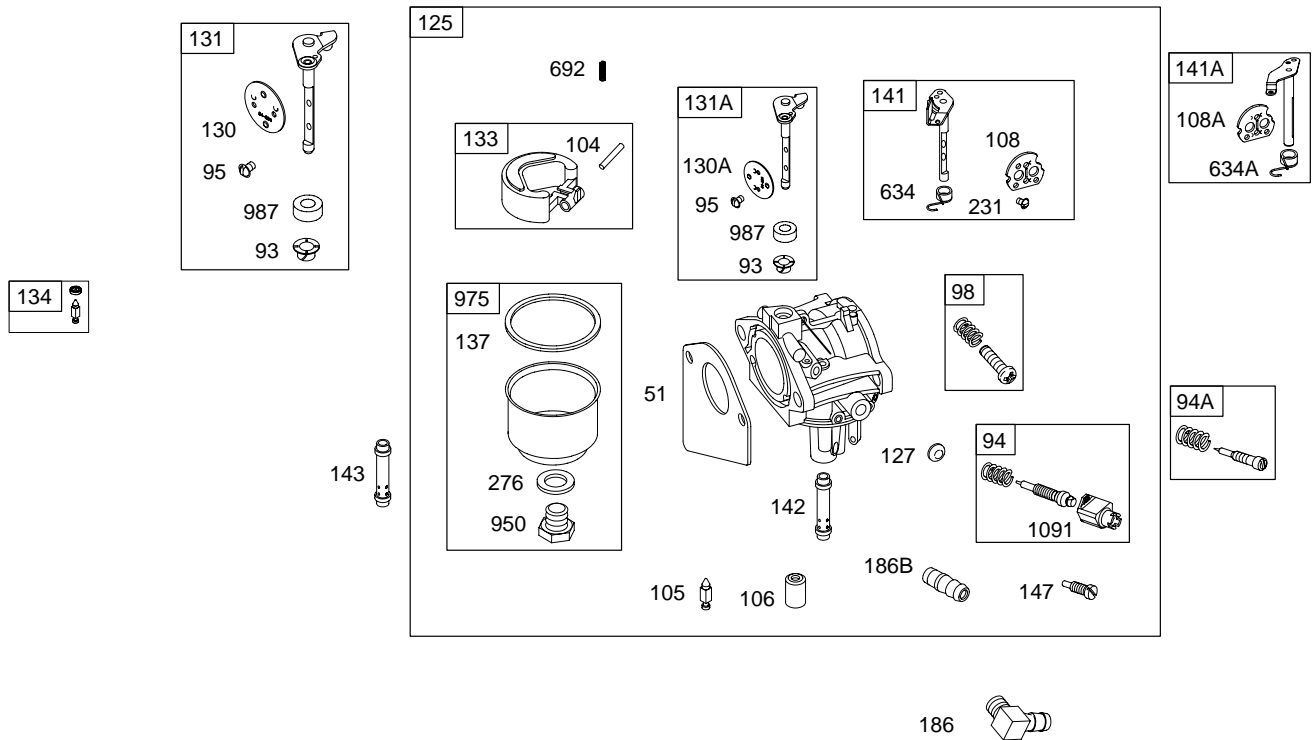



# 28B700

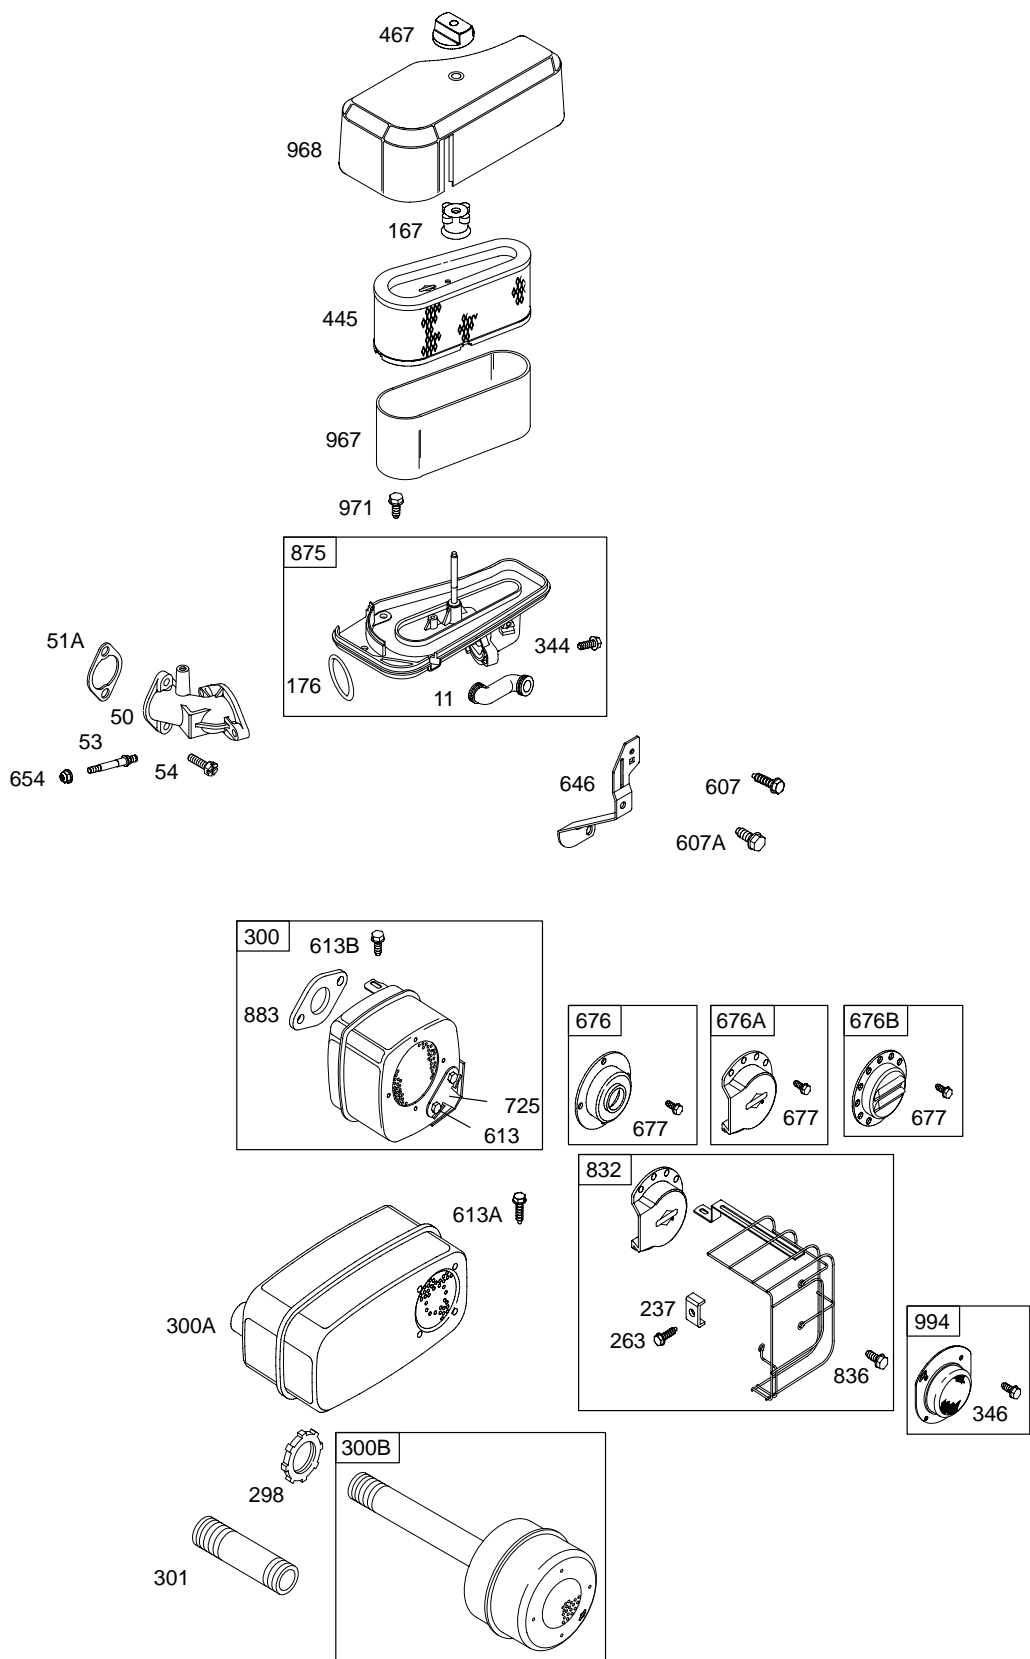

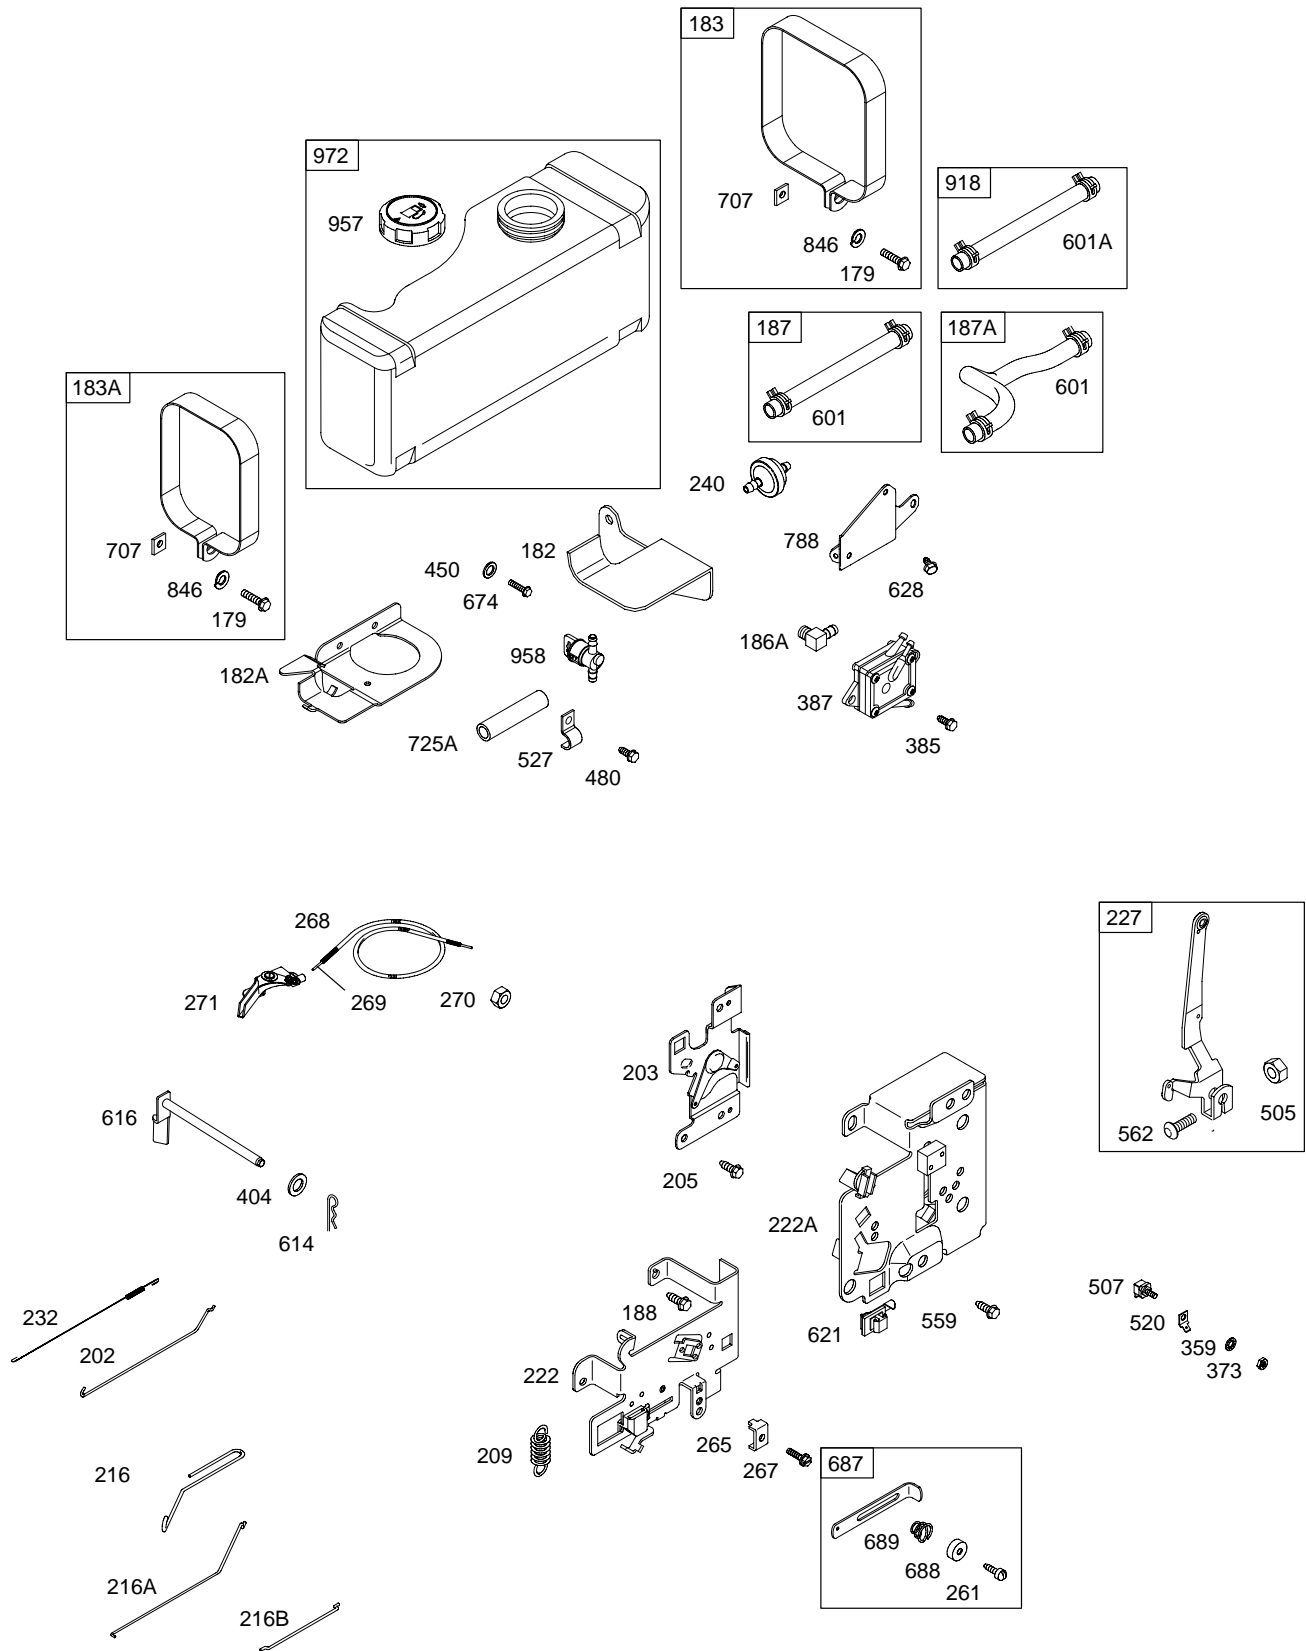

# 28B700

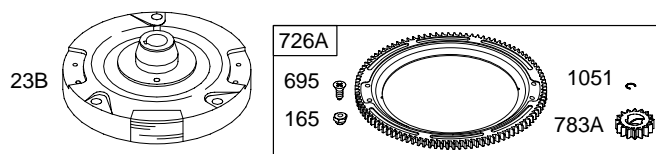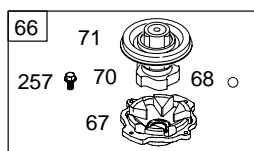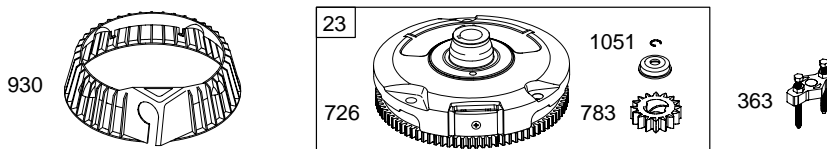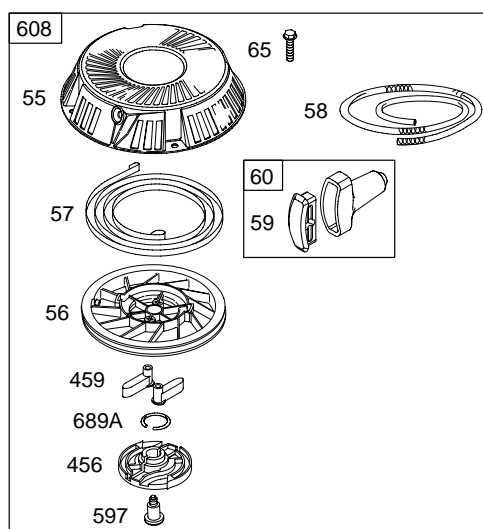
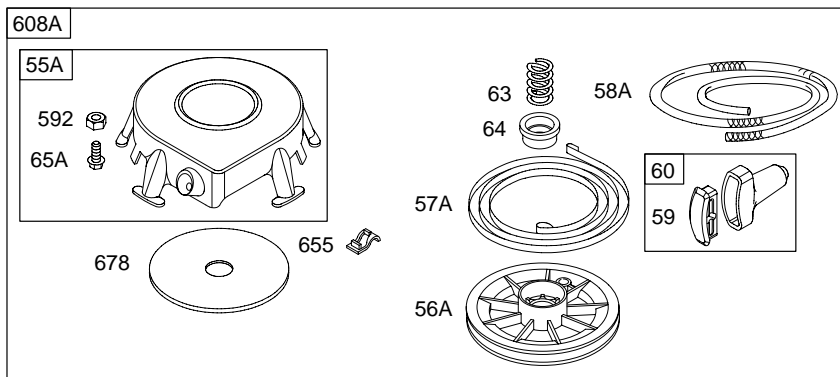 

 

 


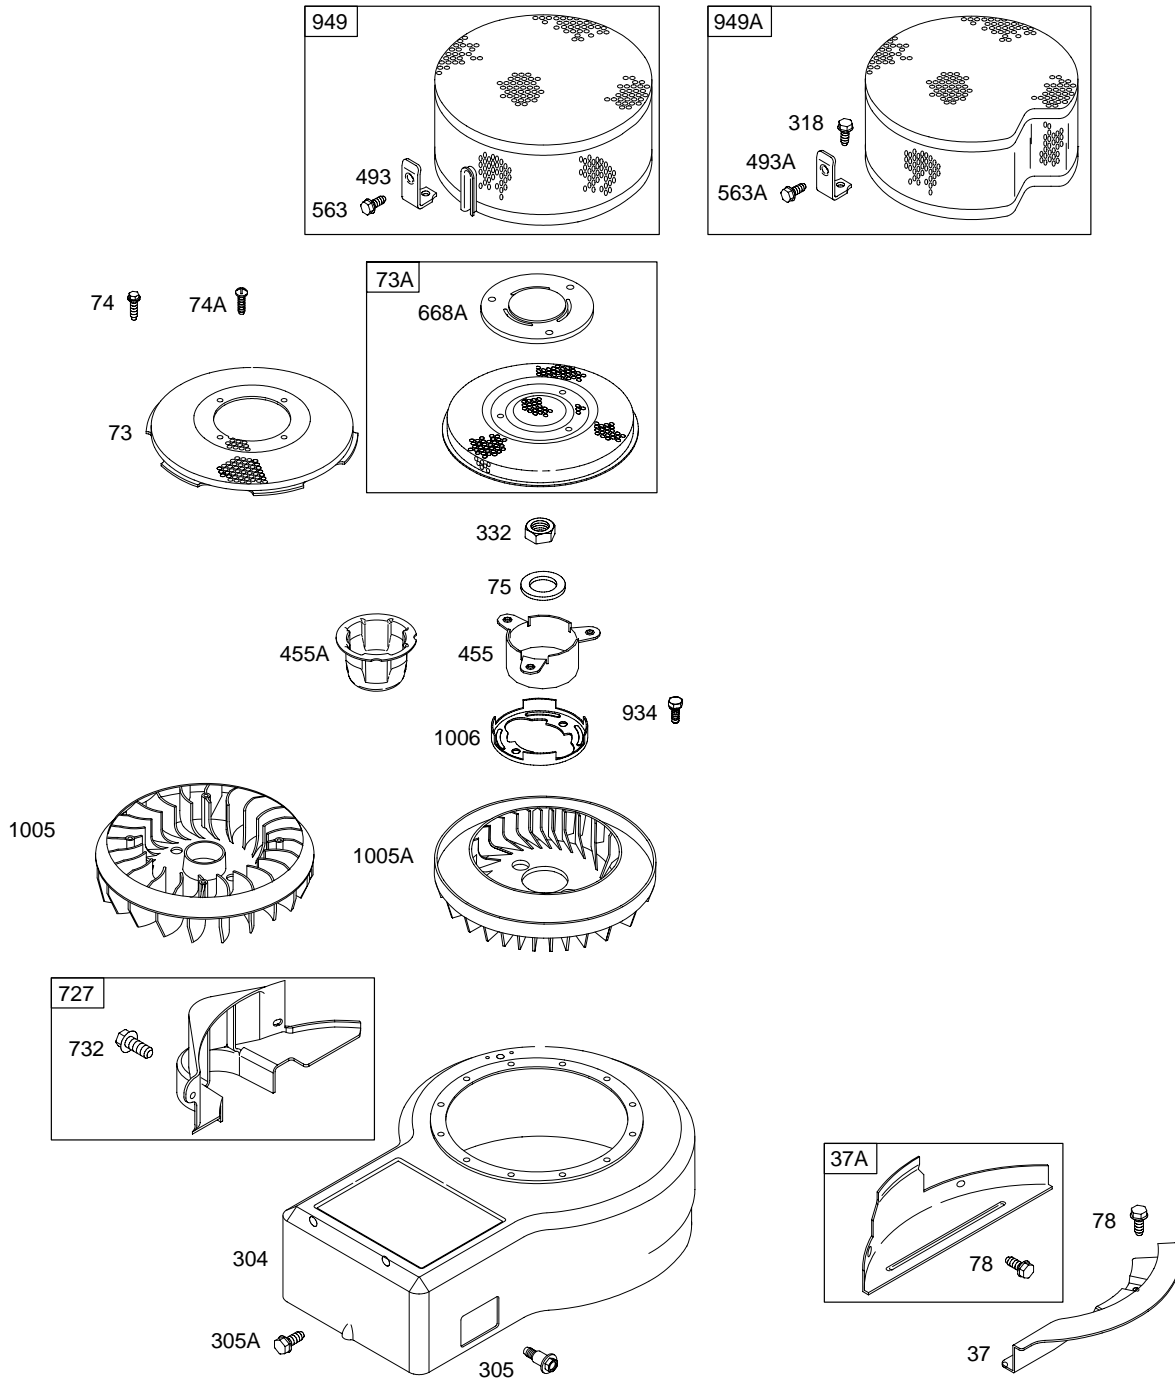












1019 LABEL KIT

1036 EMISSIONS LABEL



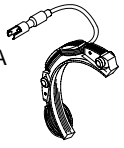

# 28B700

 DC ONLY	DUAL CIRCUIT	TRI CIRCUIT
<p>474</p>  <p>877A</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> <p>1059</p>  </div>	<p>474A</p>  <p>877</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> <p>1059</p>  </div>	<p>474B</p>  <p>877B</p> <div style="border: 1px solid black; padding: 2px; width: fit-content;"> <p>1059</p>  </div>
<p>578</p> 	<p>878</p> 	<p>878A</p> 

     **NOTE:** All Stators Use Reference 1119 Mounting Screw

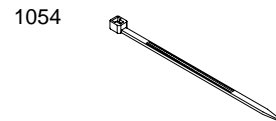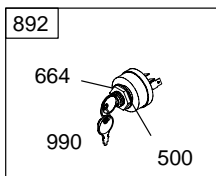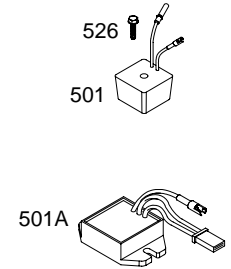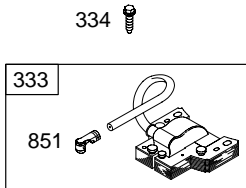



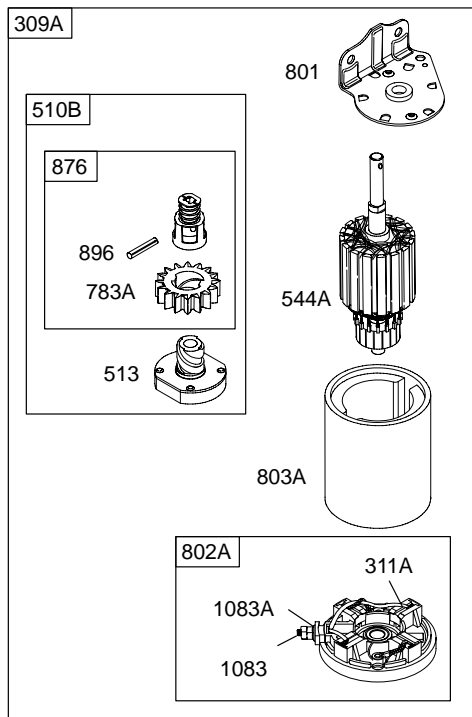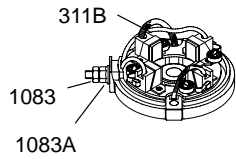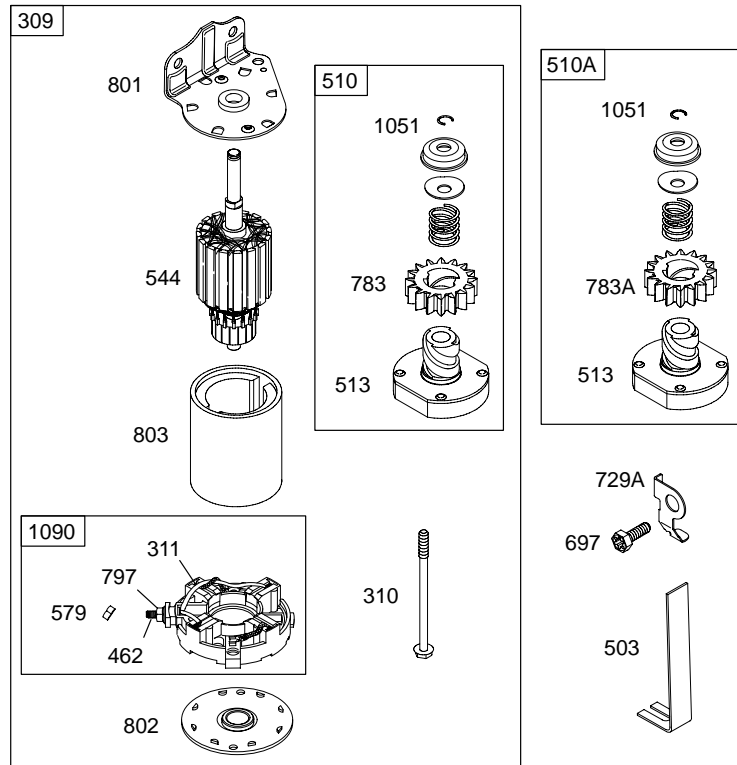

**NOTE:** For Replacement Starter Motor, See Reference 309.

# 28B700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	496413	Cylinder Assembly	24	222698	Key-Flywheel	27	691299	Lock-Piston Pin (Used After Code Date 95101500).
2	399265	Kit-Bushing/Seal (Magneto Side)	25	696397	Piston Assembly (Standard) (Used After Code Date 01060600).	27A	691792	Lock-Piston Pin (Used Before Code Date 95101600).
3	★391086	Seal-Oil (Magneto Side)				28	498319	Pin-Piston (Standard) (Used After Code Date 95101500).
4	494238	Sump-Engine						
5	494240	Head-Cylinder						
7	★Ø271866	Gasket-Cylinder Head						
8	495735	Breather Assembly <b>Note</b> 495734 Breather Assembly Used on Type No(s). 0130, 0139, 1139, 1201.						
9	★Ø27803	Gasket-Breather						
10	691666	Screw (Breather Assembly)						
11	692253	Tube-Breather						
12	★692226	Gasket-Crankcase (.015" Thick) <b>Note</b> ★692406 Gasket-Crankcase (.005" Thick) ★692405 Gasket-Crankcase (.009" Thick)						
13	690904	Screw (Cylinder Head)	26	696403	Ring Set (Standard) (Used After Code Date 01060600).	29	494504	Rod-Connecting (Standard) <b>Note</b> 495490 Rod-Connecting (.020" Undersize)
13A	691681	Screw (Cylinder Head)				31	222299	Lock-Rod Screw
14	691109	Stud (Cylinder Head)				32	690356	Screw (Connecting Rod) (1 7/8" Long)
15	690946	Plug-Oil Drain				32A	690348	Screw (Connecting Rod) (1 5/8" Long)
16	693944	Crankshaft (Used After Code Date 95073100).				33	262246	Valve-Exhaust
16B	693653	Crankshaft (Used Before Code Date 95080100).				34	262247	Valve-Intake
20	★291675	Seal-Oil (PTO Side)				35	691605	Spring-Valve (Intake)
22	692125	Screw (Crankcase Cover/Sump)				36	691597	Spring-Valve (Exhaust)
23	693557	Flywheel (Steel Ring Gear) <b>Note</b> 693556 Flywheel (Steel Ring Gear) Used on Type No(s). 0123, 0146, 1123, 1125, 1140, 1146, 1166.				37	690456	Guard-Flywheel
23B	693555	Flywheel				37A	690806	Guard-Flywheel
						40	690656	Retainer-Valve (Intake)
						40A	691939	Retainer-Valve (Exhaust)
						42	494553	Keeper-Valve
						43	691968	Slinger-Governor/Oil
						45	691811	Tappet-Valve

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
Ø Valve Gasket Set-Reference 1095

**28B700**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
46	697668	Camshaft	66	399671	Clutch–Starter (Used Before Code Date 99102500).	121	697884	Kit–Carburetor Overhaul (696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)
50	691711	Manifold–Intake						<b>Note</b>
51	◆692284	Gasket–Intake	67	394897	Clutch–Housing (Used Before Code Date 99102500).			<b>497481</b> Kit–Carburetor Overhaul (LMT 63, 64, 65, 66)
51A	★∅272554	Gasket–Intake						<b>499220</b> Kit–Carburetor Overhaul (LMT 58, 59, 60, 61, 62, 92, 93, 94, 95, 96, 108, 111, 162, 165, 169)
53	690227	Stud (Carburetor)	68	691604	Ball–Clutch (Used Before Code Date 99102500).			<b>499231</b> Kit–Carburetor Overhaul (LMT 133, 134, 135, 136, 166, 168)
54	690953	Screw (Intake Manifold)	70	691945	Ratchet–Clutch (Used Before Code Date 99102500).			<b>497971</b> Kit–Carburetor Overhaul (LMT 97, 98, 99, 100, 133, 135, 136, 166, 167, 168)
55	695130	Housing–Rewind Starter (Used After Code Date 99102400).	71	691359	Cover–Ratchet (Used Before Code Date 99102500).			<b>497535</b> Kit–Carburetor Overhaul (LMT 1, 2, 3, 4, 5, 6, 7, 32, 37, 38, 39, 40, 41, 77, 78, 79, 80, 81)
55A	393576	Housing–Rewind Starter (Used Before Code Date 99102500).	73	691191	Screen–Rotating			<b>125</b> 698171 Carburetor (696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)
56	695129	Pulley–Starter (Used After Code Date 99102400).	73A	492065	Screen–Rotating			<b>Note</b>
56A	295871	Pulley–Starter (Includes 63" Long Rope) (Used Before Code Date 99102500).	74	691627	Screw (Rotating Screen)			<b>498027</b> Carburetor (Gravity) (LMT 1, 2, 3, 4, 5, 6, 7, 32, 37, 38, 39, 40, 41, 63, 64, 65, 66, 77, 78, 79, 80, 81, 92, 93, 94, 95, 96, 97, 108, 111, 133, 134, 135, 136, 162, 163, 164, 165)
57	695131	Spring–Rewind Starter (Used After Code Date 99102400).	74A	691655	Screw (Rotating Screen)			<b>499158</b> Carburetor (Pump Feed) (LMT 166, 167, 168, 169)
57A	490179	Spring–Rewind Starter (Used Before Code Date 99102500).	75	690582	Washer (Flywheel)			
58	695132	Rope–Starter (59" Long) (Used After Code Date 99102400).	78	690661	Screw (Flywheel Guard)			
58A	692188	Rope–Starter (63" Long) (Used Before Code Date 99102500).	93	◆690602	Bushing–Throttle Shaft			
59	490653	Insert–Grip	94	498030	Kit–Idle Mixture			
60	490652	Grip–Starter Rope	94A	496589	Kit–Idle Mixture			
63	690547	Spring–Ratchet (Used Before Code Date 99102500).	95	◆691636	Screw (Throttle Valve)			
64	691920	Adapter–Ratchet Spring (Used Before Code Date 99102500).	98	495800	Kit–Idle Speed			
65	695453	Screw (Rewind Starter) (Used After Code Date 99102400).	104	◆690525	Pin–Float Hinge			
65A	690837	Screw (Rewind Starter) (Used Before Code Date 99102500).	105	◆231855	Valve–Float Needle			
			106	◆690577	Seat–Inlet (Gravity Feed)			
					<b>Note</b>			
					◆691780 Seat–Inlet (Pump Feed)			
			108	690464	Valve–Choke (Manual Choke)			
			108A	692344	Valve–Choke (Choke A Matic)			
			111	691679	Pin–Retainer			

★ Engine Gasket Set–Reference 358  
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977  
∅ Valve Gasket Set–Reference 1095

# 28B700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
127	●695005	Plug–Welch ———— <b>Note</b> ———— ●694524 Plug–Welch (696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)			———— <b>Note</b> ———— ●497568 Nozzle– Carburetor (Standard) (LMT 97, 98, 99, 100) ●497860 Nozzle– Carburetor (Standard) (LMT 63, 64, 65, 66, 108, 133, 134, 135, 136) ●498545 Nozzle– Carburetor (Standard) (LMT 111) ●499037 Nozzle– Carburetor (Standard) (LMT 162, 163, 164, 165, 169) ●499039 Nozzle– Carburetor (Standard) (LMT 166, 167, 168) ●691434 Nozzle– Carburetor (Standard) (LMT 92, 93, 94, 96) 691425 Nozzle– Carburetor (LMT 1, 2, 3, 4, 5, 6, 7, 37, 38, 39, 40, 41)	146	691639	Key–Timing
130	690468	Valve–Throttle (LMT 108, 111, 133, 134, 135, 136, 162, 163, 164, 165, 166, 167, 168, 169)				147	●497472	Jet–Pilot (LMT 4, 5, 6, 7, 32, 37, 38, 39, 40, 41, 63, 64, 65, 66, 77, 78, 79, 80, 81, 92, 93, 94, 95, 96, 97, 108, 111, 133, 134, 135, 136, 162, 163, 164, 165) ———— <b>Note</b> ———— 231983 Jet–Pilot (Used After Code Date 95042000 and Before Code Date 95110100). (LMT 108, 109, 110, 111, 133, 134, 135, 136) 232057 Jet–Pilot (Used After Code Date 95103000). (LMT 108, 110)
130A	691750	Valve–Throttle				165	693148	Nut (Ring Gear)
131	494885	Kit–Throttle Shaft (LMT 108, 111, 133, 134, 135, 136, 162, 163, 164, 165, 166, 167, 168, 169)				167	692297	Seal–Air Cleaner Nut
131A	494379	Kit–Throttle Shaft				176	★Ø691917	Seal–O Ring (Air Cleaner Base)
133	494381	Float–Carburetor				179	692331	Screw (Fuel Tank Strap)
134	494788	Kit–Needle Seat (LMT 5, 6)				182	690443	Bracket–Fuel Tank (Right Hand) ———— <b>Note</b> ———— 222980 Bracket–Fuel Tank (Right Hand) Used on Type No(s). 0135.
137	●♦281165	Gasket–Float Bowl				182A	692535	Bracket–Fuel Tank (Left Hand)
141	495097	Kit–Choke Shaft (Manual Choke)				183	698459	Strap–Fuel Tank (Right Hand)
141A	495931	Kit–Choke Shaft (Choke A Matic)				183A	496852	Strap–Fuel Tank (Left Hand)
142	●697592	Nozzle–Carburetor (Standard) (696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)	143	499040	Nozzle–Carburetor (High Altitude) (LMT 165, 166, 167) 498258 Nozzle– Carburetor High Altitude) (LMT 66, 100, 133, 134, 136) 497737 Nozzle– Carburetor (High Altitude) (LMT 92, 93, 96, 696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906) 497970 Nozzle– Carburetor (High Altitude) (LMT 97,98) 497567 Nozzle– Carburetor (LMT 94)			

★ Engine Gasket Set–Reference 358  
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977  
Ø Valve Gasket Set–Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
186	692317	Connector–Hose			<b>690576</b> Spring–Governor	270	691027	Nut (Control Wire Casing)		
186A	691609	Connector–Hose			(Gold)	271	691028	Lever–Control		
186B	698174	Connector–Hose (Carburetor)			Used on Type No(s). 0137, 0151, 1172.	276	◆692255	Washer–Sealing		
187	296004	Line–Fuel (Cut to Required Length)	216	691840	Link–Choke	287	691002	Screw (Dipstick Tube)		
187A	691371	Line–Fuel (Molded)	216A	690574	Link–Choke	298	691808	Locknut–Muffler/Elbow		
188	691693	Screw (Control Bracket)	216B	691281	Link–Choke	300	691874	Muffler		
202	691841	Link–Mechanical Governor	222	694042	Bracket–Control	300A	498984	Muffler		
203	691381	Crank–Bell	222A	692002	Bracket–Control Used on Type No(s). 0145, 1142.	300B	391569	Muffler		
205	691693	Screw (Bell Crank)	227	691374	Lever–Governor Control	301	93768	Pipe–Exhaust		
209	691278	Spring–Governor (Platinum)	231	◆691636	Screw (Choke Valve)	304	695065	Housing–Blower (Black) (Used After Code Date 99102400).		
		<b>Note</b>	232	691842	Spring –Governor Link			<b>Note</b>		
		692208 Spring–Governor (Green) Used on Type No(s). 0113, 0115, 0127, 0128, 0130, 1128, 1160.	237	690409	Retainer–Muffler Guard			690846 Housing–Blower (Black) (Used Before Code Date 99102500).		
		690480 Spring–Governor (Red) Used on Type No(s). 0101, 0102, 0111, 0122, 0126, 0145, 0604, 1016, 1101, 1114, 1142, 1143, 1144.	240	298090	Fuel Filter (Red)			305	691108	Screw (Blower Housing)
		691795 Spring–Governor (Yellow) Used on Type No(s). 0139, 0146, 1139, 1146, 1166.			<b>Note</b>			305A	692127	Screw (Blower Housing)
		691798 Spring–Governor (Brown) Used on Type No(s). 0112, 0123, 0132, 0135, 0610, 0632, 1019, 1025, 1026, 1112, 1114, 1123, 1132, 1135, 1147, 1148, 1152, 1153, 1154, 1155, 1174, 1193.	257	691660	Screw (Starter Clutch)			306	698477	Shield–Cylinder
			261	690278	Screw (Control Slide)			307	691003	Screw (Cylinder Shield)
			263	690367	Screw (Muffler Guard Retainer)			308	491490	Cover–Cylinder Head
			265	691024	Clamp–Casing					
			267	690804	Screw (Casing Clamp)					
			268	691025	Casing–Control Wire (72" Long) (Cut to Required Length)					
					<b>Note</b>					
					691072 Casing–Control Wire (48" Long) (Cut to Required Length)					
			269	691026	Wire–Control (78" Long) (Cut to Required Length)					
					<b>Note</b>					
					691589 Wire–Control (54" Long) (Cut to Required Length)					

★ Engine Gasket Set–Reference 358  
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977  
⊘ Valve Gasket Set–Reference 1095

## 28B700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
<b>309</b>	<b>693551</b>	Motor–Starter (3 5/8" Housing Length) (Steel Ring Gear Only)	<b>311</b>	<b>497608</b>	Brush Set	<b>462</b>	<b>691261</b>	Washer (Starter Cable)
		<b>Note</b>	<b>311A</b>	<b>395538</b>	Brush Set (3 5/8" Housing Length)	<b>467</b>	<b>691668</b>	Knob–Air Cleaner
		<b>693552</b> Motor–Starter (4 3/8" Housing Length) (Steel Ring Gear Only)	<b>311B</b>	<b>490311</b>	Brush Set (4 9/16" Housing Length)	<b>474</b>	<b>696578</b>	Alternator (DC Only)
		<b>497595</b> Motor–Starter (3 5/8" Housing Length) (Plastic Ring Gear Only)	<b>318</b>	<b>691617</b>	Screw (Mounting Bracket) (Debris Screen Guard)	<b>474A</b>	<b>696459</b>	Alternator (Dual Circuit)
		<b>497401</b> Motor–Starter (4 3/8" Housing Length) (Plastic Ring Gear Only)	<b>322</b>	<b>691108</b>	Screw (Cylinder Head Cover)	<b>474B</b>	<b>696457</b>	Alternator (Tri Circuit)
		<b>693054</b> Motor–Starter (3 5/8" Housing Length) (Aluminum Ring Gear Only)	<b>332</b>	<b>690662</b>	Nut (Flywheel)	<b>480</b>	<b>690664</b>	Screw (Tube Clamp)
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>332</b>	<b>690662</b>	Nut (Flywheel)	<b>493</b>	<b>695450</b>	Bracket–Mounting (Debris Screen Guard) (Used After Code Date 99102400).
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>333</b>	<b>492341</b>	Armature–Magneto	<b>493A</b>	<b>692825</b>	Bracket–Mounting (Debris Screen Guard) (Used Before Code Date 99102500).
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>334</b>	<b>691061</b>	Screw (Magneto Armature)	<b>500</b>	<b>691086</b>	Washer (Key Switch)
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>337</b>	<b>802592</b>	Plug–Spark	<b>501</b>	<b>691188</b>	Regulator
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>344</b>	<b>693675</b>	Screw (Cable Clamp)	<b>501A</b>	<b>691185</b>	Regulator Used on Type No(s). 1125.
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>346</b>	<b>690661</b>	Screw (Spark Arrester)	<b>503</b>	<b>691532</b>	Strap–Starter
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>349</b>	<b>691105</b>	Nut (Cylinder Head Cover)	<b>505</b>	<b>691251</b>	Nut (Governor Control Lever)
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>356</b>	<b>690799</b>	Wire–Stop	<b>507</b>	<b>691972</b>	Insulator
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>356A</b>	<b>398808</b>	Wire–Stop	<b>510</b>	<b>693699</b>	Drive–Starter (Used With Steel Ring Gear)
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>356B</b>	<b>399222</b>	Wire–Stop	<b>510A</b>	<b>696451</b>	Drive–Starter (Used With Aluminum and Plastic Ring Gears)
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>356E</b>	<b>692390</b>	Wire–Stop	<b>510B</b>	<b>696450</b>	Drive–Starter
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>357</b>	<b>691483</b>	Key–Drive Pulley	<b>513</b>	<b>692024</b>	Clutch–Drive
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>358</b>	<b>494241</b>	Gasket Set–Engine	<b>520</b>	<b>691084</b>	Terminal–Ground
		<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>359</b>	<b>691077</b>	Washer (Ground Terminal)	<b>523</b>	<b>692013</b>	Dipstick
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>363</b>	<b>19203</b>	Puller–Flywheel	<b>524</b>	<b>★281370</b>	Seal–Dipstick Tube		
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>373</b>	<b>691612</b>	Nut (Ground Terminal)	<b>525</b>	<b>690841</b>	Tube–Dipstick		
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>383</b>	<b>89838</b>	Wrench–Spark Plug	<b>526</b>	<b>690326</b>	Screw (Regulator)		
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>385</b>	<b>692198</b>	Screw (Fuel Pump)	<b>527</b>	<b>690394</b>	Clamp–Tube		
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>387</b>	<b>808656</b>	Pump–Fuel	<b>544</b>	<b>692034</b>	Armature–Starter (3 5/8" Housing Length)		
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>404</b>	<b>691691</b>	Washer (Governor Crank)	<b>544A</b>	<b>390837</b>	Armature–Starter (3 5/8" Housing Length)		
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>445</b>	<b>691667</b>	Filter–Air Cleaner Cartridge			<b>Note</b>		
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>450</b>	<b>691261</b>	Washer (Fuel Tank Bracket)			<b>490309</b> Armature– Starter (4 3/8" Housing Length)		
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>455</b>	<b>695113</b>	Cup–Flywheel (Used After Code Date 99102400).					
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>455A</b>	<b>691173</b>	Cup–Flywheel (Used Before Code Date 99102500).					
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>456</b>	<b>695128</b>	Plate–Pawl Friction (Used After Code Date 99102400).					
<b>499521</b> Motor–Starter (4 3/8" Housing Length) (Aluminum Ring Gear Only)	<b>459</b>	<b>281505</b>	Pawl–Ratchet (Used After Code Date 99102400).					

★ Engine Gasket Set–Reference 358  
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977  
⊘ Valve Gasket Set–Reference 1095

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
552	491986	Bushing–Governor Crank	635	66538	Boot–Spark Plug	725	690420	Shield–Heat
559	690661	Screw (Remote Choke Stop)	646	690460	Brace–Air Cleaner	725A	690403	Shield–Heat
562	691119	Bolt (Governor Control Lever)	654	690958	Nut (Carburetor)	726		Gear–Ring (Steel)
563	695449	Screw (Debris Screen Guard) (Used After Code Date 99102400).	655	691734	Anchor–Rewind Spring (Used Before Code Date 99102500).	726A	696537	Gear–Ring (Aluminum) (Services Plastic Ring Gear Only)
563A	690859	Screw (Debris Screen Guard) (Used Before Code Date 99102500).	664	691087	Nut (Key Switch)	727	490324	Cover–Starter Drive
578	692306	Wire Assembly	668	690510	Spacer	729	690596	Clip–Wire
579	691029	Nut (Starter Cable)	668A	691323	Spacer (Rotating Screen)	729A	691224	Clip–Wire (Starter Motor)
592	690800	Nut (Rewind Starter) (Used Before Code Date 99102500).	674	691058	Screw (Fuel Tank Bracket) (Used On Rewind Start Engines)	729B	224723	Clip–Wire (Starter Motor)
597	691696	Screw (Pawl Friction Plate) (Used After Code Date 99102400).			<b>Note</b>	732	691002	Screw (Starter Drive Cover)
601	95162	Clamp–Hose (Green)			690341	733	691658	Screw (Crankshaft Extension)
601A	691038	Clamp–Hose (Black)			Screw (Fuel Tank Bracket) (Used On Electric Start Engines)	741	691284	Gear–Timing
607	690703	Screw (Air Cleaner Brace)	676	396903	Deflector–Muffler	757	691714	Link–Counterweight
607A	691693	Screw (Air Cleaner Brace)	676A	393761	Deflector–Muffler	758	692423	Counterweight
608	695058	Starter–Rewind (Used After Code Date 99102400).	676B	397630	Deflector–Muffler	759	691239	Pin–Counterweight
608A	390391	Starter–Rewind (Used Before Code Date 99102500).	677	690661	Screw (Muffler Deflector)	761	691096	Screw (Counterweight)
613	691416	Screw (Muffler)	678	490817	Spacer–Rewind (Used Before Code Date 99102500).	783	693713	Gear–Pinion (Steel Ring Gear)
613A	690297	Screw (Muffler)	687	691949	Slide–Control	783A	695708	Gear–Pinion (Plastic and Aluminum Ring Gear)
613B	692198	Screw (Muffler)	688	690395	Cap–Friction	788	690458	Bracket–Fuel Pump
614	691620	Pin–Cotter	689	690529	Spring–Friction	797	693167	Nut (Brush Retainer)
616	692012	Crank–Governor	689A	691855	Spring–Friction (Used After Code Date 99102400).	801	691283	Cap–Drive
621	692310	Switch–Stop	691	★692407	Seal–Governor Shaft	802	691286	Cap–End
628	690661	Screw (Fuel Pump Bracket)	692	690572	Spring–Detent	802A	395537	Cap–End (3 5/8" Housing Length)
634	●690801	Spring/Seal Assembly (Manual Choke)			<b>Note</b>	803	693757	Housing–Starter
634A	●690802	Spring/Seal Assembly (Choke A Matic)			691301	803A	398159	Housing–Starter (3 5/8" Housing Length)
			695	693109	Screw (Ring Gear)			<b>Note</b>
			697	690372	Screw (Drive Cap)			494205
			697A	690372	Screw (Drive Cap)			Starter (4 3/8" Housing Length)
			707	690279	Nut (Fuel Tank Strap)			
			709	262243	Eccentric			
			718	690959	Pin–Locating			

★ Engine Gasket Set–Reference 358  
● Carburetor Overhaul Kit–Reference 121

◆ Carburetor Gasket Set–Reference 977  
∅ Valve Gasket Set–Reference 1095

# 28B700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
810	691779	Extension-Crankshaft	920	691656	Solenoid-Starter	1036	696770	Label-Emissions
832	692361	Guard-Muffler	930	691904	Guard-Rewind			(Used After Code Date
836	691083	Screw			(Used Before Code			01093000).
		(Muffler Guard)			Date 99102500).			----- <b>Note</b> -----
842	★691870	Seal-O Ring	934	690372	Screw			<b>695699</b> Label-
		(Dipstick Tube)			(Fan Retainer)			Emissions
846	690371	Washer	949	695448	Guard-Debris Screen			(Used After Code Date
		(Fuel Tank Strap)			(Used After Code Date			00070200 and Before
847	496367	Dipstick/Tube			99102400).			Code Date 01100100).
		Assembly	949A	397530	Guard-Debris Screen			<b>695036</b> Label-
851	493880	Terminal-Spark Plug			(Used Before Code			Emissions
869	691802	Seat-Valve			Date 99102500).			(Used After Code Date
		(Intake)	950	691657	Screw-Float Bowl			99093000 and Before
870	691844	Seat-Valve	957	493988	Cap-Fuel Tank			Code Date 00070300).
		(Exhaust)	958	698183	Valve-Fuel Shut Off			<b>694325</b> Label-
871	261961	Bushing-Valve Guide	967	272477	Filter-Pre Cleaner			Emissions
		(Exhaust)	968	691324	Cover-Air Cleaner			(Used After Code Date
		----- <b>Note</b> -----	971	691108	Screw			99010300 and Before
		<b>231218</b> Bushing-Valve			(Air Cleaner Base			Code Date 99100100).
		Guide			to Carburetor)			<b>499362</b> Label-
		(Intake) (Brass)	972	390225	Tank-Fuel			Emissions
875	693670	Base-Air Cleaner	975	495933	Bowl-Float			(Used After Code Date
876	696539	Kit-Pinion Spring	977	690192	Gasket Set-Carburetor			97063000 and Before
877	393456	Wire/Connector-	987	●691326	Seal-Throttle Shaft			Code Date 99010400).
		Alternator	990	691959	Key Set			<b>499361</b> Label-
877A	393814	Wire/Connector-	994	392390	Arrestor-Spark			Emissions
		Alternator	1005	695056	Fan-Flywheel			(Used Before Code
877B	393537	Wire/Connector-			(Used After Code Date			Date 97070100).
		Alternator			99102400).	1051	691265	Ring-Retaining
878	691237	Harness-Alternator	1005A	691905	Fan-Flywheel	1054	280275	Tie-Cable
878A	691955	Harness-Alternator			(Used Before Code	1058	274787	Operator's Manual
883	★∅692236	Gasket-Exhaust			Date 99102500).	1059	698516	Kit-Screw/Washer
892	692318	Switch-Key	1006	690452	Retainer-Fan			(Alternator)
896	691641	Pin-Drive Retainer	1019	697764	Kit-Label	1083	691626	Nut
918	393815	Hose-Vacuum						(End Cap
		(Cut to				1083A	690958	Nut
		Required Length)						(End Cap)
								(Serrated)
						1090	691293	Retainer-Brush
						1091	691333	Cap-Limiter
						1095	498539	Gasket Set-Valve
						1119	691183	Screw
								(Alternator)

★ Engine Gasket Set-Reference 358  
● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977  
∅ Valve Gasket Set-Reference 1095