



588400

Illustrated Parts List

Model Series

588400

950cc

TURBO DIESEL

TYPE NUMBERS
0205, 0216, 0223,
0225, 0230.

TO FIND

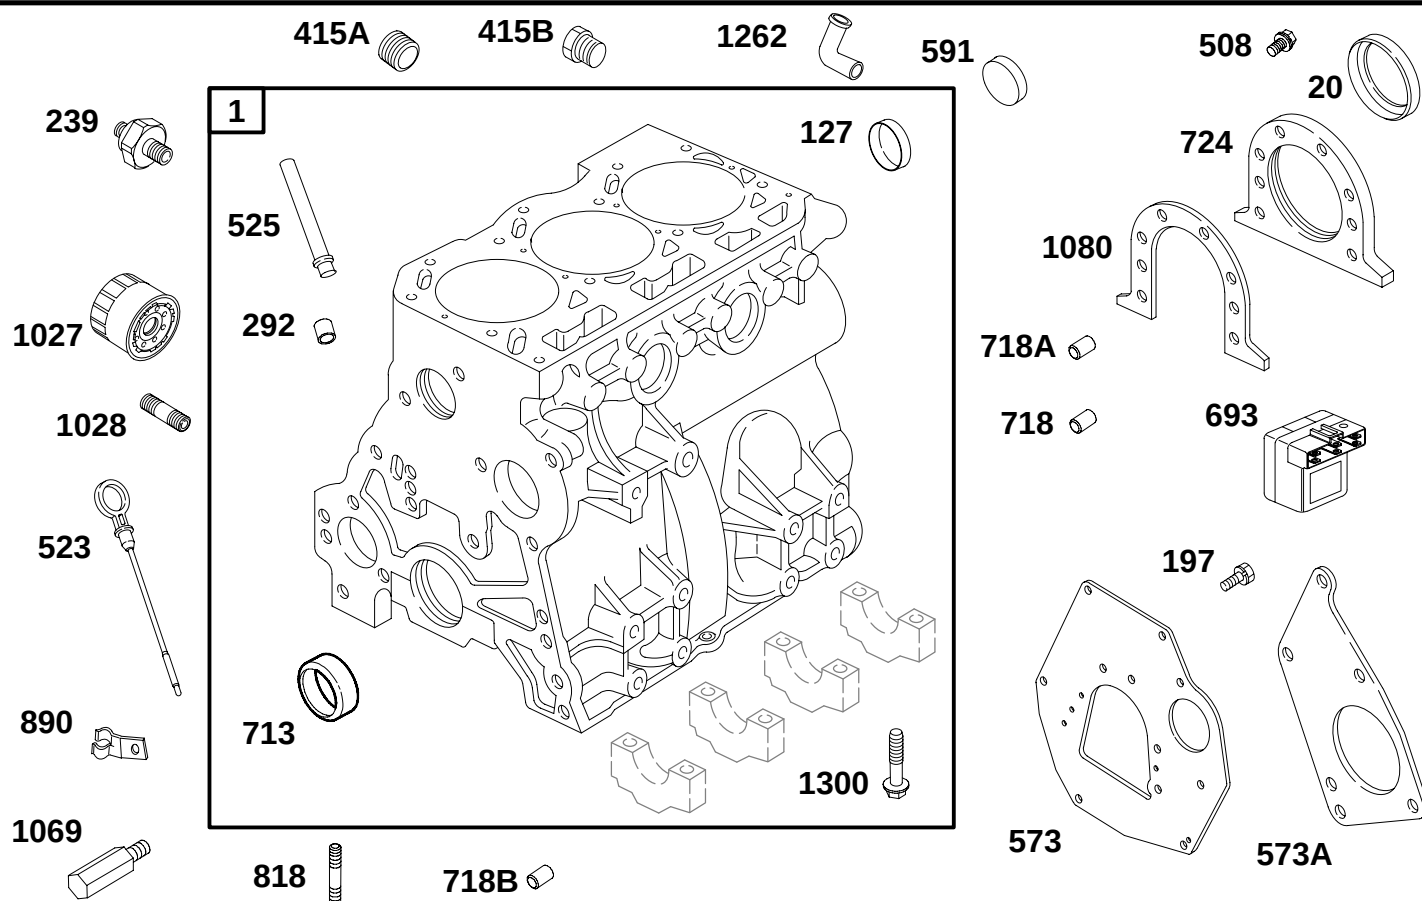 
THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Model, Type and Code Number that is located on the engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01, 02, E1, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER NOTE.**
- D. If a *Note* appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under *Note*, order the part referred to at the *Note*.
- E. If your Engine Type Number does not appear after any part number listed under *Note*, use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.
- G. **REFER TO REPAIR MANUAL MS 1055 FOR ASSEMBLY AND/OR TORQUE REQUIREMENTS.**

PRINTED IN U.S.A.



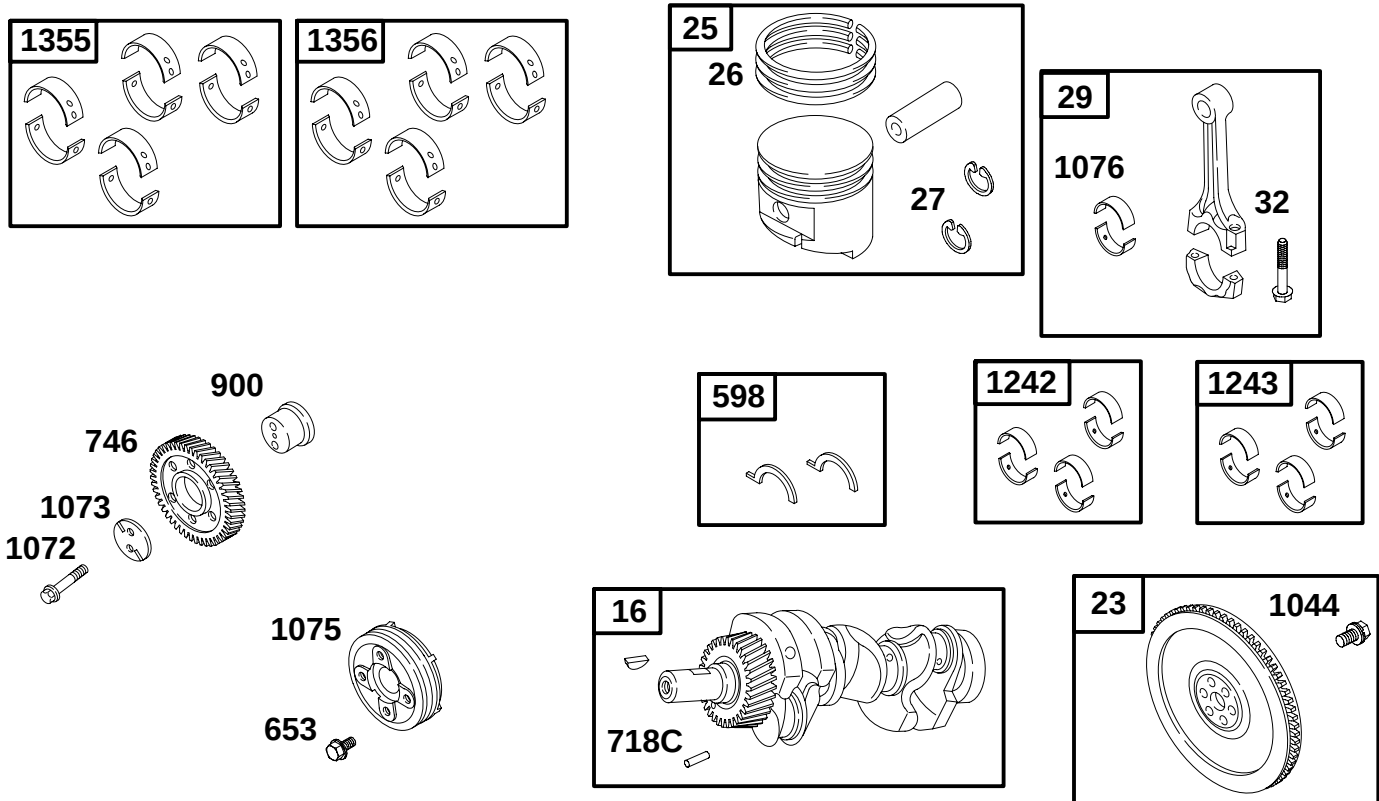 
COPYRIGHT by BRIGGS & STRATTON DAIHATSU LLC
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton DAIHATSU LLC.

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	825599	Cylinder Assembly	508	820031	Screw (Seal Retainer)	1027	820314	Filter-Oil
20	★821073	Seal-Oil (PTO Side)	523	821158	Dipstick	1028	820851	Adapter-Oil Filter
127	820004	Plug-Welch	525	820144	Tube-Dipstick	1069	820102	Nozzle-Oil
239	821135	Switch-Oil Pressure	591	821069	Plug-Camshaft	1080	★820145	Gasket-Seal Retainer
292	820662	Collar-Dipstick Tube	693	820373	Module-Pre Heat	1262	821009	Line-Water
197	820176	Screw (Mounting Bracket)	713	820129	Bushing-Camshaft	1300	820042	Screw (Crankshaft Bearing Cap)
415A	820375	Plug	718	820063	Pin-Locating			
415B	820182	Plug	718A	820062	Pin-Locating			
573	820170	Plate-Back	718B	820061	Pin-Locating			
573A	820147	Plate-Back	724	820146	Retainer-Seal			
			818	820016	Stud (Oil Pump Screen)			
			890	820238	Bracket-Support			

★ Engine Gasket Set – Reference 358

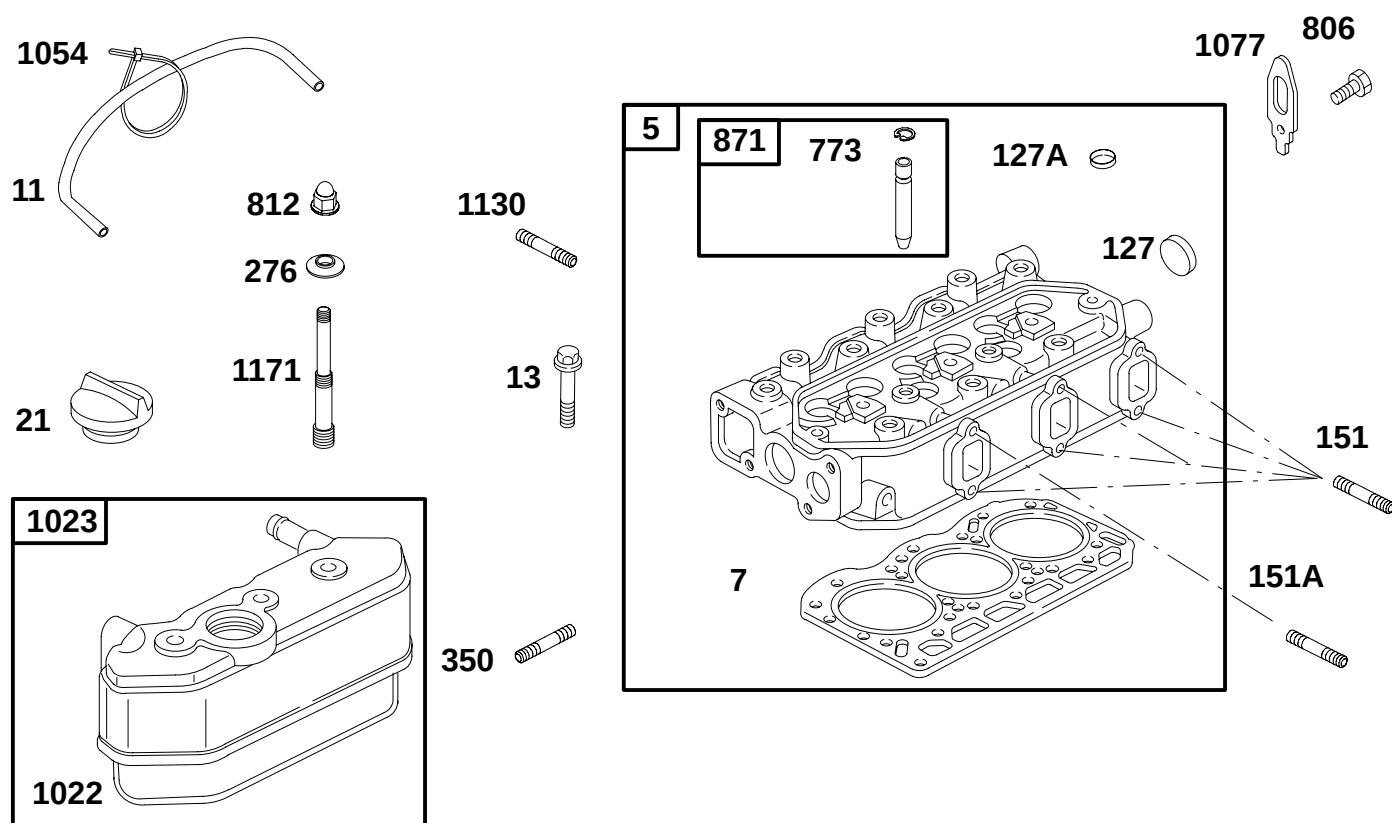 
△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	825494	Crankshaft	598	820140	Shim-Endplay (Crankshaft) (Standard)	1044	820080	Screw (Flywheel)
23	825303	Flywheel			----- Note -----	1072	820081	Screw (Idle Gear Plate)
25	825626	Piston Assembly (Standard)			820139 Shim-Endplay (Crankshaft) (.005" Oversize)	1073	820117	Plate-Idle Gear
		----- Note -----				1075	820236	Pulley-Crankshaft
		825628 Piston Assembly (.010" Oversize)	653	820079	Screw (Crankshaft Pulley)	1076	820142	Bearing/STD-Rod
26	825512	Ring Set (Standard)	718C	820059	Pin-Locating	1242	825504	Bearing Set/STD-Rod
		----- Note -----	746	820611	Gear-Idler	1243	825506	Bearing Set/010-Rod
		825514 Ring Set (.010" Oversize)	900	820116	Shaft-Gear	1355	825510	Bearing Set/STD-Main
27	820926	Lock-Piston Pin				1356	825508	Bearing Set/010-Main
29	825502	Rod-Connecting						
32	820928	Screw (Connecting Rod)						

★ Engine Gasket Set – Reference 358

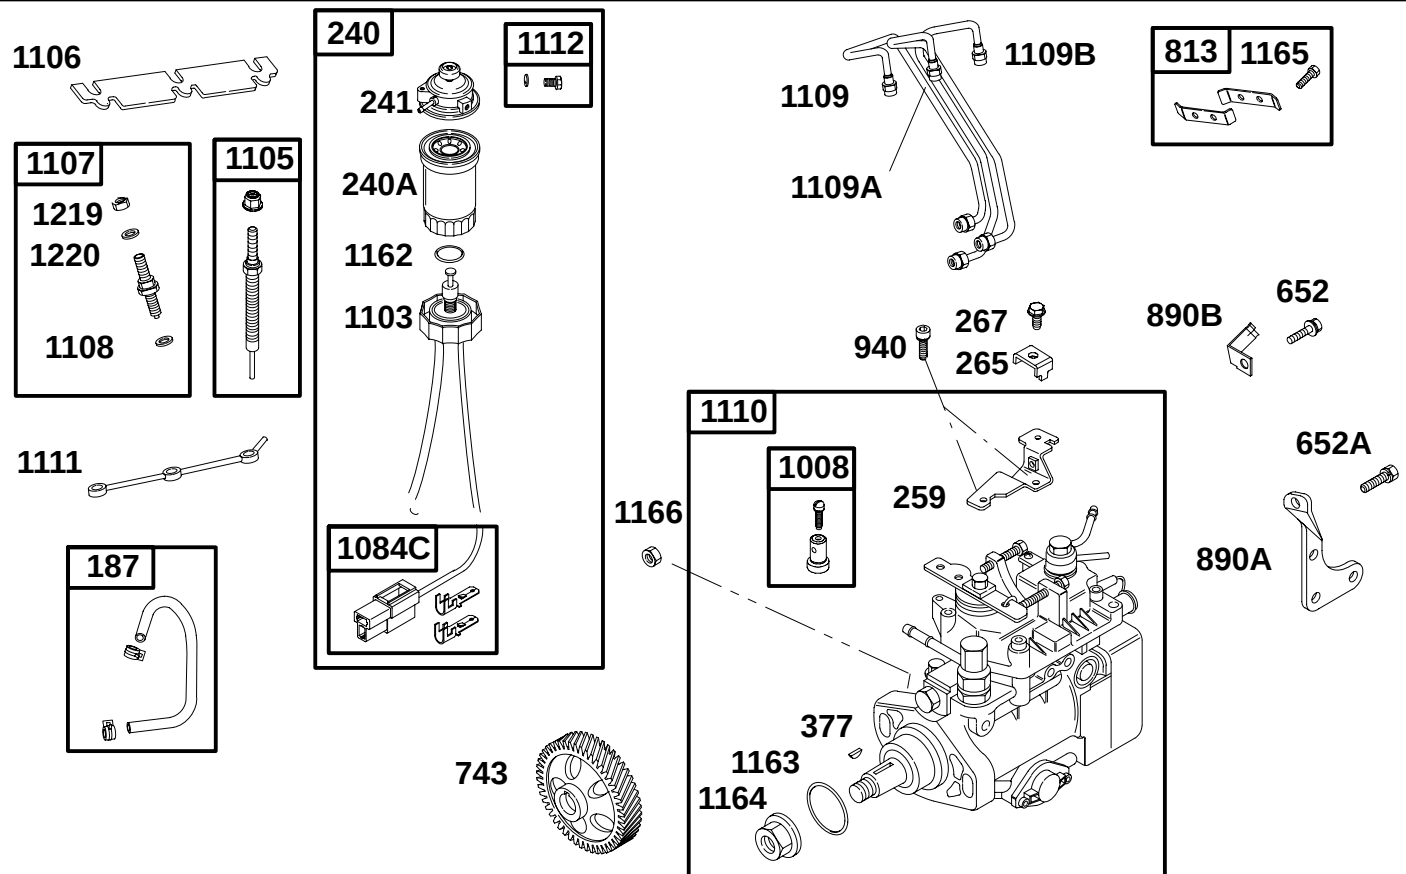 
△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	825685	Head-Cylinder (Used After Code Date 04083100). ----- Note ----- 825516 Head-Cylinder (Used Before Code Date 04090100).	151	820997	Stud (Exhaust Manifold)	812	820071	Nut (Rocker Cover)
7	★Δ820930	Gasket-Cylinder Head	151A	820999	Stud (Exhaust Manifold)	871	825030	Bushing-Valve Guide
11	820932	Tube-Breather	276	★Δ820064	Washer-Sealing (Rocker Cover)	1022	★Δ820150	Gasket-Rocker Cover
13	820934	Screw (Cylinder Head) (10 mm)	350	820078	Stud (Water Pump)	1023	825672	Cover-Rocker (Order Reference 1019, Label Kit and Reference 1036, Emissions Label for your Model, Type, Trim)
21	825024	Cap-Oil Fill	773	820130	Retainer (Valve Guide Bushing)	1054	280275	Tie-Cable
127	820004	Plug-Welch	806	820212	Screw (Lifting Bracket)	1077	820254	Bracket-Lifting
127A	820005	Plug-Welch				1130	820015	Stud (Intake Manifold)
						1171	820076	Stud (Rocker Cover)

★ Engine Gasket Set – Reference 358

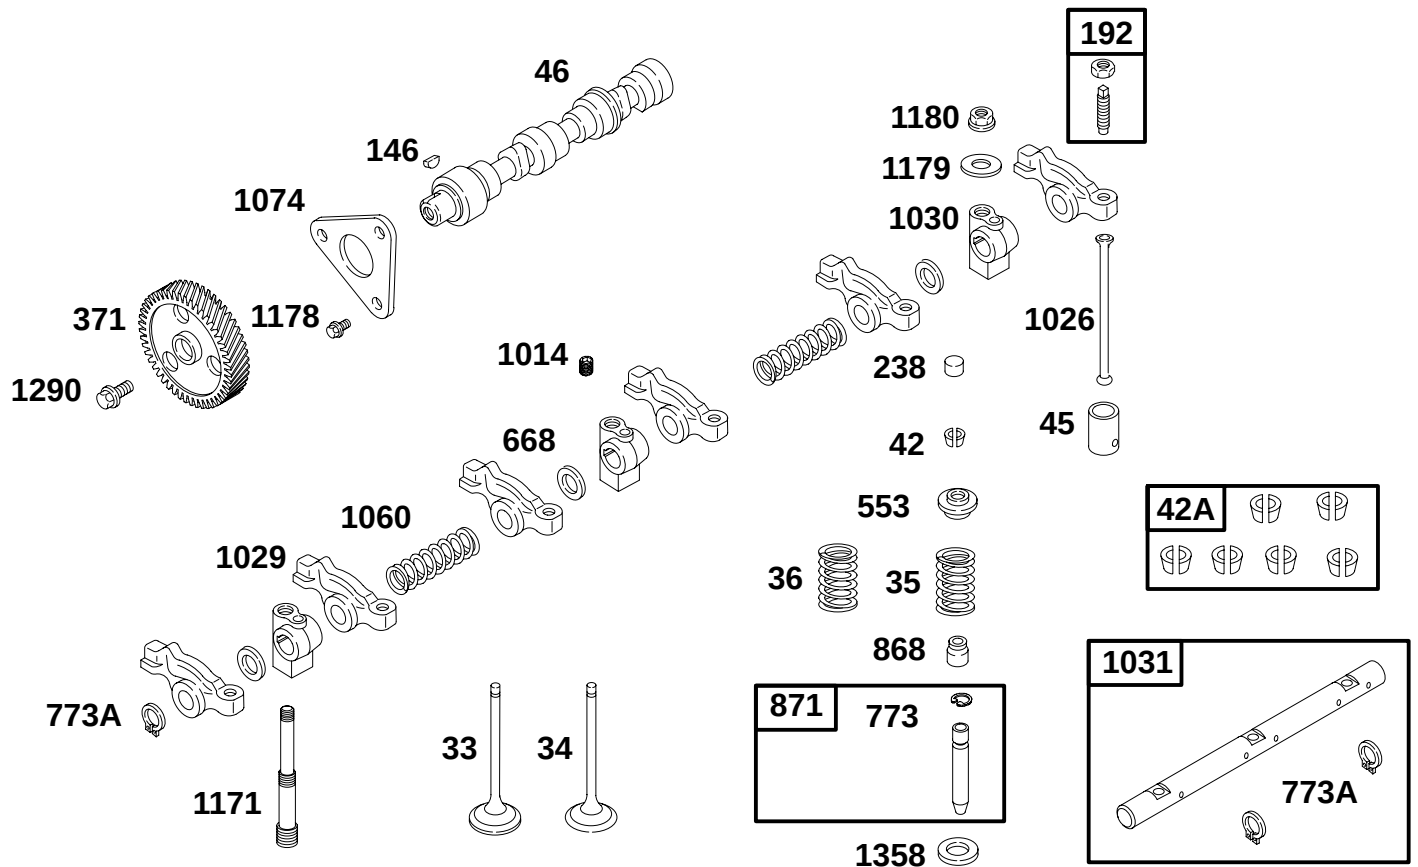 
Δ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	825179	Line-Fuel	940	820640	Screw (Casing Clamp Bracket)	1109	825194	Pipe-Injector #1
240	825219	Filter-Fuel	1008	820467	Clamp-Swivel	1109A	825195	Pipe-Injector #2
240A	820311	Filter-Fuel (Includes Reference 1162)	1084C	825156	Connector-Terminal	1109B	825196	Pipe-Injector #3
241	820344	Cover-Fuel Filter (Includes Reference 1112)	1103	820347	Sensor-Fuel Filter (Includes Reference 1162)	1110	825518	Pump-Injection
259	820634	Bracket-Casing Clamp	1105	825176	Plug-Glow	1111	820412	Pipe-Fuel Return
265	691024	Clamp-Casing	1106	820409	Strap-Glow Plug	1112	825198	Plug-Vent
267	820012	Screw (Casing Clamp)	1107	825178	Nozzle-Injector	1162	820348	Seal-O Ring (Fuel Filter Sensor)
377	821064	Key-Woodruff (Injection Pump)	1108	820411	Seat-Injector	1163	820414	Seal-O Ring (Injection Pump) (Shaft)
652	820593	Screw (Support Bracket)				1164	820419	Nut (Injection Pump)
652A	820272	Screw (Support Bracket)				1165	820031	Screw (Clamp)
743	820619	Gear-Drive (Injection Pump)				1166	820417	Nut (Injection Pump)
813	825197	Clamp				1219	820829	Nut (Injector Nozzle)
890A	820415	Bracket-Support				1220	820831	Washer (Injector Nozzle)
890B	820479	Bracket-Support						

★ Engine Gasket Set – Reference 358

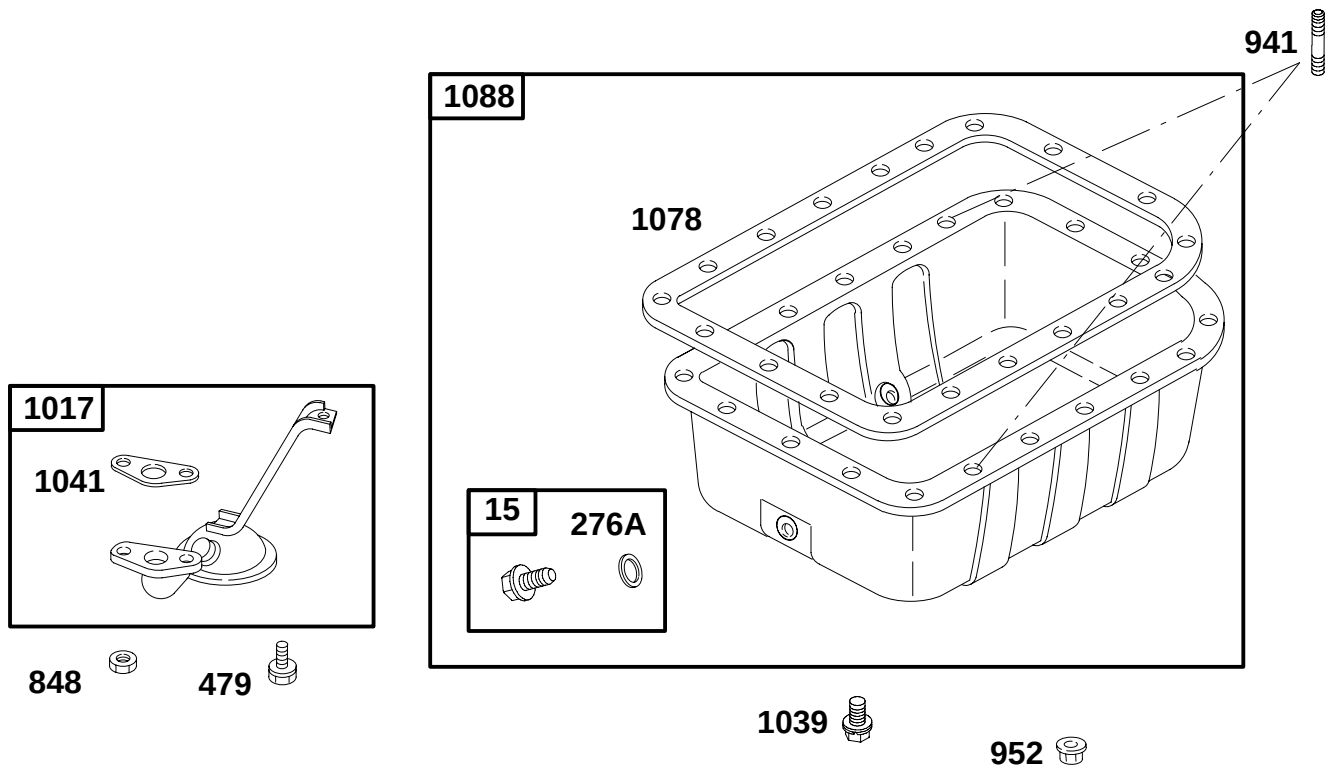 
△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
33	820404	Valve-Exhaust	238	821214	Cap-Valve (Used After Code Date 04083100).	1026	821218	Rod-Push (Used After Code Date 04083100).
34	820403	Valve-Intake						
35	820406	Spring-Valve (Intake)			----- Note -----			----- Note -----
36	820406	Spring-Valve (Exhaust)			820113 Cap-Valve (Used Before Code Date 04090100).	1029	820387	Arm-Rocker
42	825042	Keeper-Valve (Contains 1 Set)	371	820613	Gear-Cam	1030	820106	Support-Rocker Arm
42A	825082	Keeper-Valve (Contains 6 Sets)	553	820111	Retainer-Valve Spring	1031	825093	Shaft-Rocker Arm
45	820110	Tappet-Valve	668	820065	Spacer (Rocker Arm Shaft)	1060	820044	Spring-Rocker Shaft
46	820936	Camshaft	773	820130	Retainer (Valve Guide Bushing)	1074	820118	Retainer-Camshaft
146	691639	Key-Timing	773A	820003	Retainer (Rocker Arm Shaft)	1171	820076	Stud (Rocker Cover)
192	825688	Adjuster-Rocker Arm (Used After Code Date 04083100).	868	Δ820405	Seal-Valve	1178	820032	Screw (Camshaft Retainer)
		----- Note -----	871	825030	Bushing-Valve Guide	1179	820177	Washer (Rocker Arm Support)
		825041 Adjuster-Rocker Arm (Used Before Code Date 04090100).	1014	820105	Screw (Rocker Arm Support)	1180	820070	Nut (Rocker Arm Support)
						1290	820075	Screw (Cam Gear)
						1358	820112	Seat-Valve Spring

★ Engine Gasket Set - Reference 358

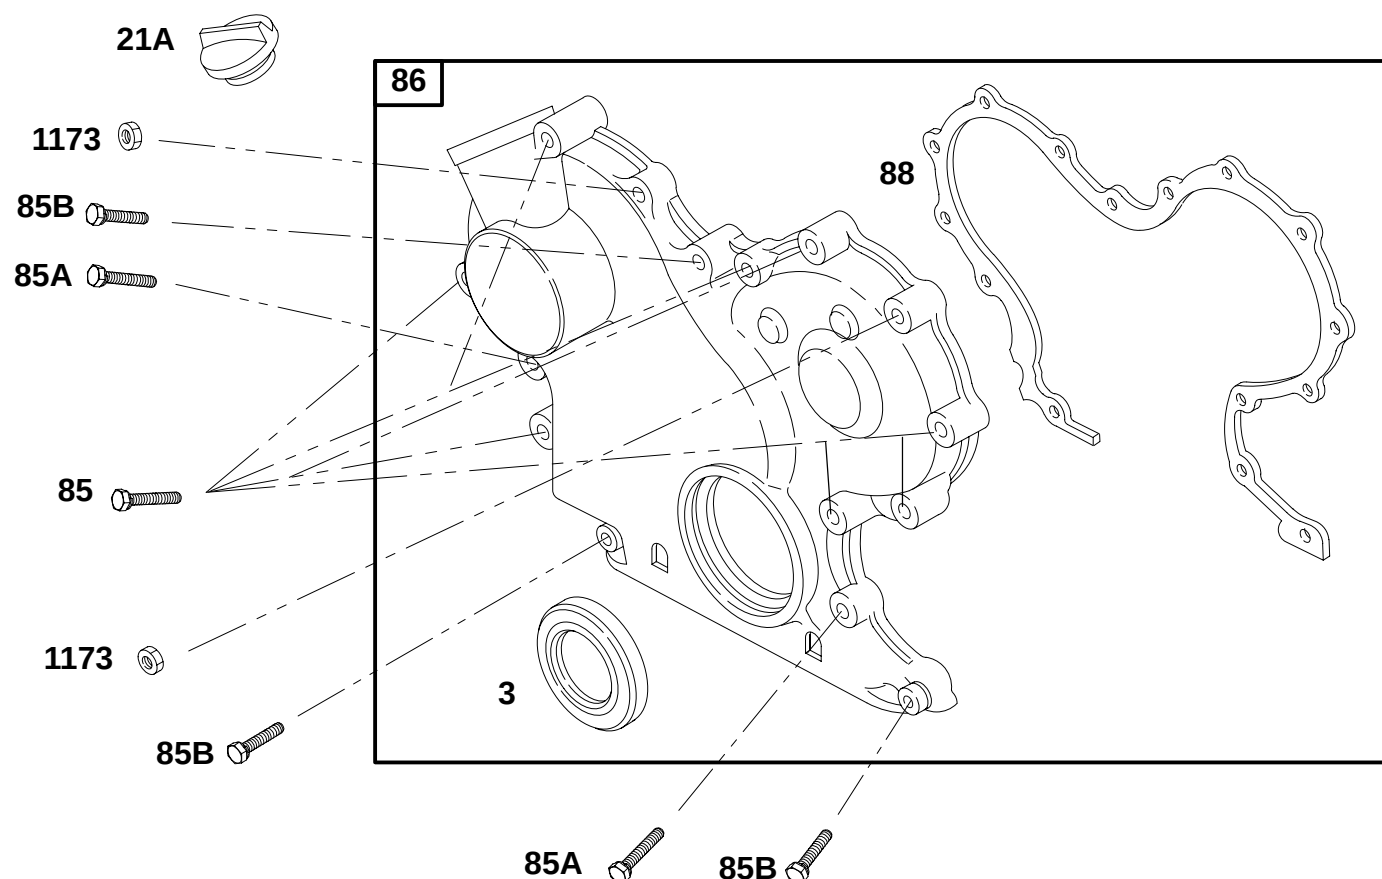 
Δ Valve Gasket Set - Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
15	825278	Plug—Oil Drain (16 mm)	848	820069	Nut (Oil Pump Screen)	1017	825089	Screen—Oil Pump
276A	★820582	Washer—Sealing (Oil Drain Plug) (16 mm)	941	820017	Stud (Oil Pan)	1039	820034	Screw (Oil Pan)
479	820034	Screw (Oil Pump Screen)	952	820068	Nut (Oil Pan)	1041	★820104	Gasket—Oil Pump Screen
						1078	★820137	Gasket—Oil Pan
						1088	825285	Pan—Oil (Dual Drain) (16 mm)

★ Engine Gasket Set – Reference 358

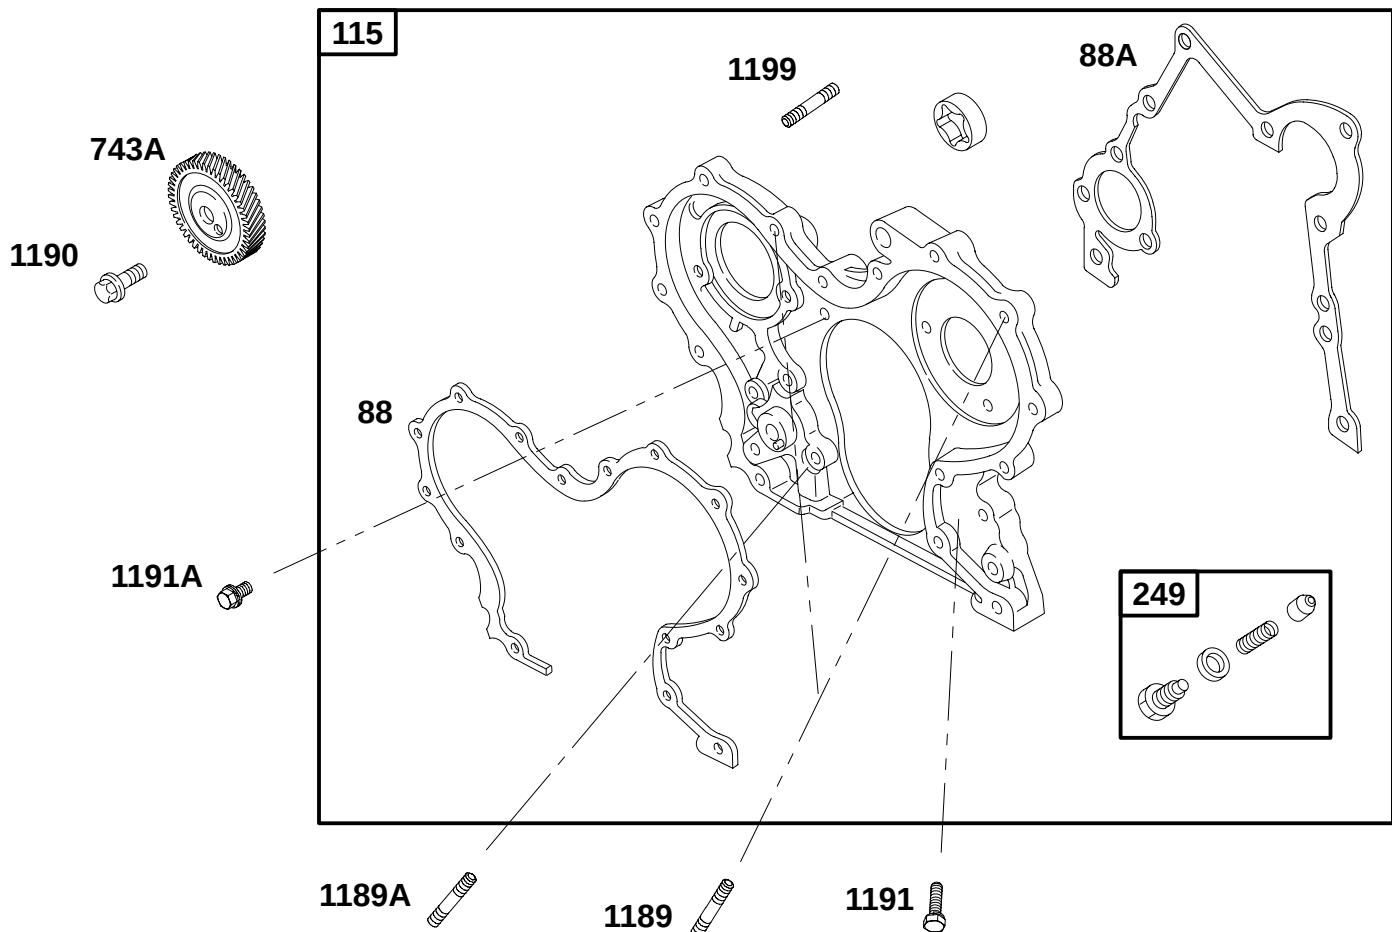 
△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★821071	Seal-Oil (Magneto Side)	85	820425	Screw (Gear Cover to Gear Reduction Case)	86	825185	Cover-Gear
21A	821077	Cap-Oil Fill Used on Type No(s). 0223.	85A	820029	Screw (Gear Cover to Gear Reduction Case)	----- Note -----		
			85B	820027	Screw (Gear Cover to Gear Reduction Case)	88	★820377	Gasket-Gear Reduction Cover
						1173	820069	Nut (Gear Cover)

★ Engine Gasket Set – Reference 358

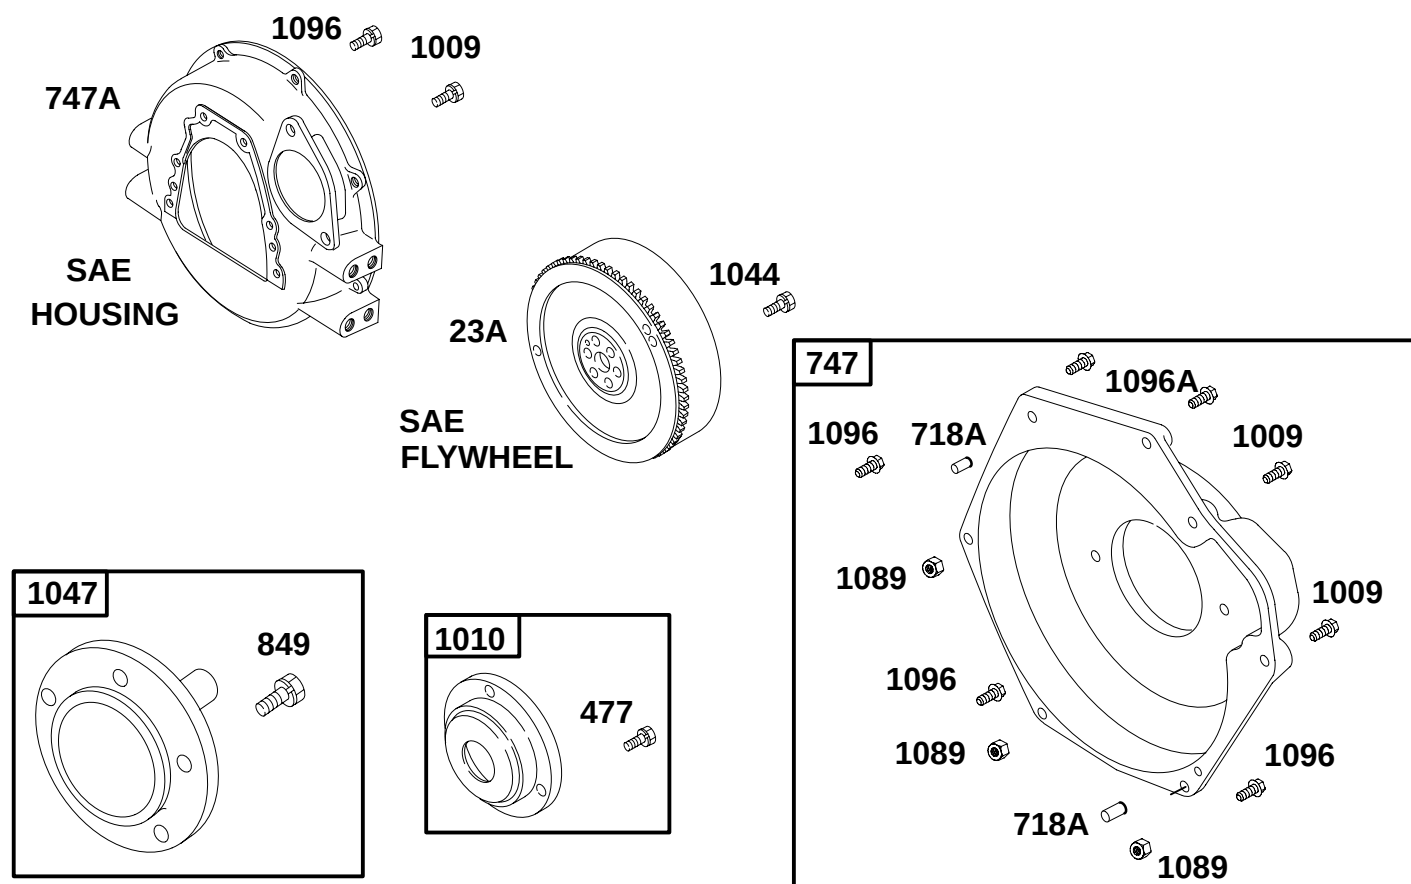 
△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
88	★820377	Gasket-Gear Reduction Cover	743A	820615	Gear-Drive (Gear Housing)	1191	820030	Screw (Gear Housing)
88A	★820155	Gasket-Gear Reduction Cover	1189	820156	Stud (Gear Housing)	1191A	820033	Screw (Gear Housing)
115	825186	Housing-Gear	1189A	820016	Stud (Gear Housing)	1199	820426	Stud (Injection Pump)
249	825032	Valve-Pressure Relief	1190	820180	Screw (Drive Gear)			

★ Engine Gasket Set – Reference 358

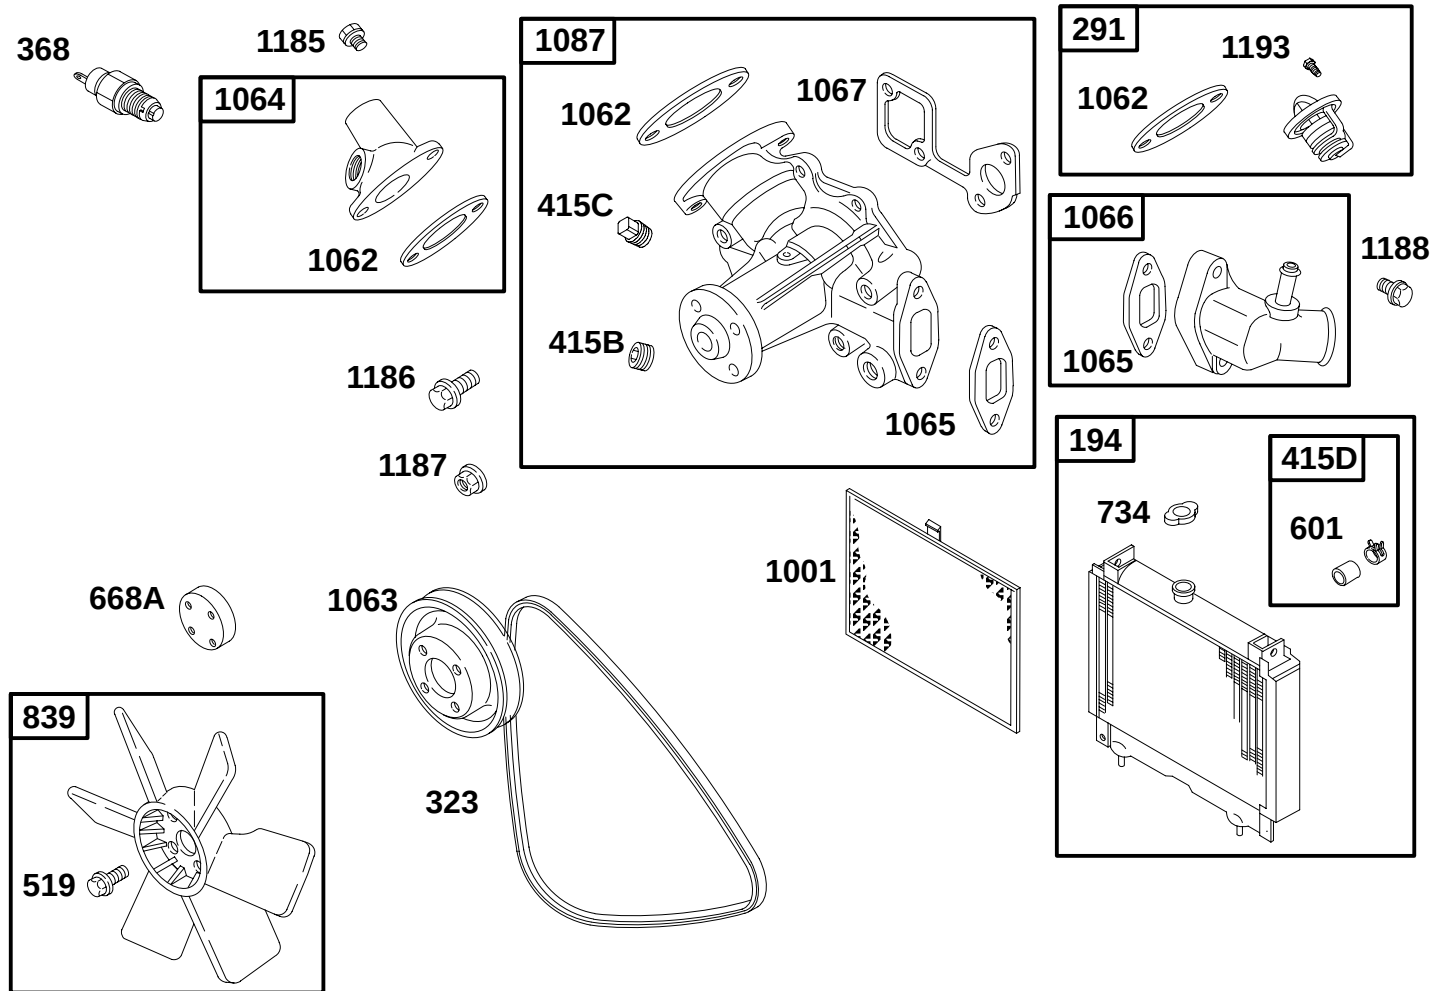 
△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23A	825071	Flywheel	849	820212	Screw (Stub Shaft)	1047	825268	Shaft-Stub (1 1/8" Diameter Shaft) (3 3/4" Length)
477	820199	Screw (Bearing Retainer)	1009	820451	Screw (Starter Motor) (Mount Starter To SAE Housings)			----- Note -----
718A	820062	Pin-Locating						825078 Shaft-Stub (1 7/16" Diameter Shaft)
747	825098	Housing-Flywheel (KTR®) (Small Pilot 2 Holes)						825123 Shaft-Stub (1" Diameter Shaft)
		----- Note -----						825269 Shaft-Stub (1 1/8" Diameter Shaft) (4 1/5" Length)
		825113 Housing-Flywheel (KTR®)	1010A	825079	Retainer-Bearing	1089	820070	Nut (Flywheel Housing)
747A	820248	Housing-Flywheel (SAE)	1044	820080	Screw (Flywheel)	1096	820241	Screw (Flywheel Housing)
						1096A	820450	Screw (Flywheel Housing)

★ Engine Gasket Set – Reference 358

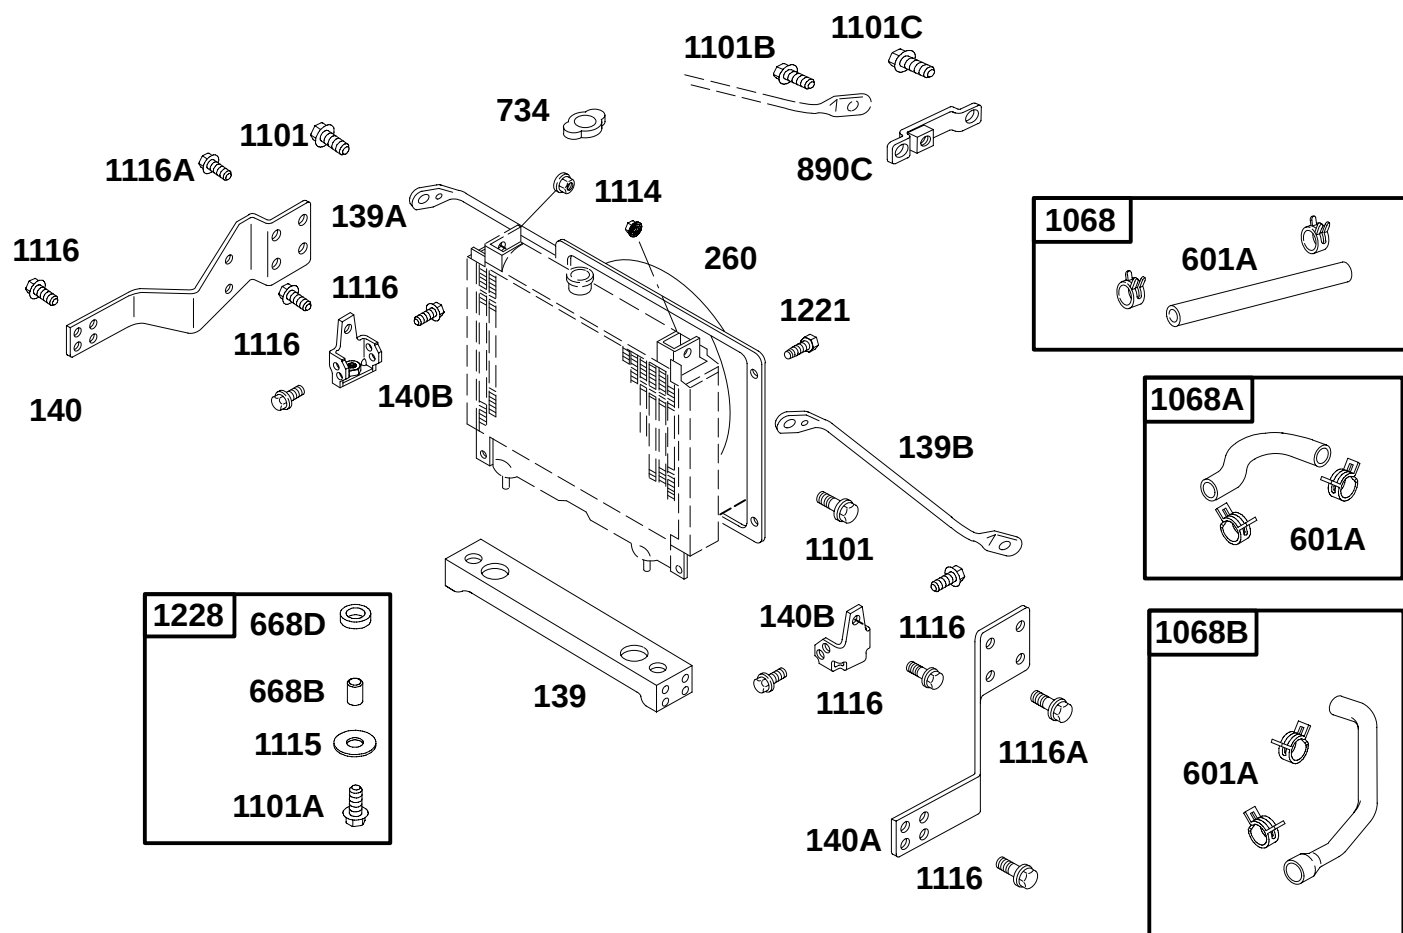 
△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
194	825645	Radiator Used on Type No(s). 0225, 0230.	519	820034	Screw (Radiator Fan)	1185	820031	Screw (Outlet Housing)
291	825064	Thermostat	601	820201	Clamp-Hose	1186	820022	Screw (Water Pump)
323	821075	Belt-Vee (940 mm)	668A	820218	Spacer (Radiator Fan)	1187	820181	Nut (Water Pump)
		----- Note -----			Used on Type No(s). 0225, 0230.	1188	820031	Screw (Inlet Housing)
		820893 Belt-Vee (970 mm)	734	820258	Cap-Radiator	1193	820185	Screw (Thermostat)
		Used on Type No(s). 0225.	839	821013	Fan-Radiator (340 mm)			
368	820208	Switch-Water Temperature	1001	821047	Screen-Radiator			
415B	820182	Plug	1062	★820093	Gasket-Outlet Housing			
415C	820052	Plug (Water Pump)	1063	820095	Pulley-Pump			
415D	825075	Plug (Radiator)	1064	825519	Housing-Outlet			
			1065	★820098	Gasket-Inlet Housing			
			1066	825520	Housing-Inlet			
			1067	★△820100	Gasket-Water Pump			
			1087	825639	Pump-Water			

★ Engine Gasket Set - Reference 358

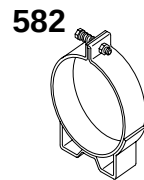 
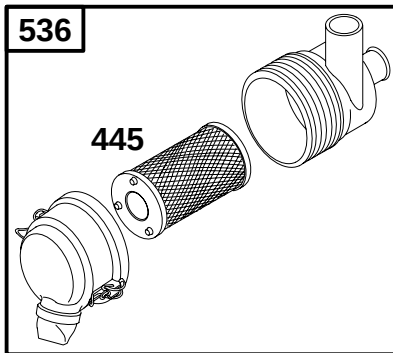 
 
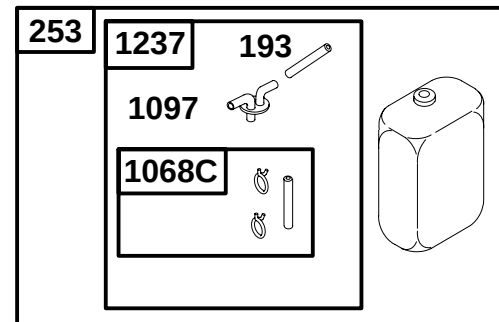 
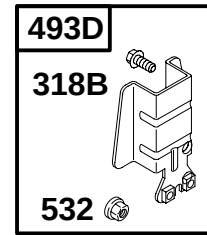 
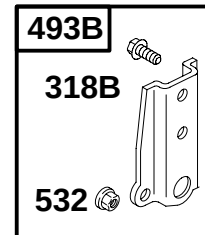 
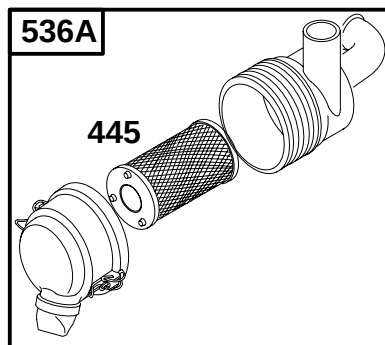 
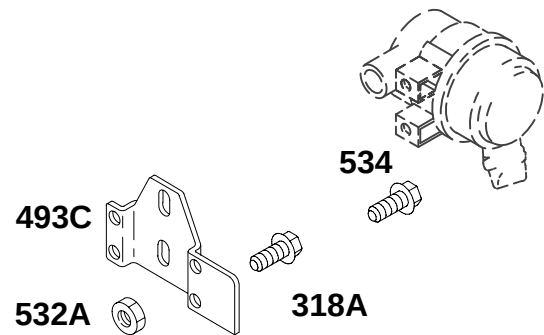 
△ Valve Gasket Set - Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
139	821045	Support-Radiator (Front)	890C	820194	Bracket-Support (Radiator)	1116	820174	Screw (Radiator Bracket)
139A	821041	Support-Radiator (Right Hand)	1068	825045	Hose/Clamp Assembly	1116A	820024	Screw (Radiator Bracket) (Used With Engine Mounts Only)
139B	821043	Support-Radiator (Left Hand)	1068A	825557	Hose/Clamp Assembly	----- Note -----		
140	820192	Bracket-Radiator (Right Hand)	1068B	825133	Hose/Clamp Assembly	820023	820023	Screw (Radiator Bracket) (Used With Engine Mounts And Radiator Brackets)
140A	820193	Bracket-Radiator (Left Hand)	1101	820272	Screw (Radiator Support)	1221	820865	Screw (Fan Shroud) (320 mm Fan)
140B	821039	Bracket-Radiator	1101A	820309	Screw (Radiator Support)	1228	825135	Mount-Radiator
260	821019	Shroud-Fan	1101B	820273	Screw (Radiator Support)			
601A	820256	Clamp-Hose	1101C	820452	Screw (Radiator Support)			
668B	820307	Spacer (Radiator Mount)	1114	820070	Nut (Radiator Support)			
668D	820198	Spacer (Radiator Mount)	1115	820296	Washer (Radiator Support)			
734	820258	Cap-Radiator						

★ Engine Gasket Set – Reference 358

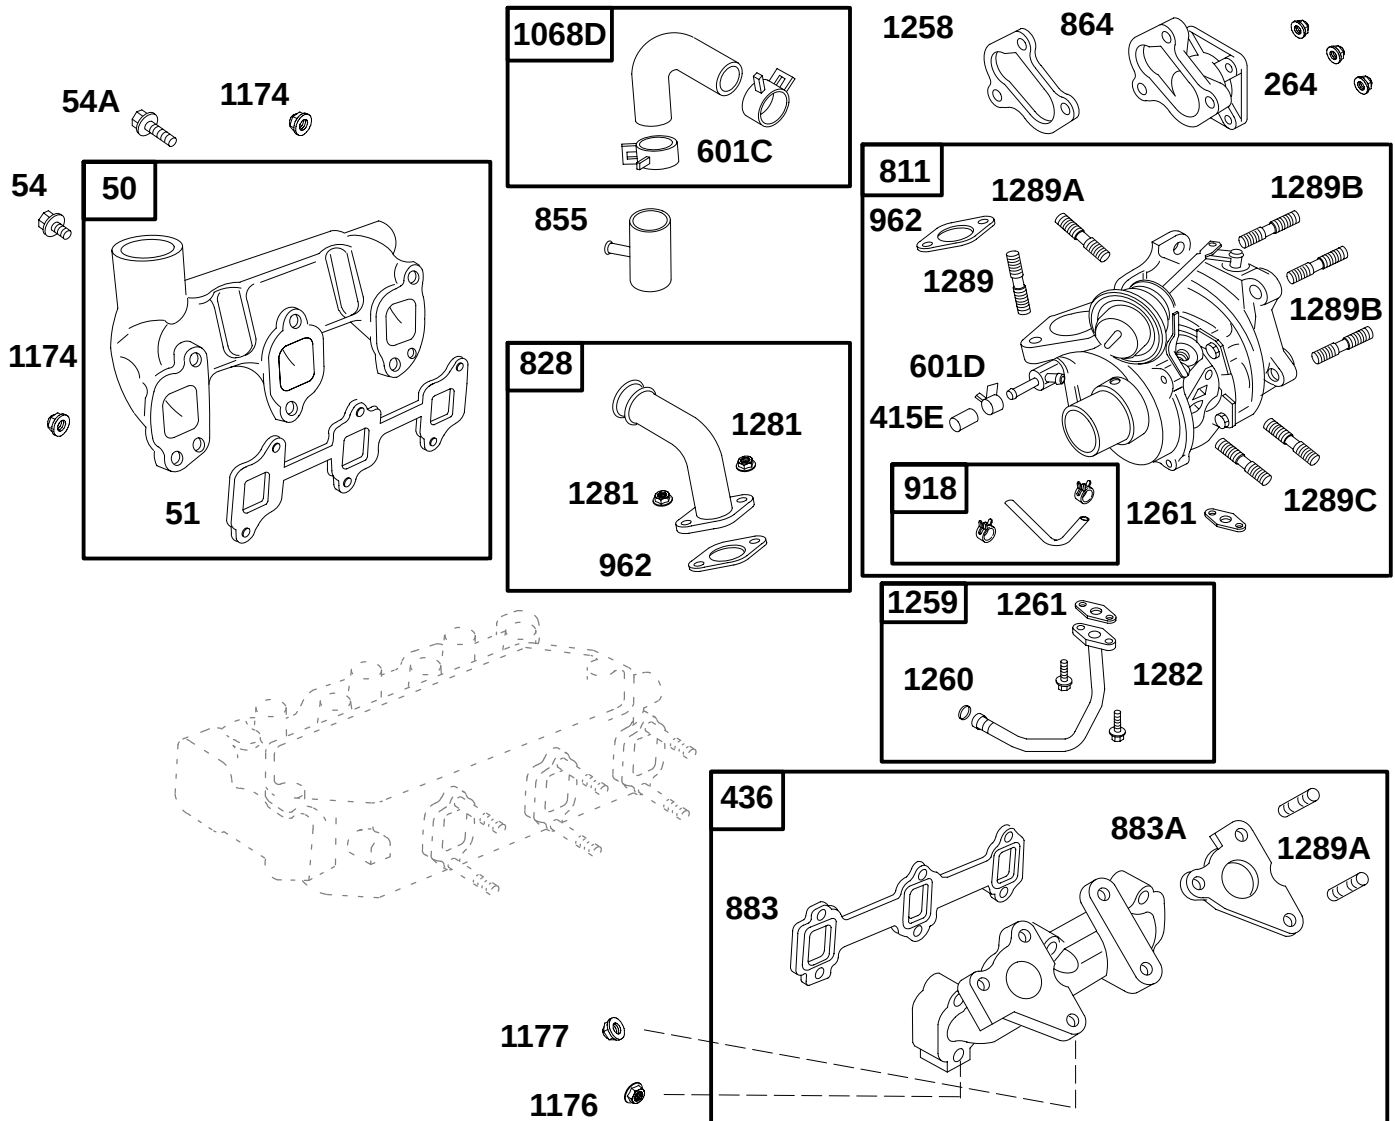 
△ Valve Gasket Set – Reference 1095

588400**1315****1315A****1315B**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
193	820597	Hose-Reserve Tank (660 mm Hose)	534	820273	Screw (Air Cleaner)	1068C	825296	Hose/Clamp Assembly
253	825462	Tank-Reserve	536	825117	Cleaner-Air (With Vacuum Adaptor)	1097	820287	Cap-Surge Tank
318A	820212	Screw (Mounting Bracket)	536A	825118	Cleaner-Air (90 Degree Elbow With Vacuum Adaptor)	1237	825461	Cap/Hose-Reserve (660 mm Hose)
318B	820034	Screw (Mounting Bracket)	582	820230	Clamp-Air Cleaner	1315	820554	Hose-Air Cleaner
445	820263	Filter-Air Cleaner Cartridge				1315A	820555	Hose-Air Cleaner
493B	825106	Bracket-Mounting (Reserve Tank)				1315B	820556	Hose-Air Cleaner
493C	820195	Bracket-Mounting (Air Cleaner)						
493D	825314	Bracket-Mounting (Reserve Tank)						
532	820011	Nut (Mounting Bracket)						
532A	820070	Nut (Mounting Bracket)						

★ Engine Gasket Set – Reference 358

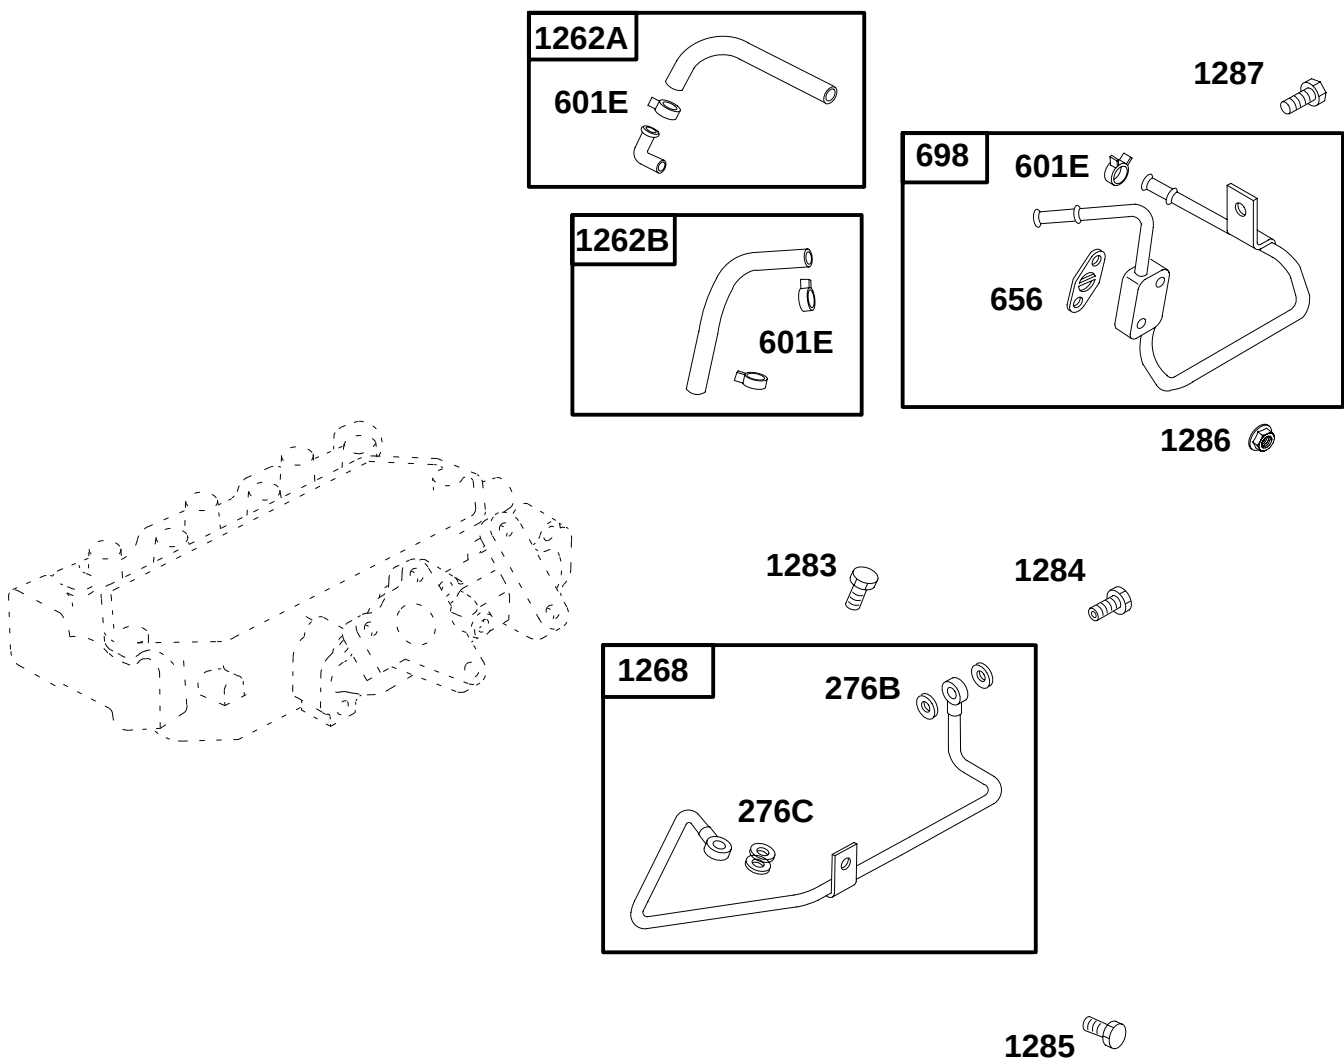 
△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	825530	Manifold-Intake	883	★△820817	Gasket-Exhaust (Manifold)	1260	820975	Seal-O Ring (Oil Outlet Pipe)
51	★△820407	Gasket-Intake	883A	★820967	Gasket-Exhaust (Turbo Charger)	1261	820973	Gasket-Oil Outlet
54	820031	Screw (Intake Manifold)	918	825542	Hose-Vacuum (Turbo Charger)	1281	820181	Nut (Air Inlet Pipe)
54A	820408	Screw (Intake Manifold)	962	820988	Gasket-Air Inlet Pipe	1282	820971	Screw (Oil Outlet Pipe)
264	820969	Nut (Muffler Adapter)	1068D	825543	Hose/Clamp Assembly	1289	820981	Stud (Turbo Charger)
415E	820995	Plug	1174	820069	Nut (Intake Manifold)	1289A	820553	Stud (Turbo Charger)
436	825531	Manifold-Exhaust	1176	820178	Nut (Exhaust Manifold)	1289B	820983	Stud (Turbo Charger)
601C	820944	Clamp-Hose	1177	820178	Nut (Muffler)	1289C	820985	Stud (Turbo Charger)
601D	820993	Clamp-Hose	1258	820990	Gasket-Muffler Adapter			
811	825533	Charger-Turbo	1259	825535	Pipe-Oil Outlet			
828	825536	Pipe-Air Inlet						
855	820942	Adapter-Air Cleaner						
864	825537	Adapter-Muffler						

★ Engine Gasket Set - Reference 358

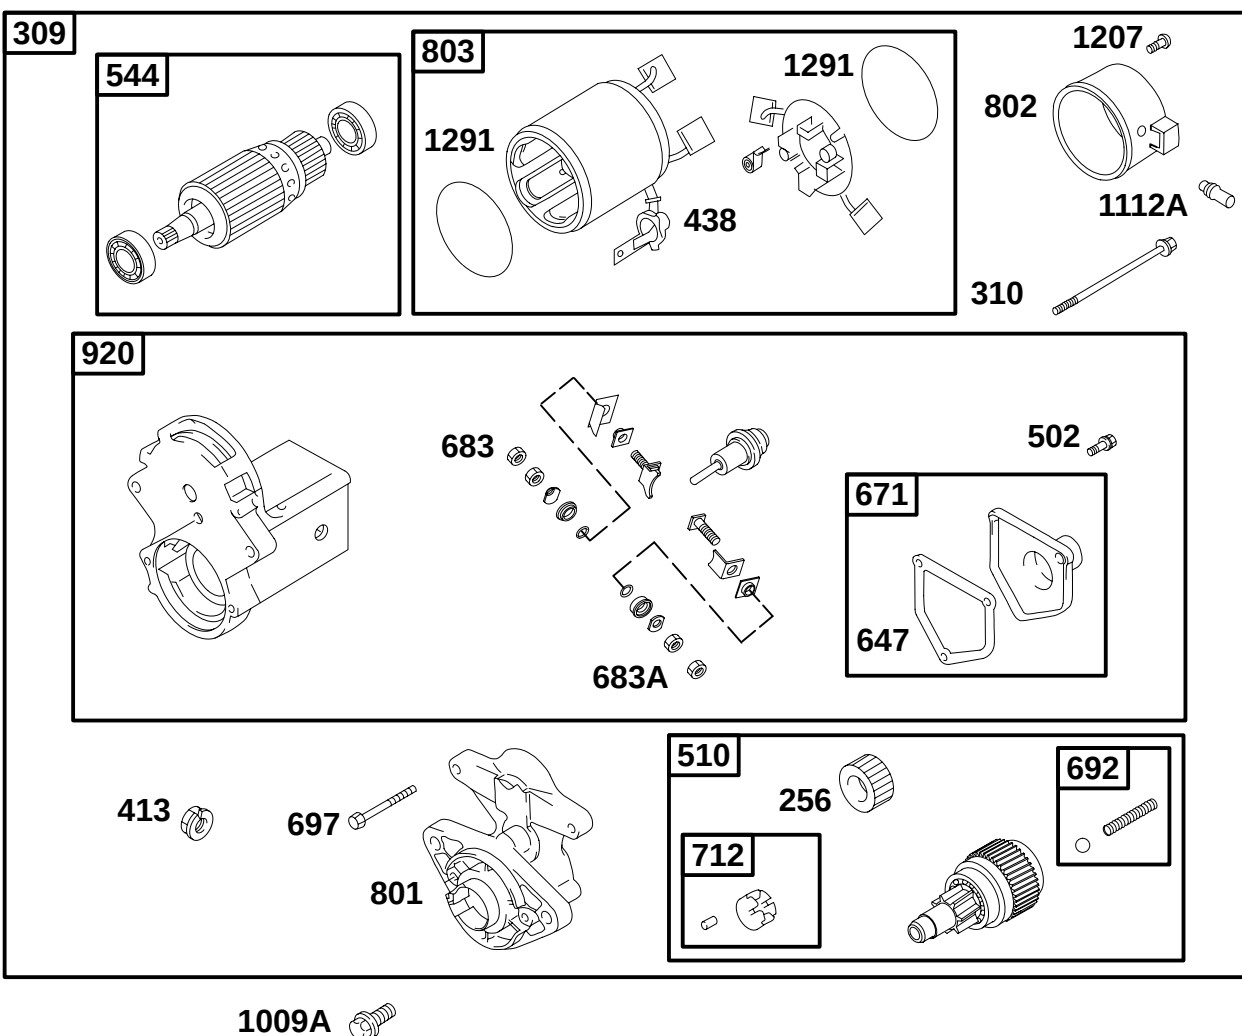 
△ Valve Gasket Set - Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
276B	★820950	Washer-Sealing (Oil Inlet Pipe)	1262A	825540	Line-Water	1285	820023	Screw (Oil Inlet Pipe)
276C	★820952	Washer-Sealing (Oil Inlet Pipe)	1262B	825541	Line-Water	1286	820069	Nut (Water Pipe)
601E	820960	Clamp-Hose	1268	825539	Pipe-Oil Inlet	1287	820023	Screw (Water Pipe)
656	820962	Gasket-Water Pipe	1283	820954	Screw (Oil Inlet Pipe)			
698	825558	Pipe-Water	1284	820948	Screw (Oil Inlet Pipe)			

★ Engine Gasket Set – Reference 358

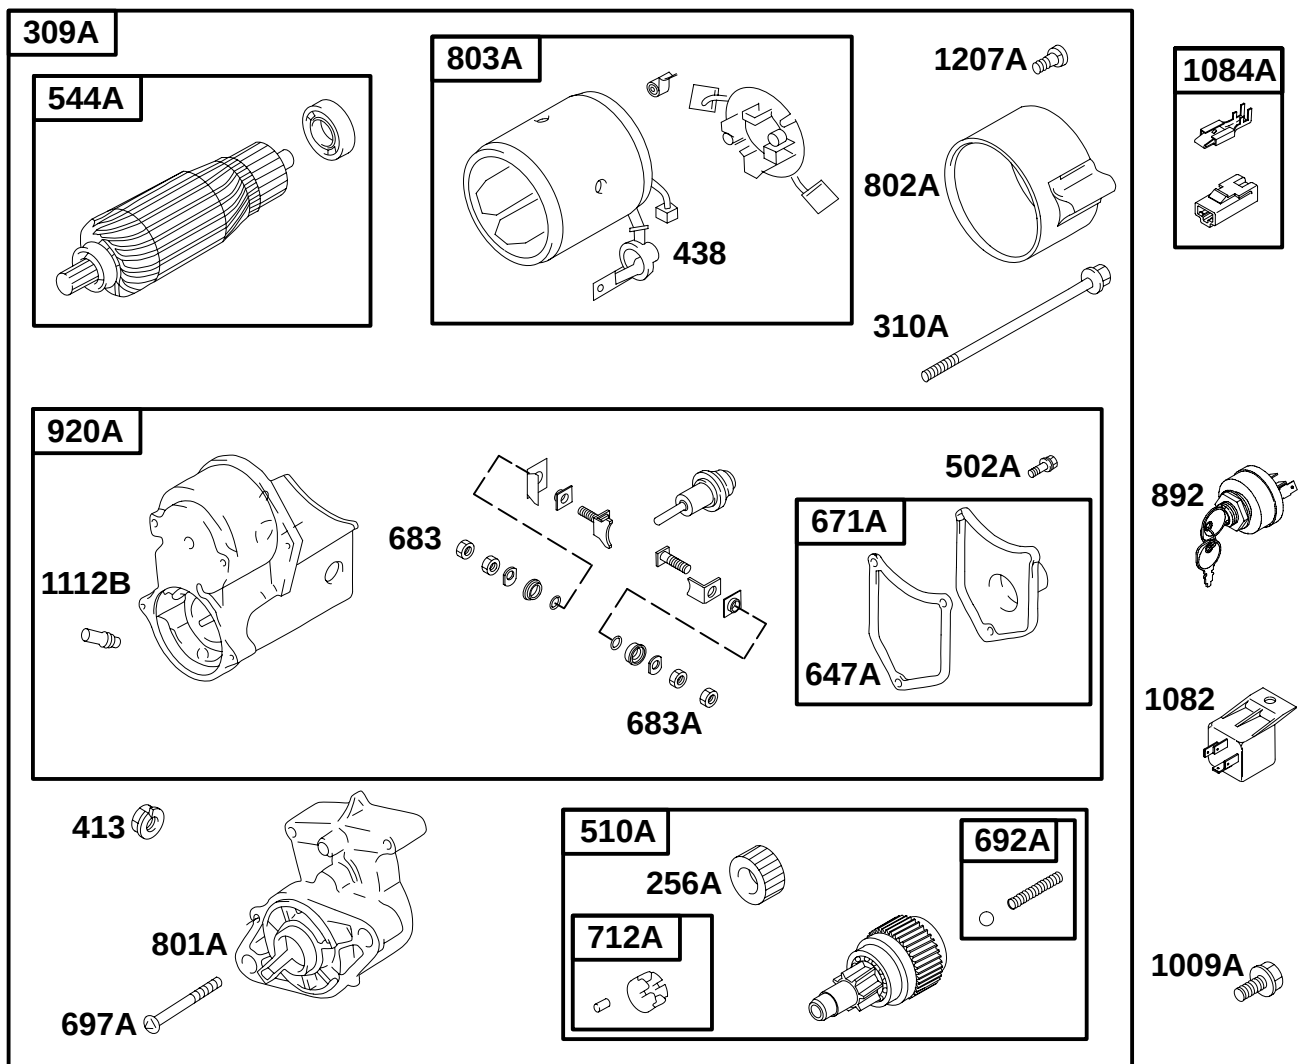 
△ Valve Gasket Set – Reference 1095

588400**1.2 KW**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
256	820767	Gear-Starter Drive	647	820719	Gasket-Solenoid Cover	712	825401	Roller-Clutch
309	825222	Motor-Starter	671	825422	Cover-Solenoid	801	825408	Cap-Drive
310	820773	Bolt (Starter Motor)	683	820723	Nut (Starter Solenoid) (Terminal)	802	820771	Cap-End
413	820067	Nut (Starter Motor)	683A	820721	Nut (Starter Solenoid) (Terminal)	803	825423	Housing-Starter (Includes Brush Set)
438	820725	Boot-Terminal	692	825402	Spring-Detent	920	825410	Solenoid-Starter
502	820763	Screw (Solenoid Cover)	697	820777	Screw (Drive Cap)	1009A	820019	Screw (Starter Motor)
510	825406	Drive-Starter				1112A	820779	Plug-Vent
544	825404	Armature-Starter				1207	820775	Screw (End Cap)
						1291	820769	Seal-O Ring (Starter Housing)

★ Engine Gasket Set – Reference 358

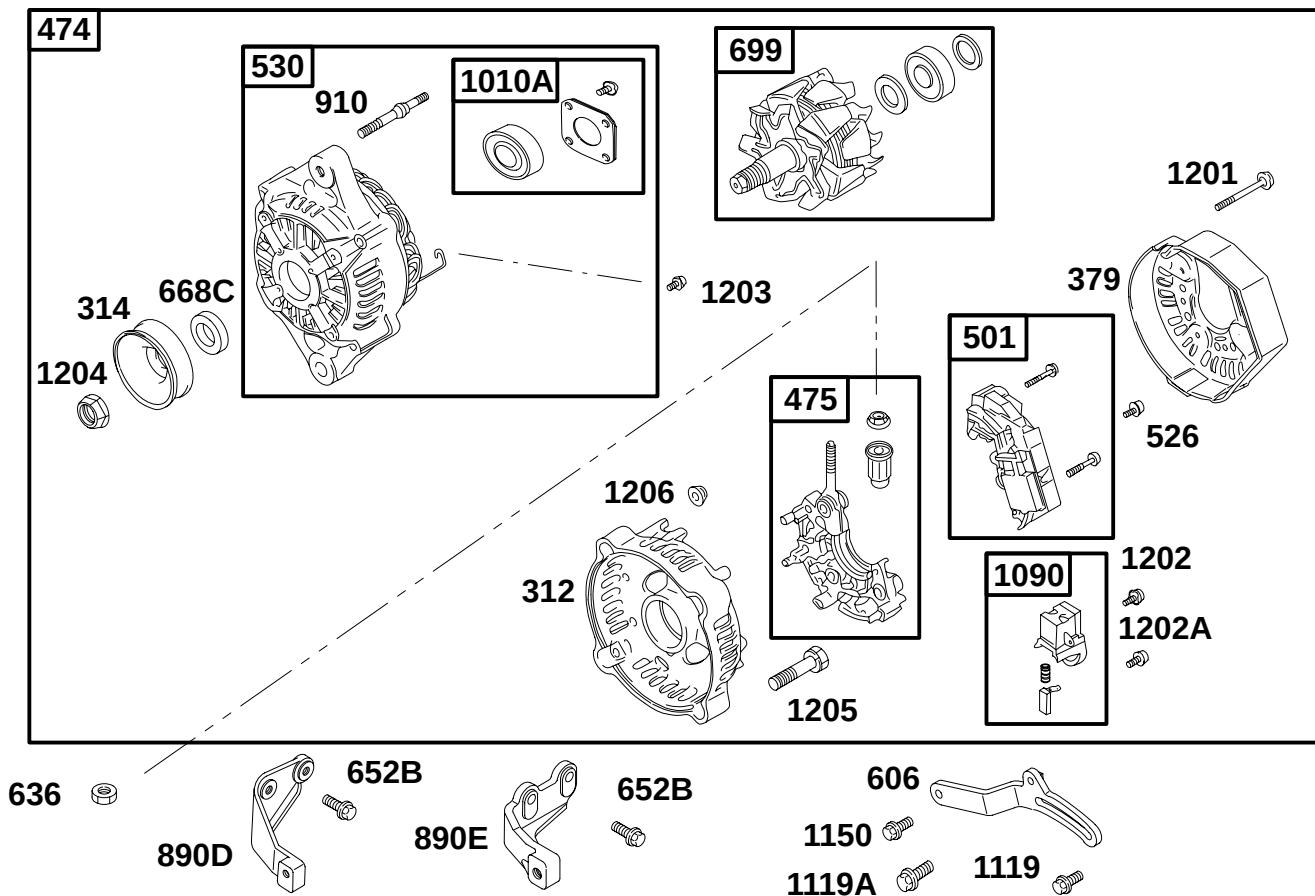 
△ Valve Gasket Set – Reference 1095

588400**1.0 KW**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
256A	820745	Gear-Starter Drive	510A	825394	Drive-Starter	801A	825396	Cap-Drive
309A	825083	Motor-Starter	544A	825392	Armature-Starter	802A	820743	Cap-End
310A	820755	Bolt	647A	820733	Gasket-Solenoid Cover	803A	825399	Housing-Starter (Includes Brushes, Springs and Brush Retainer)
413	820067	Nut	671A	825400	Cover-Solenoid	892	692318	Switch-Key
438	820725	Boot-Terminal	683	820723	Nut	920A	825398	Solenoid-Starter
502A	820739	Screw			(Starter Solenoid)	1009A	820019	Screw
		(Solenoid Cover)	683A	820721	Nut			(Starter Motor)
					(Terminal)	1082	820455	Relay-Starter
			692A	825425	Spring-Detent	1084A	825266	Connector-Terminal (Starter Terminal)
			697A	820751	Screw	1112B	820737	Plug-Vent
					(Drive Cap)	1207A	820754	Screw
			712A	825424	Roller-Clutch			(End Cap)

★ Engine Gasket Set – Reference 358

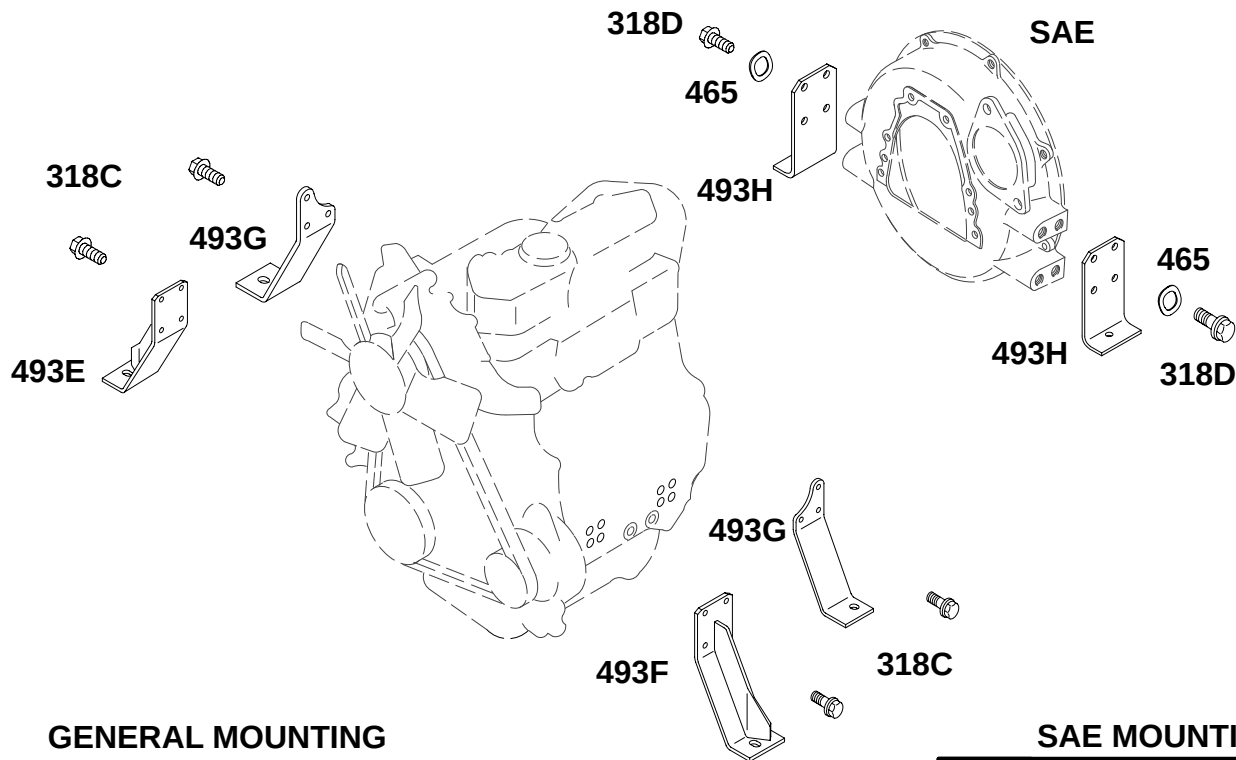 
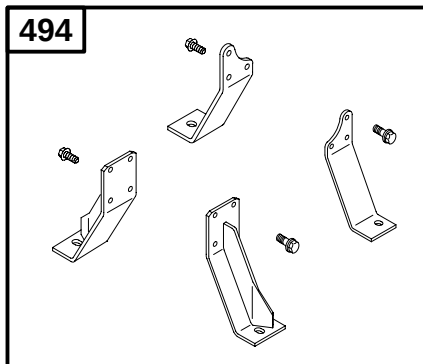 
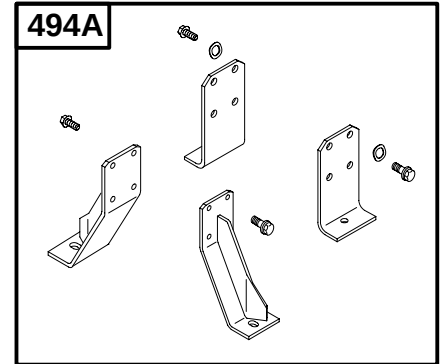 
△ Valve Gasket Set – Reference 1095

588400**40 and 60 AMP**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
312	820938	Housing-Brush End (40 Amp)	526	820702	Screw (Regulator)	1010A	825384	Retainer-Bearing
		----- Note -----	530	825526	Housing-Drive End (40 Amp)	1090	825387	Retainer-Brush
		821058 Housing-Brush End (60 Amp)			----- Note -----	1119	820343	Screw (Alternator)
314	820711	Pulley-Alternator			825579 Housing-Drive End (60 Amp)	1119A	820270	Screw (Alternator)
379	820703	Cover-Brush			825579 Housing-Drive End (60 Amp)	1150	820023	Screw (Adjusting Strap)
474	825524	Alternator (40 Amp)	606	820819	Strap-Adjusting	1201	820715	Screw (Brush Cover)
		----- Note -----	636	820069	Nut (Starting Switch)	1202	820701	Screw (Brush Retainer)
		825577 Alternator (60 Amp)	652B	820275	Screw (Support Bracket)	1202A	820702	Screw (Brush Retainer)
475	825385	Rectifier (40 Amp)	668C	820713	Spacer	120A	820702	Screw (Brush Retainer)
		----- Note -----	699	825390	Rotor Assembly	1203	820702	Screw (Stator Wire)
		825580 Rectifier (60 Amp)	890D	820213	Bracket-Support (40 Amp)	1204	820705	Nut (Alternator Pulley)
501	825388	Regulator (40 Amp)	890E	821062	Bracket-Support (60 Amp)	1205	820707	Screw (Brush End Housing)
		----- Note -----	910	820690	Stud (Alternator)	1206	820709	Nut (Brush End Housing)
		825581 Regulator (60 Amp)						

★ Engine Gasket Set - Reference 358

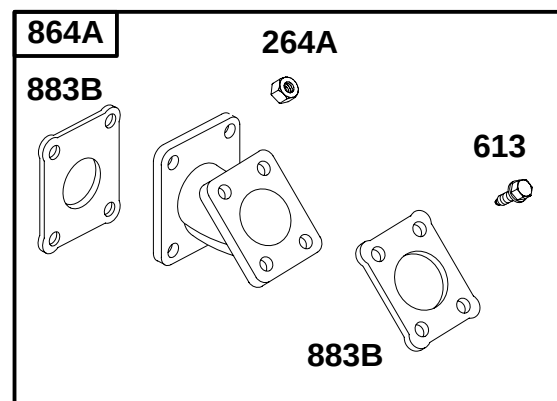 
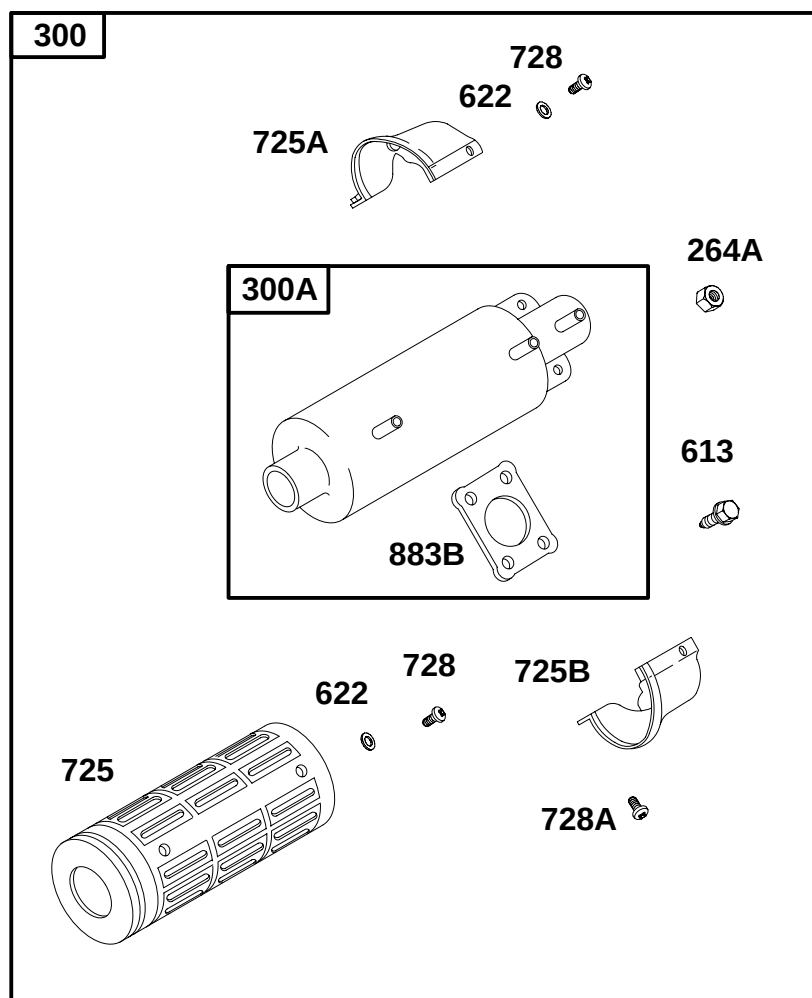 
△ Valve Gasket Set - Reference 1095

**GENERAL MOUNTING****SAE MOUNTING**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
318C	820024	Screw (Mounting Bracket) (Used With Engine Mounts Only) ----- Note ----- 820023 Screw (Mounting Bracket) (Use Only When Front Engine Mounts And Radiator Brackets Are Installed)	465	820449	Washer (Mounting Bracket)	494	825214	Mount-Engine (General Mounting)
318D	820306	Screw (Mounting Bracket)	493E	820835	Bracket-Mounting (Right Front) (General and SAE)	494A	825215	Mount-Engine (SAE Mounting)
			493F	820832	Bracket-Mounting (Left Front) (General and SAE)			
			493G	820833	Bracket-Mounting (Rear General)			
			493H	820834	Bracket-Mounting (Rear SAE)			

★ Engine Gasket Set – Reference 358

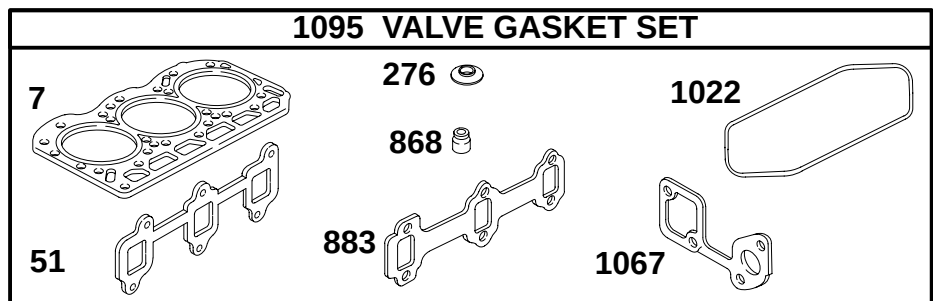 
 
 
 
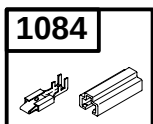 
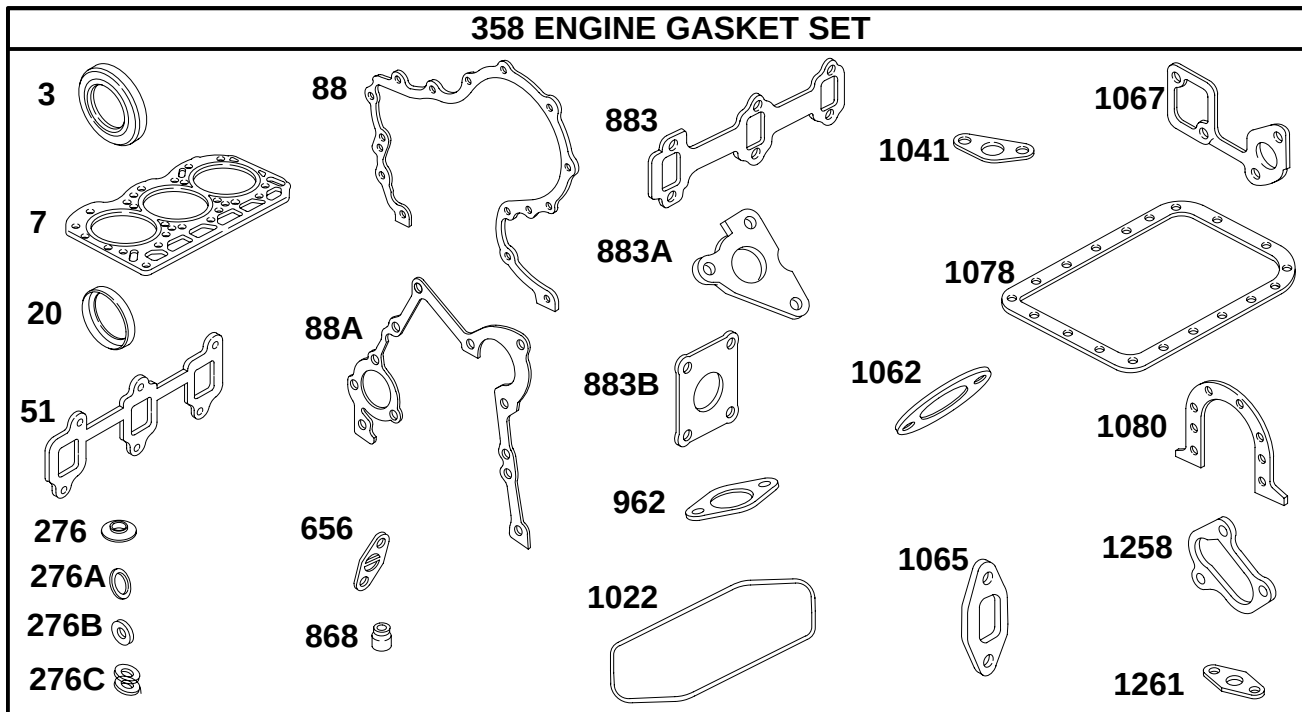 
△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
264A	820178	Nut (Muffler Adapter)	622	820631	Washer (Heat Shield)	728	821011	Screw (Heat Shield)
300	825200	Muffler	725	820628	Shield-Heat	728A	820431	Screw (Heat Shield)
300A	825550	Muffler	725A	820630	Shield-Heat	864A	825358	Adapter-Muffler
613	820023	Screw (Muffler)	725B	820629	Shield-Heat	883B	821001	Gasket-Exhaust

★ Engine Gasket Set – Reference 358

△ Valve Gasket Set – Reference 1095

588400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★821071	Seal-Oil (Magneto Side)	276B	★820950	Washer-Sealing (Oil Inlet Pipe)	1022	★820150	Gasket-Rocker Cover
7	★Δ820930	Gasket-Cylinder Head	276C	★820952	Washer-Sealing (Oil Inlet Pipe)	1041	★820104	Gasket-Oil Pump Screen
20	★821073	Seal-Oil (PTO Side)	358	825527	Gasket Set-Engine	1062	★820093	Gasket-Outlet Housing
51	★Δ820407	Gasket-Intake	656	★820962	Gasket-Water Pipe	1065	★820098	Gasket-Inlet Housing
88	★820377	Gasket-Gear Reduction Cover	868	★Δ820405	Seal-Valve	1067	★Δ820100	Gasket-Water Pump
88A	★820155	Gasket-Gear Reduction Cover	883	★Δ820817	Gasket-Exhaust (Manifold)	1078	★820137	Gasket-Oil Pan
276	★Δ820064	Washer-Sealing (Rocker Cover)	883A	★820967	Gasket-Exhaust (Turbo Charger)	1080	★820145	Gasket-Seal Retainer
276A	★820582	Washer-Sealing (Oil Drain Plug) (16mm)	883B	★821001	Gasket-Exhaust	1084	825154	Connector-Terminal
			962	★820988	Gasket-Air Inlet Pipe	1084A	825266	Connector-Terminal
						1084B	825157	Connector-Terminal
						1084D	825160	Connector-Terminal
						1095	825528	Gasket Set-Valve
						1258	★820890	Gasket-Muffler Adapter
						1261	★820973	Gasket-Oil Outlet

★ Engine Gasket Set - Reference 358

Δ Valve Gasket Set - Reference 1095

588400

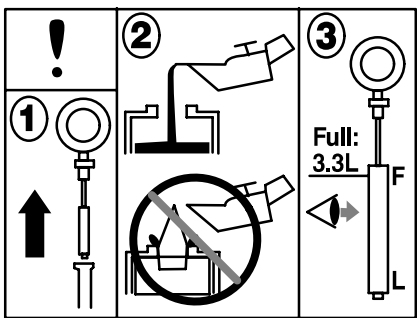 
1019



1040

MODEL	TYPE	CODE

1319



1036

DAIHATSU MOTOR CO., LTD.

TYPE: XXXXXX-X
 FAMILY: XXXXX,XXXXXX
 APPROVAL NUMBER: XXXXX/XXXX/XXXXX/XXXXX
 XXXXX-X

IMPORTANT ENGINE INFORMATION

ENGINE FAMILY NAME: XXXXX,XXXXXX
 ADVERTISED POWER: XX.X kW/XXXX rpm
 ENGINE TUNEUP SPECIFICATIONS AND ADJUSTMENTS:
 VALVE CLEARANCE (COLD): IN X.XXX in. (X.XX mm), EX X.XXX in. (X.XX mm)
 LOW IDLE: XXXX rpm, HIGH IDLE: XXXX rpm
 INJECTION TIMING: XXX mmTDC

EQUIPMENT LABEL
 DAIHATSU MOTOR CO., LTD.
 FUEL REQUIREMENT: DIESEL
 ENGINE DISPLACEMENT: XXX cc

THIS ENGINE CONFORMS TO XXXX MODEL YEAR U.S. EPA AND CA EMISSION REGS FOR
 NONROAD COMPRESSION - IGNITION ENGINES. FEL: NMHC+NOx X.X (g/kW h)
 REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.
 THIS ENGINE IS MEETING XXXX EPA AND CA STANDARDS EARLY BY MEETING THE FELs.

1058 OPERATOR'S MANUAL**1330 REPAIR MANUAL**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1019	825634	Kit-Label	1036	825662	Label-Emissions (Used After Code Date 03123100). ----- Note ----- 825636 Label-Emissions (Used Before Code Date 04010100 and After Code Date 02123100). 825635 Label-Emissions (Used Before Code Date 03010100).	1040	820290	Plate-Trim
						1058	820853	Operator's Manual
						1319	820891	Label-Warning
						1330	MS1055	Repair Manual

★ Engine Gasket Set - Reference 358

△ Valve Gasket Set - Reference 1095