



58A400

Illustrated Parts List

Model Series

58A400

950cc

TURBO DIESEL

TYPE NUMBERS
0205, 0209, 0210, 0231
0234, 0376.

TO FIND

THE CORRECT NUMBER OF THE PART YOU NEED:

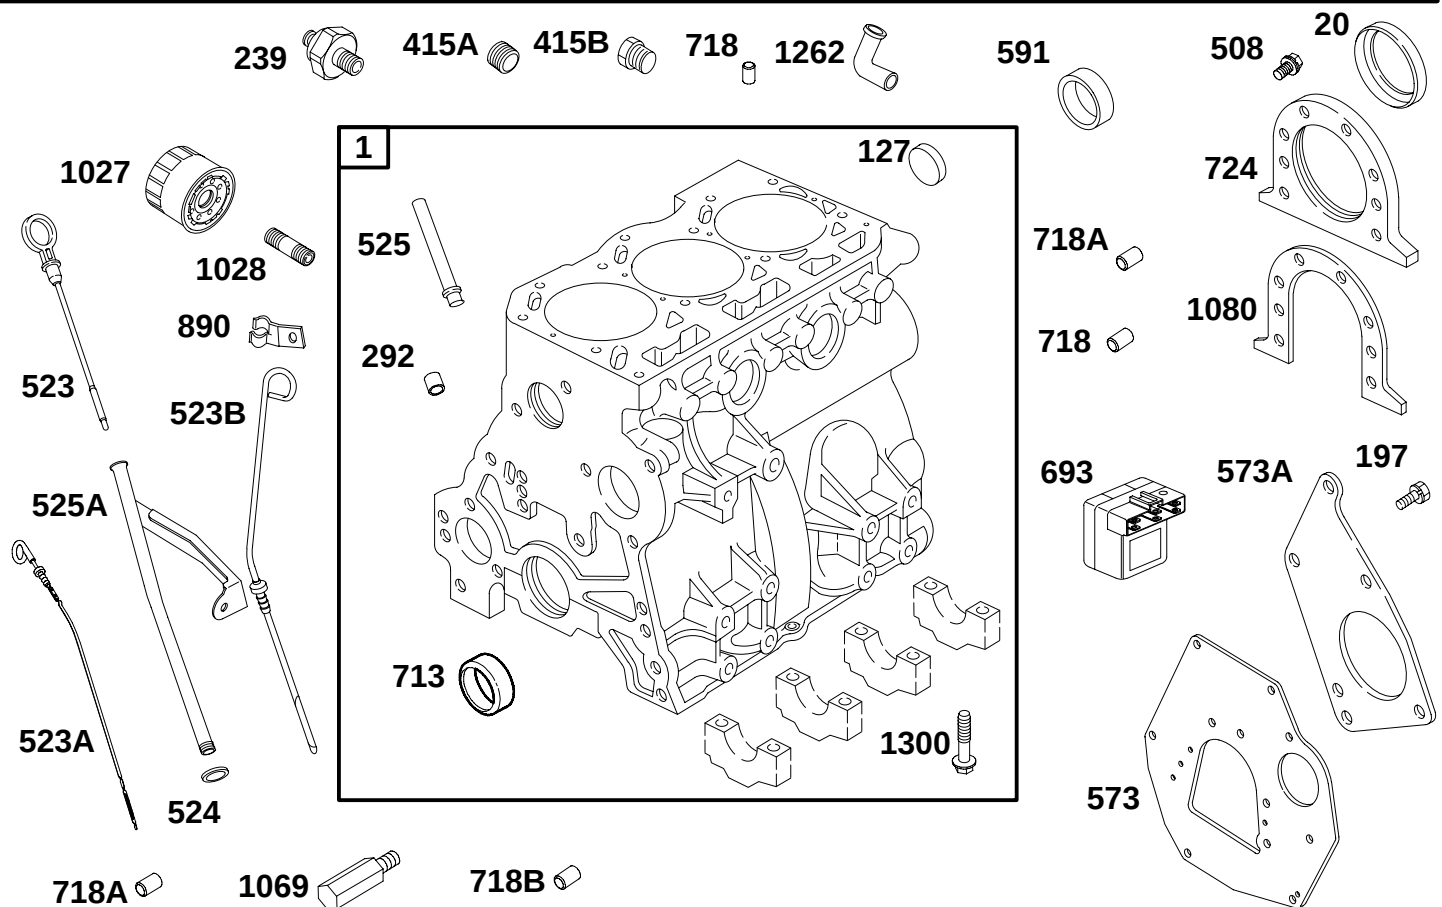
FOLLOW THE INSTRUCTIONS BELOW

- A. Refer to Model, Type and Code Number that is located on the engine. Engine type numbers such as 0123 01 are listed only as 0123 in most instances. The two digits (01, 02, E1, etc.) to the right of the space may be required for more accurate parts identification in some instances. Select the Illustrated Parts List covering the correct Model Series and Type Number.
- B. Refer to the Illustrations and compare the original part with Illustration. The number next to the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames having individual reference numbers can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical text, where Reference and Primary Part Number are listed. **THE PRIMARY PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER NOTE.**
- D. If a Note appears below the Primary Part Number, it means that this part differs from the Primary Part for certain types. If your Type number is listed under Note, order the part referred to at the Note.
- E. If your Engine Type Number does not appear after any part number listed under Note, use the Primary Part Number.
- F. For Engine Type Numbers not covered by this book, check other Parts Lists having the same engine model or contact your source of supply.
- G. **REFER TO REPAIR MANUAL MS 1055 FOR ASSEMBLY AND/OR TORQUE REQUIREMENTS.**

PRINTED IN U.S.A.



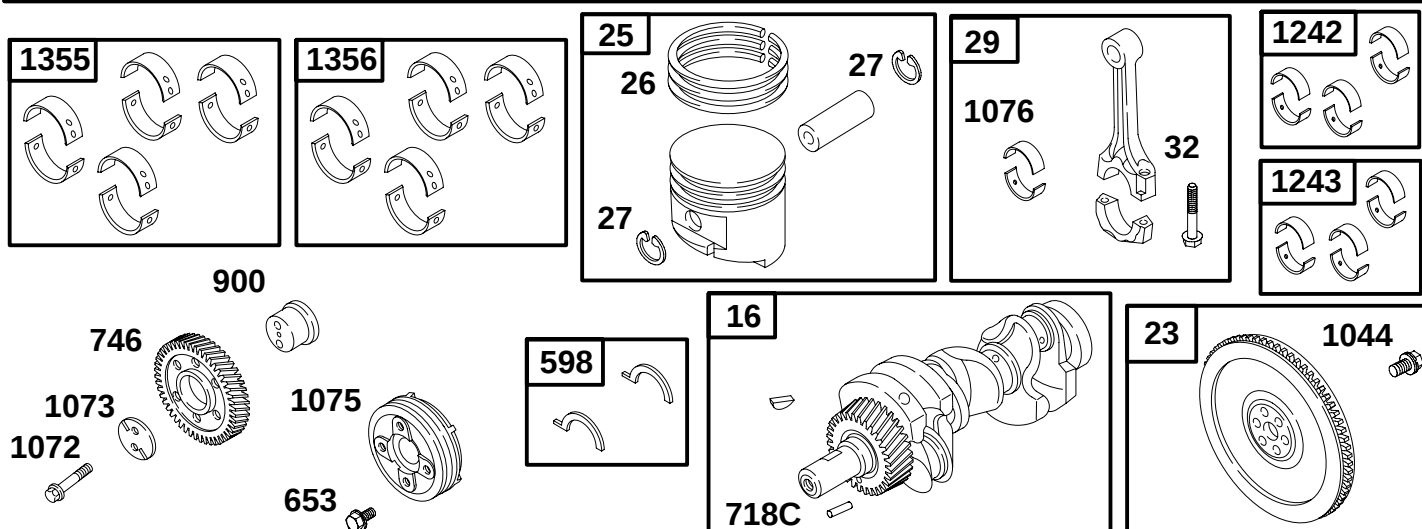
COPYRIGHT by BRIGGS & STRATTON DAIHATSU LLC
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton DAIHATSU LLC.

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	825599	Cylinder Assembly	523	821158	Dipstick	591	821069	Plug-Camshaft
20	★821073	Seal-Oil (PTO Side)	523A	820643	Dipstick Used on Type No(s). 0231.	693	820373	Module-Pre Heat
127	820004	Plug-Welch	523B	820572	Dipstick Used on Type No(s). 0376	713	820129	Bushing-Camshaft
197	820176	Screw (Back Plate)	524	820654	Seal-Dipstick Tube Used on Type No(s). 0231.	718	820063	Pin-Locating
239	821135	Switch-Oil Pressure	525	820144	Tube-Dipstick	718A	820062	Pin-Locating
292	820662	Collar-Dipstick Tube	525A	820666	Tube-Dipstick Used on Type No(s). 0231.	718B	820061	Pin-Locating
415A	820375	Plug (Cylinder)	573	820170	Plate-Back	724	820146	Retainer-Seal
415B	820182	Plug (Cylinder) Used on Type No(s). 0209.	573A	820147	Plate-Back	890	820238	Bracket-Support
508	820031	Screw (Seal Retainer)				1027	820314	Filter-Oil
						1028	820851	Adapter-Oil Filter
						1069	820102	Nozzle-Oil
						1080	★820145	Gasket-Seal Retainer
						1262	821009	Line-Water
						1300	820042	Screw (Crankshaft Bearing Cap)

★ Engine Gasket Set - Reference 358

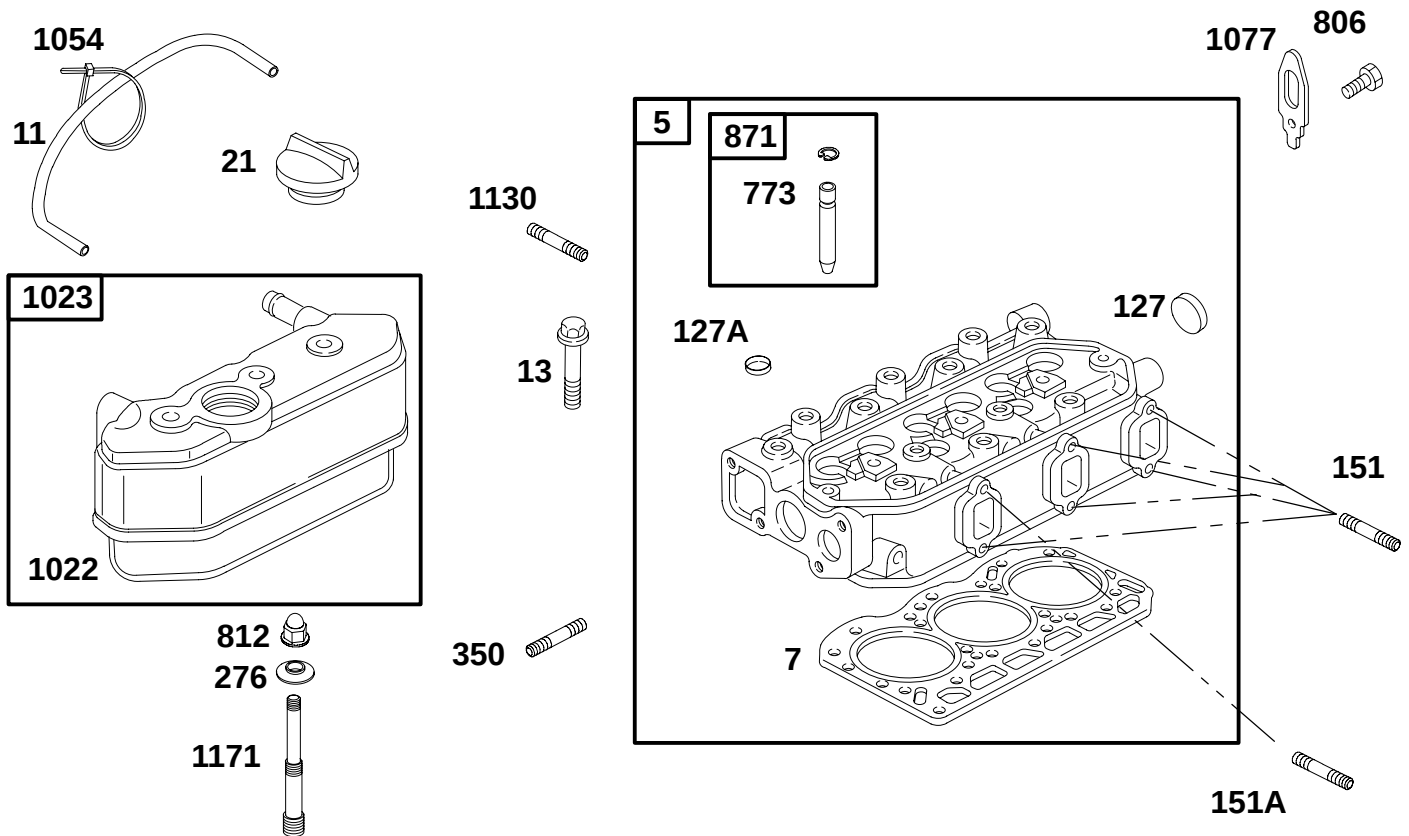
△ Valve Gasket Set - Reference 1095

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	825494	Crankshaft	598	820140	Shim-Endplay (Crankshaft) (Standard)	1044	820080	Screw (Flywheel)
23	825303	Flywheel			----- Note -----	1072	820081	Screw (Idle Gear Plate)
25	825626	Piston Assembly (Standard)			820139 Shim-Endplay (Crankshaft) (.005" Oversize)	1073	820117	Plate-Idle Gear
		----- Note -----				1075	820236	Pulley-Crankshaft
		825628 Piston Assembly (.010" Oversize)	653	820079	Screw (Crankshaft Pulley)	1076	820142	Bearing/STD-Rod
26	825512	Ring Set (Standard)	718C	820059	Pin-Locating	1242	825504	Bearing Set/STD-Rod
		----- Note -----	746	820611	Gear-Idler	1243	825506	Bearing Set/010-Rod
		825514 Ring Set (.010" Oversize)	900	820116	Shaft-Gear	1355	825510	Bearing Set/STD-Main
27	820926	Lock-Piston Pin				1356	825508	Bearing Set/010-Main
29	825502	Rod-Connecting						
32	820928	Screw (Connecting Rod)						

★ Engine Gasket Set - Reference 358

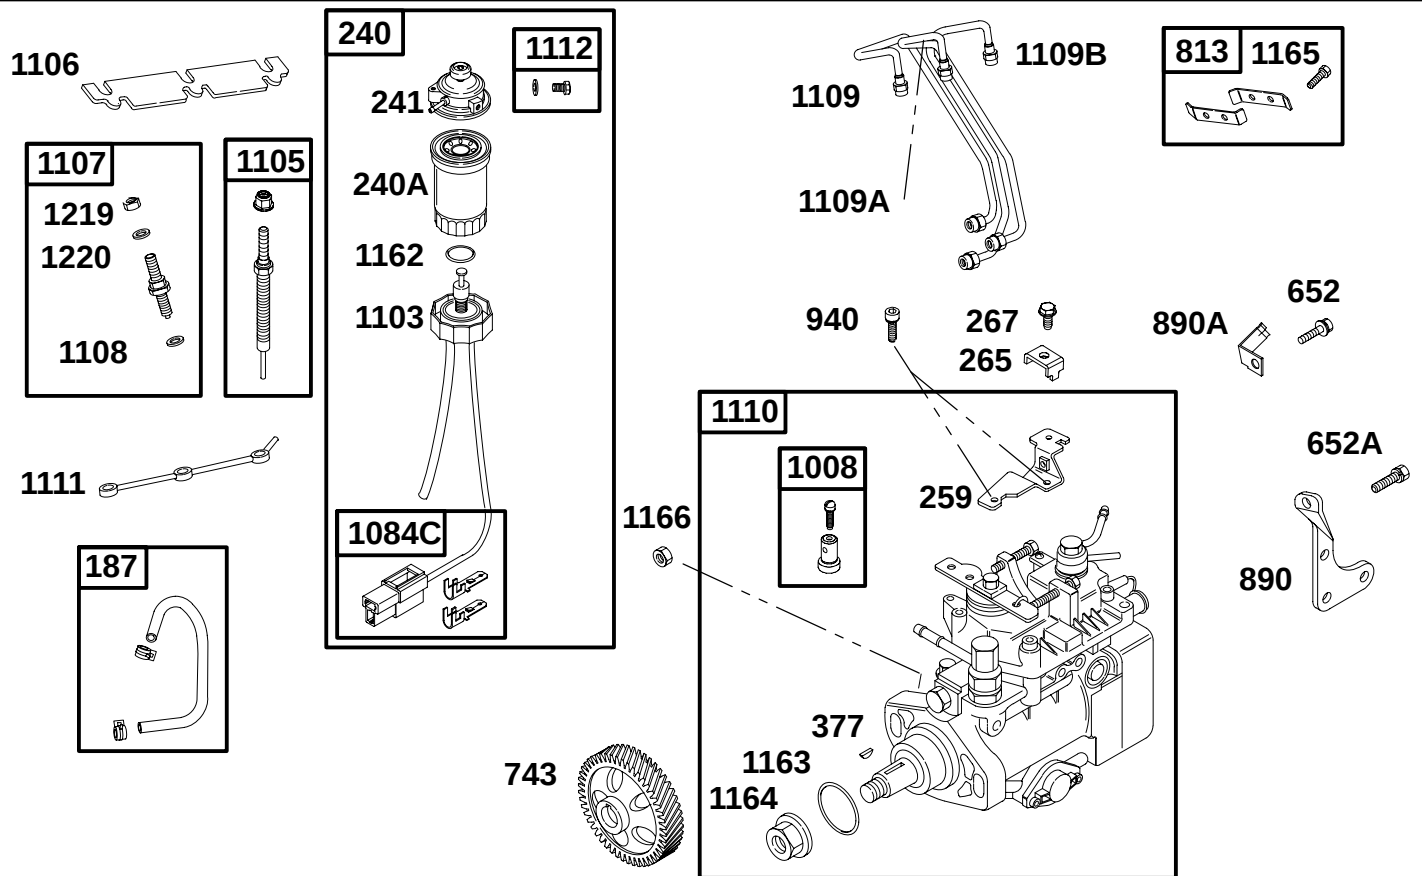
△ Valve Gasket Set - Reference 1095

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	825685	Head-Cylinder (Used After Code Date 04083100).	151	820997	Stud (Exhaust Manifold)	812	820071	Nut (Rocker Cover)
		----- Note -----	151A	820999	Stud (Exhaust Manifold)	871	825030	Bushing-Valve Guide
		825516 Head-Cylinder (Used Before Code Date 04090100).	276	★ 820064	Washer-Sealing (Rocker Cover)	1022	★ 820150	Gasket-Rocker Cover
7	★ 820930	Gasket-Cylinder Head	350	820078	Stud (Water Pump)	1023	825672	Cover-Rocker (Order Reference 1019, Label Kit and Reference 1036, Emissions Label for your Model, Type, Trim)
11	820932	Tube-Breather (540 mm)	773	820130	Retainer (Valve Guide Bushing)	1054	280275	Tie-Cable
13	820934	Screw (Cylinder Head) (10 mm)	806	820212	Screw (Lifting Bracket)	1077	820254	Bracket-Lifting
21	825024	Cap-Oil Fill				1130	820015	Stud (Intake Manifold)
127	820004	Plug-Welch				1171	820076	Stud (Rocker Cover)
127A	820005	Plug-Welch						

★ Engine Gasket Set - Reference 358

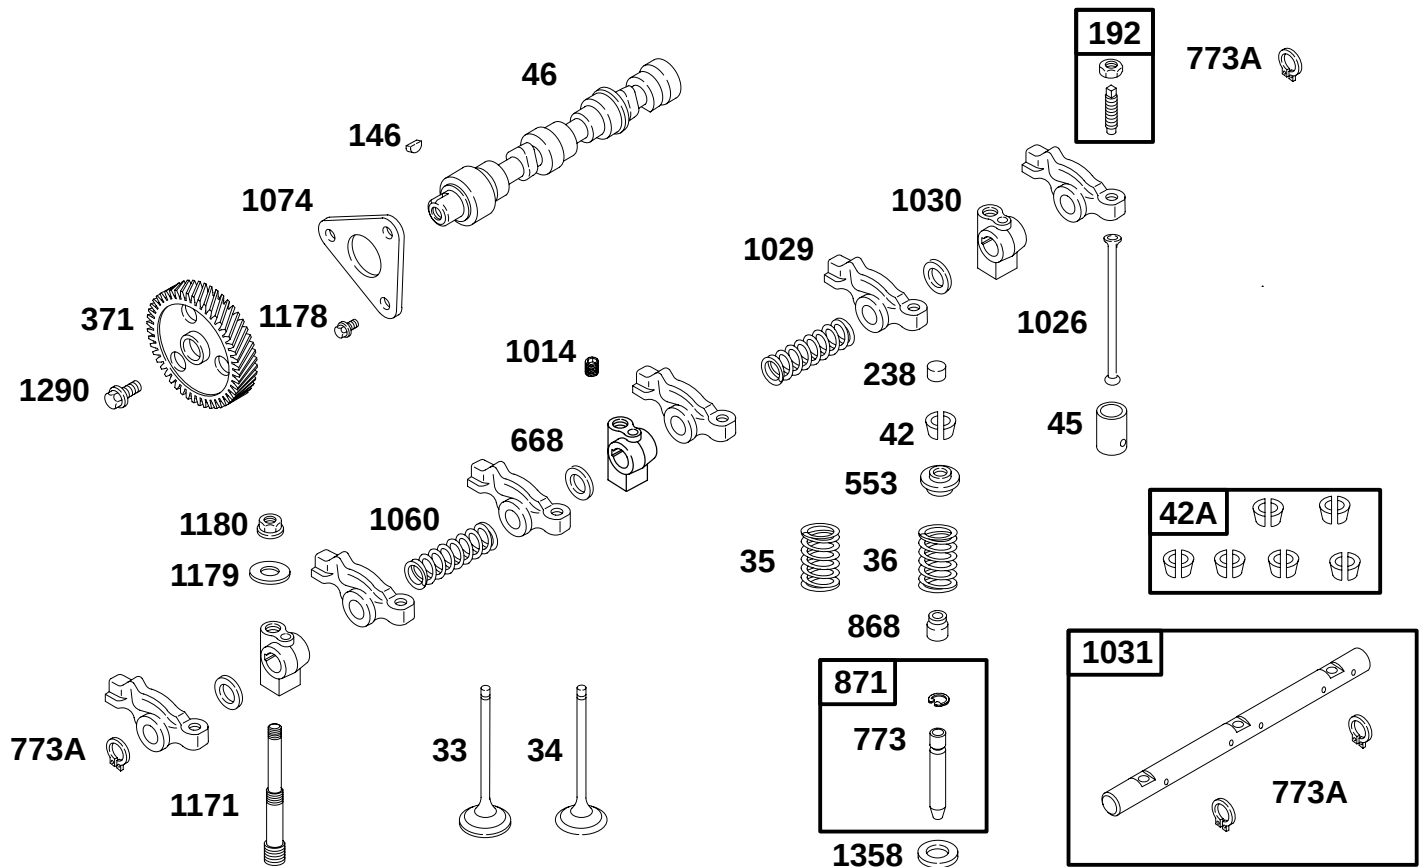
△ Valve Gasket Set - Reference 1095

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
187	825179	Line-Fuel	940	820640	Screw (Casing Clamp Bracket)	1109	825194	Pipe-Injector # 1
240	825219	Filter-Fuel				1109A	825195	Pipe-Injector # 2
240A	820311	Filter-Fuel (Includes Reference 1162)	1008	820467	Clamp-Swivel	1109B	825196	Pipe-Injector # 3
241	820344	Cover-Fuel Filter (Includes Reference 1112)	1084C	825156	Connector-Terminal	1110	825606	Pump-Injection
			1103	820347	Sensor-Fuel Filter (Includes Reference 1162)	1111	820412	Pipe-Fuel Return
259	820634	Bracket-Casing Clamp	1105	825176	Plug-Glow	1112	825198	Plug-Vent
265	691024	Clamp-Casing	1106	820409	Strap-Glow Plug	1162	820348	Seal-O Ring (Fuel Filter Sensor)
267	820012	Screw (Casing Clamp)	1107	825178	Nozzle-Injector	1163	820414	Seal-O Ring (Injection Pump)
377	821064	Key-Woodruff	1108	820411	Seat-Injector			
652	820593	Screw (Support Bracket)				1164	820419	Nut (Injection Pump)
652A	820272	Screw (Support Bracket)				1165	820031	Screw (Clamp)
743	820619	Gear-Drive (Injection Pump)				1166	820417	Nut (Injection Pump)
813	825197	Clamp				1219	820829	Nut (Injector Nozzle)
890	820415	Bracket-Support				1220	820831	Washer (Injector Nozzle)
890A	820479	Bracket-Support						

★ Engine Gasket Set – Reference 358

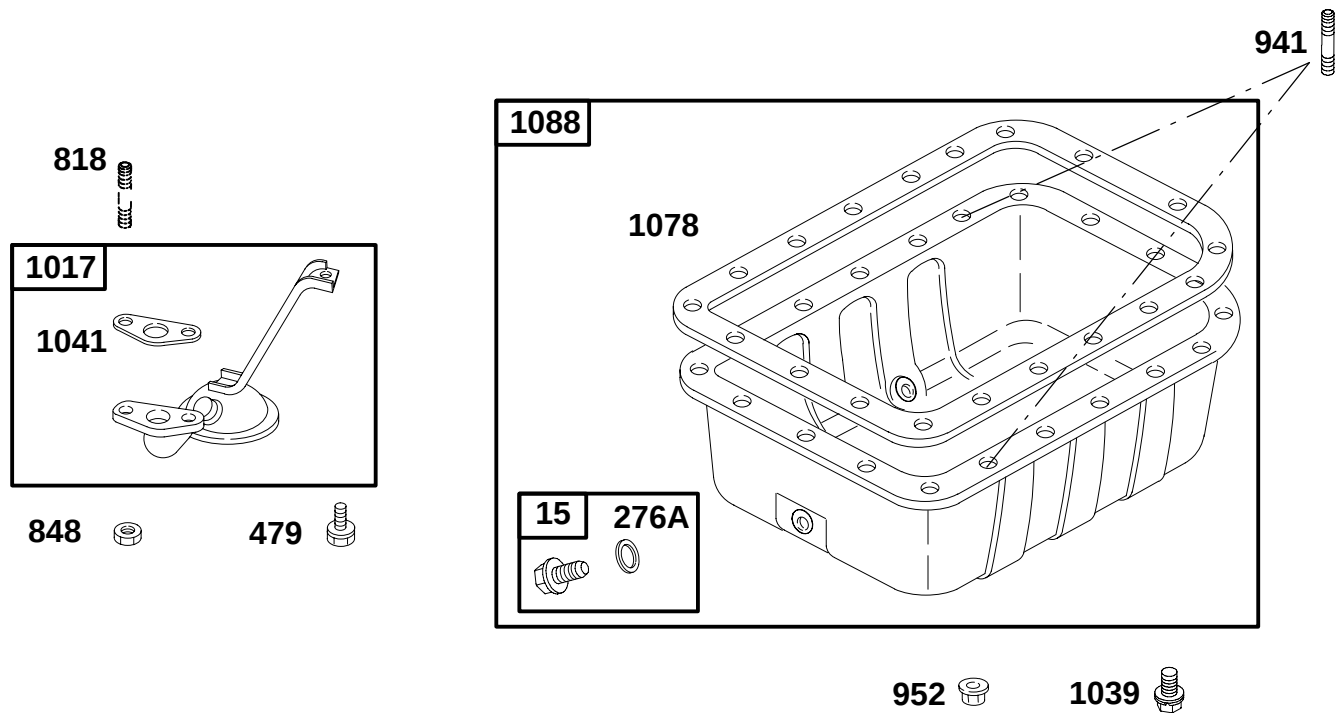
△ Valve Gasket Set – Reference 1095

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
33	820404	Valve-Exhaust	238	821214	Cap-Valve (Used After Code Date 04083100).	1029	820387	Arm-Rocker
34	820403	Valve-Intake				1030	820106	Support-Rocker Arm
35	820406	Spring-Valve (Intake)			----- Note -----	1031	825093	Shaft-Rocker Arm
36	820406	Spring-Valve (Exhaust)			820113 Cap-Valve (Used Before Code Date 04090100).	1060	820044	Spring-Rocker Shaft
42	825042	Keeper-Valve (Contains 1 Set)	371	820613	Gear-Cam	1074	820118	Retainer-Camshaft
42A	825082	Keeper-Valve (Contains 6 Sets)	553	820111	Retainer-Valve Spring	1171	820076	Stud (Rocker Cover)
45	820110	Tappet-Valve	668	820065	Spacer (Rocker Arm Shaft)	1178	820032	Screw (Camshaft Retainer)
46	820936	Camshaft	773	820130	Retainer (Valve Guide Bushing)	1179	820177	Washer (Rocker Arm Support)
146	691639	Key-Timing	773A	820003	Retainer	1180	820070	Nut (Rocker Arm Support)
192	825688	Adjuster-Rocker Arm (Used After Code Date 04083100).	871	825030	Bushing-Valve Guide	1290	820075	Screw (Cam Gear)
		----- Note -----	868	Δ820405	Seal-Valve	1358	820112	Seat-Valve Spring
		825041 Adjuster-Rocker Arm (Used Before Code Date 04090100).	1014	820105	Screw (Rocker Arm Support)			
			1026	821216	Rod-Push (Used After Code Date 04083100).			
					----- Note -----			
					820109 Rod-Push (Used Before Code Date 04090100).			

★ Engine Gasket Set - Reference 358

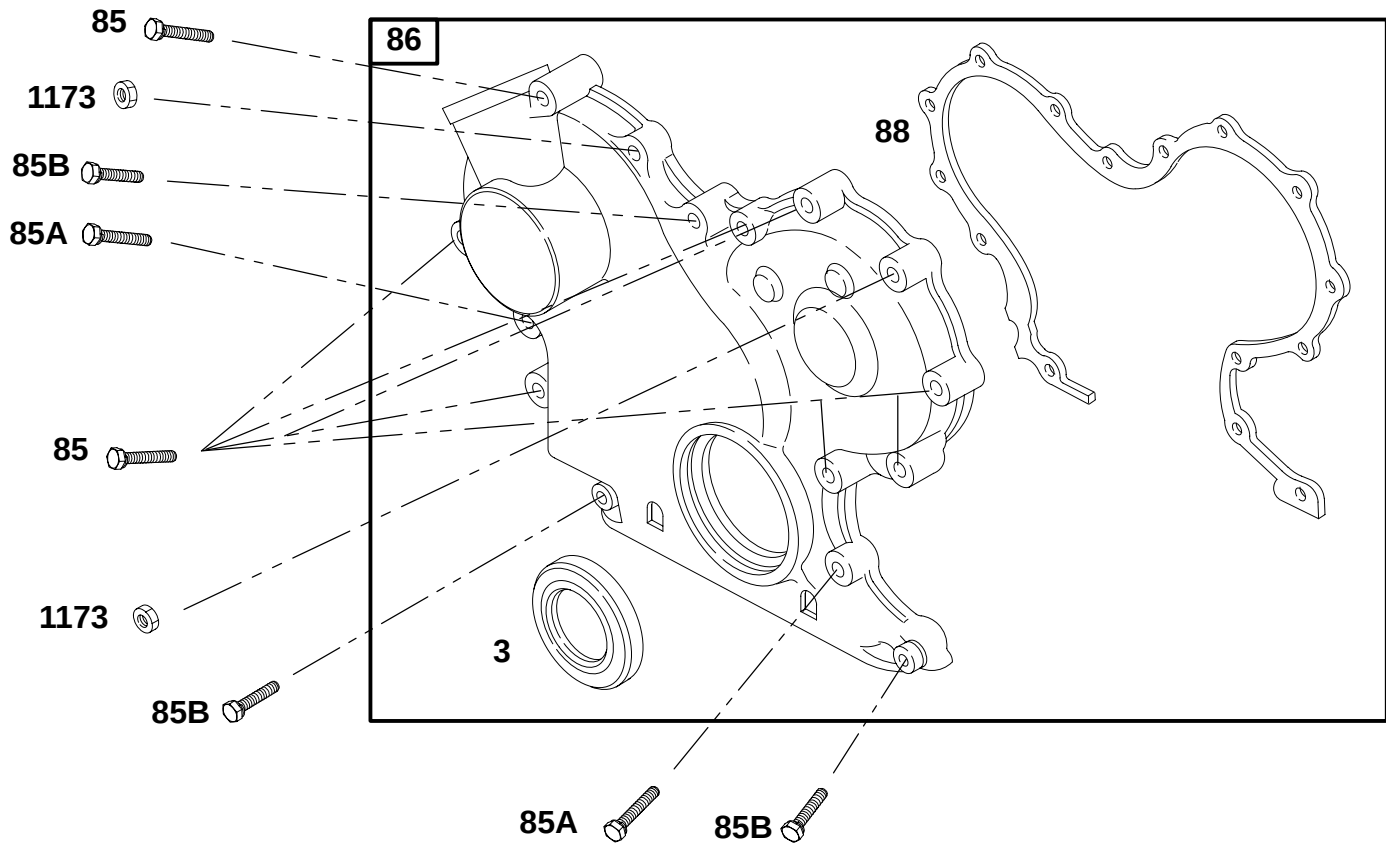
Δ Valve Gasket Set - Reference 1095

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
15	825278	Plug-Oil Drain (16 mm)	818	820016	Stud (Oil Pump Screen)	1017	825089	Screen-Oil Pump
276A	★820582	Washer-Sealing (Oil Drain Plug) (16 mm)	848	820069	Nut (Oil Pump Screen)	1039	820034	Screw (Oil Pan)
479	820034	Screw (Oil Pump Screen)	941	820017	Stud (Oil Pan)	1041	★820104	Gasket-Oil Pump Screen
			952	820068	Nut (Oil Pan)	1078	★820137	Gasket-Oil Pan
						1088	825285	Pan-Oil (Dual Drain) (16 mm)

★ Engine Gasket Set – Reference 358

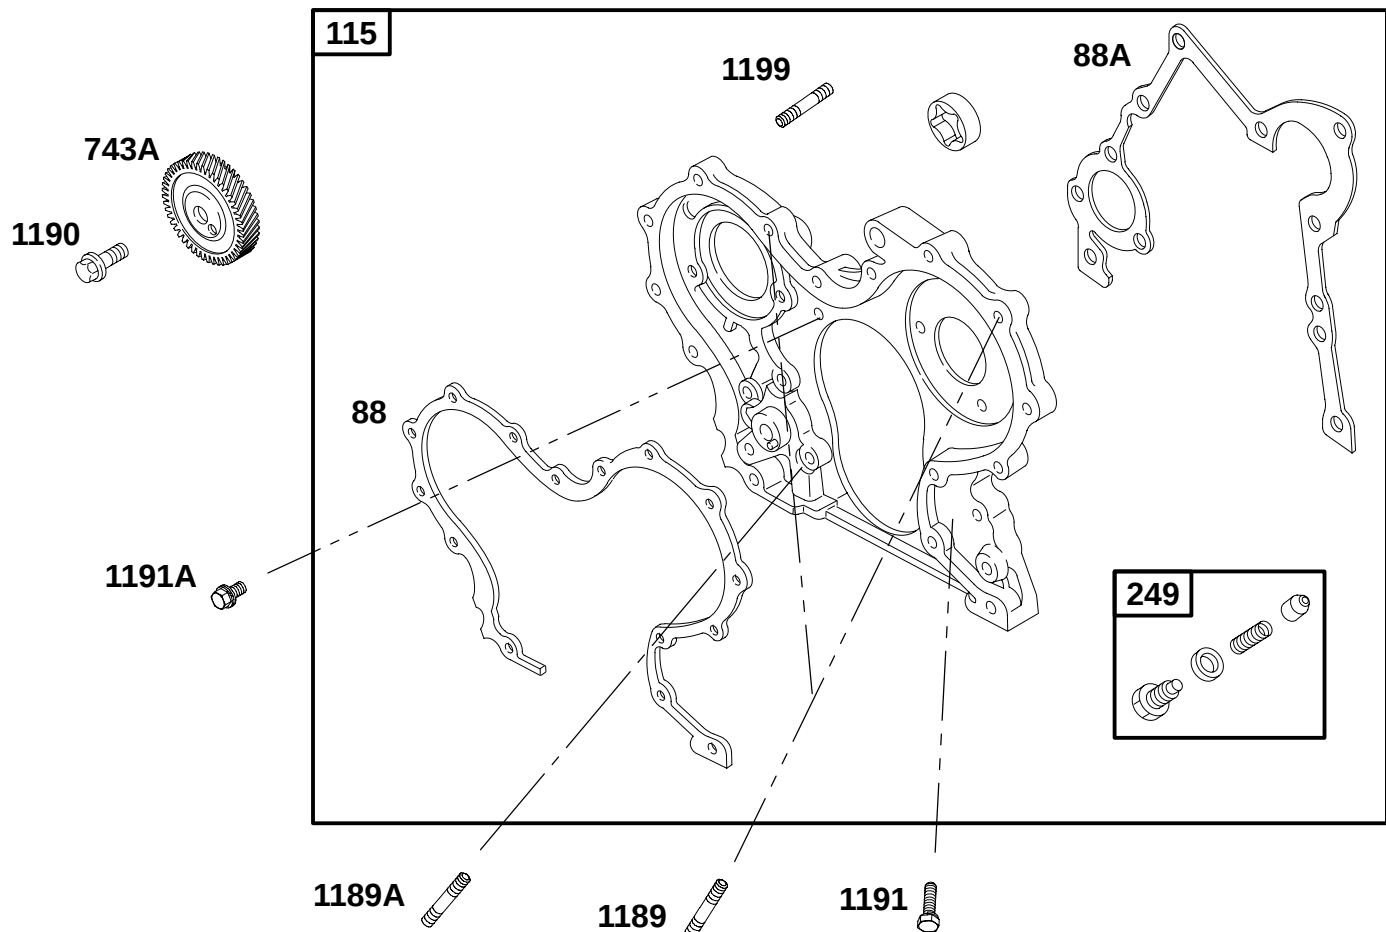
△ Valve Gasket Set – Reference 1095

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★821071	Seal-Oil (Magneto Side)	85	820425	Screw (Gear Cover to Gear Reduction Case)	86	825185	Cover-Gear
			85A	820029	Screw (Gear Cover to Gear Reduction Case)	88	★820377	Gasket-Gear Reduction Cover
			85B	820027	Screw (Gear Cover to Gear Reduction Case)	1173	820069	Nut (Gear Cover)

★ Engine Gasket Set – Reference 358

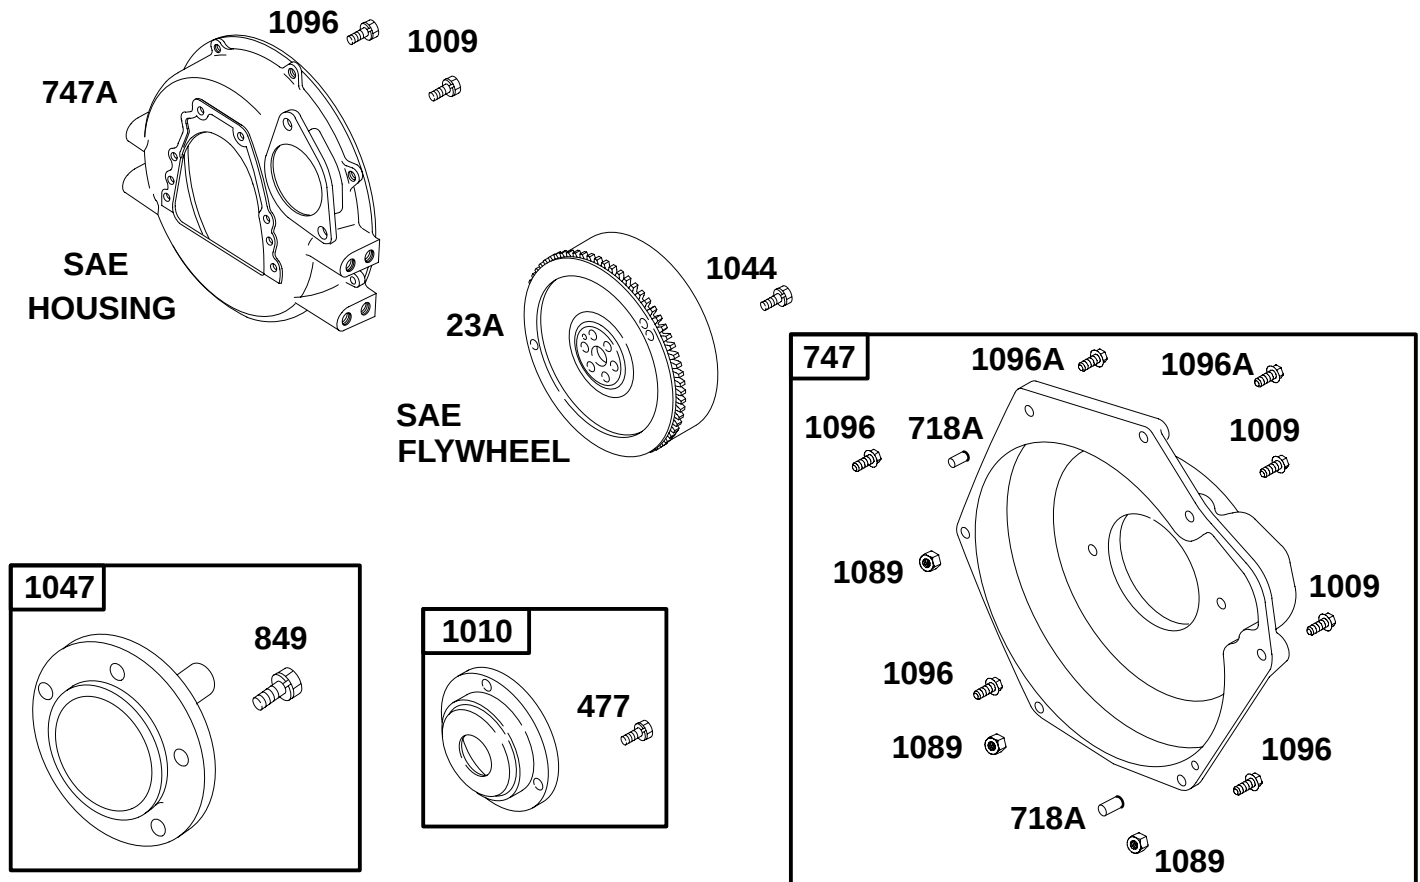
△ Valve Gasket Set – Reference 1095



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
88	★820377	Gasket-Gear Reduction Cover	743A	820615	Gear-Drive (Gear Housing)	1190	820180	Screw (Drive Gear)
88A	★820155	Gasket-Gear Reduction Cover	1189	820156	Stud (Gear Housing)	1191	820030	Screw (Gear Housing)
115	825186	Housing-Gear	1189A	820016	Stud (Gear Housing)	1191A	820033	Screw (Gear Housing)
249	825032	Valve-Pressure Relief				1199	820426	Stud (Injection Pump)

★ Engine Gasket Set – Reference 358

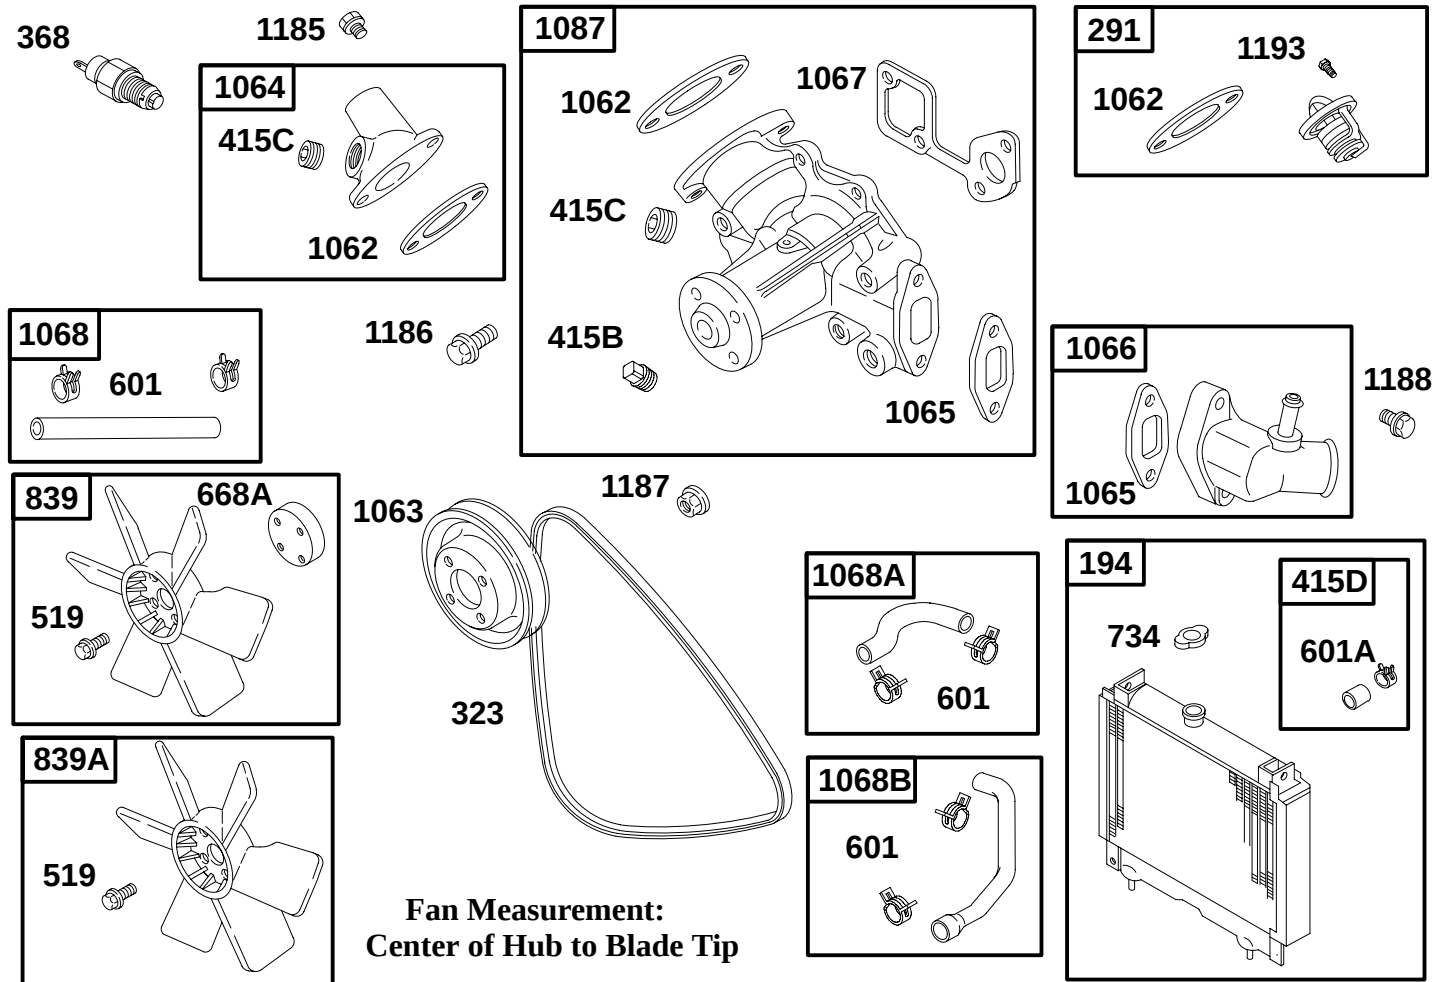
△ Valve Gasket Set – Reference 1095

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23A	825071	Flywheel	849	820212	Screw (Stub Shaft)	1047	825268	Shaft-Stub (1 1/8" Diameter Shaft) (3 3/4" Length)
477	820199	Screw (Bearing Retainer)	1009	820451	Screw (Starter Motor) (Mount Starter To SAE Housings)	----- Note -----		
718A	820062	Pin-Locating						825078 Shaft-Stub (1 7/16" Diameter Shaft)
747	825098	Housing-Flywheel (KTR®) (Small Pilot, 2 Holes)						825123 Shaft-Stub (1" Diameter Shaft)
		----- Note -----						825269 Shaft-Stub (1 1/8" Diameter Shaft) (4 1/5" Length)
		825113 Housing-Flywheel (KTR®)	1010	825079	Retainer-Bearing	1089	820070	Nut (Flywheel Housing)
747A	820248	Housing-Flywheel (SAE)	1044	820080	Screw (Flywheel)	1096	820241	Screw (Flywheel Housing)
						1096A	820450	Screw (Flywheel Housing)

★ Engine Gasket Set – Reference 358

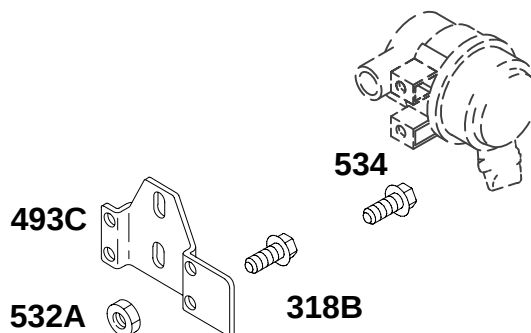
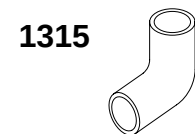
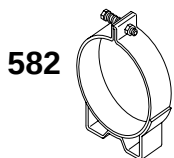
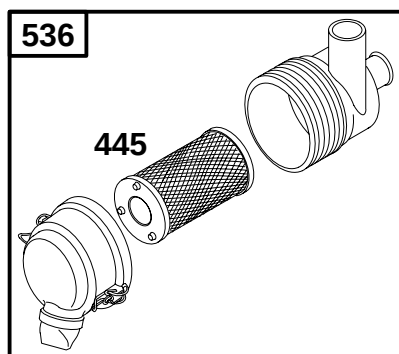
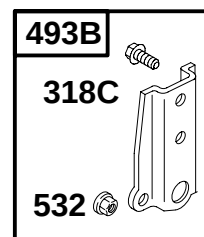
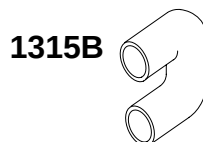
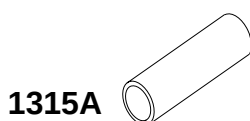
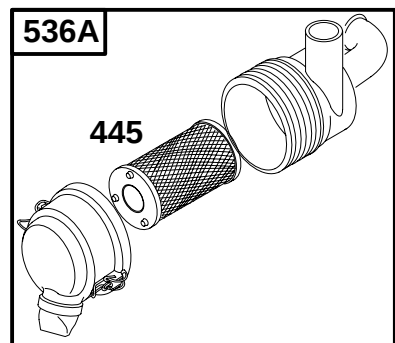
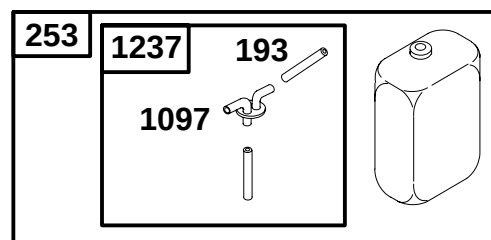
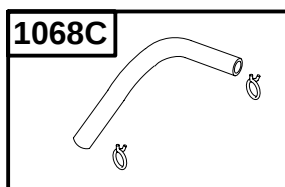
△ Valve Gasket Set – Reference 1095

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
194	825645	Radiator Used on Type No(s). 0231, 0234.		820034	Screw (Radiator Fan) Used on Type No(s). 0205, 0231, 0234.	1062	★820093	Gasket—Outlet Housing
291	825064	Thermostat				1063	820095	Pulley—Pump
323	821075	Belt—Vee (940 mm)	601	820256	Clamp—Hose	1064	825519	Housing—Outlet
368	820208	Switch—Water Temperature	601A	820201	Clamp—Hose	1065	★820098	Gasket—Inlet Housing
415B	820182	Plug (Water Pump)	668A	821218	Spacer (Radiator Fan) Used on Type No(s). 0210, 0376.	1066	825520	Housing—Inlet
415C	820052	Plug (Outlet Housing) (Water Pump)	734	820258	Cap—Radiator	1067	★△820100	Gasket—Water Pump
415D	825075	Plug (Radiator)	839	825446	Fan—Radiator Used on Type No(s). 0210, 0376.	1068	825045	Hose/Clamp Assembly
519	820030	Screw (Radiator Fan) Used on Type No(s). 0209, 0210, 0376. ----- Note -----	839A	821013	Fan—Radiator Used on Type No(s). 0205, 0231, 0234. ----- Note ----- 825644 Fan—Radiator Used on Type No(s). 0209.	1068A	825557	Hose/Clamp Assembly
						1068B	825133	Hose/Clamp Assembly
						1087	825639	Pump—Water
						1185	820031	Screw (Outlet Housing)
						1186	820022	Screw (Water Pump)
						1187	820181	Nut (Water Pump)
						1188	820031	Screw (Inlet Housing)
						1193	820185	Screw (Thermostat)

★ Engine Gasket Set – Reference 358

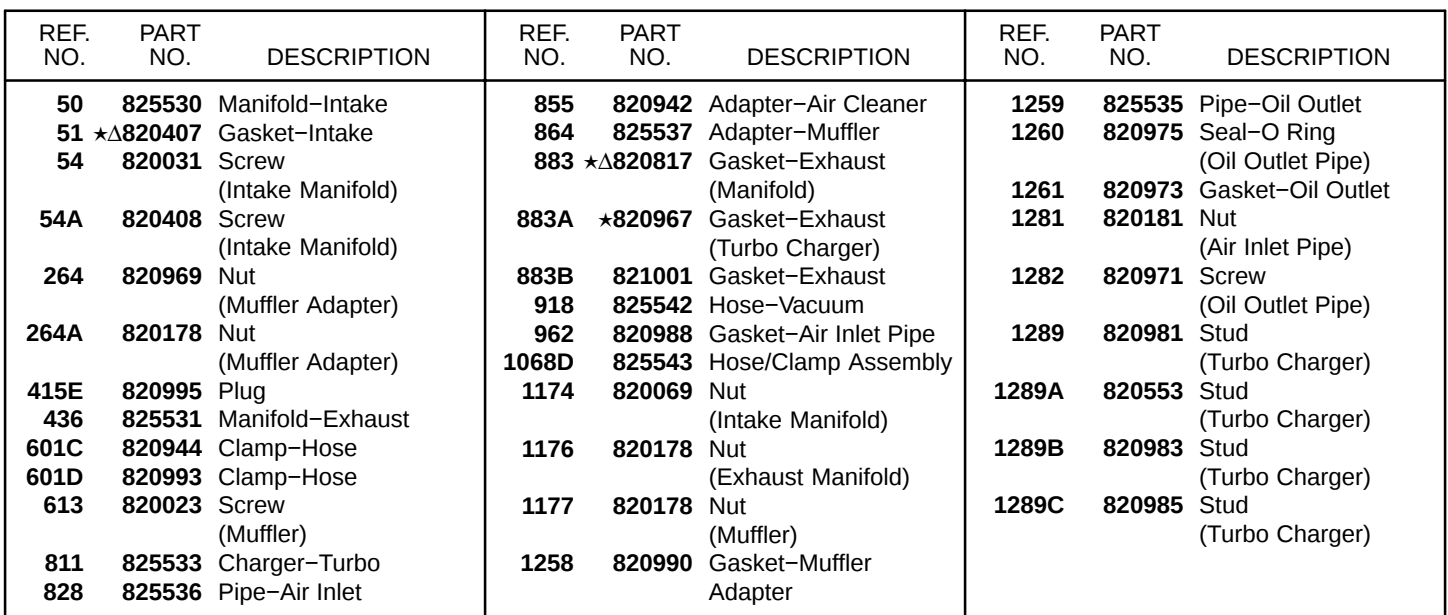
△ Valve Gasket Set – Reference 1095

58A400**534****318B****493B****318C****532****253****1237****193****1097**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
193	820597	Hose-Reserve Tank (660 mm Hose)	534	820273	Screw (Air Cleaner)	1068C	825478	Hose/Clamp Assembly
253	825462	Tank-Reserve	536	825117	Cleaner-Air (With Vacuum Adaptor)	1097	820287	Cap-Surge Tank
318B	820212	Screw (Mounting Bracket)	536A	825118	Cleaner-Air (90 Degree Elbow With Vacuum Adaptor)	1237	825461	Cap/Hose-Reserve (660 mm Hose)
318C	820034	Screw (Mounting Bracket)	582	820230	Clamp-Air Cleaner	1315	820554	Adapter-Air Cleaner (90 Degree)
445	820263	Filter-Air Cleaner Cartridge				1315A	820555	Adapter-Air Cleaner (Straight)
493B	825106	Bracket-Mounting (Reserve Tank)				1315B	820556	Adapter-Air Cleaner (180 Degree)
493C	820195	Bracket-Mounting (Air Cleaner)						
532	820011	Nut (Mounting Bracket)						
532A	820070	Nut (Mounting Bracket)						

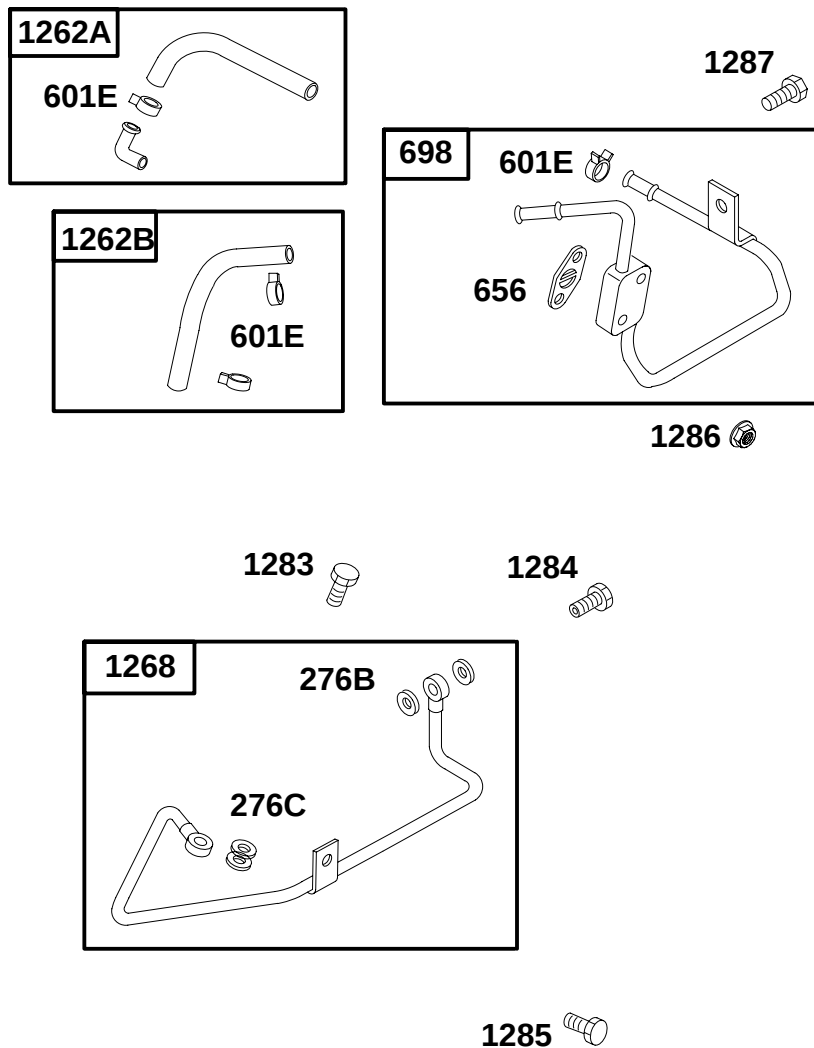
★ Engine Gasket Set – Reference 358

△ Valve Gasket Set – Reference 1095



www.mymowerparts.com

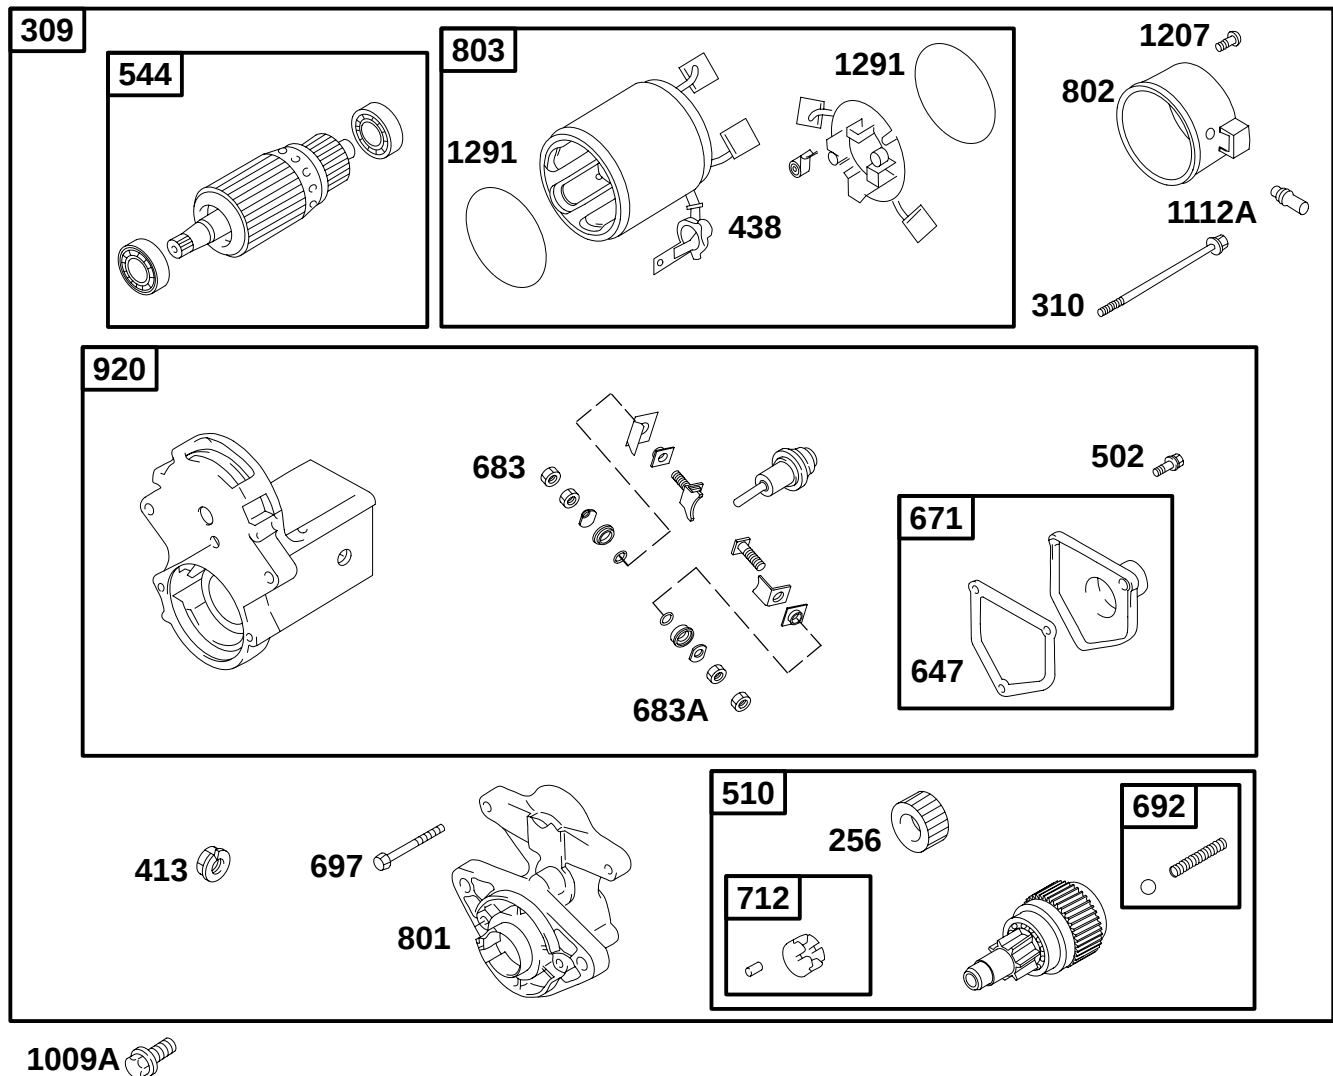
58A400



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
276B	★820950	Washer-Sealing (Oil Inlet Pipe)	1262A	825540	Line-Water	1285	820023	Screw (Oil Inlet Pipe)
276C	★820952	Washer-Sealing (Oil Inlet Pipe)	1262B	825541	Line-Water	1286	820069	Nut (Water Pipe)
601E	820960	Clamp-Hose	1268	825539	Pipe-Oil Inlet	1287	820023	Screw (Water Pipe)
656	820962	Gasket-Water Pipe	1283	820954	Screw (Oil Inlet Pipe)			
698	825558	Pipe-Water	1284	820948	Screw (Oil Inlet Pipe)			

★ Engine Gasket Set – Reference 358

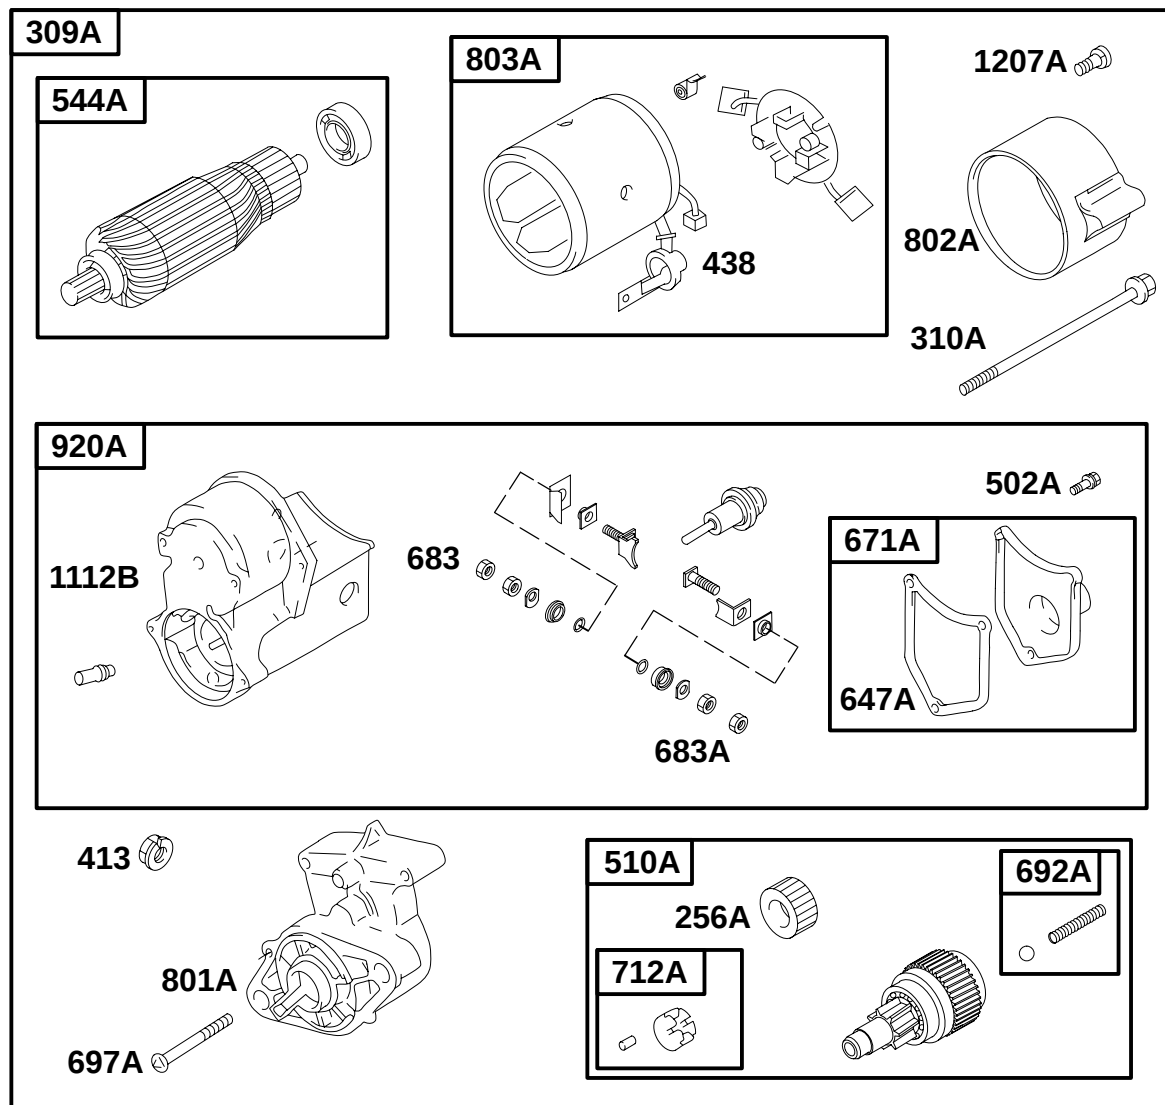
△ Valve Gasket Set – Reference 1095

58A400**1.2 KW**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
256	820767	Gear-Starter Drive	647	820719	Gasket-Solenoid Cover	712	825401	Roller-Clutch
309	825222	Motor-Starter	671	825422	Cover-Solenoid	801	825408	Cap-Drive
310	820773	Bolt (Starter Motor)	683	820723	Nut (Starter Solenoid) (Terminal)	802	820771	Cap-End
413	820067	Nut (Starter Motor)	683A	820721	Nut (Starter Solenoid) (Terminal)	803	825423	Housing-Starter (Includes Brush Set)
438	820725	Boot-Terminal	692	825402	Spring-Detent	920	825410	Solenoid-Starter
502	820763	Screw (Solenoid Cover)	697	820777	Screw (Drive Cap)	1009A	820019	Screw (Starter Motor)
510	825406	Drive-Starter				1112A	820779	Plug-Vent
544	825404	Armature-Starter				1207	820775	Screw (End Cap)
						1291	820769	Seal-O Ring (Starter Housing)

★ Engine Gasket Set – Reference 358

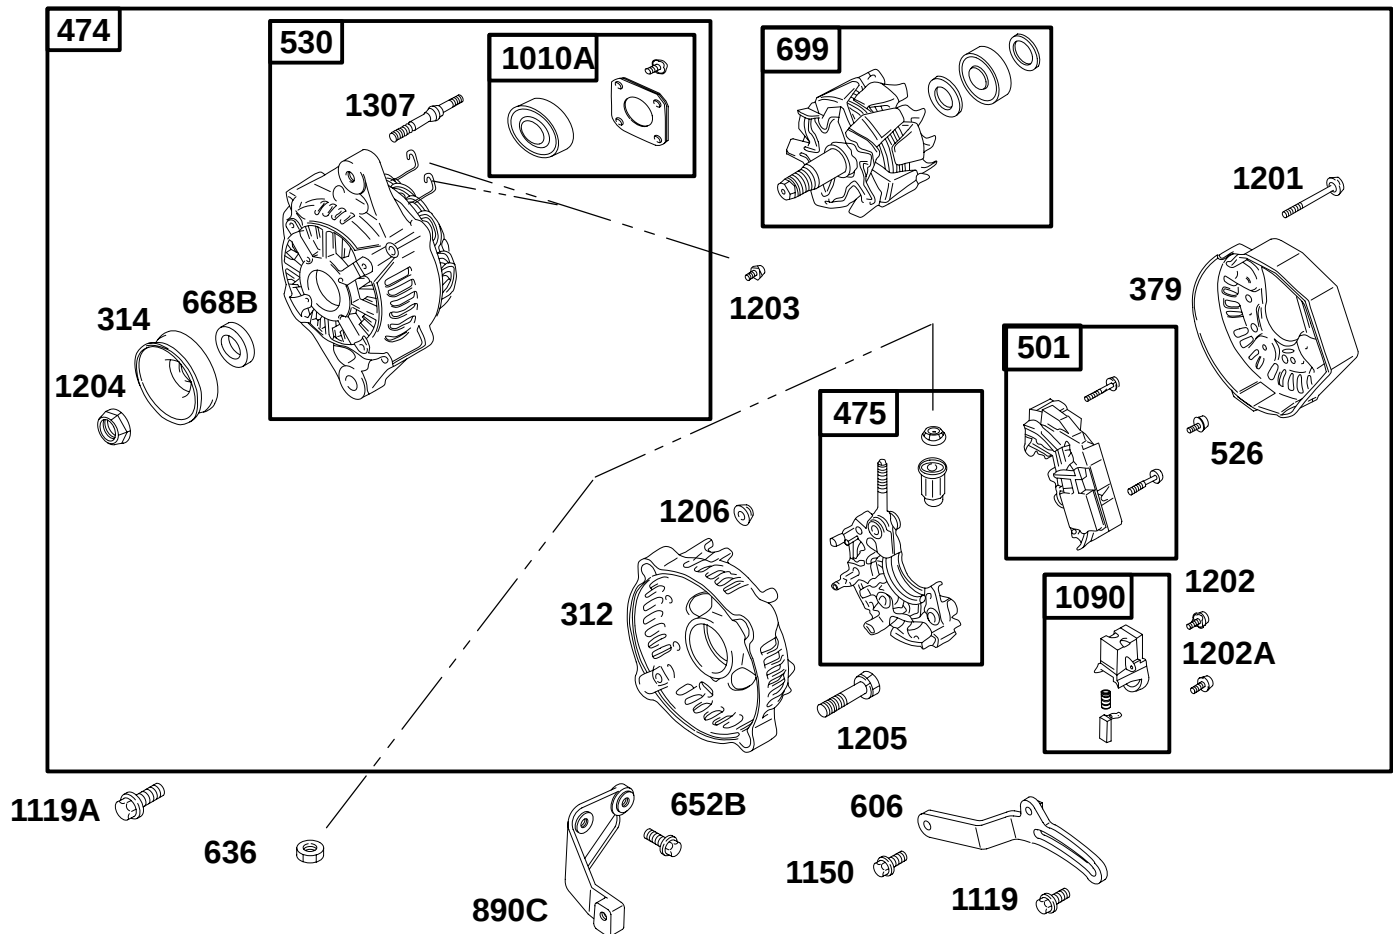
△ Valve Gasket Set – Reference 1095

58A400**1.0 KW**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
256A	820745	Gear-Starter Drive	510A	825394	Drive-Starter	801A	825396	Cap-Drive
309A	825083	Motor-Starter	544A	825392	Armature-Starter	802A	820743	Cap-End
310A	820755	Bolt (Starter Motor)	647A	820733	Gasket-Solenoid Cover	803A	825399	Housing-Starter (Includes Brushes, Springs and Brush Retainer)
413	820067	Nut (Starter Motor)	671A	825400	Cover-Solenoid	892	692318	Switch-Key
438	820725	Boot-Terminal	683	820723	Nut (Starter Solenoid) (Terminal)	920A	825398	Solenoid-Starter
502A	820739	Screw (Solenoid Cover)	683A	820721	Nut (Starter Solenoid) (Terminal)	1009A	820019	Screw (Starter Motor)
			692A	825425	Spring-Detent	1082	820455	Relay-Starter
			697A	820751	Screw (Drive Cap)	1112B	820737	Plug-Vent
			712A	825424	Roller-Clutch	1207A	820754	Screw (End Cap)

★ Engine Gasket Set – Reference 358

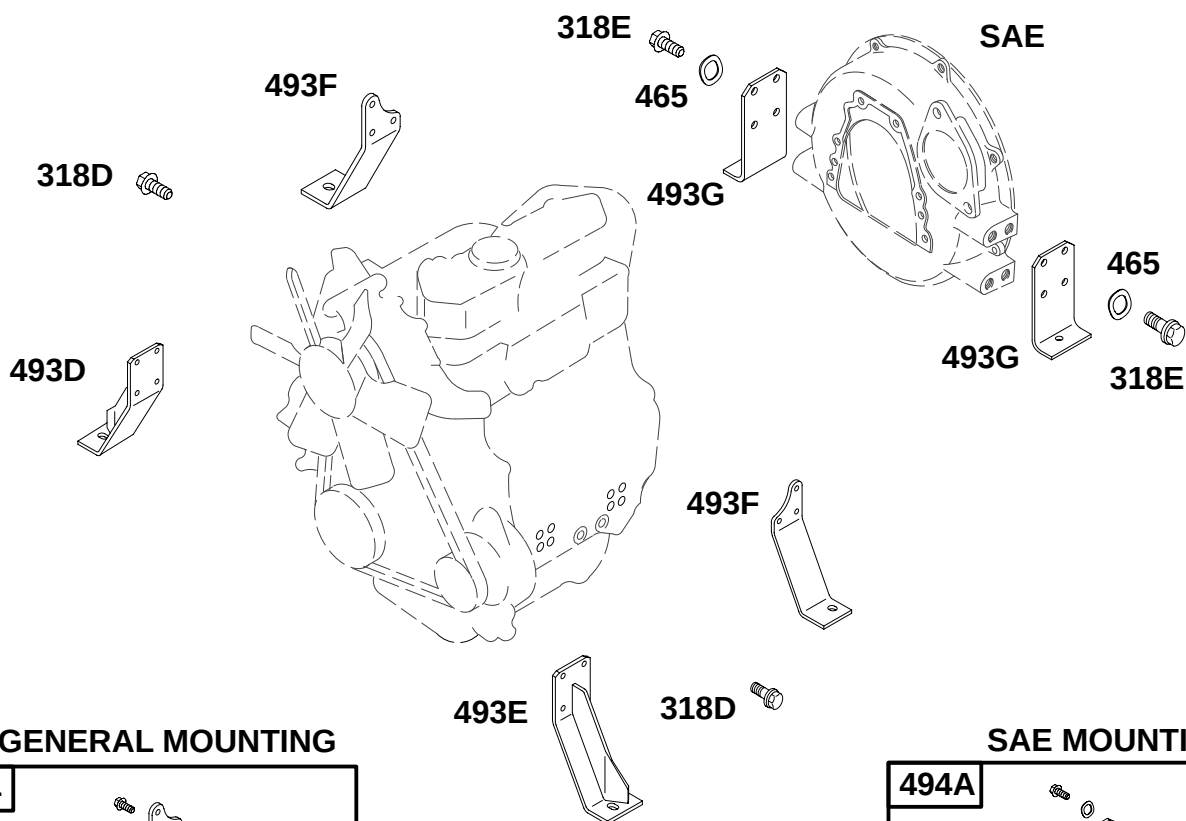
△ Valve Gasket Set – Reference 1095

58A400**40 AMP**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
312	820938	Housing-Brush End	668B	820713	Spacer			(Brush Retainer)
314	820711	Pulley-Alternator	699	825390	Rotor Assembly	1202A	820702	Screw
379	820703	Cover-Brush	890C	820213	Bracket-Support			(Brush Retainer)
474	825524	Alternator	1010A	825384	Retainer-Bearing	1203	820702	Screw
475	825385	Rectifier	1090	825387	Retainer-Brush			(Stator Wire)
501	825388	Regulator	1119	820483	Screw	1204	820705	Nut
526	820702	Screw			(Alternator)			(Alternator Pulley)
		(Regulator)	1119A	820270	Screw	1205	820707	Screw
					(Alternator)			(Brush End Housing)
530	825526	Housing-Drive End	1150	820023	Screw	1206	820709	Nut
606	820819	Strap-Adjusting			(Adjusting Strap)			(Brush End Housing)
636	820069	Nut	1201	820715	Screw	1307	820690	Stud
		(Starting Switch)			(Brush Cover)			(Alternator)
652B	820275	Screw	1202	820701	Screw			
		(Support Bracket)						

★ Engine Gasket Set - Reference 358

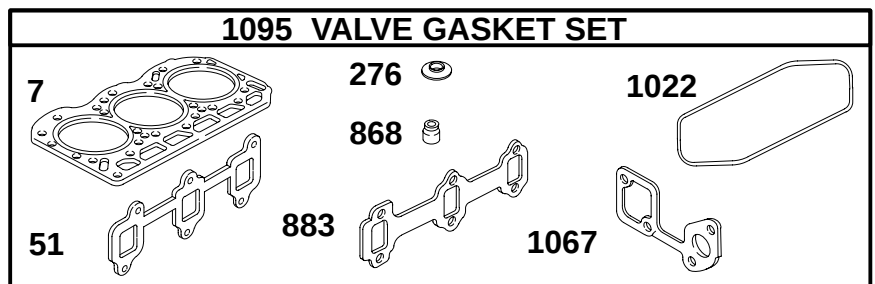
 
 
 
 
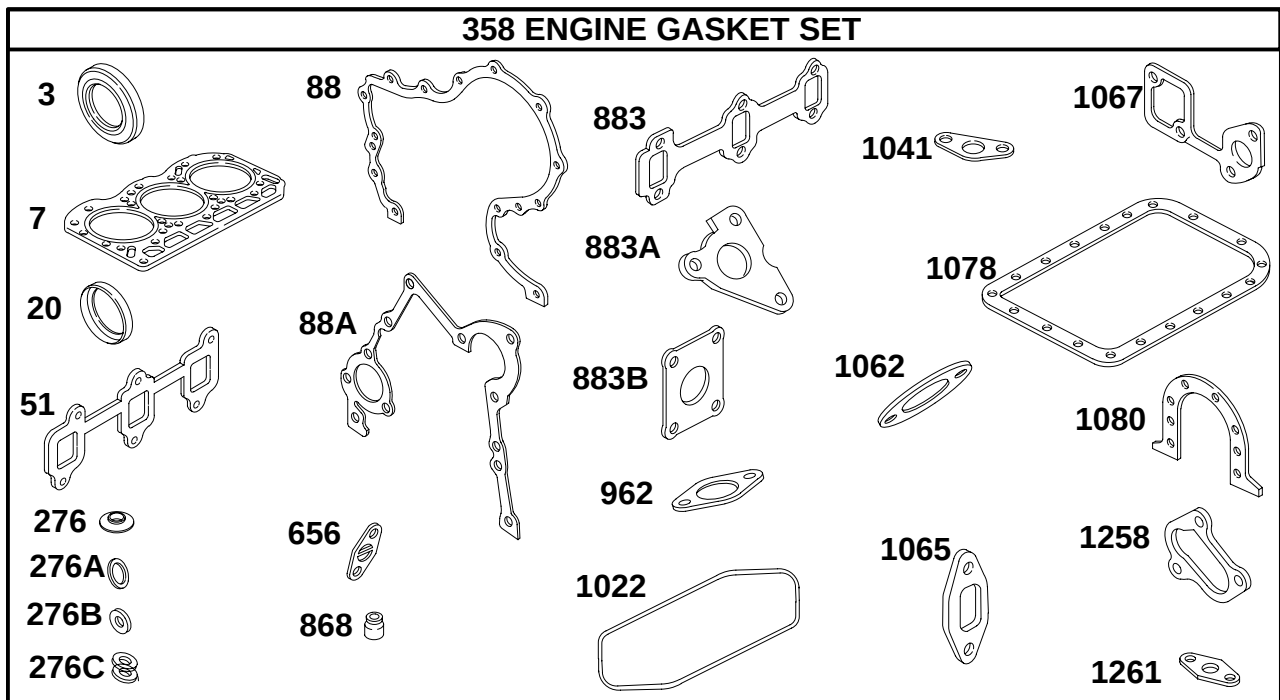
△ Valve Gasket Set - Reference 1095

58A400**494****494A**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
318D	820024	Screw (Mounting Bracket) (Used With Engine Mounts Only) ----- Note ----- 820023 Screw (Mounting Bracket) (Use Only When Front Engine Mounts And Radiator Brackets Are Installed)	465	820449	Washer (Mounting Bracket)	494	825214	Mount-Engine (General Mounting)
318E	820306	Screw (Mounting Bracket)	493D	820835	Bracket-Mounting (Right Front) (General and SAE)	494A	825215	Mount-Engine (SAE Mounting)
			493E	820832	Bracket-Mounting (Left Front) (General and SAE)			
			493F	820833	Bracket-Mounting (Rear General)			
			493G	820834	Bracket-Mounting (Rear SAE)			

★ Engine Gasket Set – Reference 358

△ Valve Gasket Set – Reference 1095

58A400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★821071	Seal-Oil (Magneto Side)	276B	★820950	Washer-Sealing (Oil Inlet Pipe)	1062	★820093	Screen
7	★Δ820930	Gasket-Cylinder Head	276C	★820952	Washer-Sealing (Oil Inlet Pipe)	1065	★820098	Gasket-Inlet Housing
20	★821073	Seal-Oil (PTO Side)	358	825527	Gasket Set-Engine	1067	★Δ820100	Gasket-Water Pump
51	★Δ820407	Gasket-Intake	656	★820962	Gasket-Water Pipe	1078	★820137	Gasket-Oil Pan
88	★820377	Gasket-Gear Reduction Cover	868	★Δ820405	Seal-Valve	1080	★820145	Gasket-Seal Retainer
88A	★820155	Gasket-Gear Reduction Cover	883	★Δ820817	Gasket-Exhaust (Manifold)	1084	825154	Connector-Terminal
276	★Δ820064	Washer-Sealing (Rocker Cover)	883A	★820967	Gasket-Exhaust (Turbo Charger)	1084A	825266	Connector-Terminal
276A	★820582	Washer-Sealing (Oil Drain Plug) (16mm)	883B	★821001	Gasket-Exhaust	1084B	825157	Connector-Terminal
			962	★820988	Gasket-Air Inlet Pipe	1084D	825160	Connector-Terminal
			1022	★Δ820150	Gasket-Rocker Cover	1095	825528	Gasket Set-Valve
			1041	★820104	Gasket-Oil Pump	1258	★820890	Gasket-Muffler Adapter
						1261	★820973	Gasket-Oil Outlet

★ Engine Gasket Set – Reference 358

Δ Valve Gasket Set – Reference 1095

58A400

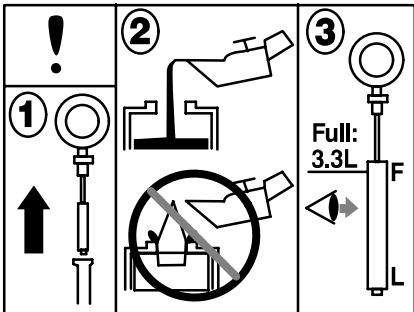
1019



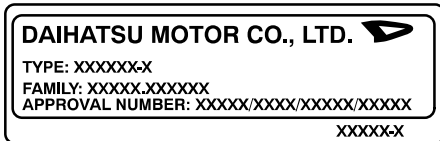
1040

MODEL	TYPE	CODE

1319

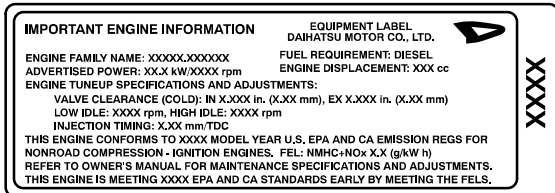


1036



1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1019	825634	Kit-Label	1036	825662	Label-Emissions (Used After Code Date 03123100). ----- Note ----- 825636 Label-Emissions (Used Before Code Date 04010100 and After Code Date 02123100). 825635 Label-Emissions (Used Before Code Date 03010100).	1040	820290	Plate-Trim
						1058	820853	Operator's Manual
						1319	820891	Label-Warning
						1330	MS1055	Repair Manual

★ Engine Gasket Set – Reference 358

△ Valve Gasket Set – Reference 1095