



9K900

Illustrated Parts List

Model Series

9K900

TYPE NUMBER
0100, 0323.

TABLE OF CONTENTS


Air Cleaner	5
Blower Housing	6
Brake	5
Cams	3
Carburetor	4
Controls	5
Covers	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Flywheel	6
Fuel Tank	4
Gasket Sets-Engine/Valve	2
Governor Spring	5
Head	2
Ignition	5
Muffler	5
Oil	2
Piston Group	3
Rewind	6
Valves	3



PRINTED IN U.S.A.









COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

9K900


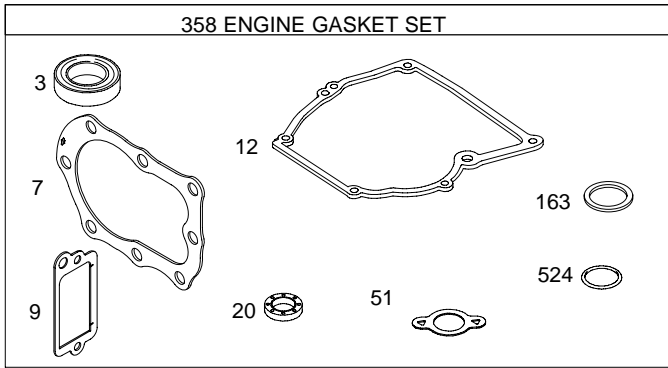



1058 OWNER'S MANUAL

  1330 REPAIR MANUAL

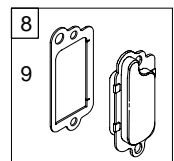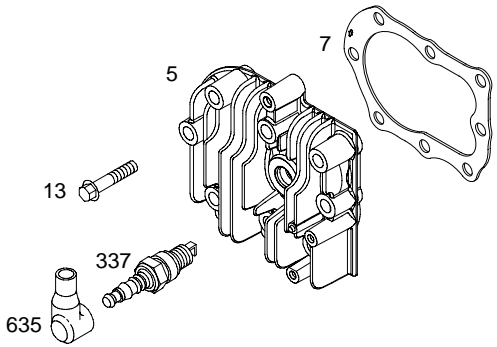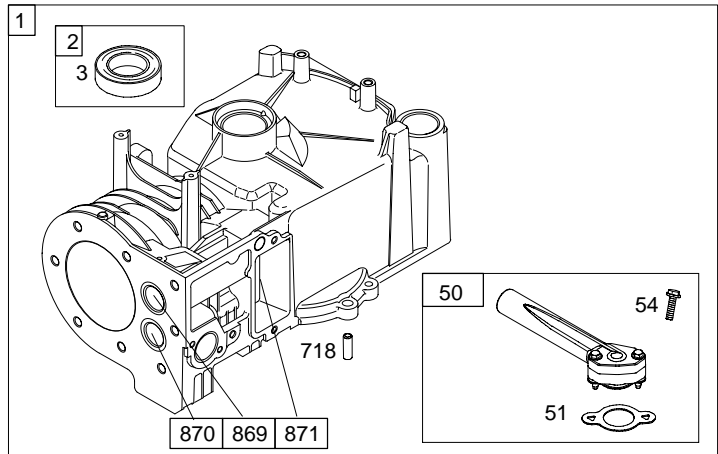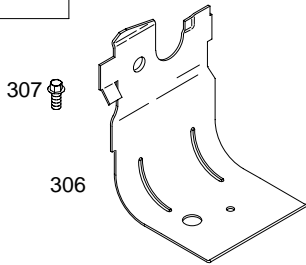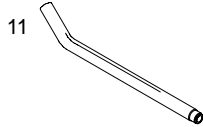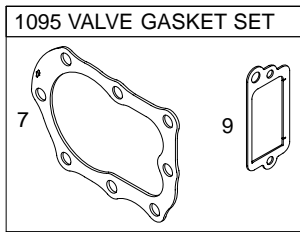


9K900

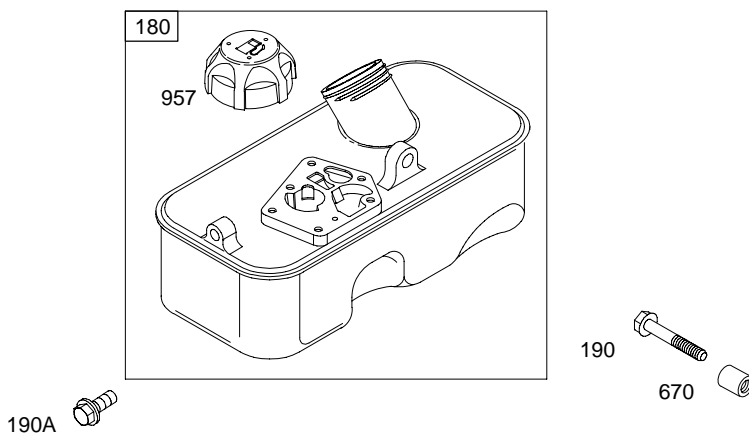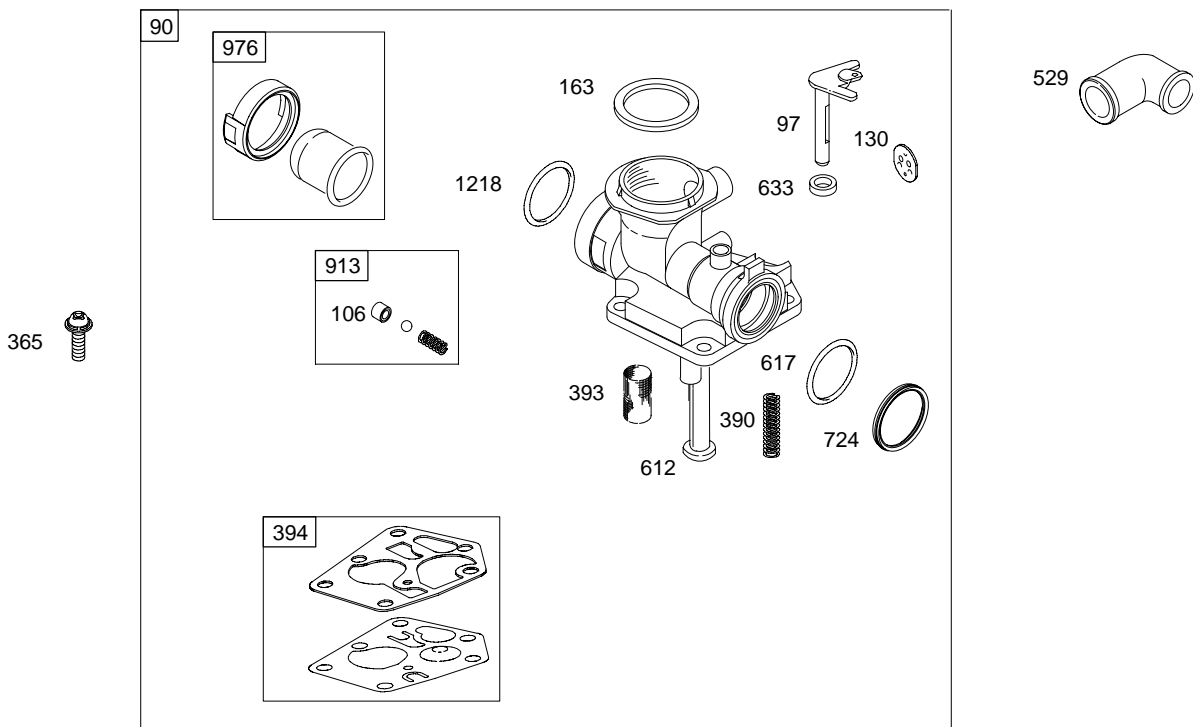

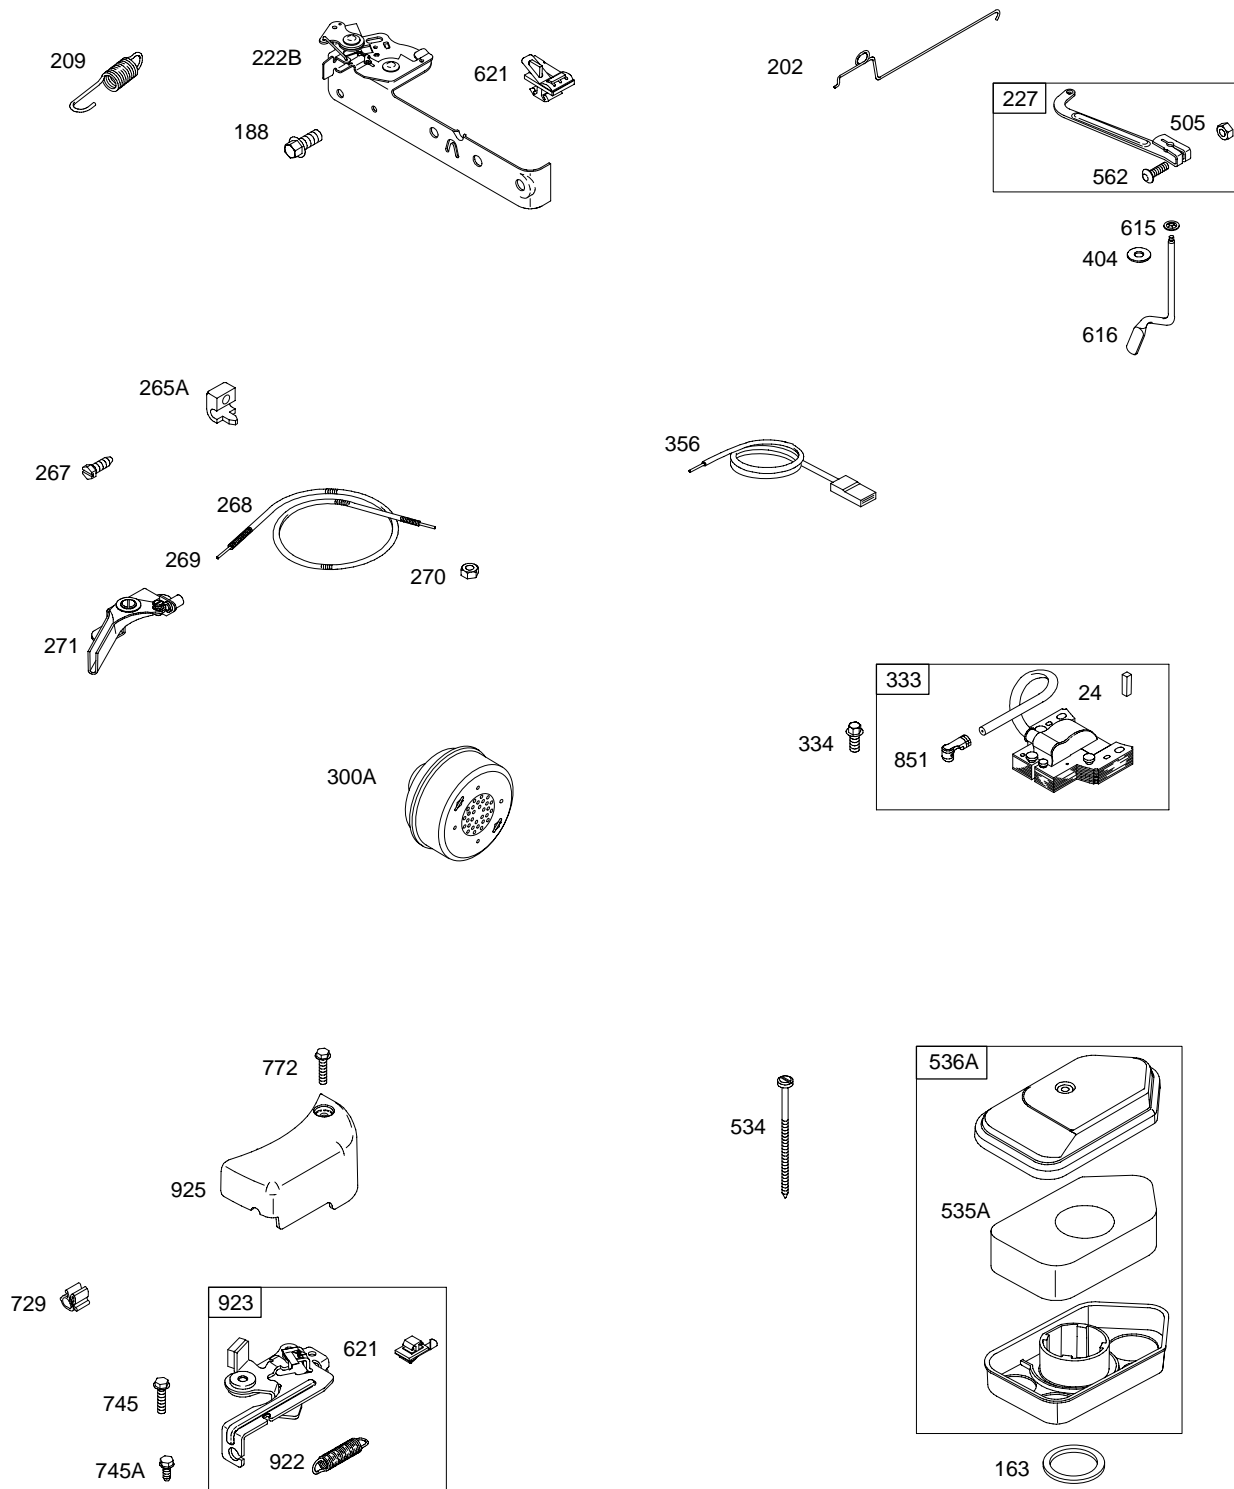

9K900

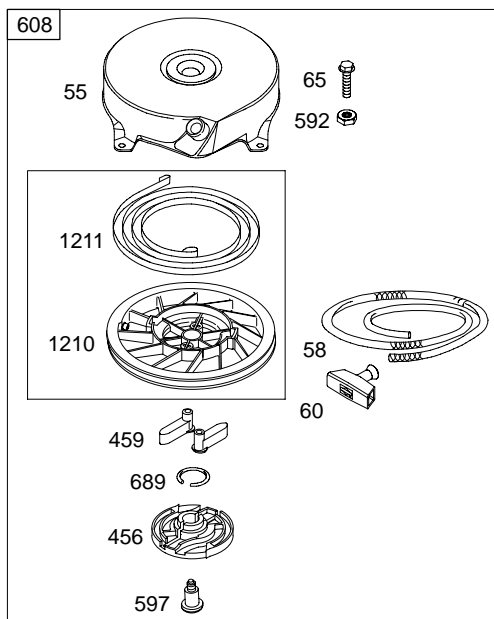

1036 EMISSIONS LABEL

1019 LABEL KIT

9K900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	692144	Housing-Rewind Starter	265A	690798	Clamp-Casing Used on Type No(s). 0100.	505	691251	Nut (Governor Control Lever)
58	697316	Rope-Starter (88 5/8" Long)	267	691044	Screw (Casing Clamp)	523A	691913	Dipstick
60	691915	Grip-Starter Rope	268	691072	Casing-Control Wire (Cut To Required Length)	524	★691876	Seal-Dipstick Tube
65	690837	Screw (Rewind Starter)	269	691026	Wire-Control (Cut To Required Length)	529	692189	Grommet
73	699850	Screen-Rotating (Used After Code Date 03082400).	270	691027	Nut (Control Wire Casing)	534	691417	Screw (Air Cleaner)
73A	694018	Screen-Rotating (Used Before Code Date 03082500).	271	691028	Lever-Control	535A	698369	Filter-Air Cleaner Foam
74	691627	Screw (Rotating Screen)	300A	394569	Muffler (Round Lo Tone)	536A	698472	Cleaner-Air
78	692198	Screw (Flywheel Guard)	304	698046	Housing-Blower (Non Compliance Engines)	562	92613	Bolt (Governor Control Lever)
90	790206	Carburetor	305	692198	Screw (Blower Housing)	592	690800	Nut (Rewind Starter)
97	697414	Shaft-Throttle	306	690400	Shield-Cylinder	597	691696	Screw (Pawl Friction Plate)
106	691901	Seat-Inlet	307	690345	Screw (Cylinder Shield)	608	499706	Starter-Rewind
130	691190	Valve-Throttle	332	690662	Nut (Flywheel)	612	496046	Tube-Pick Up
163	★271139	Gasket-Air Cleaner	333	496914	Armature-Magneto	615	690340	Retainer-Governor Shaft
180	494406	Tank-Fuel	334	691061	Screw (Magneto Armature)	616	697405	Crank-Governor
188	692198	Screw (Control Bracket)	337	802592	Plug-Spark	617	270344	Seal-O Ring (Intake Manifold)
190	691640	Screw (Fuel Tank) (To Cylinder)	356	692390	Wire-Stop	621	692310	Switch-Stop
190A	692198	Screw (Fuel Tank) (7/16" Long)	358	699933	Gasket Set-Engine	633	691321	Seal-Choke/Throttle Shaft (Throttle)
202	698835	Link-Mechanical Governor	363	19069	Puller-Flywheel	635	66538	Boot-Spark Plug
209	698726	Spring-Governor (Pink) Used on Type No(s). 0323.	365	790029	Screw (Carburetor)	670	691633	Spacer-Fuel Tank
		----- Note -----	383	89838	Wrench-Spark Plug	689	691855	Spring-Friction
		698719 Spring-Governor (Light Blue) Used on Type No(s). 0100.	390	691839	Spring-Choke Diaphragm	718	690959	Pin-Locating (Cylinder)
222B	697410	Bracket-Control	393	691837	Screen-Carburetor	718A	499047	Pin-Locating (Crankshaft)
227	697402	Lever-Governor Control	394	495770	Diaphragm-Carburetor	724	697478	Retainer-Seal
			404	690272	Washer (Governor Crank)	729	690586	Clip-Wire
			455	691236	Cup-Flywheel	741	691805	Gear-Timing
			456	692299	Plate-Pawl Friction	745	691146	Screw (Brake) (7/8" Long)
			459	281505	Pawl-Ratchet	745A	690859	Screw (Brake) (1/2" Long)
						772	691111	Screw (Linkage Cover)

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095

9K900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
851	493880	Terminal-Spark Plug	913	494409	Seat-Check Valve	1058	275508	Operator's Manual
868	697338	Seal-Valve	922	692135	Spring-Brake	1095	498526	Gasket Set-Valve
869	699641	Seat-Valve (Intake)	923	691487	Brake	1210	499901	Pulley/Spring Assembly (Pulley)
870	699642	Seat-Valve (Exhaust)	925	691349	Cover-Linkage	1211	499901	Pulley/Spring Assembly (Spring)
871	699643	Bushing-Valve Guide (Exhaust Valve)	957	497929	Cap-Fuel Tank	1218	695866	Seal-O Ring (Carburetor)
		----- Note -----	976	694394	Primer-Carburetor	1277	698718	Guard-Governor Nut
		63709 Bushing-Valve Guide (Intake Valve)	1019	496757	Kit-Label	1278	691002	Screw (Governor Guard Nut)
			1036		Label-Emissions (Available from Authorized Briggs & Stratton Service Dealer)	1330	270962	Repair Manual

★ Engine Gasket Set-Reference 358

△ Valve Gasket Set-Reference 1095