

100200 to 100299

SERVICE ENGINE



SALES MANUAL

**MODEL 100200 SERIES ENGINES REPLACED WITH
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

- NOTE 12:** Drill and tap end of Reduction PTO Shaft 5/16"-24 (1-1/8" deep).
- NOTE 15:** For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.
- NOTE 16:** Gear Red. @ 12 o'clock.
- NOTE 17:** Gear Red. @ 3 o'clock.
- NOTE 22:** If the gear reduction parts are suitable for additional service, use model 121412 type no. 0014 and transfer the reduction parts from the original engine.
- NOTE 25:** If the replacement engine supersedes to or is a Model 120000 series engine, refer to the illustrations located after the conversion data for this model series. the overall dimensions that differ, are shown in the illustrations. If after making a visual inspection and it is determined the Model 120000 series engine cannot be used because of equipment interference, the original engine should be repaired with individual parts.

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0015	100202	260719	126332	0036					15 25		All	4000		
0016	100202	260719	126332	0036					15 25		01	4000		
0035	100232	260724	126332	0035					15 25		01	4000		
0036	100232	260928	126332	0036					15 25		All	4000		
0037	100232	260726	No Replacement Repair With Individual Parts.						15		01	4000		
0038	100232	260727	126332	0036					15 25		All	3700		
0049	100252	260721	126352	0049					15 22 25		All	4000		
0070	100292	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0110	100201	260719	126332	0036					15 25		All	3600		
0111	100202	260719	126332	0036					15 25					

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0112	100232	260724	126332	0035					15 25			01 3600 02 3300 03 3600 04 3600 05 3600 06 3600 07 3600 08 3600		
0113	100232	260725	126332	0036					15 25			01 3600 02 3600 03 3600 04 3600 05 3600 06 3600 07 4000		
0114	100232	260726	No Replacement Repair With Individual Parts.						15			01 3600 02 3600 03 3600 04 3300 05 3600 06 3600		
0115	100232	260727	121332	0033					15 25			01 3600 02 3100		
0116	100252	260721	126352	0049					15 22 25		All	3600		
0117	100292	260719	No Replacement Repair With Individual Parts.						15		All	3600		
0124	100232	260928	126332	0036					15 25		01	3600		
0125	100202	260719	126332	0036					15 25			01 4000 02 4000 03 4000 04 4000 05 3600		
0126	100292	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0127	100202	260719	126332	0036					15 25			01 4000 02 4000 03 4000 04 4000 05 4000 06 4000 07 4000 08 3600 09 3600 10 3600		
0128	100202	260651	126332	0036					15 25		01	4000		
0130	100202	260719	126332	0036					15 25		01	4000		
0131	100252	260721	126352	0049					15 22 25			01 4000 02 4000 03 3600		
0132	100252	260721	126352	0049					15 16 22 25		01	3600		
0133	100202	260719	126332	0036					15 25			01 3000 02 4000		
0134	100202	260719	126332	0036					15 25		01	4000		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0135	100202	260719	126332	0036					15 25		01	3600			
0136	100252	260721	126352	0049					15 22 25		01	3600			
0137	100232	260725	126332	0036					15 25		01	4000			
0138	100202	260719	126332	0036					15 25		01 02 03 04 05	4000 4000 3600 3600 3600			
0139	100202	260719	126332	0036					15 25		01 02	4000 3800			
0140	100202	260719	126332	0036					15 25		01 02 03	4000 3600 4000			
0141	100202	260719	126332	0036					15 25		01	4000			
0142	100202	260719	126332	0036					15 25		All	4000			
0143	100292	260719	No Replacement Repair With Individual Parts.							15		01 02 03 04 05	3600 3600 4000 3600 3600		
0144	100202	260719	126332	0036					15 25		01 02	3700 4000			
0145	100202	260719	126332	0036					15 25		01 02 03 04 05 06 07 08	3700 3700 3800 4000 4000 4000 4000 3600			
0146	100202	260719	126332	0036					15 25		01	4000			
0147	100202	260719	126332	0036					15 25		All	4000			
0148	100202	260719	126332	0036					15 25		01	4000			
0149	100232	260725	126332	0036					15 25		01 02 03 04	4000 4000 4000 3600			
0150	100202	260719	126332	0036					15 25		01	3600			
0151	100202	260719	126332	0036					15 25		01	4000			
0152	100202	260719	126332	0036					15 25		01	4000			
0153	100202	260719	126332	0036					15 25		01	4000			

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0154	100292	260719	No Replacement Repair With Individual Parts.					15				01 3800 02 3600 03 4000 04 4100 05 4100 06 4000 07 3600		
0155	100202	260719	126332	0036					15 25		01	3600		
0156	100252	260721	126352	0049					12 15 16 22 25		01	3800		
0157	100202	260719	125332	0036					15 25		01	4100		
0158	100202	260719	126332	0036					15 25		01	3600		
0159	100202	260719	126332	0036					15 25		01	4000		
0160	100252	260721	126352	0049					15 22 25		01	3300		
0161	100202	260719	126332	0036					15 25		01	4000		
0162	100202	260719	126332	0036					15 25		01 02 03 04	3600 3600 3000 3300		
0163	100232	260727	121332	0033					15 25		All	3600		
0164	100202	260719	126332	0036					15 25		01	4000		
0165	100202	260719	126332	0036					15 25		01	4000		
0166	100202	260719	126332	0036					15 25		01	3600		
0167	100202	260719	126332	0036					15 25		01 02 03	4000 4000 3600		
0168	100232	260725	126332	0036					15 25		All	3600		
0169	100202	260719	126332	0036					15 25		01	4000		
0170	100252	260721	126352	0049					12 15 22 25		01	4000		
0171	100202	260719	126332	0036					15 25		01	3600		
0172	100232	260725	126332	0036					15 25		All	3600		
0173	100202	260719	126332	0036					15 25		01 02	3600 2850		
0174	100202	260719	126332	0036					15 25		01	4000		
0175	100202	260719	126332	0036					15 25		01	4000		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0176	100252	260721	126352	0049					15 22 25		01	3600		
0177	100292	260719	No Replacement Repair With Individual Parts.						15		01 02 03	3600 3600 4000		
0178	100202	260719	126332	0036					15 25		01 02 03	3600 3000 3600		
0179	100202	260719	126332	0036					15 25		All	3600		
0180	100202	260719	126332	0036					15 25		All	4000		
0181	100202	260719	126332	0036					15 25		01	4000		
0182	100232	260724	126332	0035					15 25		01 02 03	3600 4000 4000		
0183	100202	260719	126332	0036					15 25		01	4100		
0184	100232	260725	126332	0036					15 25		01	3600		
0185	100252	260721	126352	0049					15 16 22 25		01	3600		
0186	100202	260719	126332	0036					15 25		01 02	3500 3300		
0187	100202	260719	126332	0036					15 25		01 02 03 04 05 06 07 08	4000 4000 4000 3600 4000 4000 4000 3600		
0188	100202	260719	126332	0036					15 25		01 02 03	4000 4000 3600		
0189	100202	260719	126332	0036					15 25		01	4000		
0190	100232	260727	121332	0033					15 25		01	4000		
0191	100232	260725	126332	0036					15 25		01	4000		
0192	100202	260719	126332	0036					15 25		01	3600		
0193	100232	260725	126332	0036					15 25		01 02 03	4000 4000 3600		
0194	100252	260721	126352	0049					15 22 25		01	4000		
0195	100202	260719	126332	0036					15 25		01	4000		
0196	100232	260727	121332	0033					15 25		01 02 03	3600 3600 3700		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0197	100232	260725	126332	0036					15 25		All	3600		
0198	100202	260719	126332	0036					15 25		01 02	3800 3600		
0199	100202	260719	126332	0036					15 25		01	3600		
0200	100202	260719	126332	0036					15 25		All	3600		
0201	100232	260727	121332	0033					15 25		01 02 03	3800 3600 3700		
0202	100202	260719	126332	0036					15 25		01	4000		
0203	100202	260719	126332	0036					15 25		01	4000		
0204	100202	260719	126332	0036					15 25		01	3600		
0205	100232	260727	121332	0033					15 25		All	4000		
0207	100232	260727	121332	0033					15 25		01 02 03	3600 3800 3600		
0208	100232	260725	126332	0036					15 25		All	3600		
0209	100202	260719	126332	0036					15 25		01	4000		
0210	100252	260721	126352	0049					15 17 22 25		01	3600		
0211	100212	260719	126312	0023					15 25		01	3600		
0212	100202	260719	126332	0036					15 25		01 02	3600 3500		
0213	100232	260725	126332	0036					15 25		01	3300		
0214	100202	260719	126332	0036					15 25		01	4000		
0215	100202	260719	126332	0036					15 25		01 02	3600 4000		
0216	100292	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0217	100232	260727	121332	0033					15 25		01 02 03 04	3600 3800 4000 3600		
0218	100232	260724	126332	0035					15 25		All	3600		
0219	100202	260719	126332	0036					15 25		01	4000		
0220	100202	260719	126332	0036					15 25		01	3600		
0221	100202	260719	126332	0036					15 25		01	3600		
0222	100232	260725	126332	0036					15 25		01	3600		
0223	100232	260727	121332	0033					15 25		01 02 03 04	3600 3600 3600 3700		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0224	100252	260721	126352	0049					15 22 25		01	4000		
0225	100202	260719	126332	0036					15 25		01	4000		
0226	100202	260719	126332	0036					15 25		01	3500		
0227	100232	260727	121332	0033					15 25		01	3600		
0228	100202	260719	126332	0036					15 25		01	3600		
0229	100202	260719	126332	0036					15 25		01	3200		
0230	100252	260271	No Replacement Repair With Individual Parts.						15		01	4000		
0231	100202	260719	126332	0036					15 25		01	3600		
0232	100202	260719	126332	0036					15 25		01 02 03 04	4000 3800 3800 3800		
0233	100202	260719	126332	0036					15 25		All	4000		
0234	100202	260719	126332	0036					15 25		01	3300		
0235	100292	260719	No Replacement Repair With Individual Parts.						15		01	3500		
0236	100252	260721	126352	0049					15 17 22 25		All	4000		
0237	100202	260719	126332	0036					15 25		All	3000		
0238	100202	260719	126332	0036					15 25		01	3600		
0239	100202	260719	126332	0036					15 25		01 02 03	3500 3900 3900		
0240	100202	260719	126332	0036					15 25		01	4000		
0241	100202	260651	126332	0036					15 25		01	4100		
0242	100252	260721	126352	0049					15 17 22 25		01	4000		
0243	100202	260719	126332	0036					15 25		01	4000		
0244	100202	260719	126332	0036					15 25		01	4100		
0245	100292	260719	No Replacement Repair With Individual Parts.						15		01 02 03 04 05 06 07	4000 3600 3500 3500 4000 4000 3600		
0246	100202	260719	126332	0036					15 25		01	4000		
0247	100202	260719	126332	0036					15 25		01	4000		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0248	100232	260727	121332	0033					15 25		01	3600		
0249	100232	260726	No Replacement Repair With Individual Parts.						15		All	3300		
0250	100232	260725	126332	0036					15 25		01 02 03 04 05	4000 3900 3600 3600 4000		
0251	100232	260726	No Replacement Repair With Individual Parts.						15		01	3600		
0252	100232	260725	126332	0036					15 25		01	4000		
0253	100251	260721	126352	0049					15 22 25		01 02	4000 3600		
0254	100232	260725	126332	0036					15 25		All	4000		
0255	100231	260724	126332	0035					15 25		All	3600	491147	
0256	100231	260727	121332	0033					15 25		01	3800	491148	
0257	100232	260725	126332	0036					15 25		All	3600		
0258	100202	260719	126332	0036					15 25		01 02	3000 3600		
0259	100252	260721	126352	0049					15 22 25		01	3600	491149	
0260	100252	260721	126352	0049					15 16 22 25		01	3600	491149	
0261	100252	260721	126352	0049					15 22 25		01	3600	491149	
0262	100252	260721	126352	0049					15 22 25		01	3600	491149	
0264	100231	260725	126332	0036					15 25		01	3600		
0265	100201	260719	126332	0036					15 25		01	3000		
0266	100232	260727	121332	0033					15 25		01	3800	491148	
0267	100202	260719	126332	0036					15 25		01	4000		
0268	100251	260721	126352	0049					15 17 22 25		01	3200	491149	
0269	100212	260719	126312	0023					15 25		All	3600		
0270	100202	260719	126332	0036					15 25		01	4000		
0271	100202	260719	126332	0036					15 25		01	3900		
0272	100231	260725	126332	0036					15 25		All	3600		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0273	100252	260721	126352	0049					15 17 22 25		01	3300	491149		
0274	100202	260719	126332	0036					15 25		01	4000			
0275	100202	260719	126332	0036					15 25		01	3600			
0276	100232	260727	121332	0033					15 25		01	3800	491148		
0277	100232	260725	126332	0036					15 25		01	3900			
0278	100202	260719	126332	0036					15 25		01	3600			
0279	100212	260719	126312	0023					15 25		01	4000			
0280	100202	260719	126332	0036					15 25		01	3900			
0281	100202	260719	126332	0036					15 25		01	4000			
0282	100202	260719	126332	0036					15 25		All	3600			
0283	100232	260726	No Replacement Repair With Individual Parts.							15		All	3600		
0284	100232	260725	126332	0036					15 25		All	3600			
0285	100202	260719	126332	0036					15 25		01	4100			
0286	100232	260725	126332	0036					15 25		All	3600			
0287	100202	260719	126332	0036					15 25		01	4000			
0288	100202	260719	126332	0036					15 25		All	4000			
0289	100201	260719	126332	0036					15 25		01	4000			
0290	100201	260719	126332	0036					15 25		All	3600			
0292	100202	260719	126332	0036					15 25		01	3600			
0293	100251	260721	126352	0049					15 16 22 25		01	3600			
0294	100231	260725	126332	0036					15 25		All	3600			
0295	100232	260725	126332	0036					15 25		01	4000			
0296	100232	260727	121332	0033					15 25		01	3600			
0297	100231	260725	126332	0036					15 25		01	4000			
0298	100252	260721	126332	0049					15 22 25		01	3600			
0299	100202	260719	126332	0036					15 25		01	2850			
0300	100232	260928	No Replacement Repair With Individual Parts.							15		01 02	3800 3300		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0301	100202	260719	126332	0036					15 25		All	4000		
0302	100232	260727	121332	0033					15 25		01	3600		
0303	100212	260719	126312	0023					15 25		All	4000		
0304	100232	260727	121332	0033					15 25		01	3800		
0305	100232	260725	No Replacement Repair With Individual Parts.						15		01	3600		
0306	100232	260928	126332	0036					15 25		01 02	3600 3500		
0307	100251	260721	126352	0049					15 16 22 25		01	3600		
0308	100252	260721	No Replacement Repair With Individual Parts.						15		01	2900		
0309	100232	260725	126332	0036					15 25		01	3300		
0310	100202	260719	126332	0036					15 25		01	3600		
0311	100251	260721	126352	0049					15 25		01	3600		
0312	100202	260719	126332	0036					15 25		01	3600		
0313	100202	260719	126332	0036					15 25		01	3300		
0314	100232	260727	121332	0033					15 25		01	3000		
0315	100202	260719	126332	0036					15 25		01	2900		
0316	100202	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0317	100252	260721	126352	0049					15 22 25		01	3600		
0318	100232	260725	126332	0036					15 25		01	3600		
0319	100252	260721	No Replacement Repair With Individual Parts.						15		All	3600		
0320	100231	260725	126332	0036					15 25		01	3600		
0321	100231	260725	126332	0036					15 25		01	3600		
0322	100202	260719	126332	0036					15 25		01	4000		
0323	100232	260725	126332	0036					15 25		01	3600		
0324	100202	260719	126332	0036					15 25		01	4000		
0325	100232	260726	No Replacement Repair With Individual Parts.						15		01	4000		
0326	100202	260719	126332	0036					15 25		01	4000		
0327	100202	260719	126332	0036					15 25		All	3600		
0328	100202	260719	No Replacement Repair With Individual Parts.						15		01 02	3800 4000		
0329	100232	260725	126332	0036					15 25		All	3600		
0330	100202	260719	126332	0036					15 25		01	4000		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0331	100232	260928	126332	0036					15 25		01	3300		
0332	100202	260719	126332	0036					15 25		All	4000		
0333	100202	260719	126332	0036					15 25		01	3600		
0334	100202	260719	126332	0036					15 25		01	4000		
0335	100252	260721	126352	0049					15 16 22 25		01	3600		
0336	100251	260721	126352	0049					15 22 25		01	3600		
0337	100232	260724	126332	0035					15 25		01	4000		
0338	100252	260721	126352	0049					15 17 22 25		01 02 03 04 05	3600 3600 3600 3300 3300		
0339	100232	260714	126332	0035					15 25		01	3600		
0340	100231	260724	126332	0035					15 25		01 02 03	3600 3600 3700		
0341	100212	260719	126332	0036					15 25		01	3500		
0342	100202	260719	126332	0036					15 25		01	3300		
0343	100232	260727	121332	0033					15 25		All	3600		
0344	100252	260721	126352	0049					15 17 25		01	3800		
0345	100232	260727	121332	0033					15 25		01	3700		
0346	100232	260724	126332	0035					15 25		01	4000		
0347	100202	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0348	100231	260725	No Replacement Repair With Individual Parts.						15		01	3600		
0349	100202	260719	126332	0036					15 25		All	3600		
0350	100202	260719	126332	0036					15 25		All	3600		
0351	100232	260725	126332	0036					15 25		01	3900		
0352	100232	260725	126332	0036					15 25		01	3900		
0353	100232	260726	No Replacement Repair With Individual Parts.						15		01	3600		
0354	100232	260726	No Replacement Repair With Individual Parts.						15		01	4000		
0355	100232	260725	No Replacement Repair With Individual Parts.						15		01	3200		
0356	100252	260721	No Replacement Repair With Individual Parts.						15		01	4000		
0357	100212	260719	126312	0023					15 25		01	3600		
0358	100202	260719	No Replacement Repair With Individual Parts.						15		01 02 03	4000 3300 4000		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0359	100202	260719	126332	0036					15 25		All	4000		
0360	100202	260719	126332	0036					15 25		01	4000		
0361	100232	260727	121332	0033					15 25		01	3600		
0362	100232	260727	121332	0033					15 25		01	3800		
0363	100232	260726	No Replacement Repair With Individual Parts.						15		01	3600		
0364	100292	260719	No Replacement Repair With Individual Parts.						15		01	3600		
0365	100232	260724	126332	0035					15 25		01	4000		
0366	100292	260719	No Replacement Repair With Individual Parts.						15		01	3600		
0367	100232	260928	No Replacement Repair With Individual Parts.						15		01	4000		
0368	100292	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0369	100232	260727	121332	0033					15 25		01	3800		
0370	100232	260727	121332	0033					15 25		01	3800		
0371	100202	260719	126332	0036					15 25		01	3600		
0372	100232	260727	121332	0033					15 25		01	3700		
0373	100252	260271	126352	0049					15 22 25		01	3300		
0374	100202	260719	126332	0036					15 25		01	4000		
0375	100202	260719	126332	0036					15 25		01	4000		
0376	100231	260725	126332	0036					15 25		All	3600		
0377	100252	260721	No Replacement Repair With Individual Parts.						15		01	3300		
0378	100232	260928	126332	0036					15 25		01	3500		
0379	100252	260721	No Replacement Repair With Individual Parts.						15		01 02 03	3600 4000 3600		
0380	100232	260725	126332	0036					15 25		01	4000		
0381	100202	260719	126332	0036					15 25		01	4000		
0382	100212	260719	126312	0023					15 25		01	4000		
0383	100202	260719	126332	0036					15 25		01	4000		
0384	100232	260726	No Replacement Repair With Individual Parts.						15		01 02	3600 4000		
0385	100212	260719	126312	0023					15 25		01	3400		
0386	100212	260719	No Replacement Repair With Individual Parts.						15		01	3600		
0387	100252	260721	No Replacement Repair With Individual Parts.						15		01	3300		
0388	100232	260928	No Replacement Repair With Individual Parts.						15		01	3800		
0389	100212	260719	126312	0023					15 25		01	3600		
0390	100202	260719	126332	0036					15 25		All	4000		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0391	100232	260725	126332	0036					15 25		01	3600		
0392	100202	260719	126332	0036					15 25		01	3600		
0393	100232	260725	No Replacement Repair With Individual Parts.						15		01	3600		
0394	100232	260727	121332	0033					15 25		01	3000		
0395	100202	260719	126332	0036					15 25		01	4000		
0396	100232	260726	No Replacement Repair With Individual Parts.						15		01	3600		
0397	100202	260719	126332	0036					15 25		01	4000		
0398	100231	260725	126332	0036					15 25		All	3600		
0399	100202	260719	126332	0036					15 25		01	3600		
0400	100202	260719	126332	0036					15 25		01	4000		
0401	100212	260719	No Replacement Repair With Individual Parts.						15		01	3600		
0402	100252	260721	126352	0049					15 22 25		01	3600		
0403	100212	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0404	100232	260727	121332	0033					15 25		01	3700		
0405	100232	260727	121332	0033					15 25		01	4000		
0406	100232	260725	126332	0036					15 25		01	3600		
0407	100232	260725	No Replacement Repair With Individual Parts.						15		01	4000		
0408	100292	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0409	100232	260928	126332	0036					15 25		01	3800		
0410	100212	260719	126312	0023					15 25		01	4000		
0411	100201	260719	126332	0036					15 25		All	4000		
0412	100202	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0413	100202	260719	126332	0036					15 25		01	4000		
0414	100202	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0415	100212	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0416	100202	260719	126332	0036					15 25		All	4000		
0417	100202	260719	126332	0036					15 25		01	4000		
0418	100232	260928	126332	0036					15 25		01	4000		
0419	100252	260721	126352	0049					15 17 22 25		01	4000	491149	
0420	100232	260725	126332	0036					15 25		01	3600		
0421	100201	260719	126332	0036					15 25		01	3600		
0422	100202	260719	126332	0036					15 25		01	3600		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0423	100202	260719	126332	0036					15 25		01	4000		
0424	100232	260725	126332	0036					15 25		01	4000		
0425	100202	260219	No Replacement Repair With Individual Parts.						15		All	4000		
0426	100232	260726	No Replacement Repair With Individual Parts.						15		01	3600		
0427	100232	260928	126332	0036					15 25		01	3800		
0428	100202	260719	No Replacement Repair With Individual Parts.						15		All	4000		
0429	100232	260928	126332	0036					15 25		01	3600		
0430	100252	260721	126352	0049					15 17 22 25		01	2900	491149	
0431	100201	260719	126332	0036					15 25		01	3300		
0432	100202	260719	126332	0036					15 25		01	4000		
0433	100202	260719	126332	0036					15 25		01	4000		
0434	100202	260719	No Replacement Repair With Individual Parts.						15		All	4000		
0435	100252	260721	No Replacement Repair With Individual Parts.						15		01	3600	491149	
0436	100232	260727	121332	0033					15 25		01	3600	491148	
0437	100232	260727	121332	0033					15 25		01	3700	491148	
0438	100202	260719	126332	0036					15 25		01	3800		
0439	100232	260724	126332	0035					15 25		01	3600	491147	
0440	100232	260727	121332	0033					15 25		01	3100	491148	
0441	100232	260928	126332	0036					15 25		01	3600		
0442	100252	260721	126352	0049					15 17 22 25		01	3200	491149	
0443	100232	260928	126332	0036					15 25		01	3600		
0444	100292	261204	No Replacement Repair With Individual Parts.						15		01	4000		
0445	100212	260719	No Replacement Repair With Individual Parts.						15		01	3800		
0446	100212	260719	126312	0023					15 25		01	3600		
0447	100232	260928	126332	0036					15 25		01	3700		
0448	100202	260719	126332	0036					15 25		01	3000		
0449	100232	260928	126332	0036					15 25		01	4000		
0450	100232	260928	126332	0036					15 25		All	3600		
0451	100232	260928	No Replacement Repair With Individual Parts.						15		01	3800		
0452	100252	260721	No Replacement Repair With Individual Parts.						15		01	4000	491149	
0453	100202	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0454	100232	260727	121332	0033					15 25		All	3000	491148	

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0455	100231	260726	No Replacement Repair With Individual Parts.					15		01	3600			
0456	100232	260727	121332	0033					15 25		All	3100	491148	
0457	100202	260719	126332	0036					15 25		01	4000		
0458	100231	260928	126332	0036					15 25		01	3600		
0459	100231	260928	126332	0036					15 25		All	3600		
0460	100202	260719	126332	0036					15 25		01	3300		
0461	100202	260719	No Replacement Repair With Individual Parts.					15		01	4000			
0462	100232	260928	126332	0036					15 25		01	3600		
0463	100202	260719	126332	0036					15 25		01	3600		
0464	100212	260719	126312	0023					15 25		01	3400		
0465	100201	260719	126332	0036					15 25		01	3600		
0466	100202	260719	126332	0036					15 25		01	3600		
0467	100202	260719	126332	0036					15 25		01	3600		
0468	100252	260721	126352	0049					15 22 25		01	4000	491149	
0469	100232	260928	126332	0036					15 25		01	3600		
0470	100232	260928	126332	0036					15 25		01	3600		
0471	100232	260727	121332	0033					15 25		01	3700	491148	
0472	100202	260719	126332	0036					15 25		01	4000		
0473	100202	260719	No Replacement Repair With Individual Parts.					15		01	4000			
0474	100202	260719	126332	0036					15 25		01	4000		
0475	100212	260719	No Replacement Repair With Individual Parts.					15		01	3600			
0476	100202	260719	126332	0036					15 25		01	3600		
0477	100202	260719	126332	0036					15 25		01	3600		
0478	100202	260719	126332	0036					15 25		All	3600		
0479	100231	260928	126332	0036					15 25		All	3600		
0480	100232	260928	126332	0036					15 25		01	2700		
0481	100232	260928	126332	0036					15 25		01	3600		
0482	100232	260928	126332	0036					15 25		01	3600		
0483	100212	260719	No Replacement Repair With Individual Parts.					15		01	3600			
0484	100232	260928	126332	0036					15 25		01	4000		
0485	100292	260719	No Replacement Repair With Individual Parts.					15		01	3500			
0486	100232	260928	No Replacement Repair With Individual Parts.					15		01	3200			

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0487	100202	260719	126332	0036					15 25		All	3600		
0488	100202	260719	126332	0036					15 25		01	4000		
0489	100212	260719	No Replacement Repair With Individual Parts.						15		01	3600		
0490	100232	260928	126332	0036					15 25		All	3600		
0491	100232	260727	121332	0033					15 25		01	3100	491148	
0492	100232	260727	121332	0033					15 25		01	3700	491148	
0493	100232	260928	126332	0036					15 25		01	3600		
0494	100232	260928	126332	0036					15 25		01	3600		
0495	100252	260721	126352	0049					15 22 25		01	3600	491149	
0496	100202	260719	126332	0036					15 25		01	3600		
0497	100232	260928	126332	0036					15 25		01	3300		
0498	100232	260726	No Replacement Repair With Individual Parts.						15		01	3600		
0499	100202	260719	126332	0036					15 25		01	4000		
0500	100232	260928	126332	0036					15 25		01	4000		
0501	100232	260727	121332	0033					15 25		01	3800	491148	
0502	100232	260928	126332	0036					15 25		01	3600		
0503	100232	260928	126332	0036					15 25		01	3600		
0504	100202	260719	126332	0036					15 25		All	4000		
0505	100202	260719	126332	0036					15 25		01	3500		
0506	100232	260727	121332	0033					15 25		01	3600	491148	
0507	100292	260719	No Replacement Repair With Individual Parts.						15		01	3600		
0508	100252	260721	126352	0049					15 17 22 25		01	3600	491149	
0509	100202	261204	No Replacement Repair With Individual Parts.						15		All	3500		
0510	100232	260928	126332	0036					15 25		01	3600		
0511	100232	260928	126332	0036					15 25		01	3600		
0512	100232	260928	126332	0036					15 25		01	2800		
0513	100232	260928	126332	0036					15 25		01	4000		
0514	100232	260727	121332	0033					15 25		01	3700	491148	
0515	100202	260719	126332	0036					15 25		01	3300		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0516	100232	260928	126332	0036					15 25		01	4000		
0517	100232	260928	126332	0036					15 25		01	3600		
0518	100232	260727	121332	0033					15 25		01	3800	491148	
0519	100232	260928	126332	0036					15 25		01	3600		
0520	100232	260928	126332	0036					15 25		01	3600		
0521	100292	260719	No Replacement Repair With Individual Parts.						15		01	3600		
0522	100212	260719	126312	0023					15 25		01	3600		
0523	100212	260719	126312	0023					15 25		All	3500		
0524	100202	260719	126332	0036					15 25		01	3600		
0525	100252	260721	126352	0049					15 17 22 25		01	3000	491149	
0526	100252	260721	126352	0049					15 17 22 25		01	3300	491149	
0527	100202	260719	126332	0036					15 25		01	3600		
0528	100202	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0529	100232	260724	126332	0035					15 25		01	3600	491147	
0530	100202	260719	126332	0036					15 25		01	3600		
0531	100232	260727	121332	0033					15 25		01	3100	491148	
0532	100232	260727	121332	0033					15 25		01	3600	491148	
0533	100202	260719	126332	0036					15 25		01	3600		
0534	100232	260928	126332	0036					15 25		01	3600		
0535	100252	260271	126352	0049					15 22 25		01	3600	491149	
0536	100292	260719	No Replacement Repair With Individual Parts.						15		01	3500		
0537	100232	260727	121332	0033					15 25		01	3100	491148	
0538	100202	260719	126332	0036					15 25		01	4000		
0539	100202	260719	126332	0036					15 25		01	4000		
0540	100292	260719	No Replacement Repair With Individual Parts.						15		All	3600		
0541	100212	261398	No Replacement Repair With Individual Parts.						15		01	3800		
0542	100232	260928	126332	0036					15 25		01	4000		
0543	100202	260719	126332	0036					15 25		01	3600		
0544	100292	260719	No Replacement Repair With Individual Parts.						15		01	3600		
0545	100232	260726	No Replacement Repair With Individual Parts.						15		01	3600		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0546	100202	260719	126332	0036					15 25		01	4000		
0547	100232	260727	121332	0033					15 25		01	3700	491148	
0548	100232	260727	121332	0033					15 25		01	3100	491148	
0549	100202	260719	126332	0036					15 25		01	3000		
0550	100232	260928	126332	0036					15 25		01	3400		
0551	100232	260724	126332	0035					15 25		01	3700	491147	
0552	100252	260721	126352	0049					15 22 25		01	4000	491149	
0553	100202	260719	126332	0036					15 25		01	3600		
0554	100202	260719	126332	0036					15 25		01	3500		
0555	100252	260721	126352	0049					15 22 25		01	3600	491149	
0556	100232	260928	126332	0036					15 25		01	3600		
0557	100202	260719	126332	0036					15 25		01	4000		
0558	100202	260719	No Replacement Repair With Individual Parts.						15		01	4000		
0559	100231	260928	126332	0036					15 25		01	3600		
0560	100252	260721	No Replacement Repair With Individual Parts.						15		01	4000		
0561	100232	260928	126332	0036					15 25		01	3500		
0562	100252	260721	126352	0049					15 17 22 25		01	3300	491149	
0563	100202	260719	126332	0036					15 25		01	3600		
0564	100232	260928	126332	0036					15 25		01	3200		
0565	100212	261398	No Replacement Repair With Individual Parts.						15		01	3800		
0566	100231	260726	No Replacement Repair With Individual Parts.						15		All	3600		
0567	100252	260721	126352	0049					15 17 22 25		01	3600	491149	
0568	100202	260719	126332	0036					15 25		01	3600		
0569	100231	260724	126332	0035					15 25		01	3600	491147	
0570	100232	260724	126332	0035					15 25		01	3600	491147	
0571	100252	260271	126352	0049					15 22 25		01	3600	491149	
0572	100232	260726	No Replacement Repair With Individual Parts.						15		01	3600		
0582	100232	260727	No Replacement Repair With Individual Parts.						15		01	3000	491148	
0583	100212	261398	No Replacement Repair With Individual Parts.						15		01	3700		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0584	100231	260724	126332	0035					15 25		All	3600	491147	
0585	100252	260721	126352	0049					15 25		01	3600		
0586	100232	260928	126332	0036					15 25		01	3600		
0587	100232	260727	121332	0033					15 25		01	3600	491148	
0588	100232	260928	126332	0036					15 25		01	3000		
0589	100212	260719	No Replacement Repair With Individual Parts.						15		01	3300		
0590	100202	260719	126332	0036					15 25		01	3750		
0591	100232	260928	126332	0036					15 25		01	3600		
0592	100232	260724	126332	0035					15 25		01	3600	491147	
0593	100212	261398	No Replacement Repair With Individual Parts.						15		01	3800		
0594	100232	260928	126332	0036					15 25		01	3600		
0595	100232	260724	126332	0035					15 25		01	3600	491147	
0596	100212	261398	No Replacement Repair With Individual Parts.						15		01	3700		
0597	100202	260719	126332	0036					15 25		All	3600		
401011	100202	260719	126332	0036					15 25					
401013	100232	260724	126332	0035					15 25					
401014	100232	260725	126332	0036					15 25					
401015	100232	260726	No Replacement Repair With Individual Parts.						15					
401016	100232	260727	121332	0033					15 25					
401017	100252	260721	126352	0049					15 22 25					
401020	100202	260719	126332	0036					15 25		All	4000		
401021	100202	260719	126332	0036					15 25		All	4000		
401022	100202	260719	126332	0036					15 25		All	3700		
401023	100202	260719	126332	0036					15 25		All	3700		
401024	100202	260719	126332	0036					15 25		All	3600		
401025	100202	260719	126332	0036					15 25					
401026	100202	260719	126332	0036					15 25					
401027	100202	260719	126332	0036					15 25		All	3800		
401028	100202	260719	126332	0036					15 25					
401029	100202	260719	126332	0036					15 25					

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
401030	100202	260719	126332	0036					15 25		All	3600		
401031	100202	260719	126332	0036					15 25					
401032	100202	260719	126332	0036					15 25		All	2200		
401033	100202	260719	126332	0036					15 25		All	4000		
401034	100202	260719	126332	0036					15 25		All	4000		
401035	100202	260719	126332	0036					15 25					
401036	100202	260719	126332	0036					15 25					
401037	100202	260719	126332	0036					15 25					
401038	100202	260719	126332	0036					15 25		All	3000		
401039	100202	260719	126332	0036					15 25					
401040	100202	260719	126332	0036					15 25		All	2700		
401041	100202	260719	126332	0036					15 25					
401042	100202	260719	126332	0036					15 25		All	3600		
401043	100202	260719	126332	0036					15 25					
401044	100202	260719	126332	0036					15 25		All	3800		
401045	100202	260719	126332	0036					15 25		All	4000		
401046	100202	260719	126332	0036					15 25					
401047	100202	260719	126332	0036					15 25		All	4100		
401048	100202	260719	126332	0036					15 25		All	4100		
401049	100202	260719	126332	0036					15 25		All	3600		
401050	100202	260719	126332	0036					15 25		All	3600		
401051	100202	260719	126332	0036					15 25					
401052	100202	260719	126332	0036					15 25		All	4000		
401053	100202	260719	126332	0036					15 25					
401054	100202	260719	126332	0036					15 25					
401055	100202	260719	126332	0036					15 25					
401056	100202	260719	126332	0036					15 25		All	4000		
401057	100202	260719	126332	0036					15 25		All	3600		
401058	100202	260719	126332	0036					15 25					

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
401059	100202	260719	126332	0036					15 25					
401060	100202	260719	126332	0036					15 25					
401061	100202	260719	126332	0036					15 25					
401062	100202	260719	126332	0036					15 25		All	4000		
401063	100202	260719	126332	0036					15 25					
401064	100202	260719	126332	0036					15 25		All	4000		
401065	100202	260719	126332	0036					15 25					
401066	100202	260719	126332	0036					15 25					
401067	100202	260719	126332	0036					15 25		All	3700		
401068	100202	260719	126332	0036					15 25					
401069	100202	260719	126332	0036					15 25					
401070	100202	260719	126332	0036					15 25		All	3600		
401071	100202	260719	126332	0036					15 25		All	3600		
401072	100202	260719	126332	0036					15 25					
401073	100202	260719	126332	0036					15 25		All	4000		
401074	100202	260719	126332	0036					15 25					
401075	100202	260719	126332	0036					15 25					
401076	100202	260719	126332	0036					15 25		All	4000		
401077	100202	260719	126332	0036					15 25		All	4000		
401078	100202	260719	126332	0036					15 25		All	3600		
401079	100202	260719	126332	0036					15 25		All	3500		
401080	100202	260719	126332	0036					15 25					
401081	100202	260719	126332	0036					15 25		All	4000		
401082	100202	260719	126332	0036					15 25		All	3600		
401083	100202	260719	126332	0036					15 25					
401084	100202	260719	126332	0036					15 25		All	4000		
401085	100202	260719	126332	0036					15 25					
401086	100202	260719	126332	0036					15 25					
401087	100202	260719	126332	0036					15 25		All	4000		

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
401088	100202	260719	126332	0036					15 25					
401089	100202	260719	126332	0036					15 25	All	3600			
401090	100202	260719	126332	0036					15 25					
401091	100202	260719	126332	0036					15 25	All	3300			
401092	100292	260719	No Replacement Repair With Individual Parts.						15					
401093	100202	260719	126332	0036					15 25					
401094	100232	260726	No Replacement Repair With Individual Parts.						15					
401095	100252	260721	126352	0049					15 22 25					
401096	100202	260719	126332	0036					15 25	All	4000			
401097	100202	260719	126332	0036					15 25	All	4000			
401098	100202	260719	126332	0036					15 25	All	4000			
401099	100232	260724	126332	0035					15 25					
401100	100232	260725	126332	0036					15 25					
401101	100232	260726	No Replacement Repair With Individual Parts.						15					
401102	100232	260727	121332	0033					15 25					
401103	100252	260721	126352	0049					15 22 25					
401108	100202	260719	126332	0036					15 25					
401109	100202	260719	126332	0036					15 25	All	4000			
401110	100202	260719	126332	0036					15 25	All	4000			
401111	100252	260721	126352	0049					12 15 22 25					
401112	100202	260719	126332	0036					15 25					
401113	100252	260721	126352	0049					15 16 25					
401114	100252	260721	126352	0049					12 15 22 25					
401115	100252	260721	126352	0049					12 15 16 22 25					
401116	100202	260719	126332	0036					15 25					
401117	100202	260719	126332	0036					15 25	All	4000			

100200 to 100299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
401118	100212	260719	126312	0023					15 25		All	4000		

MODEL 100200

MODEL 120000

