

130900 to 130999

SERVICE ENGINE



SALES MANUAL

**MODEL 130900 SERIES ENGINES REPLACED WITH
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0015	130902	260936	No Replacement Repair With Individual Parts.								All	3500		
0016	130902	260922	No Replacement Repair With Individual Parts.								All	3500		
0017	130902	261045	No Replacement Repair With Individual Parts.								All	3500		
0018	130902	261370	No Replacement Repair With Individual Parts.								All	3200		
0025	130902	261098	No Replacement Repair With Individual Parts.								All	3500		
0026	130907	261099	No Replacement Repair With Individual Parts.								All	3500		
0027	130907	261182	No Replacement Repair With Individual Parts.								All	3500		
0040	130992	260922	No Replacement Repair With Individual Parts.								All	3500		
0110	130902	260922	No Replacement Repair With Individual Parts.								All	4000		
0111	130902	260936	No Replacement Repair With Individual Parts.								All	4000		
0112	130902	261045	No Replacement Repair With Individual Parts.								All	4000		
0113	130902	260922	No Replacement Repair With Individual Parts.								All	3500		
0115	130902	260922	No Replacement Repair With Individual Parts.								All	4000		
0116	130902	260936	No Replacement Repair With Individual Parts.								All	4000		
0117	130902	261045	No Replacement Repair With Individual Parts.								All	4000		
0120	130902	260922	No Replacement Repair With Individual Parts.								All	4000		
0121	130992	260936	No Replacement Repair With Individual Parts.								All	4000		
0122	130902	261045	No Replacement Repair With Individual Parts.								All	4000		
0123	130992	260922	No Replacement Repair With Individual Parts.								All	4000		
0124	130992	260936	No Replacement Repair With Individual Parts.								All	4000		
0125	130992	261045	No Replacement Repair With Individual Parts.								All	4000		
0127	130907	261066	No Replacement Repair With Individual Parts.								All	4000		
0130	130902	260922	No Replacement Repair With Individual Parts.								All	3300		
0131	130902	260922	No Replacement Repair With Individual Parts.								All	3300		
0132	130902	260922	No Replacement Repair With Individual Parts.								All	3100		
0133	130902	260922	No Replacement Repair With Individual Parts.								All	3500		
0134	130902	260936	No Replacement Repair With Individual Parts.								All	3800		
0135	130902	260922	No Replacement Repair With Individual Parts.								All	3800		
0136	130902	261045	No Replacement Repair With Individual Parts.								All	3300		
0137	130902	260936	No Replacement Repair With Individual Parts.								All	3500		
0138	130902	261045	No Replacement Repair With Individual Parts.								All	4000		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0139	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0140	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0141	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0142	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0143	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0144	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0145	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0146	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0147	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0148	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0149	130902	260936	No Replacement Repair With Individual Parts.									All	3200		
0150	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0151	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0152	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0153	130992	260922	No Replacement Repair With Individual Parts.									All	4000		
0154	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0155	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0156	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0157	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0158	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0159	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0160	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0161	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0162	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0163	130992	260922	No Replacement Repair With Individual Parts.									All	4000		
0164	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0165	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0166	130992	260922	No Replacement Repair With Individual Parts.									All	4000		
0167	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0168	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0169	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0170	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0171	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0172	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0173	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0174	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0175	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0176	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0177	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0178	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0179	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0180	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0181	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0182	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0183	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0184	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0185	130992	260922	No Replacement Repair With Individual Parts.									All	4000		
0186	130902	260922	No Replacement Repair With Individual Parts.									All	3000		
0187	130902	260937	No Replacement Repair With Individual Parts.									All	4000		
0188	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0189	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0190	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0191	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0192	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0193	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0194	130902	261045	No Replacement Repair With Individual Parts.									All	3300		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0195	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0196	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0197	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0198	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0199	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0200	130902	260997	No Replacement Repair With Individual Parts.									All	4000		
0201	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0202	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0203	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0204	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0205	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0206	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0207	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0208	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0209	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0211	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0212	130902	260936	No Replacement Repair With Individual Parts.									All	2800		
0213	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0214	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0215	130902	260922	No Replacement Repair With Individual Parts.									All	3000		
0216	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0217	130902	261045	No Replacement Repair With Individual Parts.									All	2600		
0218	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0219	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0220	130902	260936	No Replacement Repair With Individual Parts.									All	3800		
0221	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0222	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0223	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0224	130902	260922	No Replacement Repair With Individual Parts.									All	3000		
0225	130902	260936	No Replacement Repair With Individual Parts.									All	3000		
0226	130902	260936	No Replacement Repair With Individual Parts.									All	3000		
0227	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0228	130902	260922	No Replacement Repair With Individual Parts.									All	3000		
0229	130902	260936	No Replacement Repair With Individual Parts.									All	2900		
0230	130902	260936	No Replacement Repair With Individual Parts.									All	2800		
0231	130902	261045	No Replacement Repair With Individual Parts.									All	2800		
0232	130902	260936	No Replacement Repair With Individual Parts.									All	3400		
0233	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0234	130902	260997	No Replacement Repair With Individual Parts.									All	3500		
0235	130902	260922	No Replacement Repair With Individual Parts.									All	3800		
0236	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0237	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0238	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0239	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0240	130902	260922	No Replacement Repair With Individual Parts.									All	3000		
0241	130902	260922	No Replacement Repair With Individual Parts.									All	2600		
0242	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0243	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0244	130902	261045	No Replacement Repair With Individual Parts.									All	2800		
0245	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0246	130902	261045	No Replacement Repair With Individual Parts.									All	2900		
0247	130902	261045	No Replacement Repair With Individual Parts.									All	3000		
0248	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0249	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0250	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0251	130902	260936	No Replacement Repair With Individual Parts.									All	3500		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0252	130905	261099	No Replacement Repair With Individual Parts.									All	4000		
0253	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0255	130907	261066	No Replacement Repair With Individual Parts.									All	3300		
0256	130992	260997	No Replacement Repair With Individual Parts.									All	4000		
0257	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0258	130902	260936	No Replacement Repair With Individual Parts.									All	3800		
0259	130905	261098	No Replacement Repair With Individual Parts.									All	3300		
0260	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0261	130905	261098	No Replacement Repair With Individual Parts.									All	2800		
0262	130905	261098	No Replacement Repair With Individual Parts.									All	3300		
0263	130907	261099	No Replacement Repair With Individual Parts.									All	2800		
0264	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0265	130907	261098	No Replacement Repair With Individual Parts.									All	4000		
0266	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0267	130902	260922	No Replacement Repair With Individual Parts.									All	2600		
0268	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0269	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0270	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0271	130905	261100	No Replacement Repair With Individual Parts.									All	2800		
0272	130902	261045	No Replacement Repair With Individual Parts.									All	2600		
0273	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0274	130905	261100	No Replacement Repair With Individual Parts.									All	2500		
0275	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0276	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0277	130907	261099	No Replacement Repair With Individual Parts.									All	3500		
0278	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0279	130902	261045	No Replacement Repair With Individual Parts.									All	3000		
0280	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0281	130907	261098	No Replacement Repair With Individual Parts.									All	3300		
0282	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0283	130902	261045	No Replacement Repair With Individual Parts.									All	3200		
0284	130902	261045	No Replacement Repair With Individual Parts.									All	2800		
0285	130905	261098	No Replacement Repair With Individual Parts.									All	3400		
0286	130907	261098	No Replacement Repair With Individual Parts.									All	3400		
0287	130902	261045	No Replacement Repair With Individual Parts.									All	3200		
0288	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0289	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0290	130907	261099	No Replacement Repair With Individual Parts.									All	3500		
0291	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0292	130902	260997	No Replacement Repair With Individual Parts.									All	3500		
0293	130902	261045	No Replacement Repair With Individual Parts.									All	3400		
0294	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0295	130907	261098	No Replacement Repair With Individual Parts.									All	3700		
0296	130907	261098	No Replacement Repair With Individual Parts.									All	3700		
0297	130902	261045	No Replacement Repair With Individual Parts.									All	3700		
0298	130907	261099	No Replacement Repair With Individual Parts.									All	3500		
0299	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0300	130992	260936	No Replacement Repair With Individual Parts.									All	3300		
0301	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0302	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0303	130902	261045	No Replacement Repair With Individual Parts.									All	2600		
0304	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0305	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0306	130902	260922	No Replacement Repair With Individual Parts.									All	2600		
0307	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0308	130902	260936	No Replacement Repair With Individual Parts.									All	3700		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0309	130907	261098	No Replacement Repair With Individual Parts.									All	3700		
0310	130907	261098	No Replacement Repair With Individual Parts.									All	3700		
0311	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0312	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0313	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0315	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0316	130902	261045	No Replacement Repair With Individual Parts.									All	2600		
0317	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0318	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0319	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0320	130902	261045	No Replacement Repair With Individual Parts.									All	2500		
0321	130902	261045	No Replacement Repair With Individual Parts.									All	2500		
0322	130905	261167	No Replacement Repair With Individual Parts.									All	2500		
0323	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0324	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0325	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0326	130907	261172	No Replacement Repair With Individual Parts.									All	3600		
0327	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0328	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0329	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0330	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0331	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0332	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0333	130902	261045	No Replacement Repair With Individual Parts.									All	2600		
0334	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0335	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0336	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0337	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0338	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0339	130905	261177	No Replacement Repair With Individual Parts.									All	3500		
0340	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0341	130992	261045	No Replacement Repair With Individual Parts.									All	3500		
0342	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0343	130902	260922	No Replacement Repair With Individual Parts.									All	3800		
0344	130902	260936	No Replacement Repair With Individual Parts.									All	3100		
0345	130902	261045	No Replacement Repair With Individual Parts.									All	2500		
0346	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0347	130907	261182	No Replacement Repair With Individual Parts.									All	3700		
0348	130902	260936	No Replacement Repair With Individual Parts.									All	3600		
0349	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0350	130902	261045	No Replacement Repair With Individual Parts.									All	2600		
0351	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0352	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0353	130902	261045	No Replacement Repair With Individual Parts.									All	3000		
0354	130902	261045	No Replacement Repair With Individual Parts.									All	2600		
0355	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0356	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0357	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0358	130905	261098	No Replacement Repair With Individual Parts.									All	3600		
0359	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0360	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0361	130992	261045	No Replacement Repair With Individual Parts.									All	3500		
0362	130902	260936	No Replacement Repair With Individual Parts.									All	3800		
0363	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0364	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0365	130902	261045	No Replacement Repair With Individual Parts.									All	2600		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0366	130907	261066	No Replacement Repair With Individual Parts.									All	3600		
0367	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0368	130905	261100	No Replacement Repair With Individual Parts.									All	3500		
0369	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0370	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0371	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0372	130902	261045	No Replacement Repair With Individual Parts.									All	3100		
0373	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0374	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0375	130902	261045	No Replacement Repair With Individual Parts.									All	2800		
0376	130902	260922	No Replacement Repair With Individual Parts.									All	3700		
0377	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0378	130902	260922	No Replacement Repair With Individual Parts.									All	3800		
0379	130992	260922	No Replacement Repair With Individual Parts.									All	3700		
0380	130902	260922	No Replacement Repair With Individual Parts.									All	3700		
0381	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0382	130902	261229	No Replacement Repair With Individual Parts.									All	4000		
0383	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0384	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0385	130902	261045	No Replacement Repair With Individual Parts.									All	2800		
0386	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0387	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0388	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0389	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0390	130902	260922	No Replacement Repair With Individual Parts.									All	3100		
0391	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0392	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0393	130903	261098	No Replacement Repair With Individual Parts.									All	3700		
0394	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0395	130907	261182	No Replacement Repair With Individual Parts.									All	3700		
0396	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0397	130905	261182	No Replacement Repair With Individual Parts.									All	3700		
0398	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0399	130992	261045	No Replacement Repair With Individual Parts.									All	3100		
0400	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0401	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0402	130902	261045	No Replacement Repair With Individual Parts.									All	3100		
0403	130907	261099	No Replacement Repair With Individual Parts.									All	3700		
0404	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0405	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0406	130902	260936	No Replacement Repair With Individual Parts.									All	3600		
0407	130902	260936	No Replacement Repair With Individual Parts.									All	2900		
0408	130902	260936	No Replacement Repair With Individual Parts.									All	3000		
0409	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0410	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0411	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0412	130902	260922	No Replacement Repair With Individual Parts.									All	3400		
0413	130905	261177	No Replacement Repair With Individual Parts.									All	3500		
0414	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0415	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0416	130907	261098	No Replacement Repair With Individual Parts.									All	3700		
0417	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0418	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0419	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0420	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0421	130902	260936	No Replacement Repair With Individual Parts.									All	3000		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0422	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0423	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0424	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0425	130907	261066	No Replacement Repair With Individual Parts.									All	4000		
0426	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0427	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0428	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0429	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0430	130905	261099	No Replacement Repair With Individual Parts.									All	3600		
0431	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0432	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0433	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0434	130907	261182	No Replacement Repair With Individual Parts.									All	3700		
0435	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0436	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0437	130907	261098	No Replacement Repair With Individual Parts.									All	3700		
0438	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0439	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0440	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0441	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0442	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0443	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0444	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0445	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0446	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0447	130902	260936	No Replacement Repair With Individual Parts.									All	3600		
0448	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0449	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0450	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0451	130902	261045	No Replacement Repair With Individual Parts.									All	2600		
0452	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0453	130902	260997	No Replacement Repair With Individual Parts.									All	4000		
0454	130907	261182	No Replacement Repair With Individual Parts.									All	3700		
0455	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0456	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0457	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0458	130902	261099	No Replacement Repair With Individual Parts.									All	3600		
0459	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0460	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0461	130902	260936	No Replacement Repair With Individual Parts.									All	3400		
0462	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0463	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0464	130902	260936	No Replacement Repair With Individual Parts.									All	3200		
0465	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0466	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0467	130902	261045	No Replacement Repair With Individual Parts.									All	3200		
0468	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0469	130992	261045	No Replacement Repair With Individual Parts.									All	3100		
0470	130902	260997	No Replacement Repair With Individual Parts.									All	3500		
0471	130902	260936	No Replacement Repair With Individual Parts.									All	3700		
0472	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0473	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0474	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0475	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0476	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0477	130905	261182	No Replacement Repair With Individual Parts.									All	3100		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0478	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0479	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0480	130907	261066	No Replacement Repair With Individual Parts.									All	3600		
0481	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0482	130902	261172	No Replacement Repair With Individual Parts.									All	3300		
0483	130905	261182	No Replacement Repair With Individual Parts.									All	3100		
0484	130907	261099	No Replacement Repair With Individual Parts.									All	3500		
0485	130902	261045	No Replacement Repair With Individual Parts.									All	3400		
0486	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0487	130905	261172	No Replacement Repair With Individual Parts.									All	3400		
0488	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0489	130902	261045	No Replacement Repair With Individual Parts.									All	3400		
0490	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0491	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0492	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0493	130902	260936	No Replacement Repair With Individual Parts.									All	3600		
0494	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0495	130992	261045	No Replacement Repair With Individual Parts.									All	4000		
0496	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0497	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0498	130992	261045	No Replacement Repair With Individual Parts.									All	4000		
0499	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0500	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0501	130907	261099	No Replacement Repair With Individual Parts.									All	3500		
0502	130902	260936	No Replacement Repair With Individual Parts.									All	3600		
0503	130902	260936	No Replacement Repair With Individual Parts.									All	3200		
0504	130902	260997	No Replacement Repair With Individual Parts.									All	3500		
0505	130907	261099	No Replacement Repair With Individual Parts.									All	3600		
0506	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0507	130902	260936	No Replacement Repair With Individual Parts.									All	3000		
0508	130902	261370	No Replacement Repair With Individual Parts.									All	3200		
0509	130902	261370	No Replacement Repair With Individual Parts.									All	3200		
0510	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0511	130905	261172	No Replacement Repair With Individual Parts.									All	3500		
0512	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0513	130902	260922	No Replacement Repair With Individual Parts.									All	3000		
0514	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0515	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0516	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0517	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0518	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0519	130907	261066	No Replacement Repair With Individual Parts.									All	4000		
0520	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0521	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0522	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0523	130902	261045	No Replacement Repair With Individual Parts.									All	2800		
0524	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0525	130902	260922	No Replacement Repair With Individual Parts.									All	3200		
0526	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0527	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0528	130907	261099	No Replacement Repair With Individual Parts.									All	3300		
0530	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0531	130902	261045	No Replacement Repair With Individual Parts.									All	3100		
0532	130905	261099	No Replacement Repair With Individual Parts.									All	3500		
0533	130902	261045	No Replacement Repair With Individual Parts.									All	3400		
0534	130902	261045	No Replacement Repair With Individual Parts.									All	3300		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0535	130902	260922	No Replacement Repair With Individual Parts.									All	3400		
0536	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0537	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0538	130902	261045	No Replacement Repair With Individual Parts.									All	3200		
0539	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0540	130902	261045	No Replacement Repair With Individual Parts.									All	2600		
0541	130902	260936	No Replacement Repair With Individual Parts.									All	2600		
0542	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0543	130902	261370	No Replacement Repair With Individual Parts.									All	3000		
0544	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0545	130902	261370	No Replacement Repair With Individual Parts.									All	3400		
0546	130902	261045	No Replacement Repair With Individual Parts.									All	3100		
0547	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0548	130907	261099	No Replacement Repair With Individual Parts.									All	4000		
0549	130902	260936	No Replacement Repair With Individual Parts.									All	3600		
0550	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0551	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0552	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0553	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0554	130907	261066	No Replacement Repair With Individual Parts.									All	3600		
0555	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0556	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0557	130907	261099	No Replacement Repair With Individual Parts.									All	3500		
0558	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0559	130902	261045	No Replacement Repair With Individual Parts.									All	3200		
0560	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0561	130902	260922	No Replacement Repair With Individual Parts.									All	3000		
0562	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0563	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0564	130902	260922	No Replacement Repair With Individual Parts.									All	3100		
0565	130902	260922	No Replacement Repair With Individual Parts.									All	3599		
0566	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0567	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0568	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0569	130902	260922	No Replacement Repair With Individual Parts.									All	3100		
0570	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0571	130902	260922	No Replacement Repair With Individual Parts.									All	3400		
0572	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0573	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0574	130902	261045	No Replacement Repair With Individual Parts.									All	3400		
0575	130902	260997	No Replacement Repair With Individual Parts.									All	3500		
0576	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0577	130992	261045	No Replacement Repair With Individual Parts.									All	3100		
0578	130902	260922	No Replacement Repair With Individual Parts.									All	3700		
0579	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0580	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0581	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0582	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0583	130902	261045	No Replacement Repair With Individual Parts.									All	3000		
0584	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0585	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0586	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0587	130905	261177	No Replacement Repair With Individual Parts.									All	3500		
0588	130902	261045	No Replacement Repair With Individual Parts.									All	3000		
0589	130907	261099	No Replacement Repair With Individual Parts.									All	3500		
0590	130902	260922	No Replacement Repair With Individual Parts.									All	3600		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0591	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0592	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0593	130902	260936	No Replacement Repair With Individual Parts.									All	2600		
0594	130902	260936	No Replacement Repair With Individual Parts.									All	3600		
0595	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0596	130907	261066	No Replacement Repair With Individual Parts.									All	3600		
0597	130907	261099	No Replacement Repair With Individual Parts.									All	3600		
0598	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0599	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0600	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0601	130907	261099	No Replacement Repair With Individual Parts.									All	3600		
0602	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0603	130902	260922	No Replacement Repair With Individual Parts.									All	3700		
0604	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0605	130902	260936	No Replacement Repair With Individual Parts.									All	3200		
0606	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0607	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0608	130902	260922	No Replacement Repair With Individual Parts.									All	3000		
0609	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0610	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0611	130902	261045	No Replacement Repair With Individual Parts.									All	3400		
0612	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0613	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0614	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0615	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0616	130902	260922	No Replacement Repair With Individual Parts.									All	3400		
0617	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0618	130902	260997	No Replacement Repair With Individual Parts.									All	3500		
0619	130902	260959	No Replacement Repair With Individual Parts.									All	3600		
0620	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0621	130902	260922	No Replacement Repair With Individual Parts.									All	4000		
0622	130905	261099	No Replacement Repair With Individual Parts.									All	4000		
0623	130992	261045	No Replacement Repair With Individual Parts.									All	4000		
0624	130992	261045	No Replacement Repair With Individual Parts.									All	3500		
0625	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0626	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0627	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0628	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0629	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0630	130902	261370	No Replacement Repair With Individual Parts.									All	3000		
0631	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0632	130907	261099	No Replacement Repair With Individual Parts.									All	3600		
0633	130907	261099	No Replacement Repair With Individual Parts.									All	4000		
0634	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0635	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0636	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0637	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0638	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0639	130992	261045	No Replacement Repair With Individual Parts.									All	3500		
0640	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0641	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0642	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0643	130902	260922	No Replacement Repair With Individual Parts.									All	3300		
0644	130902	260936	No Replacement Repair With Individual Parts.									All	3000		
0645	130902	261099	No Replacement Repair With Individual Parts.									All	3400		
0646	130907	261066	No Replacement Repair With Individual Parts.									All	3600		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0647	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0648	130902	260936	No Replacement Repair With Individual Parts.									All	3100		
0649	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0650	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0651	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0652	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0653	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0654	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0655	130902	261045	No Replacement Repair With Individual Parts.									All	3000		
0656	130902	260922	No Replacement Repair With Individual Parts.									All	3400		
0657	130902	261045	No Replacement Repair With Individual Parts.									All	3000		
0658	130902	261045	No Replacement Repair With Individual Parts.									All	3000		
0659	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0660	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0661	130902	260936	No Replacement Repair With Individual Parts.									All	3900		
0662	130902	260936	No Replacement Repair With Individual Parts.									All	3600		
0663	130902	260922	No Replacement Repair With Individual Parts.									All	3600		
0664	130902	260936	No Replacement Repair With Individual Parts.									All	3200		
0665	130902	261045	No Replacement Repair With Individual Parts.									All	4000		
0666	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0667	130902	260936	No Replacement Repair With Individual Parts.									All	3100		
0668	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0669	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0670	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0671	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0672	130902	260936	No Replacement Repair With Individual Parts.									All	3800		
0673	130902	260936	No Replacement Repair With Individual Parts.									All	4000		
0674	130902	260922	No Replacement Repair With Individual Parts.									All	3100		
0675	130902	260936	No Replacement Repair With Individual Parts.									All	3200		
0676	130902	261045	No Replacement Repair With Individual Parts.									All	3100		
0677	130905	261177	No Replacement Repair With Individual Parts.									All	3500		
0678	130902	260922	No Replacement Repair With Individual Parts.									All	3100		
0679	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0680	130902	261045	No Replacement Repair With Individual Parts.									All	3600		
0681	130902	260936	No Replacement Repair With Individual Parts.									All	3400		
0682	130902	260936	No Replacement Repair With Individual Parts.									All	3200		
0683	130902	261045	No Replacement Repair With Individual Parts.									All	3000		
0684	130902	261045	No Replacement Repair With Individual Parts.									All	3500		
0685	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
0686	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0687	130902	260936	No Replacement Repair With Individual Parts.									All	3300		
0688	130902	261045	No Replacement Repair With Individual Parts.									All	3300		
0689	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
0690	130902	260959	No Replacement Repair With Individual Parts.									All	3500		
0691	130903	261098	No Replacement Repair With Individual Parts.									All	3300		
0692	130907	261066	No Replacement Repair With Individual Parts.									All	3400		
0693	130902	260922	No Replacement Repair With Individual Parts.									All	3200		
1015	130902	397109	No Replacement Repair With Individual Parts.									All	3500		
1016	130902	492091	No Replacement Repair With Individual Parts.									All	3500		
1017	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1018	130902	397121	No Replacement Repair With Individual Parts.									All	3200		
1025	130907	261098	No Replacement Repair With Individual Parts.									All	3500		
1027	130907	261098	No Replacement Repair With Individual Parts.									All	3500		
1039	130905	397116	No Replacement Repair With Individual Parts.									All	3500		
1040	130992	492091	No Replacement Repair With Individual Parts.									All	3500		
1110	130902	492091	No Replacement Repair With Individual Parts.									All	4000		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1115	130902	492091	No Replacement Repair With Individual Parts.							All	4000			
1127	130907	397116	No Replacement Repair With Individual Parts.							All	4000			
1130	130902	397109	No Replacement Repair With Individual Parts.							All	4000			
1131	130902	397109	No Replacement Repair With Individual Parts.							All	3300			
1132	130902	492091	No Replacement Repair With Individual Parts.							All	3300			
1133	130902	397109	No Replacement Repair With Individual Parts.							All	3500			
1134	130902	493410	No Replacement Repair With Individual Parts.							All	3600			
1135	130902	492091	No Replacement Repair With Individual Parts.							All	3500			
1136	130902	397109	No Replacement Repair With Individual Parts.							All	3300			
1137	130907	397116	No Replacement Repair With Individual Parts.							All	3500			
1138	130902	397109	No Replacement Repair With Individual Parts.							All	3200			
1139	130902	492091	No Replacement Repair With Individual Parts.							All	3200			
1140	130902	397109	No Replacement Repair With Individual Parts.							All	3500			
1141	130902	493410	No Replacement Repair With Individual Parts.							All	3600			
1142	130902	492091	No Replacement Repair With Individual Parts.							All	4000			
1143	130902	397119	No Replacement Repair With Individual Parts.							All	3400			
1144	130902	493410	No Replacement Repair With Individual Parts.							All	3300			
1145	130902	492091	No Replacement Repair With Individual Parts.							All	3600			
1147	130902	493410	No Replacement Repair With Individual Parts.							All	3100			
1148	130902	397109	No Replacement Repair With Individual Parts.							All	3100			
1149	130902	492091	No Replacement Repair With Individual Parts.							All	3100			
1150	130992	493410	No Replacement Repair With Individual Parts.							All	3100			
1151	130902	493410	No Replacement Repair With Individual Parts.							All	3600			
1152	130902	397109	No Replacement Repair With Individual Parts.							All	3400			
1153	130902	492091	No Replacement Repair With Individual Parts.							All	3500			
1154	130902	492091	No Replacement Repair With Individual Parts.							All	4000			
1155	130902	492091	No Replacement Repair With Individual Parts.							All	3400			
1156	130902	492092	No Replacement Repair With Individual Parts.							All	4000			
1157	130902	493410	No Replacement Repair With Individual Parts.							All	4000			
1158	130902	492091	No Replacement Repair With Individual Parts.							All	3000			
1159	130902	492091	No Replacement Repair With Individual Parts.							All	3000			
1160	130902	397109	No Replacement Repair With Individual Parts.							All	3300			
1161	130902	492091	No Replacement Repair With Individual Parts.							All	3300			
1162	130902	397121	No Replacement Repair With Individual Parts.							All	3000			
1163	130902	493410	No Replacement Repair With Individual Parts.							All	3500			
1164	130902	493410	No Replacement Repair With Individual Parts.							All	3500			
1165	130902	492091	No Replacement Repair With Individual Parts.							All	3500			
1166	130902	492091	No Replacement Repair With Individual Parts.							All	3300			
1167	130902	397109	No Replacement Repair With Individual Parts.							All	3300			
1168	130902	492091	No Replacement Repair With Individual Parts.							All	4000			
1169	130902	397109	No Replacement Repair With Individual Parts.							All	3500			
1170	130902	397109	No Replacement Repair With Individual Parts.							All	3600			
1171	130902	492091	No Replacement Repair With Individual Parts.							All	3600			
1172	130902	493410	No Replacement Repair With Individual Parts.							All	3300			
1173	130902	493410	No Replacement Repair With Individual Parts.							All	3300			
1174	130902	397109	No Replacement Repair With Individual Parts.							All	4000			
1175	130902	492091	No Replacement Repair With Individual Parts.							All	3400			
1176	130902	397109	No Replacement Repair With Individual Parts.							All	3600			
1177	130902	493410	No Replacement Repair With Individual Parts.							All	3300			
1178	130902	397109	No Replacement Repair With Individual Parts.							All	3100			
1179	130902	493410	No Replacement Repair With Individual Parts.							All	3000			
1180	130902	397109	No Replacement Repair With Individual Parts.							All	3600			
1181	130902	493410	No Replacement Repair With Individual Parts.							All	3000			
1182	130902	493410	No Replacement Repair With Individual Parts.							All	3500			
1183	130902	493410	No Replacement Repair With Individual Parts.							All	3300			
1184	130902	492091	No Replacement Repair With Individual Parts.							All	2900			

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
1185	130902	493410	No Replacement Repair With Individual Parts.									All	4000		
1186	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1187	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1188	130902	493410	No Replacement Repair With Individual Parts.									All	3000		
1189	130902	492091	No Replacement Repair With Individual Parts.									All	4000		
1190	130902	492091	No Replacement Repair With Individual Parts.									All	3200		
1191	130902	397116	No Replacement Repair With Individual Parts.									All	3200		
1192	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1193	130902	492091	No Replacement Repair With Individual Parts.									All	3500		
1194	130902	493410	No Replacement Repair With Individual Parts.									All	3600		
1195	130902	397109	No Replacement Repair With Individual Parts.									All	3600		
1196	130902	493410	No Replacement Repair With Individual Parts.									All	3300		
1197	130902	493410	No Replacement Repair With Individual Parts.									All	3300		
1198	130902	493410	No Replacement Repair With Individual Parts.									All	3000		
1199	130902	397109	No Replacement Repair With Individual Parts.									All	3300		
1200	130902	397481	No Replacement Repair With Individual Parts.									All	3000		
1201	130902	397109	No Replacement Repair With Individual Parts.									All	4000		
1202	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1203	130902	492091	No Replacement Repair With Individual Parts.									All	3500		
1204	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1205	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1206	130902	397109	No Replacement Repair With Individual Parts.									All	3500		
1207	130902	397091	No Replacement Repair With Individual Parts.									All	3500		
1208	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1209	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1210	130902	397109	No Replacement Repair With Individual Parts.									All	3500		
1211	130902	492091	No Replacement Repair With Individual Parts.									All	3300		
1212	130902	492091	No Replacement Repair With Individual Parts.									All	3300		
1213	130902	397109	No Replacement Repair With Individual Parts.									All	3500		
1214	130902	493410	No Replacement Repair With Individual Parts.									All	4100		
1215	130902	493410	No Replacement Repair With Individual Parts.									All	3200		
1216	130902	493410	No Replacement Repair With Individual Parts.									All	3100		
1217	130902	493410	No Replacement Repair With Individual Parts.									All	3200		
1218	130902	492091	No Replacement Repair With Individual Parts.									All	3300		
1219	130992	493410	No Replacement Repair With Individual Parts.									All	3500		
1220	130907	397119	No Replacement Repair With Individual Parts.									All	3400		
1221	130902	493410	No Replacement Repair With Individual Parts.									All	3400		
1222	130902	493410	No Replacement Repair With Individual Parts.									All	3300		
1223	130982	397109	No Replacement Repair With Individual Parts.									All	3200		
1224	130902	490043	No Replacement Repair With Individual Parts.									All	3300		
1225	130982	492091	No Replacement Repair With Individual Parts.									All	3500		
1226	130902	397121	No Replacement Repair With Individual Parts.									All	3000		
1227	130902	493410	No Replacement Repair With Individual Parts.									All	4000		
1228	130982	492091	No Replacement Repair With Individual Parts.									All	3500		
1229	130902	493410	No Replacement Repair With Individual Parts.									All	3000		
1230	130982	397109	No Replacement Repair With Individual Parts.									All	3000		
1231	130902	493410	No Replacement Repair With Individual Parts.									All	3300		
1232	130902	492091	No Replacement Repair With Individual Parts.									All	3500		
1233	130902	493410	No Replacement Repair With Individual Parts.									All	3400		
1234	130907	397119	No Replacement Repair With Individual Parts.									All	3400		
1235	130902	397109	No Replacement Repair With Individual Parts.									All	3500		
1236	130982	492091	No Replacement Repair With Individual Parts.									All	3500		
1237	130902	397109	No Replacement Repair With Individual Parts.									All	3400		
1238	130902	397109	No Replacement Repair With Individual Parts.									All	3200		
1239	130902	492091	No Replacement Repair With Individual Parts.									All	3500		
1240	130902	492091	No Replacement Repair With Individual Parts.									All	3500		

130900 to 130999

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
1241	130902	492091	No Replacement Repair With Individual Parts.									All	3500		
1242	130982	397109	No Replacement Repair With Individual Parts.									All	3500		
1243	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1244	130982	397109	No Replacement Repair With Individual Parts.									All	3000		
1245	130982	492091	No Replacement Repair With Individual Parts.									All	4000		
1246	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1247	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
1248	130902	492091	No Replacement Repair With Individual Parts.									All	3200		
1249	130907	397119	No Replacement Repair With Individual Parts.									All	3000		
1250	130982	492091	No Replacement Repair With Individual Parts.									All	3100		
1251	130902	397109	No Replacement Repair With Individual Parts.									All	4000		
1252	130982	492091	No Replacement Repair With Individual Parts.									All	3500		
1253	130982	397109	No Replacement Repair With Individual Parts.									All	3600		
1254	130902	492091	No Replacement Repair With Individual Parts.									All	2900		
1255	130902	493410	No Replacement Repair With Individual Parts.									All	3200		
1256	130902	493410	No Replacement Repair With Individual Parts.									All	3200		
1257	130902	397109	No Replacement Repair With Individual Parts.									All	3500		
1258	130902	492091	No Replacement Repair With Individual Parts.									All	3300		
1259	130982	493410	No Replacement Repair With Individual Parts.									All	4000		
1260	130902	492091	No Replacement Repair With Individual Parts.									All	3500		
1261	130902	493410	No Replacement Repair With Individual Parts.									All	3400		
2015	130902	260936	No Replacement Repair With Individual Parts.									All	3500		
2016	130902	260922	No Replacement Repair With Individual Parts.									All	3500		
3100	130902	492091	No Replacement Repair With Individual Parts.									All	4000		
3120	130902	397109	No Replacement Repair With Individual Parts.									All	3300		
3121	130982	397109	No Replacement Repair With Individual Parts.									All	3200		
3122	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
3123	130992	493410	No Replacement Repair With Individual Parts.									All	3500		
3124	130902	397109	No Replacement Repair With Individual Parts.									All	3300		
3125	130982	397109	No Replacement Repair With Individual Parts.									All	3200		
3126	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
3127	130902	397109	No Replacement Repair With Individual Parts.									All	3300		
3128	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
3129	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
4002	130902	492091	No Replacement Repair With Individual Parts.									All	3600		
4003	130902	397109	No Replacement Repair With Individual Parts.									All	3600		
4015	130902	397109	No Replacement Repair With Individual Parts.									All	3500		
4016	130902	492091	No Replacement Repair With Individual Parts.									All	3200		
4017	130902	493410	No Replacement Repair With Individual Parts.									All	3500		
4019	130902	397109	No Replacement Repair With Individual Parts.									All	3600		
4025	130907	397117	No Replacement Repair With Individual Parts.									All	3500		