FORM MS-9272-3/01 REPLACES FORM MS-9272-7/00 FILE IN SECT. 2B OF SERVICE ENGINE SALES MANUAL

131700 to 131799



MODEL 131700 SERIES ENGINES REPLACED WITH STANDARD SERVICE ENGINES

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

131700 to 131799

Original Engine			Make F	Remove Add				Change			Short Block				
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #	Note	to Type	Trim	RPM	Part #		Notes
0015	131702	493410	No Rep	lacement	Repair	With Indi	ividual f	Parts.			All	3300			
0020	131702	493410		lacement							All	3500			
0100	131702	492091	No Rep	lacement	Repair	With Indi	ividual F	Parts.			All	4000			
0120	131702	492091	No Rep	lacement	Repair	With Indi	ividual f	Parts.			All	4000			
0130	131702	490852	No Rep	lacement	Repair	With Indi	ividual f	Parts.			All	3300			
0131	131702	493410	No Rep	lacement	Repair	With Indi	ividual f	Parts.			All	3400			
0132	131702	493410	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	3000			
0133	131702	493410	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	3300			
0134	131702	493410	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	3500			
0135	131702	493410	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	3500			
0136	131702	397109	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	3100			
0137	131702	493410	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	3500			
0138	131702	492091	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	3500			
0139	131702	493410	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	4000			
0140	131702	493410	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	3000			
0141	131782	492091	No Rep	lacement	Repair	With Indi	ividual f	⊃arts.			All	3700			
0142	131702	492091	No Rep	lacement	Repail	With Indi	ividual F	Parts.			All	3300			
0143	131702	492091	No Rep	lacement	Repair	With Indi	ividual F	⊃arts.			All	3000			
0144	131702	493410	No Rep	lacement	Repail	With Indi	ividual f	⊃arts.			All	3600			
0145	131782	493410	No Rep	lacement	Repail	With Indi	ividual f	⊃arts.			All	3500			
0146	131702	397109	No Rep	lacement	Repail	With Indi	ividual f	⊃arts.			All	3500			
0147	131782	492091	No Rep	lacement	Repail	With Indi	ividual f	⊃arts.			All	3500			
0149	131782	493410	No Rep	lacement	Repail	With Indi	ividual F	Parts.			All	3400			
0150	131782	493410	No Rep	lacement	Repair	With Indi	ividual f	Parts.			All	3700			
0151	131782	493410	No Rep	lacement	Repair	With Indi	ividual f	Parts.			All	3400			
0152	131702	493410	No Rep	lacement	Repair	With Indi	ividual I	Parts.			All	3500			
0153	131702	397109	No Rep	lacement	Repail	With Indi	ividual f	Parts.			All	3500			
3125	131782	397109	No Rep	lacement	Repail	With Indi	ividual f	Parts.			All	3300			
3126	131702	397109	No Rep	lacement	Repair	With Indi	ividual I	Parts.			All	3300			
3127	131702	493410	No Rep	lacement	Repail	With Indi	ividual f	Parts.			All	2850			
3128	131782	397109	No Rep	lacement	Repail	With Indi	ividual I	Parts.			All	3300			
<u> </u>															

For Briggs & Stratton Discount Parts Call 606-678-9623 or 606-561-4983

131700 to 131799

Original Engine			Make From Remove		Add			Change			SI	nort Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #	Note	to Type	Trim	RPM	Part #	Notes
3129	131702	493962	No Re	placement	Repai	r With Ind	ividual	Parts.			All	2850		
3130	131702	492091	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3300		
3131	131702	493410	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3600		
3132	131782	492091	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3300		
4000	131702	493410	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3500		
4001	131702	493410	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3600		
4002	131702	397109	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3100		
4003	131707	397119	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3600		
7001	131702	493410	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3500		
7015	131702	493410	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3000		
7051	131782	493410	No Re	placement	Repai	r With Ind	ividual	Parts.			All	3000		_