

**136200 to 136299****SERVICE ENGINE****SALES MANUAL****MODEL 136200 SERIES ENGINES REPLACED WITH  
STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

**Engine Replacement Notes:**

**NOTE 15:** For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.

**Short Block Notes:**

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

**136200 to 136299**

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0006	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0014	136212	499765	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0015	136212	499765	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0016	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0018	136217	499765	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0026	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0027	136217	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0120	136232	495645	No Replacement	Repair With Individual Parts.					15		All	3600		
0121	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0122	136202	499765	No Replacement	Repair With Individual Parts.					15		All	3600		
0124	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0125	136217	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0126	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0127	136217	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0128	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0129	136202	499765	No Replacement	Repair With Individual Parts.					15		All	3600		
0130	136217	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0131	136232	495645	No Replacement	Repair With Individual Parts.					15		All	3600		
0132	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0133	136202	499765	No Replacement	Repair With Individual Parts.					15		All	3600		
0134	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0140	136217	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0141	136232	495645	No Replacement	Repair With Individual Parts.					15		All	3600		
0142	136217	499765	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0143	136202	499765	No Replacement	Repair With Individual Parts.					15		All	3600		
0144	136202	499765	No Replacement	Repair With Individual Parts.					15		All	3400		
0151	136232	495645	No Replacement	Repair With Individual Parts.					15		All	3600		
0615	136212	499765	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0616	136212	492088	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0617	136212	499765	No Replacement	Repair With Individual Parts.					15		All	3600	694200	
0618	136212	499765	No Replacement	Repair With Individual Parts.					15		All	3600	694200	

**136200 to 136299**

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0626	136212	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
0727	136217	499765	No Replacement Repair With Individual Parts.						15		All	3600	694200	
0732	136212	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
0734	136212	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
0737	136217	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
0743	136202	499765	No Replacement Repair With Individual Parts.						15		All	3600		
0744	136202	499765	No Replacement Repair With Individual Parts.						15		All	3600		
0751	136232	495645	No Replacement Repair With Individual Parts.						15		All	3600		
1015	136212	499765	No Replacement Repair With Individual Parts.						15		All	3600	694200	
1016	136212	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
1018	136217	499765	No Replacement Repair With Individual Parts.						15		All	3600	694200	
1026	136212	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
1027	136217	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
1134	136212	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
1140	136217	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
1142	136217	492088	No Replacement Repair With Individual Parts.						15		All	3600	694200	
1143	136202	499765	No Replacement Repair With Individual Parts.						15		All	3600		
1144	136202	499765	No Replacement Repair With Individual Parts.						15		All	3400		
1151	136232	495645	No Replacement Repair With Individual Parts.						15		All	3600		