FORM MS-6030-7/04
REPLACES FORM MS-6030-1/04
FILE IN SECT. 2B OF SERVICE ENGINE SALES MANUAL

19A400 to 19A499



## MODEL 19A400 SERIES ENGINES REPLACED WITH STANDARD SERVICE ENGINES

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

## **Engine Replacement Notes:**

- NOTE 15: For all Go-Karts use only a Model 136200 series engine as a replacement, regarless of the original Model.
- NOTE 30: If the replacement engine supersedes to or is a Model 200000 series engine, refer to the illustrations located after the conversion data for this model series.

  To make the crankshaft center line the same add 695154 spacer kit, other overall dimensions which differ, are shown in the illustrations. If after making a visual inspection and it is determined the Model 200000 series engine cannot be used because of equipment interference, the original engine should be repaired with a short block and/or individual parts.

## **Short Block Notes:**

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

## 19A400 to 19A499

Original Engine			Make From		Remove		Add			Change			Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #	Note	to Type	Trim	RPM	Part #	Notes
0199	19A402	495648	205432	0036					15		All	3600		
									30					
0699	19A402	495648	205432	0036					15		All	3600		
									30					