

**28BH00 to 28BH99**

**SERVICE ENGINE**  **SALES MANUAL**

**MODEL 28BH00 SERIES ENGINES REPLACED WITH  
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

**Engine Replacement Notes:**

- NOTE 23:** If the original engine is equipped with a Six Pin Wiring Harness transfer to the replacement engine.
- NOTE 43:** Original engine was equipped with a Rotating Screen. These parts can be transferred to the replacement engine.
- NOTE 61:** The original engine was equipped with Debris Gard. Transfer these parts to replacement engine.
- NOTE 64:** Transfer Alternator Assembly from original engine to replacement engine.
- NOTE 81:** Transfer Governor Spring to replacement engine.
- NOTE 88:** Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required
- NOTE 97:** Transfer the Blower Housing , Rewind Assembly and related parts from the original engine to replacement engine.

**Short Block Notes:**

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

**28BH00 to 28BH99**

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0110	28BH77	697516	28CH77	0036					23		All	3000	697762	
0114	28BH76	697516	285H77	0036					23		All	3600	697762	
									61					
									81					
									88					
									97					
0115	28BH77	697516	28CH77	0036	1	691840			23		All	3600	697762	
									43					
									64					
									81					