FORM MS-3229-4/06 REPLACES FORM MS-3229-1/06

445600 to 445699



MODEL 445600 SERIES ENGINES REPLACED WITH STANDARD SERVICE ENGINES

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

- NOTE 23: If the original engine is equipped with a Six Pin Wiring Harness transfer to the replacement engine.
- NOTE 81: Transfer Governor Spring to replacement engine.
- NOTE 88: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required
- NOTE 90: Transfer Oil Sensor to the replacement engine.
- NOTE 114: Transfer Regulator and Lead Wires to the replacement engine.

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

445600 to 445699

Original Engine			Make From		Remove		Add			Change			Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #	Note	to Type	Trim	RPM	Part #	Notes
0110	445677	699700	445777	0027					23		All	3500	698172	
									88					
									90					
0413	445677	699700	445777	0027					23		All	3300	698172	
									88					
									90					
0420	445677	699700	445777	0027					23		All	3500	698172	
									114					
0421	445677	699700	445777	0027					23		All	3500	698172	
0476	445677	790132	446777	0026					23		All	3300	698173	
									90					
0503	445677	699700	445777	0027					23		All	2500	698172	
									81					
									90					