

**62000 to 62999**

**SERVICE ENGINE**



**SALES MANUAL**

**MODEL 62000 SERIES ENGINES REPLACED WITH  
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

**Engine Replacement Notes:**

**Short Block Notes:**

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

**62000 to 62999**

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
0111	62032	261588	No Replacement Repair With Individual Parts.									All	4200		
0130	62032	261588	No Replacement Repair With Individual Parts.									All	4000		
0131	62032	261588	No Replacement Repair With Individual Parts.									All	4000		
0132	62032	261588	No Replacement Repair With Individual Parts.									All	4200		
0529	62032	262063	No Replacement Repair With Individual Parts.									01	4000		
0531	62032	261588	No Replacement Repair With Individual Parts.									01	4200		
0532	62032	261588	No Replacement Repair With Individual Parts.									01	4200		
0601	62032	261588	No Replacement Repair With Individual Parts.									All	4200		
0605	62032	261588	No Replacement Repair With Individual Parts.									All	4200		
0626	62032	262032	No Replacement Repair With Individual Parts.									01	4000		
0627	62033	262063	No Replacement Repair With Individual Parts.									01	4000		
0629	62032	262063	No Replacement Repair With Individual Parts.									01	4000		
												02	4000		
0630	62033	261588	No Replacement Repair With Individual Parts.									All	4000		
0631	62032	261588	No Replacement Repair With Individual Parts.									All	4000		
0632	62032	261588	No Replacement Repair With Individual Parts.									All	4000		
0633	62032	261588	No Replacement Repair With Individual Parts.									All	4000		
0634	62032	261588	No Replacement Repair With Individual Parts.									01	4200		
0641	62032	261588	No Replacement Repair With Individual Parts.									01	4200		
0642	62033	261588	No Replacement Repair With Individual Parts.									01	4200		
0650	62032	261588	No Replacement Repair With Individual Parts.									01	4200		
0651	62032	261588	No Replacement Repair With Individual Parts.									01	4200		
0652	62032	261588	No Replacement Repair With Individual Parts.									01	3800		
0653	62033	261588	No Replacement Repair With Individual Parts.									01	3800		
0654	62033	261588	No Replacement Repair With Individual Parts.									01	4200		
0663	62033	262063	No Replacement Repair With Individual Parts.									01	4000		
0664	62032	262063	No Replacement Repair With Individual Parts.									01	4000		