

80200 to 80299

SERVICE ENGINE



SALES MANUAL

**MODEL 80200 SERIES ENGINES REPLACED WITH
 STANDARD SERVICE ENGINES**

In most cases, the Original Type numbers shown may be replaced by a Service Type Number without making any changes. Necessary changes of engine parts such as crankshafts, reduction parts, blower housings, etc., are noted. Other differences, such as mufflers, elbows, deflectors, etc., are not listed but are very important for safety and engine performance. Be sure the exhaust system on the replacement engine duplicates the system originally selected by the equipment manufacturer. Parts that are suitable for additional use should be transferred. Before making any conversion, check the data shown in the column labeled "REMOVE, ADD and NOTE." See if the changes, which are shown, are actually necessary on the application in question. Often a standard service engine will be a WORKABLE replacement without converting to such things as a special fuel tank or starter position.

If the crankshaft number does not appear in the "Original Engine" column, consult the Illustrated Parts List for the correct service replacement crankshaft number.

Engine Replacement Notes:

- NOTE 4:** Drill and retap end of Crankshaft 5/16"-18 (5/8" deep).
- NOTE 5:** Drill and retap end of crankshaft 5/16"-24 (5/8" deep).
- NOTE 15:** For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.
- NOTE 16:** Gear Red. @ 12 o'clock.
- NOTE 17:** Gear Red. @ 3 o'clock.
- NOTE 34:** If the replacement engine supersedes to or is a Model 90000 series engine, refer to the illustrations located after the conversion data for this model series. The overall dimensions which differ, are shown in the illustrations. If after making a visual inspection and it is determined the Model 93400 series engine cannot be used because of equipment interference, the original engine should be repaired with a short block and/or individual parts.
- NOTE 46:** Original engine was equipped with special Gear and Shaft Assembly. Transfer these parts to the replacement engine.
- NOTE 113:** Gear Red. @ 6 o'clock.

Short Block Notes:

The SHORT BLOCK part number shown, is the assembly which can be used to rebuild the Original Type Number. If a letter appears after the short block number, it indicates the short block must be modified. The change denoted by each letter is as follows:

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0015	80202	260257	93302	0016					15 34		01	3900		
0016	80202	260257	93302	0016					15 34		All	3300		
0017	80202	260492	93302	0017					15 34		01	3300		
0018	80202	260492	93302	0017					15 34		01	3900		
0019	80202	260257	93302	0016					15 34		01	3300		
0035	80232	260932	93332	0035					15 34		All	3300		
0036	80232	260182	93332	0036					15 34		All	3300		
0037	80232	260489	No Replacement Repair With Individual Parts.						15		All	3300		
0038	80232	260110	No Replacement Repair With Individual Parts.						15		All	3300		
0039	80232	260491	No Replacement Repair With Individual Parts.						15		01	3300		
0040	80232	260187	93332	0040					15 34		All	3300		
0049	80252	260276	93352	0049					15 34		All	3300		
0110	80201	260257	93302	0016					15 34		All	3300		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0111	80202	260257	93302	0016					15 34		01 02 03 04 05 06 07 08 09 10 11 12 13	3300 3300 3300 3300 3600 3600 3000 3300 3600 3300 3300 3300		
0112	80203	260257	93302	0016					15 34		All	3300		
0113	80206	260257	93302	0016					15 34		01	3300		
0115	80211	260257	93312	0022					15 34		01	3300		
0116	80212	260257	93312	0022					15 34		01 02	3300 4000		
0117	80213	260257	93312	0022					15 34		All	3300		
0118	80216	260257	93312	0022					15 34					
0120	80231	260110	No Replacement Repair With Individual Parts.						15		01	3300		
0121	80232	260110	No Replacement Repair With Individual Parts.						15		01 03 04 05 06 07 08 09 10 11 12 13 14 15	3300 3300 3600 3300 3300 3300 2200 3300 3300 3300 3300 3300 3300 3300		
0122	80232	260110	No Replacement Repair With Individual Parts.						15					
0123	80236	260110	No Replacement Repair With Individual Parts.						15					
0125	80251	260276	93352	0049					15 34		01	3300		
0126	80252	260276	93352	0049					15 34		01 02 03	3300 3600 3300		
0127	80253	260276	93352	0049					15 34					
0128	80256	260276	93352	0049					15 34					
0129	80252	260276	No Replacement Repair With Individual Parts.						15		01	3300		
0130	80292	260257	No Replacement Repair With Individual Parts.						15					
0131	80296	260257	No Replacement Repair With Individual Parts.						15					
0132	80202	260257	93302	0016					15 34		01	3900		
0133	80292	260257	No Replacement Repair With Individual Parts.						15		01	3000		
0135	80292	260257	No Replacement Repair With Individual Parts.						15		01	3300		
0136	80292	260257	No Replacement Repair With Individual Parts.						15		01	3900		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0137	80202	260257	93302	0016					15 34		01	4000		
0140	80202	260257	93302	0016					15 34		01	3600		
0141	80252	260276	93352	0049					15 34		01	3600		
0142	80202	260257	93302	0016					15 34		01	3900		
0143	80202	260257	93302	0016					15 34		01	3000		
0144	80202	260257	93302	0016					15 34		All	3600		
0147	80202	260257	93302	0016					15 34		01	3600		
0148	80202	260257	93302	0016					15 34		01	3900		
0149	80232	260932	93332	0035					15 34		All	3600		
0150	80232	260932	93332	0035					15 34		All	3600		
0151	80252	260276	No Replacement Repair With Individual Parts.						15		01	3900		
0152	80202	260257	93302	0016					15 34		All	3600		
0153	80232	260932	93332	0035					15 34		ALL	3600		
0154	80202	260257	93302	0016					15 34		01	3900		
0156	80252	260276	93352	0049					15 34		01	3600		
0157	80252	260276	93352	0049					15 34		01	3600		
0158	80292	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0159	80202	260257	93302	0016					15 34		01 02	3600 4000		
0160	80202	260257	93302	0016					15 34		All	3900		
0162	80292	260257	No Replacement Repair With Individual Parts.						15		01	3900		
0163	80202	260562	93302	0016					5 15 34		01	3600		
0164	80232	260182	93332	0036					15 34		01 02 03 05 06 07 08 09 10 11 12 13 14 15 16	4000 3300 3950 3300 4000 3300 3300 3300 3600 4000 3600 3300 4000 4000 4000		
0165	80202	260492	93302	0017					15 34		01	3000		
0166	80232	260187	93332	0040					15 34		All	3300		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0167	80202	260257	93302	0016					15 34		All	4000		
0168	80231	260182	93332	0036					15 34		01 02 03 04 05 06 07	3600 3600 3800 3600 3600 3600 3300		
0169	80232	260489	No Replacement Repair With Individual Parts.						15		01	3300		
0170	80232	260187	93332	0040					15 34		01 02	4000 3600		
0171	80251	260276	93352	0049					15 17 34		01	3600		
0172	80202	260257	93302	0016					15 34		01	3600		
0173	80231	260121	93332	0040					15 34		01	3600		
0174	80232	260489	No Replacement Repair With Individual Parts.						15		01 02 03 04 05 06 07 08 09 10	3300 3300 3800 3300 3600 3600 3600 3300 3300 3600		
0175	80202	260257	93302	0016					15 34		01	3600		
0176	80231	260932	93332	0036					15 34		01 02 03 04 05	3300 3300 3600 3300 3300		
0177	80202	260257	93302	0016					15 34		01	3600		
0178	80202	260257	93302	0016					15 34		01	3600		
0179	80202	260257	93302	0016					15 34		01 02 03 04 05	3400 3300 3300 3600 3000		
0180	80202	260257	93302	0016					15 34		01	3300		
0181	80202	260257	93302	0016					15 34		01	3600		
0182	80202	260257	93302	0016					15 34		01	3600		
0183	80232	260932	93332	0035					15 34		01 02 03 04	3600 3300 3300 3300		
0184	80251	260276	93352	0049					15 17 34		01	3300		
0185	80231	260107	93332	0035					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0186	80252	260276	93352	0049					15 34		01	3600		
0187	80202	260257	93302	0016					15 34		01	3600		
0188	80232	260187	93332	0040					15 34					
0189	80202	260257	93302	0016					15 34		All	3600		
0190	80232	260489	No Replacement Repair With Individual Parts.						15		01 02 03 04 05 06	3300 3300 3300 4000 3700 3600		
0192	80202	260257	93302	0016					15 34		01	4000		
0193	80202	260257	93302	0016					15 34		01	3200		
0194	80252	260276	93352	0049					15 17 34		01	4000		
0195	80201	260257	93302	0016					15 34		01	2400		
0196	80231	260268	93332	0036					15 34		01	3300		
0197	80292	260257	No Replacement Repair With Individual Parts.						15		All	3600		
0198	80231	260489	No Replacement Repair With Individual Parts.						15		01	3300		
0199	80202	260257	93302	0016					15 34		01	3300		
0200	80231	260110	No Replacement Repair With Individual Parts.						15		01 02 03	3300 3600 3600		
0201	80202	260562	93302	0016					5 15 34		01	3600		
0202	80202	260257	93302	0016					15 34		01	3600		
0203	80232	260110	No Replacement Repair With Individual Parts.						15		01	3600		
0204	80202	260257	93302	0016					15 34		01	3300		
0205	80201	260257	93302	0016					15 34		01	3600		
0206	80231	260107	93332	0035					15 34		01	3300		
0207	80252	260276	93352	0049					15 17 34		01	2800		
0208	80231	260182	93332	0036					15 34		01 02 03	3900 3600 3300		
0209	80252	260276	93352	0049					15 17 34		01	3300		
0210	80251	260276	93352	0049					15 34		01	4000		
0211	80252	260276	93352	0049					15 34		01	3600		
0212	80212	260257	93312	0022					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0213	80202	260257	93302	0016					15 34		01	3900		
0214	80211	260186	No Replacement Repair With Individual Parts.						15		01	3300		
0215	80201	260257	93302	0016					15 34		All	3300		
0216	80231	260110	No Replacement Repair With Individual Parts.						15		All	3300		
0218	80251	260257	93352	0049					15 34		01	3000		
0219	80232	260932	93332	0035					15 34		01 02	3300 3500		
0220	80232	260187	93332	0040					15 34		01	3600		
0221	80232	260110	No Replacement Repair With Individual Parts.						15		01	2900		
0222	80231	260110	No Replacement Repair With Individual Parts.						15		01	3600		
0223	80202	260257	93302	0016					15 34		01	3600		
0224	80201	260257	93302	0016					15 34		01	3300		
0225	80232	260182	93332	0036					15 34		01	3300		
0226	80202	260257	93302	0016					15 34		All	3300		
0227	80232	260182	93332	0036					15 34		01 02 03 04 05 06 07	3300 3600 3450 3600 3600 3300 3600		
0228	80252	260276	93352	0049					15 34		01	3300		
0229	80202	260257	93302	0016					15 34		01	3300		
0230	80252	260276	93352	0049					15 17 34		01	4000		
0231	80202	260492	93302	0017					15 34		All	3600		
0232	80202	260257	93302	0016					15 34		01	3600		
0233	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
0234	80292	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0235	80252	260276	93352	0049					15 16 34		01	3300		
0236	80202	260257	93302	0016					15 34		01	3400		
0237	80202	260562	93302	0016					5 15 34		01	3900		
0238	80201	260257	93302	0016					15 34		All	3600		
0239	80232	260491	No Replacement Repair With Individual Parts.						15		01	3300		
0240	80231	260107	93332	0035					15 34		01	3600		
0241	80202	260257	93302	0016					15 34		All	3600		
0242	80202	260257	93302	0016					15 34		01	3900		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0243	80292	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0244	80202	260257	93302	0016					15 34		01	3600		
0245	80202	260257	93302	0016					15 34		01	3300		
0246	80232	260932	93332	0035					15 34		01	3600		
0247	80202	260257	93302	0016					15 34		01	3300		
0248	80202	260257	93302	0016					15 34		01	3900		
0249	80202	260257	93302	0016					15 34		01	3600		
0250	80212	260562	93312	0022					5 15 34		01	3600		
0252	80202	260257	93302	0016					15 34		All	3600		
0253	80252	260276	93352	0049					15 34		01	3600		
0254	80232	260491	No Replacement Repair With Individual Parts.						15		01 02	3600 4000		
0255	80202	260492	93302	0017					15 34		01	3900		
0256	80202	260257	93302	0016					15 34		01	3900		
0257	80251	260276	93352	0049					15 17 34		01	3200		
0258	80202	260257	93302	0016					15 34		01	3600		
0259	80252	260276	93352	0049					15 34		01	2800		
0260	80252	260276	93352	0049					15 34		01	3600		
0261	80231	260268	93332	0036					15 34		01	3600		
0262	80202	260562	93302	0016					5 15 34		01	4000		
0263	80252	260276	93352	0049					15 34		01	3600		
0264	80202	260257	93302	0016					15 34		01	4000		
0265	80202	260257	93302	0016					15 34		01 02	3300 3700		
0266	80202	260562	93302	0016					5 15 34		01	4000		
0267	80232	260182	93332	0036					15 34		01	3300		
0268	80212	260257	No Replacement Repair With Individual Parts.						15		01	4000		
0269	80202	260257	93302	0016					15 34		01	3900		
0270	80232	260932	93332	0035					15 34		01	3100		
0271	80252	260276	93352	0049					15 16 34		01	3500		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0272	80202	260257	93302	0016					15 34		01	3600		
0273	80252	260276	93352	0049					15 34 113		All	3900		
0274	80231	260110	No Replacement Repair With Individual Parts.						15		01	3600		
0275	80202	260257	93302	0016					15 34		01	3400		
0276	80232	260111	93332	0035					15 34		01 02 03	3400 3400 3600		
0277	80232	260182	93332	0036					15 34		01 02	3900 3300		
0278	80202	260492	93302	0017					15 34		01	3900		
0279	80202	260257	93302	0016					15 34		All	3600		
0280	80202	260492	93302	0017					15 34		01	3600		
0281	80252	260276	93352	0049					15 16 34		01	3600		
0282	80202	260257	93302	0016					15 34		01	3600		
0283	80232	260182	93332	0036					15 34		01	3600		
0284	80202	260257	93302	0016					15 34		01	3600		
0285	80202	260257	93302	0016					15 34		01	3600		
0286	80202	260257	93302	0016					15 34		01 02	3600 3300		
0287	80232	260489	No Replacement Repair With Individual Parts.						15		02	3600		
0288	80202	260257	93302	0016					15 34		01	3600		
0289	80232	260932	93332	0035					15 34		01 02	3600 3300		
0290	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
0291	80202	260257	93302	0016					15 34		01	3600		
0292	80212	260492	93312	0002					15 34		01	4000		
0293	80202	260257	93302	0016					15 34		01 02	3900 3900		
0294	80202	260257	93302	0016					15 34		01	3600		
0295	80232	260182	93332	0036					15 34		01 02 03	3900 3300 3300		
0296	80202	260257	93302	0016					15 34		01	3600		
0297	80212	260562	93312	0022					5 15 34		01	3600		
0298	80212	260257	93312	0022					15 34		01	4000		
0299	80231	260109	No Replacement Repair With Individual Parts.						15		01	3600		
0301	80202	260492	93302	0017					15 34		All	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0302	80232	260187	93332	0040					15 34		01	3600		
0303	80252	260276	93352	0049					15 34		01	3600		
0304	80232	260182	93332	0036					15 34		01	3600		
0306	80231	260182	93332	0036					15 34		01 02 03 04 05 06 07 08 09 10 11 12 13 14 15	3800 3300 4000 3300 3300 4000 3000 3300 3600 4000 4000 3300 3600 4000 3300		
0307	80251	260276	93352	0049					15 34		01	3600		
0308	80212	260492	93312	0002					15 34		All	4000		
0310	80202	260257	93302	0016					15 34		01	2400		
0311	80232	260932	93332	0035					15 34		01	3300		
0313	80252	260276	93352	0049					15 34		01	3000		
0315	80202	260257	93302	0016					15 34		01	3600		
0316	80202	260257	93302	0016					15 34		01	3200		
0317	80232	260932	93332	0035					15 34		01	3600		
0318	80232	260932	93332	0035					15 34		01	3300		
0319	80202	260257	93302	0016					15 34		01	3900		
0320	80252	260276	93352	0049					15 34 113		01	3600		
0321	80202	260257	93302	0016					15 34		01	3600		
0322	80232	260182	93332	0036					15 34		01 02 03 04 05 06	3600 3600 3300 3300 3300 3300		
0323	80202	260492	93302	0017					15 34		01	3300		
0326	80202	260257	93302	0016					15 34		01	3600		
0327	80232	260491	No Replacement Repair With Individual Parts.						15		01	3600		
0328	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0329	80212	260257	93312	0022					15 34		01	3600		
0330	80202	260492	93302	0017					15 34		01	3600		
0332	80292	260257	No Replacement Repair With Individual Parts.						15		01	3300		
0333	80202	260257	93302	0016					15 34		All	3900		
0334	80202	260492	93302	0017					15 34		01	3300		
0335	80252	260276	93352	0049					15 34		01	3300		
0336	80202	260492	93302	0017					15 34		01	3300		
0337	80202	260257	93302	0016					15 34		01	3600		
0339	80202	260257	93302	0016					15 34		All	3600		
0340	80232	260932	93332	0035					15 34		01	3300		
0341	80252	260276	93352	0049					15 34		01	3300		
0342	80202	260562	93302	0016					5 15 34		01	3600		
0343	80202	260257	93302	0016					15 34		01	3600		
0344	80202	260257	93302	0016					15 34		01	3300		
0345	80201	260257	93302	0016					15 34		01	3600		
0346	80232	260110	No Replacement Repair With Individual Parts.						15		01	3300		
0348	80252	260276	93352	0049					15 34 113		01	3600		
0349	80202	260257	93302	0016					15 34		01	3600		
0350	80231	260107	93332	0035					15 34		01	3300		
0351	80232	260182	93332	0036					15 34		01	3600		
0352	80202	260257	93302	0016					15 34		All	3600		
0353	80202	260257	93302	0016					15 34		01	3600		
0355	80202	260562	93302	0016					5 15 34		01	3900		
0356	80252	260276	93352	0049					15 17 34		01 02 03	3300 3400 3000		
0357	80202	260562	93302	0016					5 15 34		All	3900		
0358	80232	260932	93332	0035					15 34		01	3300		
0359	80232	260182	93332	0036					15 34		01	3300		
0360	80202	260257	93332	0016					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0361	80202	260492	93302	0017					15 34		01	3600		
0362	80231	260182	93332	0036					15 34		01	3950		
0363	80202	260257	93302	0016					15 34		01	3600		
0364	80231	260489	No Replacement Repair With Individual Parts.						15		01 02 03 04	3300 3600 3600 3300		
0365	80232	260932	No Replacement Repair With Individual Parts.						15		All	3600		
0366	80202	260492	93302	0017					15 34		01	3300		
0367	80252	260276	93352	0049					15 17 34		01	3600		
0368	80251	260276	93352	0049					15 34		01	3600		
0369	80232	260932	93332	0035					15 34		01	4000		
0370	80202	260257	93302	0016					15 34		01	3600		
0371	80252	260276	93352	0049					15 17 34		01	3600		
0372	80202	260492	93302	0017					15 34		01	3600		
0373	80202	260492	93302	0017					15 34		01	3600		
0374	80232	260489	No Replacement Repair With Individual Parts.						15		All	3600		
0375	80231	260489	No Replacement Repair With Individual Parts.						15		All	3600		
0376	80201	260492	93302	0017					15 34		01	3600		
0378	80202	260492	93302	0017					15 34		01	3600		
0379	80232	260187	93332	0040					15 34		All	3600		
0380	80252	260276	93352	0049					15 34 113		01	3600		
0381	80232	260187	No Replacement Repair With Individual Parts.						15		01	3900		
0382	80232	260182	93332	0036					15 34		All	3600		
0384	80232	260187	93332	0040					15 34		01 02 03 04 05 06	3600 3500 3300 3300 3300 3300		
0385	80202	260492	93302	0017					15 34		01	3600		
0386	80232	260182	93332	0036					15 34		01 02	3600 4000		
0388	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		
0389	80232	260187	93332	0040					15 34		01	3500		
0390	80231	260182	93332	0036					4 15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0391	80231	260182	93332	0036					15 34		01	3600		
0392	80232	260932	93332	0035					15 34		All	2900		
0393	80202	260257	93302	0016					15 34		01	3600		
0395	80202	260257	93302	0016					15 34		All	3600		
0396	80232	260932	93332	0035					15 34		01	3300		
0398	80232	260932	93332	0035					15 34		01	3600		
0399	80202	260492	93302	0017					15 34		All	3600		
0400	80202	260257	93302	0016					15 34		01	3600		
0401	80292	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0402	80232	260187	93332	0040					15 34		01	3600		
0403	80252	260276	93352	0049					15 34		01	3300		
0404	80202	260492	93302	0017					15 34		01	3900		
0405	80202	260492	93302	0017					15 34		All	3600		
0406	80202	260492	93302	0017					15 34		All	3900		
0407	80232	260932	93332	0035					15 34		01	3600		
0408	80202	260257	93302	0016					15 34		01	3600		
0410	80202	260492	93302	0017					15 34		01	3600		
0411	80202	260257	93302	0016					15 34		01	3600		
0412	80202	260257	93302	0016					15 34		01	3600		
0413	80202	260257	93302	0016					15 34		All	3800		
0419	80202	260257	93302	0016					15 34		01	3600		
0420	80202	260492	93302	0017					15 34		01	4000		
0421	80252	260276	93352	0049					15 16 34		01	3000		
0422	80202	260492	93302	0017					15 34		All	3900		
0423	80212	260257	93312	0022					15 34		01	3600		
0424	80202	260257	93302	0016					15 34		01	3300		
0425	80252	260276	93352	0049					15 16 34		01	3300		
0426	80202	260492	93302	0017					15 34		01	4000		
0427	80202	260257	93302	0016					15 34		01	3900		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0428	80231	260932	93332	0035					15 34		01	3500		
0429	80202	260257	93302	0016					15 34		01	3900		
0430	80202	260492	93302	0017					15 34		01	3900		
0431	80212	260492	No Replacement Repair With Individual Parts.						15		01	3600		
0432	80211	260276	No Replacement Repair With Individual Parts.						15		01	3300		
0433	80231	260489	No Replacement Repair With Individual Parts.						15		01 02	3800 3600		
0434	80231	260489	No Replacement Repair With Individual Parts.						15		01	3800		
0435	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0436	80231	260182	93332	0036					15 34		01	3600		
0437	80212	260257	No Replacement Repair With Individual Parts.						15		All	3600		
0438	80231	260187	93332	0040					15 34		01	3600		
0441	80202	260492	No Replacement Repair With Individual Parts.						15		01	3600		
0442	80231	260182	93332	0036					15 34		01	3600		
0443	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0444	80202	260257	93302	0016					15 34		01	3600		
0446	80212	260257	No Replacement Repair With Individual Parts.						15		All	3600		
0447	80252	260276	93352	0049					15 34 46		01 02 02 03 03	3600 3300 3300 3300 3300		
0448	80232	260182	93332	0036					15 34		All	3600		
0449	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0453	80232	260110	No Replacement Repair With Individual Parts.						15		01	3600		
0454	80202	260257	No Replacement Repair With Individual Parts.						15		All	3600		
0455	80232	260932	93332	0035					15 34		01	3600		
0456	80231	260932	93332	0035					15 34		01 02	3600 3500		
0457	80231	260182	93332	0036					15 34		01	3300		
0458	80202	260562	93302	0016					5 15 34		01	3900		
0459	80232	260932	93332	0035					15 34		01	3600		
0460	80212	260257	93312	0022					15 34		01	3600		
0461	80202	260257	93302	0016					15 34		01	3800		
0462	80252	260276	93352	0049					15 17 34		01	3600		
0463	80212	260257	No Replacement Repair With Individual Parts.						15		All	3600		
0464	80252	260276	93352	0049					15 34		01	3300		
0465	80202	260492	93302	0017					15 34		01 02 02	3900 3600 3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0466	80202	260492	93302	0017					15 34		01	3600		
0467	80232	260182	No Replacement Repair With Individual Parts.						15		01 02	3300 3600		
0468	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0470	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0471	80202	260492	93302	0017					15 34		01	3600		
0472	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0473	80231	260182	93332	0036					15 34		01	3300		
0474	80232	260932	93332	0035					15 34		All	3600		
0475	80212	260492	93312	0002					15 34		01	4000		
0476	80202	260492	93302	0017					15 34		01	3900		
0477	80202	260492	93302	0017					15 34		01	3900		
0478	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0479	80231	260489	No Replacement Repair With Individual Parts.						15		01	3800		
0480	80202	260257	93302	0016					15 34		01	3300		
0481	80202	260257	93302	0016					15 34		01	3900		
0482	80202	260492	No Replacement Repair With Individual Parts.						15		01	3600		
0483	80232	260182	93332	0036					15 34		01	3300		
0484	80202	260562	93302	0016					5 15 34		01	3600		
0485	80232	260182	93332	0036					15 34		01	3300		
0486	80202	260492	93302	0017					15 34		01	3900		
0487	80202	260257	93302	0016					15 34		01	3600		
0488	80202	260257	93302	0016					15 34		01	3600		
0490	80212	260257	93312	0022					15 34		All	3900		
0491	80202	260257	93302	0016					15 34		01	3900		
0492	80212	260257	93312	0022					15 34		01 02	3900 3600		
0493	80202	260492	93302	0017					15 34		All	3900		
0494	80232	260110	No Replacement Repair With Individual Parts.						15		All	3600		
0497	80202	260492	93302	0017					15 34		All	3600		
0498	80232	260187	93332	0040					15 34		All	3600		
0499	80231	260187	93332	0040					15 34		01	3600		
0500	80252	260276	93352	0049					15 17 34		All	3300		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0501	80202	260257	93302	0016					15 34		01	3900		
0502	80232	260932	93332	0035					15 34		All	3600		
0503	80202	260492	93302	0017					15 34		01	3900		
0504	80202	260562	93302	0016					5 15 34		01	3900		
0505	80231	260187	93332	0040					15 34		01	3300		
0506	80202	260257	93302	0016					15 34		01	3900		
0507	80202	261128	No Replacement Repair With Individual Parts.						15		All	3600		
0508	80232	260182	93332	0036					15 34		01	4000		
											02	4000		
											03	4000		
											04	3800		
											05	4000		
											06	4000		
											07	4000		
											08	4000		
											09	4000		
											10	3300		
											11	4000		
0510	80202	260257	93302	0016					15 34		All	3600		
0511	80232	260932	93332	0035					15 34		01	3600		
0512	80202	260257	93302	0016					15 34		01	3600		
0514	80202	260492	93302	0017					15 34		01	4000		
0515	80202	260257	93302	0016					15 34		01	3300		
0516	80232	260182	93332	0036					15 34		01	3300		
0517	80232	260932	93332	0035					15 34		01	3600		
0518	80252	260276	93352	0049					15 34		All	3300		
0519	80202	260257	93302	0016					15 34		01	3900		
0520	80202	260492	93302	0017					15 34		All	3600		
0521	80202	260257	93302	0016					15 34		01	3600		
0522	80202	260257	No Replacement Repair With Individual Parts.						15		All	3600		
0523	80252	260276	93352	0049					15 17 34		01	3000		
0524	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0526	80232	260182	93332	0036					15 34		01	3600		
0527	80202	260257	93302	0016					15 34		01	3600		
0528	80202	260492	93302	0017					15 34		01	3900		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0529	80212	260257	93312	0022					4 15 34		01	3600		
0531	80202	260562	No Replacement Repair With Individual Parts.						15		01	3600		
0532	80252	260276	93352	0049					15 34		01	3600		
0533	80202	261161	No Replacement Repair With Individual Parts.						15		ALL	3600		
0534	80232	260932	93332	0035					15 34		01	3600		
0535	80202	260257	93302	0016					15 34		01	3300		
0536	80212	260492	No Replacement Repair With Individual Parts.						15		01	3600		
0537	80232	260182	93332	0036					15 34		01	3000		
0539	80292	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0540	80202	260257	93302	0016					15 34		01	3900		
0541	80201	260257	93302	0016					15 34		01	3700		
0542	80202	260492	93302	0017					15 34		01	3600		
0543	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0544	80232	260187	93332	0040					15 34		01	3600		
0545	80202	260257	93302	0016					15 34		01	3900		
0546	80202	260257	93302	0016					15 34		All	3300		
0547	80202	260492	93302	0017					15 34		01	3900		
0548	80232	260932	93332	0035					15 34		01	3600		
0549	80202	260257	93302	0016					15 34		All	3900		
0550	80232	260187	93332	0040					15 34		01	3300		
0551	80202	260257	93302	0016					15 34		01	4000		
0552	80202	260492	93302	0017					15 34		01	4000		
0553	80202	260492	93302	0017					15 34		All	3900		
0554	80202	260492	93302	0017					15 34		01	3600		
0555	80202	260257	No Replacement Repair With Individual Parts.						15		All	3600		
0556	80232	260182	93332	0036					15 34		01 02 03	4000 4000 3300		
0557	80232	260187	93332	0040					15 34		01	3300		
0558	80212	260257	93312	0022					15 34		01	3600		
0559	80231	260932	93332	0035					15 34		01	3600		
0560	80252	260276	93352	0049					15 17 34		All	3300		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0561	80202	260257	93302	0016					15 34		01	3900		
0562	80251	260276	93352	0049					15 16 34		01	3000		
0564	80252	260276	93352	0049					15 17 34		01 02 03 04	3300 3600 3300 3300		
0565	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0566	80252	260276	93352	0049					15 17 34		01	3300		
0567	80202	260257	93302	0016					15 34		01	3600		
0568	80202	260492	93302	0017					15 34		01	3600		
0569	80202	260562	No Replacement Repair With Individual Parts.						15		01	3600		
0570	80212	260492	93312	0002					15 34		01	3600		
0572	80202	260257	93302	0016					15 34		All	3600		
0573	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0574	80232	260932	93332	0035					15 34		01 02 03 04 05 06 07 08 09 10	3800 3300 3600 3300 3600 3300 3600 3300 3600 3600		
0576	80202	261161	No Replacement Repair With Individual Parts.						15		All	3600		
0577	80231	260187	93332	0040					15 34		01	3300		
0578	80212	260257	93312	0022					15 34		01	3600		
0579	80202	260257	93302	0016					15 34		01	3900		
0580	80232	260182	93332	0036					15 34		01	3300		
0581	80232	260187	93332	0040					15 34		01	3300		
0582	80292	260257	No Replacement Repair With Individual Parts.						15		01	3900		
0583	80202	260562	93302	0016					5 15 34		01	3600		
0584	80202	260257	93302	0016					15 34		01	3500		
0585	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0586	80202	260492	93302	0017					15 34		01	3600		
0587	80202	260492	93302	0017					15 34		01	3600		
0588	80202	260257	93302	0016					15 34		01	3600		
0589	80212	260257	93312	0022					15 34		All	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0590	80202	260492	93302	0017					15 34		All	3900		
0591	80202	260492	93302	0017					15 34		All	3600		
0592	80292	260492	No Replacement Repair With Individual Parts.						15		All	3900		
0593	80292	260492	No Replacement Repair With Individual Parts.						15		01	3900		
0594	80202	260257	93302	0016					15 34		01	3600		
0595	80232	260932	93332	0035					15 34		01	3600		
0596	80232	260932	93332	0035					15 34		01	3600		
0597	80232	260182	No Replacement Repair With Individual Parts.						15		01	3600		
0600	80292	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0601	80202	260492	93302	0017					15 34		All	3600		
0602	80232	260182	93332	0036					15 34		01	4000		
0603	80252	260276	93352	0049					15 16 34		01	3000		
0605	80252	260276	93352	0049					15 34		01	3300		
0606	80202	260492	93302	0017					15 34		01	3600		
0607	80202	260492	93302	0017					15 34		All	3600		
0608	80232	260182	93332	0036					15 34		01	3600		
0610	80202	260257	93302	0016					15 34		01	3300		
0611	80252	260276	93352	0049					15 34		01	3300		
0612	80252	260276	93352	0049					15 17 34		01	3300		
0613	80292	260257	No Replacement Repair With Individual Parts.						15		01	3300		
0614	80292	260257	No Replacement Repair With Individual Parts.						15		All	3200		
0615	80202	260562	93302	0016					5 15 34		01	3600		
0616	80252	260276	93352	0049					15 17 34		01	3300		
0617	80232	260182	93332	0036					15 34		01	3450		
0618	80202	260492	93302	0017					15 34		01	3600		
0619	80202	260257	93302	0016					15 34		01	3600		
0621	80232	260932	93332	0035					15 34		01	2900		
0624	80202	260257	93302	0016					15 34		01 02	3300 3100		
0625	80232	260932	93332	0035					15 34		01	3300		
0626	80232	260932	93332	0035					15 34		All	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0627	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
0629	80202	260257	93302	0016					15 34		01	3600		
0630	80201	260257	93302	0016					15 34		01	3700		
0632	80252	260276	93352	0049					15 17 34		01	3300		
0633	80231	260932	93332	0035					15 34		All	3600		
0634	80232	260489	No Replacement Repair With Individual Parts.						15		All	3600		
0635	80202	260257	93302	0016					15 34		01	3300		
0636	80232	260932	93332	0035					15 34		All	3600		
0637	80232	260932	93332	0035					15 34		01	3300		
0638	80231	260489	No Replacement Repair With Individual Parts.						15		01	3600		
0639	80232	260187	93332	0040					15 34		01	3600		
0640	80232	260110	No Replacement Repair With Individual Parts.						15		01	4000		
0641	80201	260257	93302	0016					15 34		01 02	3700 3300		
0644	80232	260932	93332	0035					15 34		01	3600		
0645	80211	260257	93312	0022					15 34		01	3600		
0646	80232	260932	93332	0035					15 34		01	3600		
0647	80202	260257	93302	0016					15 34		01	3600		
0649	80202	260257	93302	0016					15 34		01	3600		
0650	80202	260492	93302	0016					15 34		01	3600		
0651	80202	260257	93302	0016					15 34		All	3600		
0652	80202	260492	93302	0017					15 34		All	3600		
0653	80232	260932	93332	0035					15 34		01	3600		
0655	80202	260257	93302	0016					15 34		All	4000		
0656	80202	260257	93302	0016					15 34		01	3600		
0657	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0658	80232	260182	93332	0035					15 34		01	3600		
0659	80202	261298	No Replacement Repair With Individual Parts.						15		02	3500		
0660	80202	260257	93302	0016					15 34		01	3600		
0661	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0662	80202	260257	93302	0016					15 34		01	3900		
0663	80232	260932	93332	0035					15 34		01	3300		
0664	80232	260110	No Replacement Repair With Individual Parts.						15		01	3300		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0665	80232	260187	93332	0040					15 34		01	3300		
0666	80212	260257	93312	0022					15 34		01	3600		
0667	80252	260276	93352	0049					15 34		01	3300		
0668	80202	260562	93302	0016					5 15 34		01	3900		
0669	80252	260276	93352	0049					15 16 34		01	3300		
0670	80232	260187	93332	0040					15 34		01	3800		
0671	80202	260257	93302	0016					15 34		01	3600		
0672	80252	260276	93352	0049					15 34 46 113		01	2700		
0674	80231	260182	93332	0036					15 34		All	3300		
0675	80232	260932	93332	0035					15 34		01	3600		
0676	80252	260276	93352	0049					15 34		01	3300		
0677	80232	260932	93332	0035					15 34		01 02 03	3300 3450 3300		
0678	80252	260276	93352	0049					15 34 113		01	3900		
0679	80252	260276	93352	0049					15 34 113		01	3300		
0680	80202	260562	93302	0016					5 15 34		01	3900		
0681	80232	260932	93332	0035					15 34		01	3400		
0682	80232	260932	93332	0035					15 34		01	3600		
0683	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
0684	80232	260489	No Replacement Repair With Individual Parts.						15		01	3300		
0685	80232	260932	93332	0035					15 34		01	2600		
0686	80251	260276	93352	0049					15 34		01	3600		
0687	80202	260492	93302	0017					15 34		01	3900		
0688	80232	260187	93332	0040					15 34		01	3600		
0689	80231	260182	93332	0036					4 15 34		01	3600		
0690	80232	260932	93332	0035					15 34		01 02 03	3600 3600 3200		
0691	80212	260276	No Replacement Repair With Individual Parts.						15		01	3300		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0692	80232	260489	No Replacement Repair With Individual Parts.						15		01	3800		
0693	80232	260187	93332	0040					15		01	3900		
									34					
0694	80232	260489	No Replacement Repair With Individual Parts.						15		01	3800		
0695	80202	260492	93302	0017					15		01	2600		
									34					
0696	80232	260182	93332	0036					15		01	3900		
									34					
0697	80202	260562	93302	0016					5		01	3600		
									15					
									34					
0698	80252	260276	93352	0049					15		01	3900		
									34					
0699	80202	260257	93302	0016					15		All	3600		
									34					
0701	80202	260257	93302	0016					15		01	3600		
									34					
0702	80212	260492	93312	0002					15		All	3900		
									34					
0703	80232	260110	No Replacement Repair With Individual Parts.						15		01	3600		
0704	80212	260257	93312	0022					15		01	3600		
									34					
0705	80232	260187	93332	0040					15		01	3600		
									34					
0706	80232	260110	No Replacement Repair With Individual Parts.						15		01	3900		
0707	80252	260276	93352	0049					15		01	3600		
									17					
									34					
0708	80232	260932	93332	0035					15		01	3300		
									34					
0709	80232	260182	93332	0036					15		All	3300		
									34					
0710	80232	260932	93332	0035					15		01	3300		
									34					
0712	80202	260257	93302	0016	3	93032	3	90832	15		All	3500		
							3	93656	34					
0713	80232	260182	93332	0036					15		01	3300		
									34					
0714	80202	260257	93302	0016					15		01	3900		
									34					
0716	80232	260932	93332	0035					15		All	3600		
									34					
0717	80232	260110	No Replacement Repair With Individual Parts.						15		01	3600		
0718	80202	261161	No Replacement Repair With Individual Parts.						15		01	3600		
0719	80232	260489	No Replacement Repair With Individual Parts.						15		01	3300		
0720	80252	260276	93352	0049					15		01	3300		
									17					
									34					
0721	80232	260932	93332	0035					15		01	3600		
									34		02	3600		
											03	3600		
											04	3950		
											05	3600		
											06	3600		
											07	3600		
											08	4000		
											09	3600		
											10	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0722	80232	260932	93332	0035					15 34		01	3300		
0723	80202	261161	No Replacement Repair With Individual Parts.						15		All	3600		
0725	80201	260257	93302	0016					15 34		01	2600		
0726	80232	260187	93332	0040					15 34		01	3300		
0727	80232	260187	93332	0040					15 34		01	3600		
0728	80232	260110	No Replacement Repair With Individual Parts.						15		01	3600		
0729	80232	260932	93332	0035					15 34		01	3800		
0730	80232	260182	93332	0036					15 34		01 02 03 04 05	3300 3800 3300 3300 3300		
0731	80292	260298	No Replacement Repair With Individual Parts.						15		All	3600		
0732	80232	260932	93332	0035					15 34		01	3300		
0733	80252	260276	93352	0049					15 34 46 113		01	2700		
0734	80292	260492	No Replacement Repair With Individual Parts.						15		01	3900		
0735	80232	260932	93332	0035					15 34		All	3600		
0736	80212	260257	93312	0022					15 34		All	3600		
0737	80202	260257	93302	0016					15 34		01	3600		
0738	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0739	80232	260110	No Replacement Repair With Individual Parts.						15		01	3900		
0740	80202	260492	93302	0017					15 34		01	3300		
0741	80202	260257	93302	0016					15 34		All	3600		
0742	80212	260257	93312	0022					15 34		01	3600		
0744	80292	260257	No Replacement Repair With Individual Parts.						15		01	3000		
0747	80202	260257	93302	0016					15 34		01	3900		
0748	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0749	80231	260489	No Replacement Repair With Individual Parts.						15		01	3800		
0750	80252	260276	93352	0049					15 17 34		01	3600		
0751	80202	260492	93302	0017					15 34		01	3900		
0752	80202	260257	93302	0016					15 34		All	3900		
0753	80292	260257	No Replacement Repair With Individual Parts.						15		01	3900		
0754	80202	260257	93302	0016					15 34		01	3900		
0757	80232	260187	93332	0040					15 34		01 02	3300 3450		
0758	80202	260257	93302	0016					15 34		All	3700		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0759	80252	260276	93352	0049					15 16 34		01	3300		
0760	80232	260489	No Replacement Repair With Individual Parts.						15		01 02	3300 3800		
0761	80292	261298	No Replacement Repair With Individual Parts.						15		All	3900		
0762	80202	260492	93302	0017					15 34		01	3600		
0763	80252	260276	93352	0049					15 16 34		All	3600		
0764	80232	260187	93332	0040					15 34		01	3450		
0765	80202	260257	93302	0016					15 34		01	3500		
0766	80232	260932	93332	0035					15 34		01	2900		
0767	80202	260257	93302	0016					15 34		01	3800		
0769	80232	260932	93332	0035					15 34		01	3600		
0771	80232	260932	93332	0035					15 34		01	3800		
0772	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
0774	80252	260276	93352	0049					15 34		01	3600		
0775	80232	260932	93332	0035					15 34		01	3600		
0776	80212	260492	No Replacement Repair With Individual Parts.						15		01	3600		
0777	80202	260257	93302	0016					15 34		01	3600		
0778	80232	260182	93332	0036					15 34		01	3600		
0779	80202	261298	No Replacement Repair With Individual Parts.						15		01	3800		
0781	80202	261298	No Replacement Repair With Individual Parts.						15		01	3600		
0782	80232	260182	93332	0036					15 34		01	4000		
0783	80231	260932	93332	0035					15 34		01	3600		
0784	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
0785	80202	260257	93302	0016					15 34		01	3900		
0786	80202	261404	No Replacement Repair With Individual Parts.						15		All	3300		
0787	80292	261404	No Replacement Repair With Individual Parts.						15		All	3300		
0788	80252	260276	93352	0049					15 34		01	3300		
0789	80232	260932	93332	0035					15 34		01	3600		
0790	80232	260932	93332	0035					15 34		01	3600		
0791	80232	260489	No Replacement Repair With Individual Parts.						15		All	3600		
0792	80232	260932	93332	0035					15 34		01	2400		
0793	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0794	80232	260932	93332	0035					15 34		All	3600		
0795	80232	260182	93332	0036					15 34		01	4000		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0796	80202	260492	93302	0017					15 34		All	3200		
0797	80202	260492	93302	0017					15 34		01	3900		
0798	80202	260257	93302	0016					15 34		01	3000		
0799	80202	261298	No Replacement Repair With Individual Parts.						15		All	3500		
0800	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0801	80202	260492	93302	0017					15 34		All	3600		
0802	80202	260257	93302	0016	3	93032	3	90832 93656	15 34		01	3500		
0803	80232	260187	93332	0040					15 34		01	3900		
0805	80202	260492	93302	0017					15 34		01	3300		
0806	80232	260932	93332	0035					15 34		All	3600		
0807	80202	260492	93302	0017					15 34		01	3600		
0808	80202	260257	93302	0016					15 34		All	3600		
0809	80202	260257	93302	0016					15 34		01	3900		
0810	80231	260182	93332	0036					15 34		01	3600		
0811	80232	260932	93332	0035					15 34		01	3300		
0812	80212	260562	No Replacement Repair With Individual Parts.						15		01	3600		
0813	80232	260489	No Replacement Repair With Individual Parts.						15		01	3500		
0814	80232	260182	93332	0036					15 34		01	4000		
0815	80202	260492	93302	0017					15 34		01	3600		
0816	80232	260932	93332	0035					15 34		01	3300		
0818	80232	260932	93332	0035					15 34		All	3300		
0820	80212	260562	No Replacement Repair With Individual Parts.						15		01	3600		
0821	80252	260276	93352	0049					15 17 34		01	3600		
0822	80202	260257	93302	0016					15 34		01	3900		
0823	80231	260110	No Replacement Repair With Individual Parts.						15		01	3600		
0824	80231	260932	93332	0035					15 34		All	3600		
0825	80202	260257	93302	0016					15 34		01	3300		
0826	80252	260276	93352	0049					15 16 34		01	2700		
0827	80231	260932	93332	0035					15 34		01	3600		
0829	80202	260492	93302	0017					15 34		01	3400		
0831	80202	260562	No Replacement Repair With Individual Parts.						15		01	3600		
0832	80231	260491	No Replacement Repair With Individual Parts.						15		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0833	80202	260257	93302	0016					15 34		01	3600		
0834	80292	261298	No Replacement Repair With Individual Parts.						15		01	3600		
0835	80232	260182	93332	0036					15 34		02	3600		
0836	80252	260276	93352	0049					15 34		01	3300		
0837	80202	261161	No Replacement Repair With Individual Parts.						15		01	3300		
0838	80212	260562	No Replacement Repair With Individual Parts.						15		01	3600		
0839	80202	260492	93302	0017					15 34		01	3900		
0840	80232	260932	93332	0035					15 34		01	3600		
0841	80231	260182	93332	0036					15 34		01 02	3600 4000		
0842	80232	260932	93332	0035					15 34		01	3300		
0843	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
0844	80232	260932	93332	0035					15 34		01	3800		
0845	80202	260257	93302	0016					15 34		01	3300		
0846	80202	260492	93302	0017					15 34		01	3600		
0847	80212	260257	93312	0022					15 34		01	3600		
0848	80202	260492	93302	0017					15 34		01	3900		
0849	80232	260187	93332	0040					15 34		01	4000		
0850	80252	250276	93352	0049					15 34 113		01	3300		
0851	80232	260187	93332	0040					15 34		01	3600		
0853	80202	260257	93302	0016					15 34		All	3600		
0854	80252	260279	93352	0049					15 17 34		01	4000		
0855	80202	260492	93302	0017					15 34		All	3300		
0856	80252	260276	93352	0049					15 16 34		01	3600		
0857	80212	260562	93312	0022					5 15 34		01	3400		
0858	80202	260492	93302	0017					15 34		01	3900		
0860	80232	260932	93332	0035					15 34		01	3600		
0861	80202	260257	93302	0016					15 34		01	3000		
0862	80202	260492	93302	0017					15 34		01	3900		
0863	80232	260932	93332	0035					15 34		01 02	3300 4000		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0864	80232	260932	93332	0035					15 34		01	3300		
0865	80232	260489	No Replacement Repair With Individual Parts.						15		01	3300		
0866	80232	260932	93332	0035					15 34		01	3300		
0867	80202	260257	93302	0016					15 34		01	3300		
0869	80212	260257	No Replacement Repair With Individual Parts.						15		01	4000		
0870	80232	260187	93332	0040					15 34		01	3900		
0871	80231	260182	93332	0036					15 34		01	4000		
0872	80202	260492	93302	0017					15 34		All	3900		
0873	80252	260276	93352	0049					15 34		01	3200		
0874	80202	260257	93302	0016					15 34		01	3200		
0875	80232	260932	93332	0035					15 34		01	3600		
0876	80202	260492	93302	0017					15 34		01	3900		
0877	80202	260257	93302	0016					15 34		01	3300		
0879	80202	260492	93302	0017					15 34		01	3600		
0880	80202	260492	93302	0017					15 34		01	3600		
0881	80212	260257	93312	0022					15 34		01	3200		
0882	80202	260257	93302	0016					15 34		01	3600		
0883	80202	260257	93302	0016					15 34		01	3600		
0888	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0889	80232	260932	93332	0035					15 34		All	3600		
0890	80202	260257	93302	0016					15 34		01	3300		
0892	80212	260562	93312	0022					5 15 34					
0895	80232	260182	93332	0036					15 34		01	3300		
0896	80202	260257	93302	0016					15 34		01	3600		
0897	80232	260932	No Replacement Repair With Individual Parts.						15		01	3300		
0898	80232	260110	No Replacement Repair With Individual Parts.						15		01	4000		
0899	80212	260562	No Replacement Repair With Individual Parts.						15		01	3600		
0900	80252	260276	93352	0049					15 16 34		01	4000		
0901	80232	260932	93332	0035					15 34		01	3600		
0902	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0903	80202	260492	93302	0017					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0904	80232	260187	93332	0040					15 34		01	3600		
0905	80232	260932	93332	0035					15 34		01	4000		
0906	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
0907	80212	260257	93312	0022					15 34		All	4000		
0908	80232	260932	93332	0035					15 34		01	3600		
0909	80232	260932	93332	0035					15 34		01	3700		
0910	80252	260115	93352	0049					15 17 34		01	3600		
0912	80252	260115	93352	0049					15 34 113		01	3900		
0913	80232	260489	No Replacement Repair With Individual Parts.						15		01	4100		
0914	80232	260182	93332	0036					15 34		01	4000		
0915	80292	260257	No Replacement Repair With Individual Parts.						15		01	3000		
0916	80212	260257	93312	0022					15 34		01	3600		
0917	80232	260932	93332	0035					15 34		01	3300		
0918	80232	260489	No Replacement Repair With Individual Parts.						15		01	3300		
0919	80232	260932	93332	0035					15 34		01	3800		
0920	80232	260110	No Replacement Repair With Individual Parts.						15		01	3600		
0921	80232	260932	93332	0035					15 34		01	3600		
0922	80212	260257	93312	0022					15 34		01	4000		
0923	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
0924	80212	260257	93312	0022					15 34		01	3600		
0925	80232	260182	93332	0036					15 34		01	3600		
0926	80202	260257	93302	0016					15 34		01	3600		
0927	80252	260115	93352	0049					15 34 113		01	3600		
0928	80202	260257	93302	0016					15 34		01	3300		
0929	80212	260257	93312	0022					15 34		01	3600		
0930	80202	260257	93302	0016					15 34		01	3900		
0931	80202	260257	93302	0016					15 34		01	3000		
0932	80202	260257	93302	0016					15 34		01	3500		
0933	80202	260492	93302	0017					15 34		01	4000		
0935	80232	260932	93332	0035					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
0936	80202	260492	93302	0017					15 34		01	3300		
0937	80232	260932	93332	0035					15 34		AI	3600		
0938	80231	260182	93332	0036					15 34		All	4000		
0939	80212	260492	No Replacement Repair With Individual Parts.						15		01	3600		
0941	80212	260257	93312	0022					15 34		01	3600		
0942	80232	260932	93332	0035					15 34		01	3600		
1000	80232	260182	93332	0036					15 34		01	3800		
1001	80232	260489	No Replacement Repair With Individual Parts.						15		01	3300		
1002	80202	260257	93302	0016					15 34		01	3600		
1003	80202	260492	93302	0017					15 34		01	3600		
1004	80232	260932	93332	0035					15 34		01	3300		
1005	80212	260257	No Replacement Repair With Individual Parts.						15		01	3600		
1006	80232	260182	93332	0036					15 34		01	3600		
1007	80212	260257	93312	0022					15 34		01	3600		
1008	80212	260492	93312	0002					15 34		01	3600		
1009	80252	260115	93352	0049					15 34		01	3600		
1010	80252	260115	93352	1049					15 34		01	3900		
1011	80202	260562	No Replacement Repair With Individual Parts.						15		01	3600		
1012	80232	260182	93332	1036					15 34		01	3600		
1013	80232	260110	No Replacement Repair With Individual Parts.						15		01 02 03	3600 3600 4100		
1014	80202	260492	93302	1017					15 34		01	3200		
1015	80252	260115	93352	1049					15 34		01	3400		
1016	80292	261298	No Replacement Repair With Individual Parts.						15		01	3600		
1017	80202	260257	93302	1016					15 34		01	3900		
1018	80212	260257	93312	1022					15 34		01	3600		
1019	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
1020	80252	260115	93352	1049					15 34		01	3600		
1021	80232	260932	93332	1035					15 34		01	3300		
1022	80232	260932	93332	0035					15 34		01	3300		
1024	80202	260257	93302	0016					15 34		All	3100		
1025	80232	260932	93332	0035					15 34		01	4000		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1026	80232	260932	93332	0035					15 34		01	3600		
1027	80232	260932	93332	0035					15 34		01	2800		
1028	80202	261298	No Replacement Repair With Individual Parts.						15		All	3300		
1029	80202	260257	93302	0016	2	93032	2	90832 93656	15 34		01	3600		
1030	80232	260932	93332	0035					15 34		01	3100		
1031	80202	260257	93302	0016					15 34		01	3600		
1032	80232	260932	93332	0035					15 34		01	3600		
1033	80232	260182	93332	0036					15 34		01	3800		
1034	80202	260492	93302	0017					15 34		01	3600		
1035	80232	260110	No Replacement Repair With Individual Parts.						15		01	3300		
1036	80232	260113	No Replacement Repair With Individual Parts.						15		01	3100		
1037	80232	260182	93332	0036	2	93032	2	22963 93656	15 34		01	3800		
1038	80202	260257	93302	0016	2	93032	2	22963 93656	15 34		01	3300		
1039	80252	260115	93352	0049					15 34		01	3200		
1040	80232	260187	93332	0040					15 34		01	3300		
1041	80231	260182	93332	0036					15 34		01	3600		
1042	80212	260257	93312	0022					15 34		01	3600		
1043	80252	260115	93352	0049					15 17 34		01	3300		
1044	80212	260257	93312	0022					15 34		01	3600		
1045	80232	260932	93332	0035					15 34		01	3600		
1046	80202	260257	93302	0016					15 34		01	3500		
1047	80232	260932	93332	0035	2	93111	2	22963 93582	15 34		01	4000		
1048	80232	260187	93332	0040					15 34		01	3600		
1049	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
1050	80232	260182	93332	0036	1	93111	1	22963	15 34		01	3800		
1051	80212	260257	93312	0022					15 34		01	3600		
1052	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
1053	80212	260257	93312	0022					15 34		01	3600		
1054	80232	260182	93332	0036					15 34		01	4000		
1055	80202	260492	93302	0017					15 34		01	4000		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1056	80252	260115	93352	0049					15 34		01	3300		
1057	80232	260491	No Replacement Repair With Individual Parts.						15		01	3900		
1058	80212	260492	93312	0002					15 34		01	3600		
1059	80232	260182	93332	0036					15 34		01	3300		
1060	80232	260110	No Replacement Repair With Individual Parts.						15		01	2200		
1061	80232	260489	No Replacement Repair With Individual Parts.						15		01	3600		
1062	80212	260257	93312	0022					15 34		01	3400		
1063	80202	261298	No Replacement Repair With Individual Parts.						15		01	3500		
1064	80202	260492	93302	0017					15 34		01	3600		
1065	80202	260257	93302	0016					15 34		01	2800		
1066	80212	260257	93312	0022					15 34		01	3600		
1067	80212	260492	93312	0002					15 34		01	3600		
1068	80232	260932	93332	0035					15 34		01	4000		
1069	80232	260932	93332	0035					15 34		01	3600		
1070	80202	260492	93302	0017					15 34		01	3300		
1071	80202	261298	No Replacement Repair With Individual Parts.						15		01	3300		
1072	80212	260492	93312	0002					15 34		01	3300		
1073	80212	260257	93312	0022					15 34		01 02	3200 3600		
1074	80232	260182	93332	0036					15 34		01	4000		
1075	80202	260257	93302	0016					15 34		01	3300		
1076	80232	260932	93332	0035					15 34		01	3950		
1077	80232	260932	93332	0035					15 34		01	2900		
1078	80202	260257	93302	0016					15 34		01	3100		
1079	80232	260932	93332	0035					15 34		01	3300		
1080	80202	260257	93302	0016	2	93032	2	90832 93656	15 34		01	3300		
1081	80202	260257	93302	0016	2	93032	2	90832 93656	15 34		01	3300		
1082	80202	260257	93302	0015	2	93032	2	90832 93656	15 34		01	3300		
1083	80232	260932	93332	0035					15 34		01	4000		
1084	80232	260110	No Replacement Repair With Individual Parts.						15		01	2200		
1085	80202	260257	93302	0016					15 34		01	3100		
1086	80202	260257	93302	0016					15 34		01	3300		
1087	80232	260182	93332	0036					15 34		01 02	3600 4000		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
1088	80202	260492	93302	0017					15 34		01	3300			
1089	80202	260492	93302	0017					15 34		01	3900			
1090	80212	260257	93312	0022	2	93111	3	22963	15 34		All	3900			
					1	93113	3	93583							
1091	80232	260182	93332	0036					15 34		01	4000			
1092	80212	260257	No Replacement Repair With Individual Parts.							15		01	3600		
1093	80232	260932	93332	0035					15 34		01	3600			
1094	80202	260257	93302	0016					15 34		01	3300			
1095	80252	260115	93352	0049					15 34		01	3600			
1096	80232	260932	93332	0035					15 34		01	4000			
1097	80202	260257	93302	0016					15 34		01	3300			
1098	80232	260932	93332	0035	1	93111	2	22963	15 34		All	4000			
					1	93113	2	93583							
1099	80202	260492	93302	0017					15 34		01	3400			
1100	80232	260182	93332	0036					15 34		01	3300			
1101	80202	260257	93302	0016					15 34		01	3800			
1102	80212	260257	93312	0022	1	93111	2	22963	15 34		01	3200			
					1	93113	2	93583							
1103	80212	260257	93312	0022					15 34		All	3200			
1104	80232	260932	93332	0035					15 34		01	4000			
1105	80202	260257	93302	0016					15 34		01	3900			
1106	80212	260492	93312	0002					15 34		01	3500			
1107	80202	261298	No Replacement Repair With Individual Parts.							15		01	3500		
1108	80202	260492	93302	0017					15 34		01	3600			
1109	80202	260257	93302	0016					15 34		01	3900			
1110	80202	260492	93302	0017					15 34		01	4000			
1111	80232	260182	93332	0036					15 34		01	4000			
1112	80232	260932	93332	0035					15 34		01	3600			
1113	80232	260932	93332	0035					15 34		01	2700			
1114	80202	260257	93302	0016					15 34		01	3600			
1115	80232	260932	93332	0035					15 34		01	3700			
1116	80232	260182	93332	0036					15 34		01	3800			
1117	80232	260932	93332	0035					15 34		01	3200			

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
1118	80232	260932	93332	0035					15 34		01	3600			
1119	80202	260257	93302	0016	2	93032	2	90832 93656	15 34		01	3600			
1120	80202	260257	93302	0016					15 34		01	3500			
1121	80212	260257	93312	0022					15 34		01	3600			
1122	80202	260257	93302	0016					15 34		01	3600			
1123	80232	260932	93332	0035					15 34		01	3600			
1124	80232	260187	93332	0040					15 34		01	2200			
1125	80231	260182	93332	0036					15 34		01	4000			
1126	80232	260932	93332	0035					15 34		01	2200			
1127	80252	260276	93352	0049	1	93111	3	22963 93583	15 16 34		01	3300			
1128	80202	260257	93302	0016					15 34		01	3900			
1129	80232	260187	93332	0040					15 34		01	3600			
1130	80212	260257	93312	0022					15 34		01	3600			
1131	80202	260492	93302	0017					15 34		All	4000			
1132	80232	260187	93332	0040					15 34		01	3300			
1133	80201	260257	93302	0016					15 34		01	3100			
1134	80202	260257	93302	0016					15 34		01	3600			
1135	80232	260182	93332	0036					15 34		01	3600			
1136	80232	260932	93332	0035					15 34		01	4000			
1137	80202	260492	93302	0017					15 34		01	3600			
1138	80202	260257	93302	0016					15 34		01	3600			
1139	80232	260932	No Replacement Repair With Individual Parts.							15		01	3900		
1140	80232	260182	93332	0036					15 34		01	3800			
1515	80202	492880	93302	0016					15 34		01	3900			
1516	80202	492880	93302	0016					15 34		All	3300			
1517	80202	493767	93302	0017					15 34		01	3300			
1518	80202	493767	93302	0017					15 34		01	3900			
1519	80202	492880	93302	0016					15 34		01	3300			
1522	80212	492880	93312	0022					15 34		01	3300			

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1535	80232	493633	93332	0035					15 34		All	3300		
1536	80232	492095	93332	0036					15 34		01	3300		
1537	80232	493619	No Replacement Repair With Individual Parts.						15		01	3300		
1538	80232	397252	No Replacement Repair With Individual Parts.						15		01	3300		
1539	80232	397256	No Replacement Repair With Individual Parts.						15		01	3300		
1540	80232	493849	93332	0040					15 34		All	3300		
1541	80232	492095	93332	0036					15 34		01	4000		
1549	80252	493409	93352	0049					15 34		All	3300		
1611	80202	492880	93302	0016					15 34		All	3300		
1619	80232	493633	93332	0035					15 34		01	3300		
1621	80232	397252	No Replacement Repair With Individual Parts.						15		All	3600		
1623	80232	492095	93332	0036					15 34		98	3600		
1624	80231	397252	No Replacement Repair With Individual Parts.						15		98	3600		
1626	80252	493409	93352	0049					15 34		All	3300		
1630	80232	492095	93332	0036					15 34		01 02	3600 3300		
1631	80232	493633	93332	0035					15 34		01	3300		
1632	80232	493633	93332	0035					15 34		01	3500		
1633	80201	492880	93302	0016					15 34		01	3100		
1634	80252	493409	93352	0049					15 34 113		01	3600		
1635	80232	492095	93332	0036					15 34		01 02 03 04	4000 3300 3600 3600		
1636	80212	492880	93312	0022					15 34		01	3400		
1637	80202	492880	93302	0017					15 34		01	3600		
1638	80202	493632	No Replacement Repair With Individual Parts.						15		01	3500		
1639	80202	492880	93302	0016					15 34		01	2500		
1640	80202	493767	93302	0017					15 34		01	3400		
1641	80232	492095	93332	0036					15 34		01	3300		
1642	80232	492095	93332	0036					15 34		01	3600		
1643	80212	492880	93312	0022					15 34		01	3600		
1644	80212	492880	No Replacement Repair With Individual Parts.						15		01	3900		
1645	80202	492880	93302	0016					15 34		01	3300		
1646	80292	492880	No Replacement Repair With Individual Parts.						15		01	3000		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1647	80202	493767	93302	0017					15 34		01	3900		
1648	80232	493849	93332	0040					15 34		01	3900		
1649	80202	493767	93302	0017					15 34		01	2600		
1650	80232	492095	93332	0036					15 34		01	3800		
1651	80202	493767	93302	0017					15 34		All	3200		
1652	80202	492880	93302	0016					15 34		01	3900		
1653	80232	493633	93332	0035					15 34		01	3800	491041	
1654	80232	397252	No Replacement Repair With Individual Parts.						15		01	2200		
1655	80252	493409	93352	0049					15 34		01	3600		
1656	80232	492095	93332	0036					15 34		01	3600	491039	
1657	80232	493849	93332	0040					15 34		01	2200		
1658	80232	493633	93332	0035					15 34		01	4000	491041	
1659	80202	492880	93302	0016					15 34		All	3800		
1660	80232	493633	93332	0035					15 34		01 02 03 04	3600 3300 3600 3300	491041	
1661	80202	492880	93302	0016	2	93032	2	90832 93656	15 34		All	3300		
1662	80232	493633	93332	0035	2	93111	2	22963 93583	15 34		All	4000	491041	
1663	80232	493633	93332	0035	2	93111	2	22963 93583	15 34		01	4000	491041	
1664	80202	493767	93302	0017					15 34		01	3600		
1665	80232	492095	93332	0036					15 34		All	4000	491039	
1666	80252	493409	93352	0049					15 16 34		01	2700		
1667	80232	493633	93332	0035					15 34		01	3600	491041	
1668	80232	493633	93332	0035					15 34		01	3800	491041	
1669	80232	397252	No Replacement Repair With Individual Parts.						15		01	4000		
1670	80212	493599	No Replacement Repair With Individual Parts.						15		01	3300		
1671	80202	492880	93302	0016					15 34		01	3600		
1672	80202	492880	93302	0016	3	93032	3	90832 93656	15 34		All	3600		
1673	80231	397252	No Replacement Repair With Individual Parts.						15		01	3300		
1674	80252	493409	93352	0049					15 17 34		01	4000		
1675	80202	493767	93302	0017					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1676	80202	493767	93302	0017					15 34		All	3300		
1677	80202	493767	93302	0017					15 34		01	3300		
1678	80202	493767	93302	0017					15 34		01	4000		
1679	80232	492095	93332	0036					15 34		All	3600	491039	
1680	80202	493767	93302	0017					15 34		01	3200		
1681	80202	492880	93302	0016	1	66694	1	66884	15 34		01	4000		
1682	80202	492880	93302	0016					15 34		01	3800		
1683	80232	492095	93332	0036					15 34		01	3800	491039	
1684	80231	397252	No Replacement Repair With Individual Parts.						15		01	3300		
1685	80202	492880	No Replacement Repair With Individual Parts.						15		01	3900		
1686	80212	492880	No Replacement Repair With Individual Parts.						15		01	3900		
1687	80202	492880	93302	0016					15 34		01	3100		
1688	80232	493849	93332	0040					15 34		01 02	3600 3800		
1689	80232	493633	93332	0035					15 34		01	3600	491041	
1690	80232	397252	No Replacement Repair With Individual Parts.						15		01	3600		
1691	80202	492880	No Replacement Repair With Individual Parts.						15		01	3900		
1692	80202	492880	93302	0016					15 34		01	3300		
1693	80252	493409	93352	0049					15 34		01	3300		
1694	80202	493767	93302	0017					15 34		01	3300		
1695	80202	492880	93302	0016	2	93032	2	90832 93656	15 34		01	3300		
1696	80202	492880	93302	0016					15 34		01	3900		
1697	80232	493633	93332	0035					15 34		01	3600	491041	
1698	80212	492880	No Replacement Repair With Individual Parts.						15		01	3900		
1699	80212	492880	No Replacement Repair With Individual Parts.						15		01	3900		
1700	80232	493633	93332	0035					15 34		01	3600	491041	
1701	80202	492880	93302	0016					15 34		01	3600		
1702	80202	493767	93302	0017					15 34		01	3900		
1703	80232	492880	93332	0035					15 34		01	3600	491041	
1704	80292	492880	No Replacement Repair With Individual Parts.						15		01	3000		
1705	80231	492095	93332	0036					15 34		01	3600	491039	
1706	80232	492095	93332	0036					15 34		All	4000	491039	
1707	80232	493849	93332	0040					15 34		01	3500		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1708	80212	492881	93312	0022					5 15 34		01	3400		
1709	80252	493409	93352	0049					15 34		01	3300		
1710	80232	492095	93332	0036	2	93032	2	22963 2 93656	15 34		01	3800	491039	
1711	80232	493633	93332	0035					15 34		01	3600	491041	
1712	80232	493849	93332	0040					15 34		01	3600		
1713	80232	397252	No Replacement Repair With Individual Parts.						15		01	4100		
1714	80212	492881	No Replacement Repair With Individual Parts.						15		01	3900		
1715	80212	492880	93312	0022					15 34		01	3600		
1716	80202	493767	93302	0017					15 34		01	3900		
1717	80212	492880	93312	0022					15 34		01	3600		
1718	80212	492880	93312	0022					15 34		All	4000		
1719	80232	493633	No Replacement Repair With Individual Parts.						15		01	3300	491041	
1720	80202	492880	93302	0016					15 34		01	3100		
1721	80212	492880	93312	0022					15 34		01	3200		
1722	80202	492880	93302	0016					15 34		01	3600		
1723	80232	492095	93332	0036					15 34		01	3600	491039	
1724	80202	492880	93302	0016					15 34		01	3500		
1725	80202	493767	93302	0017					15 34		01	3600		
1726	80232	492095	93332	0036					15 34		01	4000	491039	
1727	80252	493409	93352	0049					15 16 34		01	3600		
1728	80232	493633	No Replacement Repair With Individual Parts.						15		01	3900		
1729	80232	493633	93332	0035					15 34		01	2900	491041	
1730	80202	492880	93302	0016					15 34		01	4000		
1731	80202	493767	93302	0017					15 34		01	3600		
1732	80212	493767	93312	0022					15 34		01	3300		
1733	80232	493849	93332	0040					15 34		01	3600		
1734	80202	492880	93302	0016					15 34		01	3600		
1735	80202	493767	93302	0017					15 34		01	3300		
1736	80292	492880	No Replacement Repair With Individual Parts.						15		01	3000		
1737	80232	493849	93332	0040					15 34		01	3300		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1738	80232	493633	93332	0035					15 34		01	3600	491041	
1739	80202	492881	No Replacement Repair With Individual Parts.						15		01	3900		
1740	80202	493767	93302	0017					15 34		01	3200		
1741	80232	493633	93332	0035					15 34		01	3600	491041	
1742	80202	492880	93302	0016					15 34		01	3300		
1743	80202	493767	93302	0040					15 34		01	3300		
1744	80202	492880	93302	0016	2	93032	2	90832 93656	15 34		All	3300		
1745	80232	492095	93332	0036					15 34		01	4000	491039	
1746	80212	492880	93312	0022					15 34		01	3600		
1747	80212	492880	93312	0022					15 34		01	3600		
1748	80232	493633	93332	0035					15 34		01	4000	491041	
1749	80252	493409	93352	0049					15 16 34		01	3000		
1750	80232	397252	No Replacement Repair With Individual Parts.						15		01	3200		
1751	80252	493409	93352	0049					15 16 34		01	3300		
1752	80232	492095	93332	0036					15 34		01	4000	491039	
1753	80252	493409	93352	0049					15 17 34		01	3300		
1754	80232	493633	93332	0035					15 34		01	3600	491041	
1755	80232	493633	93332	0035					15 34		01	3900	491041	
1756	80232	492095	93332	0036					15 34		01	3800	491039	
1757	80202	492880	93302	0016					15 34		01	3300		
1758	80202	493767	93302	0017					15 34		01	3300		
1759	80252	493409	93352	0049					15 16 34		01	3600		
1760	80232	493633	93332	0035					15 34		01	3600	491041	
1761	80202	492880	93302	0016					15 34		01	3300		
1762	80202	492880	93302	0016					15 34		01	3900		
1763	80202	493767	93302	0017					15 34		01	3600		
1764	80231	492095	93332	0036					15 34		01	3300	491039	
1765	80202	493767	93302	0017					15 34		All	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1766	80232	492095	93332	0036					15 34		01	4000	491039	
1767	80212	492880	No Replacement Repair With Individual Parts.						15		01	3300		
1768	80202	493767	93302	0017					15 34		01	3600		
1769	80231	492095	93332	0036					15 34		01	4000	491039	
1770	80212	492880	93312	0022					15 34		01	3600		
1771	80232	493633	93332	0035					15 34		01	4000	491041	
1772	80292	493632	No Replacement Repair With Individual Parts.						15		01	3600		
1773	80232	493633	93332	0035					15 34		01	3600	491041	
1774	80232	492095	93332	0036					15 34		01	3900	491039	
1775	80202	493632	No Replacement Repair With Individual Parts.						15		01	3800		
1776	80232	493633	93332	0035					15 34		01	3300	491041	
1777	80232	493619	No Replacement Repair With Individual Parts.						15		01	3300		
1778	80202	492880	93302	0016					15 34		01	3600		
1779	80202	493767	93302	0017					15 34		01	2850		
1780	80202	493767	93302	0017					15 34		01	3600		
1781	80232	492095	93332	0036					15 34		01	3600	491039	
1782	80202	493767	93302	0017					15 34		01	3300		
1783	80202	492880	93302	0016					15 34		01	4000		
1784	80232	493633	93332	0035					15 34		01	3900	491041	
1785	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
1786	80202	492880	93302	0016					15 34		01	3600		
1787	80232	397251	No Replacement Repair With Individual Parts.						15		01	3300		
1788	80232	492095	93332	0036					15 34		01	3600	491039	
1789	80201	492880	93302	0016					15 34		01	3300		
1790	80202	493767	93302	0017					15 34		01	3200		
1791	80202	492880	93302	0016	2	93032	2	90832	15 34		01	3600		
								2 93656						
1792	80231	493633	93332	0035					15 34		01	3300	491041	
1793	80202	492880	93302	0016	2	93032	2	90832	15 34		01	3600		
								2 93656						
1794	80232	493619	No Replacement Repair With Individual Parts.						15		01	3300		
1795	80212	492880	93312	0022					15 34		01	3200		
1796	80232	492095	93332	0036					15 34		01	3600		
1797	80232	492095	93332	0036					15 34		01	3600	491039	

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1798	80202	492880	93302	0016					15 34		01	4000		
1799	80232	493633	93332	0035					15 34		01	3600	491041	
1800	80232	493633	93332	0035					15 34		01	3200	491041	
1801	80232	397256	No Replacement Repair With Individual Parts.						15		01	3900		
1802	80232	493849	93332	0040					15 34		01	3600		
1803	80232	493619	No Replacement Repair With Individual Parts.						15		01	3600		
1804	80252	493409	93352	0049					15 34		01	2700		
1805	80212	492880	93312	0022					15 34		01	3200		
1806	80231	493633	93332	0035					15 34		01	4000	491041	
1807	80232	493633	93332	0035					15 34		01	4000	491041	
1808	80202	492880	93302	0016					15 34		01	3300		
1809	80202	493767	93302	0017					15 34		01	3600		
1810	80232	397252	No Replacement Repair With Individual Parts.						15		01	3000		
1811	80202	493767	93302	0017					15 34		01	3900		
1812	80232	492095	93332	0036					15 34		01	3600	491039	
1813	80202	492880	93302	0016					15 34		01	3600		
1814	80212	492880	93312	0022					15 34		01	3600		
1815	80232	493633	93332	0035					15 34		All	3600	491041	
1816	80202	492880	93302	0016					15 34		01	2500		
1817	80232	397256	No Replacement Repair With Individual Parts.						15		01	3900		
1818	80212	492881	93312	0022					5 15 34		01	3650		
1819	80232	493633	93332	0035					15 34		01	3600		
1820	80232	493849	93332	0040					15 34		01	2600		
1821	80232	397252	No Replacement Repair With Individual Parts.						15		01	3000		
1822	80252	493409	93352	0049					15 34		01	3300		
1823	80231	492095	93332	0036					15 34		01	3600	491039	
1824	80202	493632	No Replacement Repair With Individual Parts.						15		01	3800		
1825	80202	493767	93302	0017					15 34		01	3600	491039	
1826	80232	493849	93332	0040					15 34		01	4000		
1827	80202	492880	93302	0016					15 34		01	3200		
1828	80232	493633	93332	0035					15 34		01	3950	491041	

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1829	80232	493633	93332	0035					15 34		01	3600	491041	
1830	80202	493632	No Replacement Repair With Individual Parts.						15		01	3500		
1831	80202	493767	93302	0017					15 34		01	3900		
1832	80212	492880	93312	0022					15 34		01	3600		
1833	80232	397252	No Replacement Repair With Individual Parts.						15		01	3300		
1834	80232	493633	93332	0035					15 34		01	3600	491041	
1835	80202	492880	93302	0016					15 34		All	4000		
1836	80232	492095	93332	0036					15 34		All	4000	491039	
1837	80252	493409	93352	0049					15 34		01	2700		
1838	80202	493767	93302	0016					15 34		01	3100		
1839	80232	492095	93332	0036					15 34		01	3600	491039	
1840	80202	492880	93302	0016					15 34		01	3900		
1841	80232	492095	93332	0036					15 34		01	3800	491039	
1842	80232	492095	93332	0036					15 34		01	3600	491039	
1843	80202	492880	93302	0016					15 34		01	3600		
1845	80202	492880	93302	0016					15 34		All	3300		
1846	80232	397252	No Replacement Repair With Individual Parts.						15		01	2200		
1847	80232	493633	93332	0035					15 34		01	4000	491041	
1848	80202	492880	93302	0016					15 34		01	3300		
1849	80252	493409	93352	0049					15 34		01	3300		
1850	80252	493409	93352	0049					15 34		01	3600		
1851	80232	397251	No Replacement Repair With Individual Parts.						15		01	3300		
1852	80232	493633	93332	0035					15 34		01 02 03	4000 3600 3600	491041	
1853	80212	492881	93312	0022					5 15 34		01	3600		
1854	80202	492880	93302	0016					15 34		01	3300		
1855	80202	493767	93302	0017					15 34		01	2850		
1856	80232	493633	93332	0035					15 34		01	3400	491041	
1858	80202	493767	93302	0017					15 34		01	2500		
1859	80232	493849	No Replacement Repair With Individual Parts.						15		01	3600		
1860	80202	493767	93302	0017					15 34		All	2700		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1861	80212	492880	93312	0022					15 34		All	3600		
1862	80212	492880	93312	0022					15 34		01	4000		
1863	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
1864	80202	493767	93302	0017					15 34		01	3900		
1865	80202	493767	No Replacement Repair With Individual Parts.						15		All	3300		
1866	80232	492095	93332	0036					15 34		01	4000		
1867	80252	493409	93352	0049					15 17 34		01	3600		
1868	80202	493767	93302	0017					15 34		01	3100		
1869	80202	492880	93302	0016					15 34		01	3300		
1870	80232	492095	93332	0036	2	93032	2	90832	15 34		01	3600	491039	
								2 93656						
1871	80232	492095	93332	0036					15 34		01	4000	491039	
1872	80232	493633	No Replacement Repair With Short Block and/or Individual Parts								All	3600	491041	
1873	80252	493409	93352	0049					15 17 34		01	3300		
1874	80202	492880	93302	0016					15 34		01	3300		
1875	80202	493767	93302	0017					15 34		01	3900		
1876	80232	493633	93332	0035	2	90832	2	90832	15 34		01	3600	491041	
								2 93656						
1877	80202	492880	93302	0016					15 34		01	3600		
1878	80202	492880	93302	0016					15 34		01	3300		
1879	80202	493767	93302	0017					15 34		01	3600		
1880	80202	492880	No Replacement Repair With Individual Parts.						15		All	3300		
1881	80232	492095	No Replacement Repair With Individual Parts.						15		01	4000	491039	
1882	80212	492880	No Replacement Repair With Individual Parts.						15		01	3300		
1883	80232	493849	No Replacement Repair With Individual Parts.						15		01	3600		
1884	80202	492880	93302	0016					15 34		01	3600		
1885	80212	492880	93312	0022					15 34		01	4000		
1886	80202	493632	No Replacement Repair With Individual Parts.						15		01	3900		
1887	80232	493633	93332	0035					15 34		01	3300	491041	
1888	80202	493632	No Replacement Repair With Individual Parts.						15		01	3500		
1889	80202	492880	93302	0016					15 34		01	2900		
1890	80202	492880	93302	0016					15 34		01	3300		
1891	80202	492880	No Replacement Repair With Individual Parts.						15		01	3300		
1892	80202	493767	93302	0017					15 34		01	3600		
1893	80202	492880	93302	0016					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
1894	80202	492880	No Replacement Repair With Individual Parts.						15		01	3600		
1895	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
1896	80202	493767	93302	0017					15		01	3300		
									34					
1897	80202	493767	93302	0017					15		01	3100		
									34					
1898	80202	493767	93302	0017	1	66734	1	66684	15		01	3100		
									34					
2035	80232	260932	93332	0035					15		01	3300	401041	
									34					
2036	80232	260182	93332	0036					15		01	3300	491039	
									34					
2049	80252	260276	93352	0049					15		All	3300	491040	
									34					
2100	80232	493633	93332	0035					15		01	3600	491041	
									34		02	3300		
2101	80202	492880	93302	0016					15		01	2800		
									34					
2102	80232	492095	93332	0036					15		01	3800	491039	
									34					
2103	80232	493849	93332	0040					15		01	3900		
									34					
2104	80202	493767	93312	0002					15		01	3900		
									34					
2105	80202	492880	93302	0016					15		01	3800		
									34					
2106	80232	493619	No Replacement Repair With Individual Parts.						15		All	3300		
2108	80232	492095	93332	0036					15		01	3600	491039	
									34					
2109	80212	492880	No Replacement Repair With Individual Parts.						15		01	3300		
2110	80231	492095	93332	0036					15		01	4000	491039	
									34					
2111	80201	492880	93302	0016					15		01	3100		
									34					
2112	80202	493767	93302	0017					15		01	3600		
									34					
2113	80212	492880	No Replacement Repair With Individual Parts.						15		01	4000		
2114	80231	493633	93332	0035					15		01	4000	491041	
									34					
2115	80232	493633	93332	0035					15		01	4000	491041	
									34					
2116	80212	492880	No Replacement Repair With Individual Parts.						15		01	3100		
2117	80232	492095	93332	0036					15		01	4000	491039	
									34					
2118	80202	493767	93302	0017					15		01	3900		
									34					
2119	80202	493767	93302	0017					15		01	3600		
									34					
2120	80232	493633	93332	0035					15		01	3300	491041	
									34					
2121	80202	493632	No Replacement Repair With Individual Parts.						15		01	3900		
2122	80232	493633	93332	0035					15		01	3300	491041	
									34					
2123	80212	492881	No Replacement Repair With Individual Parts.						15		01	4000		
2124	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2125	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2126	80202	493767	93302	0017					15		01	3600		
									34					

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block		
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes	
2201	80202	492880	93302	0016					15 34		01	3300			
2202	80232	493633	93332	0035					15 34		01	3300	491041		
2203	80252	493409	93352	0049					15 34		01	3300	491040		
2204	80202	492880	93302	0016					15 34		01	3300			
2205	80212	492880	93312	0022					15 34		01	3300			
2206	80212	492880	93312	0022					15 34		01	3300			
2207	80232	493633	93332	0035					15 34		All	3300	491041		
2208	80252	493409	93352	0049					15 34		All	3300	491040		
2209	80202	492880	93302	0016					15 34		All	3300			
2210	80232	492095	93332	0036					15 34		01	4000	491039		
2211	80232	492095	93332	0036					15 34		01	3600	491039		
2212	80202	492880	93302	0016	3	93032	3	90832 3 93656	15 34		01	3600			
2213	80202	492880	93302	0016					15 34		01	2800			
2214	80212	493767	93312	0002					15 34		01	3300			
2215	80232	492095	93332	0036					15 34		01	3600	491039		
2216	80232	493633	93332	0035					15 34		01	3600	491041		
2217	80232	493633	93332	0035					15 34		01	4000	491041		
2218	80252	493409	93352	0049					15 34 113		01	2700	491040		
2219	80212	492880	93312	0022					15 34		01	3600			
2220	80232	493633	93332	0035					15 34		01	3500	491041		
2221	80202	492880	93302	0017					15 34		01	3900			
2222	80232	493633	93332	0040					15 34		01	3900			
2223	80232	493633	93332	0035					15 34		01	4000	491041		
2224	80252	493409	93352	0049					15 34		01	3300	491040		
2225	80202	493767	93302	0017					15 34		01	2600			
2226	80232	492095	No Replacement Repair With Individual Parts.							15		All	4000		
2227	80212	492880	93312	0022					15 34		All	3200			
2228	80232	492095	93332	0036					15 34		01	3600	491039		
2229	80232	493633	93332	0035					15 34		01	3950	491041		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2230	80212	492880	93312	0022					15 34		01	4000		
2231	80252	493409	93352	0049					15 17 34		01	4000	491040	
2232	80232	493633	No Replacement Repair With Individual Parts.						15		01	3600	491041	
2233	80201	492880	93302	0016					15 34		01	3100		
2234	80202	493767	93302	0017					15 34		All	3200		
2235	80202	493632	No Replacement Repair With Individual Parts.						15		01	3800		
2236	80232	492095	93332	0036					15 34		01	4000	491039	
2237	80202	492880	No Replacement Repair With Individual Parts.						15		01	4000		
2238	80202	492880	93302	0016					15 34		All	3300		
2239	80232	492095	93332	0036					15 34		01	4000	491039	
2240	80202	492880	93302	0016					15 34		01	3300		
2241	80232	493633	93332	0035					15 34		01	3300	491041	
2242	80232	493633	93332	0035					15 34		01	2900	491041	
2243	80212	493767	No Replacement Repair With Individual Parts.						15		01	2400		
2244	80202	492881	93302	0016					5 15 34		01	4000		
2245	80232	492095	93332	0036					15 34		01 02	4000 3600	491039	
2246	80212	492880	93312	0022					15 34		All	3600		
2247	80231	493633	93332	0035					15 34		01	3300	491041	
2248	80232	397252	No Replacement Repair With Individual Parts.						15		01	3200		
2249	80202	492880	93302	0016					15 34		01	3300		
2250	80252	493409	93352	0049					15 17 34		01	3600		
2251	80202	492880	93302	0016					15 34		01	2900		
2252	80232	493633	93332	0035					15 34		01	3600	491041	
2253	80232	492095	93332	0036					15 34		01	4000	491039	
2254	80232	492095	93332	0036					15 34		01	4000	491039	
2255	80202	492880	93302	0016					15 34		01	2500		
2256	80202	492880	93302	0016					15 34		01	3300		
2257	80232	493633	93332	0036					15 34		01	3600	491041	
2258	80232	492095	93332	0036					15 34		01	3800	491039	
2259	80232	492095	93332	0036					15 34		01	4000	491039	

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2260	80232	493633	93332	0035					15 34		01	3600	491041	
2261	80202	492880	93302	0016					15 34		01	3300		
2262	80232	493849	93332	0040					15 34		01	3600		
2263	80252	493409	93352	0049					15 16 34		01	3300		
2264	80202	492880	93302	0016					15 34		01	3600		
2265	80212	492880	No Replacement Repair With Individual Parts.						15		01	4000		
2266	80202	493767	93302	0017					15 34		01	3900		
2267	80232	493633	93332	0035					15 34		01	3600	491041	
2268	80232	492095	No Replacement Repair With Individual Parts.						15		01	3900	491039	
2269	80232	493633	93332	0035					15 34		01	3600	491041	
2270	80232	493633	93332	0035					15 34		01	3300	491041	
2271	80202	492880	93302	0016					15 34		01	3300		
2272	80232	492095	93332	0036					15 34		01	3600	491039	
2273	80202	493767	93302	0017					15 34		01	2700		
2274	80252	493409	93352	0049					15 34		01	3600		
2275	80202	492880	93302	0016					15 34		01	2600		
2276	80202	492880	93302	0016					15 34		01	3100		
2277	80232	492095	93332	0036					15 34		01	3600	491039	
2278	80252	493409	93352	0049					15 34		01	3600	491041	
2279	80232	492095	93332	0036					15 34		01	4000	491039	
2280	80232	493633	93332	0035					15 34		01	3600	491041	
2281	80202	492880	93302	0016					15 34		01	3600		
2282	80212	492880	93312	0022					15 34		01	3600		
2283	80212	492880	93312	0022					15 34		01	3600		
2284	80202	492880	93302	0016					15 34		01	4000		
2285	80212	492880	93312	0022					15 34		01	3600		
2286	80252	493409	93352	0049					15 34		01	3600		
2287	80232	493633	93332	0035					15 34		01	3300	491041	
2288	80202	493632	No Replacement Repair With Individual Parts.						15		01	3500		
2289	80212	492880	93312	0022					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2290	80232	492095	93332	0036					15 34		01	3800	491039	
2291	80212	492880	93312	0022					15 34		01	3600		
2292	80202	492880	93302	0016					15 34		01	3600		
2293	80232	493633	93332	0035					15 34		01	3600	491041	
2294	80252	493409	93352	0049					15 34		01	3600		
2295	80232	493849	93332	0040					15 34		01	3300		
2296	80212	493767	93312	0002					15 34		01	3600		
2297	80202	493632	No Replacement Repair With Individual Parts.						15		01	3900		
2298	80232	493849	93332	0040					15 34		01	3600		
2299	80202	493767	93302	0017					15 34		01	3300		
2300	80232	493849	93332	0040					15 34		01	3600		
2301	80232	493849	No Replacement Repair With Individual Parts.						15		01	3600		
2302	80212	492880	No Replacement Repair With Individual Parts.						15		01	3300		
2303	80202	492880	93302	0016					15 34		01	3600		
2304	80202	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2305	80202	493632	No Replacement Repair With Individual Parts.						15		01	3600		
2306	80212	492880	93312	0022					15 34		01	3600		
2307	80202	492880	No Replacement Repair With Individual Parts.						15		01	3300		
2308	80202	492880	93302	0016					15 34		01	3900		
2309	80252	493409	93352	0049					15 34		01	3300		
2310	80232	493633	93332	0035					15 34		01	3000	491041	
2311	80232	492095	93332	0036					15 34		01	4000	491039	
2312	80212	492880	93312	0022					15 34		01	3500		
2313	80212	492880	No Replacement Repair With Individual Parts.						15		01	3100		
2314	80202	493632	No Replacement Repair With Individual Parts.						15		01	3900		
2315	80232	492095	93332	0036					15 34		All	4000	491039	
2316	80202	492880	93302	0016					15 34		01	4000		
2317	80202	493767	93302	0017					15 34		01	2600		
2318	80202	493767	93302	0017					15 34		01	3600		
2319	80202	492880	93302	0016					15 34		01	3600		
2320	80202	493767	93302	0017					15 34		01	3900		
2321	80202	492880	93302	0016					15 34		01	3400		
2322	80202	492880	93302	0016					15 34		01	3300		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2323	80202	492880	93302	0016					15 34		01	3000		
2324	80202	493767	93302	0017					15 34		01	3300		
2325	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2326	80202	492880	93302	0016					15 34		01	2800		
2327	80232	493849	93332	0040					15 34		01	2200		
2328	80232	493633	93332	0035					15 34		01	4000	491041	
2329	80232	493633	93332	0035					15 34		01	3950	491041	
2330	80202	492880	93302	0016					15 34		01	3100		
2331	80202	493767	93302	0017					15 34		01	3600		
2332	80202	493632	No Replacement Repair With Individual Parts.						15		01	3500		
2333	80202	493767	93302	0017					15 34		01	3600		
2334	80202	492881	No Replacement Repair With Individual Parts.						15		01	3600		
2335	80202	492880	93302	0016					15 34		01	3300		
2336	80212	492884	93312	0022					15 34		01	3100		
2337	80212	493409	93352	0049					15 34 46		01	2700		
2338	80232	492095	93332	0036					15 34		01	3600	491039	
2339	80232	493633	93332	0035					15 34		01	3300	491041	
2340	80232	493849	93332	0040					15 34		01	3600		
2341	80202	493767	93302	0017					15 34		01	3600		
2342	80252	493409	93352	0049					15 17 34		01	3400		
2344	80232	493633	93332	0035					15 34		01	3500	491041	
2345	80202	492880	93302	0016					15 34		01	2800		
2346	80202	493767	93302	0017					15 34		01	3300		
2347	80292	492880	No Replacement Repair With Individual Parts.						15		All	3000		
2348	80232	493633	93332	0035					15 34		01	3300	491041	
2349	80232	397252	No Replacement Repair With Individual Parts.						15		01	3300		
2350	80232	493633	93332	0035					15 34		01	3600	491041	
2351	80292	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2352	80202	492880	93302	0016					15 34		01	2900		
2353	80202	492880	93302	0016					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2354	80252	493409	93352	0049					15 34 46		01	3250		
2355	80232	492095	93332	0036					15 34		01	3600	491039	
2356	80202	493767	93302	0017					15 34		01	2850		
2357	80212	492880	93312	0022					15 34		All	3600		
2358	80202	493767	93302	0017					15 34		01	3900		
2359	80202	492880	93302	0016					15 34		01	3300		
2360	80212	492880	93312	0022					15 34		01	3100		
2361	80202	493767	93302	0017					15 34		01	3900		
2362	80212	492880	No Replacement Repair With Individual Parts.						15		01	3300		
2363	80202	493767	93302	0017					15 34		01	3900		
2364	80232	493633	93332	0035					15 34		01	4000	491041	
2365	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2366	80202	492880	No Replacement Repair With Individual Parts.						15		01	3300		
2367	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2368	80212	492881	93312	0022					5 15 34		01	3300		
2369	80202	493632	No Replacement Repair With Individual Parts.						15		01	3200		
2370	80202	493767	93302	0017					15 34		01	3600		
2371	80202	493767	93302	0017					15 34		01	3300		
2372	80292	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2373	80212	492880	93312	0022					15 34		01	3300		
2374	80232	397251	No Replacement Repair With Individual Parts.						15		01	3300		
2375	80232	493849	93332	0040					15 34		01	2600		
2376	80232	493633	93332	0035					15 34		01	4000	491041	
2377	80202	493767	93302	0017					15 34		01	3100		
2378	80202	492880	93302	0016					15 34		01	3300		
2379	80202	493767	93302	0017					15 34		01	3300		
2381	80202	492880	93302	0016					15 34		01	4000		
2382	80212	492880	93312	0022					15 34		01	3100		
2383	80202	492880	93302	0016					15 34		01	2600		
2384	80212	492880	93312	0022					15 34		01	4000		
2385	80202	492880	93302	0016					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2386	80212	493767	93312	0002					15 34		01	3500		
2387	80212	493767	93312	0002					15 34		01	3500		
2388	80212	492880	93312	0022					15 34		01	3500		
2389	80212	492880	93312	0022					15 34		01	3500		
2390	80202	493767	93302	0017					15 34		01	2600		
2391	80202	492880	93302	0016					15 34		01	3300		
2392	80202	493632	No Replacement Repair With Individual Parts.						15		01	3900		
2393	80292	492880	No Replacement Repair With Individual Parts.						15		01	3100		
2394	80232	493633	93332	0035					15 34		01	3600	491041	
2395	80212	492880	93312	0022					15 34		01	3400		
2396	80212	492880	93312	0022					15 34		01	4000		
2397	80232	493633	93332	0035					15 34		01	3300	491041	
2398	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2399	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2400	80232	493633	93332	0035					15 34		01	3600	491041	
2401	80232	492095	93332	0036					15 34		01	4000	491039	
2402	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2403	80232	493633	93332	0035					15 34		01	4000	491041	
2404	80202	492880	93302	0016					15 34		01	3200		
2405	80232	493633	93332	0035					15 34		01	3300	491041	
2406	80232	492095	No Replacement Repair With Individual Parts.						15		01	3900	491039	
2407	80232	493633	93332	0035					15 34		01	3300	491041	
2408	80232	493633	93332	0035					15 34		01	3400	491041	
2409	80212	492880	93312	0022					15 34		01	3600		
2410	80212	492880	93312	0022					15 34		01	3400		
2411	80212	492880	93312	0022					15 34		01	3400		
2412	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
2413	80232	492095	93332	0036					15 34		01	3600	491039	
2414	80212	493767	93312	0002					15 34		01	2500		
2415	80232	397252	No Replacement Repair With Individual Parts.						15		01	3300		
2416	80232	493633	93332	0035					15 34		01	3300	491041	
2417	80202	493767	93302	0017					15 34		01	3600		
2418	80202	493767	93302	0017					15 34		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
2419	80202	493767	93302	0017					15 34		01	3600		
2420	80212	493632	No Replacement Repair With Individual Parts.						15		01	3500		
2421	80232	493633	93332	0035					15 34		01	3300	491041	
2422	80212	492880	93312	0022					15 34		01	3400		
2423	80232	493633	93332	0035					15 34		All	3600	491041	
2424	80212	493633	93312	0022					15 34		All	3600		
2425	80212	492748	No Replacement Repair With Individual Parts.						15		01	3750		
2426	80212	493633	No Replacement Repair With Individual Parts.						15		01	3600		
2428	80232	492095	93332	0036					15 34		01	4000	491039	
2429	80252	493409	93352	0049					4 15 17 34		01	3400		
2430	80202	493767	93302	0017					15 34		01	3100		
2431	80202	492880	93302	0016					15 34		01	2900		
2432	80212	492880	93312	0022					15 34		01	3600		
2915	80202	492880	93302	0016					15 34		01	3900		
2916	80202	492880	93302	0016					15 34		01	3300		
2917	80202	493767	93302	0017					15 34		01	3300		
2918	80202	493767	93302	0017					15 34		01	3900		
2919	80202	492880	93302	0019					15 34		01	3300		
2922	80212	492880	93312	0022					15 34		01	3300		
2935	80232	493633	93332	0035					15 34		01	3300	491041	
2936	80232	492095	93332	0036					15 34		01 02	3300 3600	491039	
2937	80232	493619	No Replacement Repair With Individual Parts.						15		01	3300		
2938	80232	397252	No Replacement Repair With Individual Parts.						15		01	3300		
2939	80232	397256	No Replacement Repair With Individual Parts.						15		01	3300		
2940	80232	493849	93332	0040					15 34		01	3300		
2941	80232	492095	93332	0036					15 34		01	3300	491039	
2949	80252	493409	93352	0049					15 34		All	3300		
4001	80202	492880	93302	0016					15 34		All	4000		
4002	80212	492880	No Replacement Repair With Individual Parts.						15		01 02 03	3400 3400 3600		
4003	80212	493767	No Replacement Repair With Individual Parts.						15		01	2600		
4004	80212	492880	93312	0022					15 34		01	4000		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
4005	80212	493409	93352	0049					15 17 34 46		All	2700		
4007	80252	493409	93352	0049					15 34		All	3300		
4008	80292	492880	No Replacement Repair With Individual Parts.						15		01	3600		
4010	80232	492095	93332	0036					15 34		01 02	4000 3600	491039	
4011	80232	492095	93332	0036					15 34		All	4000	491039	
4012	80232	493633	93332	0035					15 34		01	4000	491041	
4013	80202	493767	93302	0017					15 34		01	2850		
4014	80232	493633	93332	0035					15 34		01	3300	491041	
4015	80202	492880	93302	0016					15 34		01	3900		
4016	80202	492880	93302	0016					15 34		01 03 06 07	3300 4000 3300 3600		
4017	80202	493767	93302	0017					15 34		01	3600		
4018	80202	493767	93302	0017					15 34		All	3900		
4019	80202	492880	93302	0016					15 34		01	3300		
4020	80232	397252	No Replacement Repair With Individual Parts.						15		All	3300		
4021	80232	493633	No Replacement Repair With Individual Parts.						15		01	4000	491041	
4022	80212	492880	93312	0022					15 34		All	3600		
4023	80232	493633	93332	0035					15 34		01	3300	491041	
4026	80232	492095	No Replacement Repair With Individual Parts.						15		All	3600	491039	
4030	80232	493849	93332	0040					15 34		All	3300		
4031	80232	493849	93332	0040					15 34		01	4000		
4033	80232	492095	No Replacement Repair With Individual Parts.						15		01	3800	491039	
4034	80202	492880	93302	0016					15 34		01	3200		
4035	80232	493633	93332	0035					15 34		01 02 03 04 05 06	3300 3600 3300 4000 3300 3300	491041	
4036	80232	492095	93332	0036					15 34		01	4000	491039	
4037	80202	492880	93302	0016					15 34		01	3300		
4038	80232	397252	No Replacement Repair With Individual Parts.						15		01	2500		
4039	80232	493849	93332	0040					15 34		01	3600		
4040	80232	493849	93332	0040					15 34		All	4000		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
4041	80232	493633	93332	0035					15 34		01	2900	491041	
4042	80212	492880	93312	0022					15 34		01	3600		
4043	80212	492880	93312	0022					15 34		01	3300		
4044	80232	493849	93332	0040					15 34		01	3300	491042	
4045	80232	493633	93332	0035					15 34		01	2900	491041	
4046	80232	493849	93332	0040					15 34		01	2500		
4047	80212	492880	93312	0022					15 34		01	2500		
4048	80232	492095	93332	0040					15 34		01	3300		
4049	80252	493409	93352	0049					15 34		All	3300		
4050	80252	493409	93352	0049					15 34		All	3600		
4051	80232	492095	93332	0036					15 34		01	4000	491039	
4052	80232	493633	93332	0035					15 34		01	4000	491041	
4057	80202	493767	93302	0017					15 34		01	3200		
4820	80232	397251	No Replacement Repair With Individual Parts.						15		01	3750		
4823	80232	397251	No Replacement Repair With Individual Parts.						15		01	3150		
5630	80232	397251	No Replacement Repair With Individual Parts.						15		All	3750		
8044	80232	397251	No Replacement Repair With Individual Parts.						15		All	3750		
8111	80232	493633	No Replacement Repair With Individual Parts.						15		All	3300		
8130	80232	493633	No Replacement Repair With Individual Parts.						15		All	3300		
8131	80212	261450	No Replacement Repair With Individual Parts.						15		All	3800		
8132	80212	261450	No Replacement Repair With Individual Parts.						15		All	3100		
8133	80232	397251	No Replacement Repair With Individual Parts.						15		All	3800		
8134	80232	397251	No Replacement Repair With Individual Parts.						15		All	3000		
8135	80232	397251	No Replacement Repair With Individual Parts.						15		All	3800		
8136	80232	397251	No Replacement Repair With Individual Parts.						15		All	3150		
8137	80212	261450	No Replacement Repair With Individual Parts.						15		All	3750		
8138	80212	493767	No Replacement Repair With Individual Parts.						15		All	3600		
8139	80232	397251	No Replacement Repair With Individual Parts.						15		All	3750		
8140	80202	493849	No Replacement Repair With Individual Parts.						15		All	3100		
8141	80232	397253	No Replacement Repair With Individual Parts.						15		All	3600		
8142	80232	397251	No Replacement Repair With Individual Parts.						15					
8544	80232	397251	No Replacement Repair With Individual Parts.						15		All	3700		
8611	80232	493633	No Replacement Repair With Individual Parts.						15		01	3300		
8630	80202	493632	No Replacement Repair With Individual Parts.						15		01	3300		
8631	80212	261450	No Replacement Repair With Individual Parts.						15		01	3800		
8632	80232	397251	No Replacement Repair With Individual Parts.						15		01	3100		
8633	80232	397251	No Replacement Repair With Individual Parts.						15		01	3800		
8634	80232	493633	No Replacement Repair With Individual Parts.						15		All	3000		
8635	80212	397251	No Replacement Repair With Individual Parts.						15		01	3800		
8636	80232	397251	No Replacement Repair With Individual Parts.						15		01	3150		
8637	80232	493633	No Replacement Repair With Individual Parts.						15		01	3700		
8638	80212	261450	No Replacement Repair With Individual Parts.						15		01	3600		
8639	80232	397251	No Replacement Repair With Individual Parts.						15		01	3750		
8640	80232	397251	No Replacement Repair With Individual Parts.						15		01	3100		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
8641	80212	493767	No Replacement Repair With Individual Parts.						15		01	4000		
											02	3600		
											03	3600		
8642	80232	493849	No Replacement Repair With Individual Parts.						15		01	2200		
8643	80232	397251	No Replacement Repair With Individual Parts.						15		01	3750		
											02	3600		
											03	3750		
											04	3750		
8644	80232	397251	No Replacement Repair With Individual Parts.						15		01	3750		
8645	80202	493632	No Replacement Repair With Individual Parts.						15		01	3600		
8646	80232	397251	No Replacement Repair With Individual Parts.						15		01	3150		
8647	80212	261450	No Replacement Repair With Individual Parts.						15		01	3600		
8648	80232	493849	No Replacement Repair With Individual Parts.						15		01	2200		
8649	80232	493633	No Replacement Repair With Individual Parts.						15		01	3700		
8650	80232	397251	No Replacement Repair With Individual Parts.						15		01	3150		
8651	80232	397251	No Replacement Repair With Individual Parts.						15		01	3700		
8700	80202	483632	No Replacement Repair With Individual Parts.						15		01	3200		
8701	80202	493632	No Replacement Repair With Individual Parts.						15		01	3600		
8702	80212	399006	No Replacement Repair With Individual Parts.						15		01	3600		
8703	80212	399006	No Replacement Repair With Individual Parts.						15		01	3750		
8704	80212	399006	No Replacement Repair With Individual Parts.						15		01	3750		
8705	80232	397251	No Replacement Repair With Individual Parts.						15		01	3750		
8844	80232	397251	No Replacement Repair With Individual Parts.						15		01	3700		
8911	80202	493632	No Replacement Repair With Individual Parts.						15		01	3600		
8912	80232	493633	No Replacement Repair With Individual Parts.						15		01	3000		
8913	80232	397251	No Replacement Repair With Individual Parts.						15		01	3700		
8914	80232	493849	No Replacement Repair With Individual Parts.						15		01	2700		
8915	80232	397251	No Replacement Repair With Individual Parts.						15		01	3750		
8916	80212	397251	No Replacement Repair With Individual Parts.						15		01	3600		
8917	80212	492880	No Replacement Repair With Individual Parts.						15		01	3600		
8918	80232	397251	No Replacement Repair With Individual Parts.						15		01	3750		
8919	80212	397251	No Replacement Repair With Individual Parts.						15		01	3600		
8920	80202	493767	No Replacement Repair With Individual Parts.						15		01	3900		
8921	80212	397251	No Replacement Repair With Individual Parts.						15		01	3750		
8922	80232	493633	No Replacement Repair With Individual Parts.						15		01	3300		
8923	80212	399006	No Replacement Repair With Individual Parts.						15		01	3750		
9023	80212	260257	No Replacement Repair With Individual Parts.						15		01	4000		
9024	80202	260257	No Replacement Repair With Individual Parts.						15		01	4000		
9044	80232	260113	No Replacement Repair With Individual Parts.						15		All	3700		
9133	80201	260257	No Replacement Repair With Individual Parts.						15		01	3300		
9134	80202	260257	No Replacement Repair With Individual Parts.						15		01	3300		
9145	80231	260110	No Replacement Repair With Individual Parts.						15		01	3300		
9146	80232	260110	No Replacement Repair With Individual Parts.						15		01	3300		
9155	80232	260932	No Replacement Repair With Individual Parts.						15		01	3300		
9161	80232	260489	No Replacement Repair With Individual Parts.						15		01	3000		
9165	80202	260492	No Replacement Repair With Individual Parts.						15		01	3000		
9191	80231	260113	No Replacement Repair With Individual Parts.						15		01	3800		
											02	2400		
9217	80232	260113	No Replacement Repair With Individual Parts.						15		All	3800		
9251	80232	260113	No Replacement Repair With Individual Parts.						15		01	3800		
											02	3800		
											03	3300		
9252	80231	260759	No Replacement Repair With Individual Parts.						15		01	3900		
9253	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		
9300	80231	260512	No Replacement Repair With Individual Parts.						15		01	3750		
9305	80231	260113	No Replacement Repair With Individual Parts.						15		01	3600		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
9309	80232	260113	No Replacement Repair With Individual Parts.						15		01	3600		
9312	80202	260257	No Replacement Repair With Individual Parts.						15		01	3000		
9314	80232	260932	No Replacement Repair With Individual Parts.						15		01	3000		
9324	80232	260113	No Replacement Repair With Individual Parts.						15		01	3600		
9325	80231	260109	No Replacement Repair With Individual Parts.						15		01	2400		
9347	80202	260257	No Replacement Repair With Individual Parts.						15		01	4000		
9354	80231	260121	No Replacement Repair With Individual Parts.						15		01	3300		
9377	80232	260932	No Replacement Repair With Individual Parts.						15		01	3300		
9383	80232	260113	No Replacement Repair With Individual Parts.						15		01	3800		
9387	80202	260257	No Replacement Repair With Individual Parts.						15		01	3300		
9397	80232	260113	No Replacement Repair With Individual Parts.						15		01	3000		
9409	80232	260113	No Replacement Repair With Individual Parts.						15		01	3600		
9414	80232	260113	No Replacement Repair With Individual Parts.						15		01	3700		
9415	80231	260113	No Replacement Repair With Individual Parts.						15		01	3700		
9416	80202	260257	No Replacement Repair With Individual Parts.						15		01	4000		
											02	3900		
9417	80202	260257	No Replacement Repair With Individual Parts.						15		01	4000		
9418	80232	260113	No Replacement Repair With Individual Parts.						15		01	3000		
9439	80232	260113	No Replacement Repair With Individual Parts.						15		01	3800		
9440	80231	260932	No Replacement Repair With Individual Parts.						15		All	3500		
9450	80232	260113	No Replacement Repair With Individual Parts.						15		01	3600		
9451	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		
9452	80231	260113	No Replacement Repair With Individual Parts.						15		01	3700		
9469	80232	260932	No Replacement Repair With Individual Parts.						15		01	3500		
948010	80201	260257	93302	0016					15		All	3300		
									34					
948011	80202	260257	93302	0016					15		All	3300		
									34					
948012	80203	260257	93302	0016					15		All	3300		
									34					
948013	80206	260257	93302	0016					15		All	3300		
									34					
948015	80231	260110	No Replacement Repair With Individual Parts.						15		All	3300		
948016	80232	260110	No Replacement Repair With Individual Parts.						15		All	3300		
948017	80232	260110	No Replacement Repair With Individual Parts.						15		All	3300		
948018	80236	260110	No Replacement Repair With Individual Parts.						15		All	3300		
948020	80251	260276	93352	0049					15		All	3300		
									34					
948021	80252	260276	93352	0049					15		All	3300		
									34					
948022	80253	260276	93352	0049					15		All	3300		
									34					
948023	80256	260276	93352	0049					15		All	3300		
									34					
948025	80292	260257	No Replacement Repair With Individual Parts.						15		All	3300		
948026	80296	260257	No Replacement Repair With Individual Parts.						15		All	3300		
948027	80201	260257	93302	0016					15		All	3900		
									34					
948028	80202	260257	93302	0016					15		All	3900		
									34					
948029	80203	260257	93302	0016					15		All	3900		
									34					
948030	80206	260257	93302	0016					15		All	3900		
									34					
948031	80231	260110	No Replacement Repair With Individual Parts.						15		All	3900		
948032	80232	260110	No Replacement Repair With Individual Parts.						15		All	3900		
948033	80233	260110	No Replacement Repair With Individual Parts.						15		All	3900		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
948034	80236	260110	No Replacement Repair With Individual Parts.						15		All	3900		
948035	80251	260276	No Replacement Repair With Individual Parts.						15		All	3900		
948036	80252	260276	No Replacement Repair With Individual Parts.						15		All	3900		
948037	80253	260276	No Replacement Repair With Individual Parts.						15		All	3900		
948038	80256	260276	No Replacement Repair With Individual Parts.						15		All	3900		
948039	80292	260257	No Replacement Repair With Individual Parts.						15		All	3900		
948040	80296	260257	No Replacement Repair With Individual Parts.						15		All	3900		
948045	80202	260257	93302	0016					15					
									34					
948046	80206	260257	93302	0016					15					
									34					
948047	80202	260257	93302	0016					15		All	3000		
									34					
948048	80202	260257	93302	0016					15		All	3600		
									34					
948049	80232	260932	93332	0035					15					
									34					
948050	80202	260257	93302	0016					15					
									34					
948051	80202	260257	93302	0016					15					
									34					
948052	80206	260257	93302	0016					15					
									34					
948053	80202	260257	93302	0016					15					
									34					
948054	80206	260257	93302	0016					15					
									34					
948055	80201	260257	93302	0016					15					
									34					
948056	80202	260257	93302	0016					15		All	3300		
									34					
948057	80232	260489	No Replacement Repair With Individual Parts.						15		All	3450		
948058	80202	260257	93302	0016					15		All	3600		
									34					
948059	80232	260489	No Replacement Repair With Individual Parts.						15		All	3300		
948060	80206	260257	93302	0016					15					
									34					
948061	80202	260257	93302	0016					15					
									34					
948062	80232	260932	93302	0035					15					
									34					
948063	80232	260182	93332	0036					15					
									34					
948064	80232	260489	No Replacement Repair With Individual Parts.						15					
948066	80252	260276	93352	0049					15					
									34					
948067	80231	260489	No Replacement Repair With Individual Parts.						15					
948068	80202	260257	93302	0016					15		All	3300		
									34					
948069	80232	260489	No Replacement Repair With Individual Parts.						15					
948070	80232	260110	No Replacement Repair With Individual Parts.						15		All	2900		
948071	80232	260932	93332	0035					15					
									34					
948072	80202	260257	93302	0016					15		All	3900		
									34					
948073	80202	260257	93302	0016					15		All	3900		
									34					

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
948074	80206	260257	93302	0016					15 34		All	3900		
948075	80232	260932	93332	0035					15 34		All	3600		
948076	80252	260276	93332	0049					15 34 113					
948077	80256	260276	93352	0049					15 17 34		All	4900		
948078	80202	260257	93302	0016					15 34					
948079	80202	260257	93302	0016					15 34					
948080	80202	260257	93302	0016					15 34					
948081	80202	260257	93302	0016					15 34					
948082	80202	260107	93332	0035					15 34					
948083	80202	260257	93302	0016					15 34					
948084	80232	260182	93332	0036					15 34					
948085	80232	260932	93332	0035					15 34		All	3300		
948086	80201	260257	93302	0016					15 34		All	3300		
948087	80202	260257	93302	0016					15 34		All	3300		
948088	80252	260276	93352	0049					15 34		All	3300		
948089	80206	260257	93302	0016					15 34					
948090	80231	260121	93332	0040					15 34		All	3300		
948091	80202	260257	93302	0016					15 34		All	3000		
948092	80202	260257	93302	0016					15 34		All	3900		
948093	80251	260276	93352	0049					15 17 34		All	3300		
948094	80202	260257	93302	0016					15 34		All	3300		
948095	80202	260257	93302	0016					15 34					
948096	80202	260257	93302	0016					15 34					
948097	80252	260276	No Replacement Repair With Individual Parts.						15					
948098	80202	260257	93302	0016					15 34					
948099	80232	260932	93332	0035					15 34					
948100	80211	260257	93312	0022					15 34					
948101	80212	260257	93312	0022					15 34					

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
948102	80202	260257	93302	0016					15 34					
948103	80232	260187	93332	0040					15 34	All	3300			
948104	80231	260268	93332	0036					15 34	All	3600			
948105	80252	260276	No Replacement Repair With Individual Parts.						15					
948106	80202	260257	93302	0016					15 34					
948107	80292	260257	No Replacement Repair With Individual Parts.						15					
948108	80202	260257	93302	0016					15 34	All	3300			
948109	80251	260276	93352	0049					15 17 34					
948110	80202	260257	93302	0016					15 34	All	3900			
948111	80202	260257	93302	0016					15 34					
948112	80202	260257	93302	0016					15 34	All	3600			
948113	80202	260257	93302	0016					15 34					
948114	80202	260257	93302	0016					15 34					
948115	80202	260257	93302	0016					15 34					
948116	80201	260257	93302	0016					15 34	All	3900			
948117	80231	260268	93332	0036					15 34	All	3900			
948118	80232	260182	93332	0036					15 34	All	3900			
948119	80232	260182	93332	0036					15 34	All	3900			
948120	80201	260257	93302	0016					15 34					
948121	80231	260121	93332	0040					15 34					
948122	80232	260932	93332	0035					15 34					
948123	80232	260489	No Replacement Repair With Individual Parts.						15					
948124	80202	260257	93302	0016					15 34					
948125	80292	260257	No Replacement Repair With Individual Parts.						15					
948126	80252	260276	No Replacement Repair With Individual Parts.						15					
948127	80232	260182	93332	0036					15 34	All	3300			
948128	80202	260257	93302	0016					15 34					
948129	80202	260257	93302	0016					15 34					
948130	80202	260257	93302	0016					15 34	All	3600			
948131	80232	260489	No Replacement Repair With Individual Parts.						15	All	3800			
948132	80252	260276	93352	0049					15 34					

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
948133	80202	260257	93302	0016					15 34					
948134	80231	260268	93332	0036					15 34	All		3600		
948135	80202	260257	93302	0016					15 34					
948136	80202	260257	93302	0016					15 34					
948137	80202	260257	93302	0016					15 34					
948138	80201	260104	93302	0016					15 34	All		2400		
948139	80231	260489	No Replacement Repair With Individual Parts.						15					
948140	80252	260276	93352	0049					15 34	All		3600		
948141	80201	260492	93302	0017					15 34	All		3300		
948142	80202	260257	No Replacement Repair With Individual Parts.						15					
948143	80206	260492	No Replacement Repair With Individual Parts.						15					
948144	80252	260276	93352	0049					15 34					
948145	80201	260257	93302	0016					15 34					
948146	80206	260257	93302	0016					15 34					
948147	80232	260932	93332	0035					15 34					
948148	80202	260257	93302	0016					15 34					
948149	80252	260276	93352	0049					15 17 34	All		4000		
948150	80251	260276	93352	0049					15 34	All		4000		
948151	80202	260674	No Replacement Repair With Individual Parts.						15					
948152	80202	260674	No Replacement Repair With Individual Parts.						15					
948153	80202	260257	93302	0016					15 34					
948154	80202	260257	93302	0016					15 34	All		3600		
948155	80232	260489	No Replacement Repair With Individual Parts.						15					
948156	80202	260257	93302	0016					15 34					
948157	80252	260276	No Replacement Repair With Individual Parts.						15					
948158	80202	260257	93302	0016					15 34					
948159	80202	260562	93302	0016					5 15 34					
948160	80252	260276	93352	0049					15 34					
948161	80231	260107	93332	0035					15 34					
948162	80232	260182	93332	0036					15 34	All		3500		
948163	80292	260257	No Replacement Repair With Individual Parts.						15					
948164	80206	260257	No Replacement Repair With Individual Parts.						15					

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
948165	80202	260257	93302	0016					15 34					
948166	80232	260932	93332	0035					15 34	All	3300			
948167	80202	260257	93302	0016					15 34					
948168	80202	260257	93302	0016					15 34					
948169	80252	260276	93352	0049					15 34					
948170	80292	260257	No Replacement Repair With Individual Parts.						15					
948171	80231	260107	93332	0035					15 34					
948172	80202	260257	93302	0016					15 34					
948173	80292	260257	No Replacement Repair With Individual Parts.						15	All	3600			
948174	80252	260276	93352	0049					15 17 34					
948175	80202	260257	93302	0016					15 34					
948176	80252	260276	93352	0049					15 34					
948177	80212	260257	93312	0022					15 34	All	4000			
948178	80202	260257	93302	0016					15 34					
948179	80232	260932	93332	0035					15 34	All	3600			
948180	80202	260562	93302	0016					5 15 34					
948181	80202	260257	93302	0016					15 34					
948182	80252	260276	93352	0049					15 34					
948183	80202	260257	93302	0016					15 34					
948184	80202	260257	93302	0016					15 34					
948185	80252	260276	No Replacement Repair With Individual Parts.						15					
948186	80252	260276	93352	0049					15 17 34	All	2800			
948187	80251	260276	93352	0049					15 17 34	All	3600			
948188	80232	260187	93332	0040					15 34					
948189	80232	260182	93332	0036					15 34	All	3300			
948190	80202	260257	93302	0016					15 34					
948191	80232	260489	No Replacement Repair With Individual Parts.						15					
948192	80232	260489	No Replacement Repair With Individual Parts.						15					
948193	80201	260257	93302	0016					15 34					

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
948194	80202	260257	93302	0016					15 34					
948195	80231	260107	93332	0035					15 34					
948196	80202	260257	93302	0016					15 34					
948197	80202	260257	93302	0016					15 34					
948198	80292	260257	No Replacement Repair With Individual Parts.						15					
948199	80202	260257	93302	0016					15 34	All	3400			
948200	80232	260187	93332	0040					15 34	All	3600			
948201	80202	260257	93302	0016					15 34					
948202	80202	260257	93302	0016					15 34	All	3300			
948203	80202	260257	93302	0016					15 34					
948204	80202	260257	No Replacement Repair With Individual Parts.						15					
948205	80252	260276	93302	0016					15 34					
948206	80202	260257	93302	0016					15 34					
948207	80252	260276	93302	0016					15 34					
948208	80231	260107	93332	0035					15 34					
948209	80202	260257	93302	0016					15 34					
948210	80232	260932	93332	0035					15 34					
948211	80232	260489	No Replacement Repair With Individual Parts.						15					
948212	80202	260257	93302	0016					15 34					
948213	80231	260489	No Replacement Repair With Individual Parts.						15					
948214	80252	260276	93352	0049					15 34					
948215	80251	260276	93352	0049					15 34					
948216	80232	260489	No Replacement Repair With Individual Parts.						15					
948217	80202	260257	93302	0016					15 34					
948218	80202	260257	93302	0016					15 34					
948219	80252	260257	93352	0049					15 17 34					
948220	80202	260257	93302	0016					15 34					
948221	80292	260257	No Replacement Repair With Individual Parts.						15					
948222	80292	260257	No Replacement Repair With Individual Parts.						15					
948223	80202	260257	93302	0016					15 34					
948224	80232	260110	No Replacement Repair With Individual Parts.						15					
948225	80232	260932	93332	0035					15 34					
948226	80232	260489	No Replacement Repair With Individual Parts.						15					

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
948227	80202	260257	93302	0016					15 34					
948228	80232	260491	No Replacement Repair With Individual Parts.						15					
948229	80231	260106	No Replacement Repair With Individual Parts.						15					
948230	80212	260257	93312	0022					15 34					
9489	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		
9495	80232	260182	No Replacement Repair With Individual Parts.						15		01	3500		
9509	80232	260932	No Replacement Repair With Individual Parts.						15		01	3300		
951010	80201	260257	No Replacement Repair With Individual Parts.						15					
951011	80202	260257	No Replacement Repair With Individual Parts.						15					
951012	80203	260257	No Replacement Repair With Individual Parts.						15					
951013	80206	260257	No Replacement Repair With Individual Parts.						15					
951015	80231	260106	No Replacement Repair With Individual Parts.						15					
951016	80232	260110	No Replacement Repair With Individual Parts.						15					
951017	80232	260106	No Replacement Repair With Individual Parts.						15					
951018	80233	260110	No Replacement Repair With Individual Parts.						15					
951020	80251	260276	No Replacement Repair With Individual Parts.						15					
951021	80252	260276	No Replacement Repair With Individual Parts.						15					
951022	80253	260265	No Replacement Repair With Individual Parts.						15					
951023	80256	260276	No Replacement Repair With Individual Parts.						15					
951025	80232	260113	No Replacement Repair With Individual Parts.						15					
951026	80232	260113	No Replacement Repair With Individual Parts.						15					
951039	80202	260257	No Replacement Repair With Individual Parts.						15					
951040	80202	260257	No Replacement Repair With Individual Parts.						15					
951041	80202	260257	No Replacement Repair With Individual Parts.						15					
951042	80202	260257	No Replacement Repair With Individual Parts.						15					
951043	80202	260257	No Replacement Repair With Individual Parts.						15					
951044	80202	260492	No Replacement Repair With Individual Parts.						15					
951045	80231	260109	No Replacement Repair With Individual Parts.						15					
951046	80232	260489	No Replacement Repair With Individual Parts.						15					
9513	80202	260257	No Replacement Repair With Individual Parts.						15		01	3600		
9519	80232	260932	No Replacement Repair With Individual Parts.						15					
9530	80232	260932	No Replacement Repair With Individual Parts.						15		01	3300		
9538	80232	260113	No Replacement Repair With Individual Parts.						15		01	3600		
9563	80232	260932	No Replacement Repair With Individual Parts.						15		All	3500		
9571	80232	260113	No Replacement Repair With Individual Parts.						15		01	3150		
											02	3000		
9575	80232	260113	No Replacement Repair With Individual Parts.						15		01	3300		
9598	80232	260932	No Replacement Repair With Individual Parts.						15		All	3800		
9599	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		
9609	80232	260113	No Replacement Repair With Individual Parts.						15		01	3750		
9620	80232	260113	No Replacement Repair With Individual Parts.						15		01	3100		
9622	80232	260113	No Replacement Repair With Individual Parts.						15		01	3700		
9623	80232	260113	No Replacement Repair With Individual Parts.						15		01	3300		
9628	80232	260113	No Replacement Repair With Individual Parts.						15		01	3300		
9631	80232	260113	No Replacement Repair With Individual Parts.						15		All	3100		
9642	80232	260113	No Replacement Repair With Individual Parts.						15		01	3750		
9643	80202	260257	No Replacement Repair With Individual Parts.						15		01	4000		
9648	80232	260932	No Replacement Repair With Individual Parts.						15		01	3200		
9654	80232	260113	No Replacement Repair With Individual Parts.						15		01	3600		
9673	80232	260113	No Replacement Repair With Individual Parts.						15		01	3700		
9700	80232	260113	No Replacement Repair With Individual Parts.						15		01	3800		
9711	80232	260113	No Replacement Repair With Individual Parts.						15		01	3800		
9715	80232	260113	No Replacement Repair With Individual Parts.						15		01	3300		
9724	80232	260113	No Replacement Repair With Individual Parts.						15		01	3800		

80200 to 80299

Original Engine			Make From		Remove		Add		Note	Change to Type	Trim	RPM	Short Block	
Type	Model	Crank	Model	Type #	Qty	Part #	Qty	Part #					Part #	Notes
9743	80232	260113	No Replacement Repair With Individual Parts.						15		All	3300		
9745	80232	260932	No Replacement Repair With Individual Parts.						15		01	3300		
9746	80232	260113	No Replacement Repair With Individual Parts.						15		01	3150		
9755	80232	260113	No Replacement Repair With Individual Parts.						15		01	3150		
9756	80232	260932	No Replacement Repair With Individual Parts.						15		01	3100		
9768	80232	260113	No Replacement Repair With Individual Parts.						15		01	3150		
9770	80232	260113	No Replacement Repair With Individual Parts.						15		01	3150		
9773	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		
9780	80232	260182	No Replacement Repair With Individual Parts.						15		01	3300		
9804	80232	260113	No Replacement Repair With Individual Parts.						15		All	3750		
9817	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		
9819	80212	261450	No Replacement Repair With Individual Parts.						15		01	3800		
9828	80232	260113	No Replacement Repair With Individual Parts.						15		01	3750		
9830	80232	260113	No Replacement Repair With Individual Parts.						15		01	3750		
9852	80232	260113	No Replacement Repair With Individual Parts.						15		01	3300		
9859	80232	260113	No Replacement Repair With Individual Parts.						15		01	3150		
9868	80212	261450	No Replacement Repair With Individual Parts.						15		01	3800		
9878	80232	260932	No Replacement Repair With Individual Parts.						15		01	3000		
9884	80232	260113	No Replacement Repair With Individual Parts.						15		01	3000		
9885	80232	260932	No Replacement Repair With Individual Parts.						15		01	3300		
9886	80232	260113	No Replacement Repair With Individual Parts.						15		01	3750		
9887	80212	261450	No Replacement Repair With Individual Parts.						15		01	3800		
9891	80232	260489	No Replacement Repair With Individual Parts.						15		01	3000		
9893	80232	260113	No Replacement Repair With Individual Parts.						15		01	3100		
9894	80212	261450	No Replacement Repair With Individual Parts.						15		01	3800		
9940	80232	260113	No Replacement Repair With Individual Parts.						15		All	3750		
9943	80212	260492	No Replacement Repair With Individual Parts.						15		01	4000		
											02	3300		
9944	80212	260492	No Replacement Repair With Individual Parts.						15		01	3800		
9945	80232	260113	No Replacement Repair With Individual Parts.						15		01	3100		
9946	80232	260489	No Replacement Repair With Individual Parts.						15		01	3000		
9947	80232	260113	No Replacement Repair With Individual Parts.						15		All	3700		
9948	80232	260113	No Replacement Repair With Individual Parts.						15		01	3150		
9949	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		
9950	80232	260113	No Replacement Repair With Individual Parts.						15		01	3100		
9951	80232	260932	No Replacement Repair With Individual Parts.						15		01	3600		
9952	80212	261450	No Replacement Repair With Individual Parts.						15		01	3800		
9953	80232	260113	No Replacement Repair With Individual Parts.						15		01	3150		
9954	80232	260182	No Replacement Repair With Individual Parts.						15		01	3000		
9955	80232	260113	No Replacement Repair With Individual Parts.						15		01	3600		
9956	80212	260492	No Replacement Repair With Individual Parts.						15					
9957	80232	260113	No Replacement Repair With Individual Parts.						15		All	3700		