



**Illustrated
Parts List**


2004-03

I0302011

Walk Mower

65RSW21HV A


(65C21HV A, 917.374781)

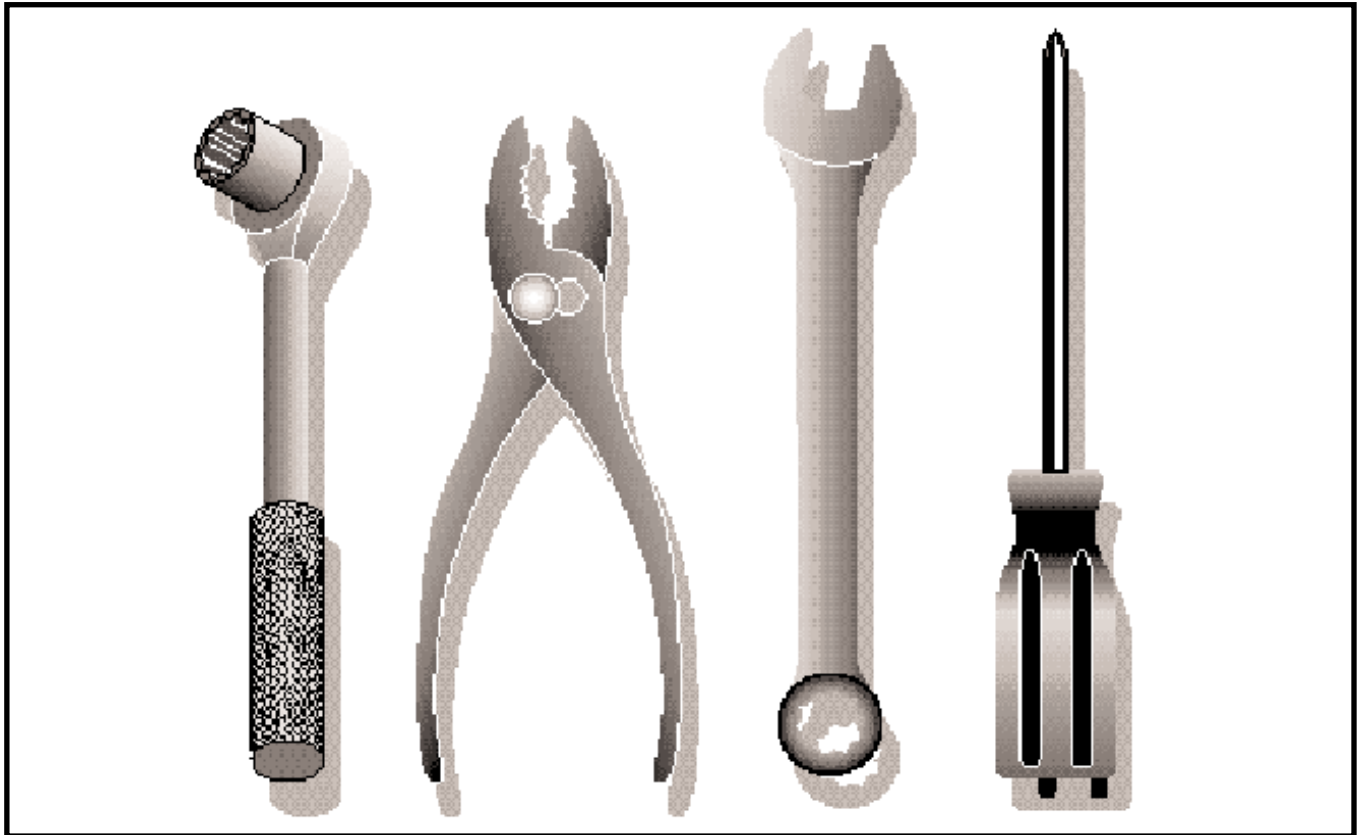

Repair Parts Manual

For Husqvarna Parts Call 606-678-9623 or 606-561-4983


For Husqvarna Parts Call 606-678-9623 or 606-561-4983
ROTARY LAWN MOWER - - MODEL NUMBER 65RSW21HV (65RSW21HVA)
GEAR CASE ASSEMBLY - - PART NUMBER 532 18 36-99

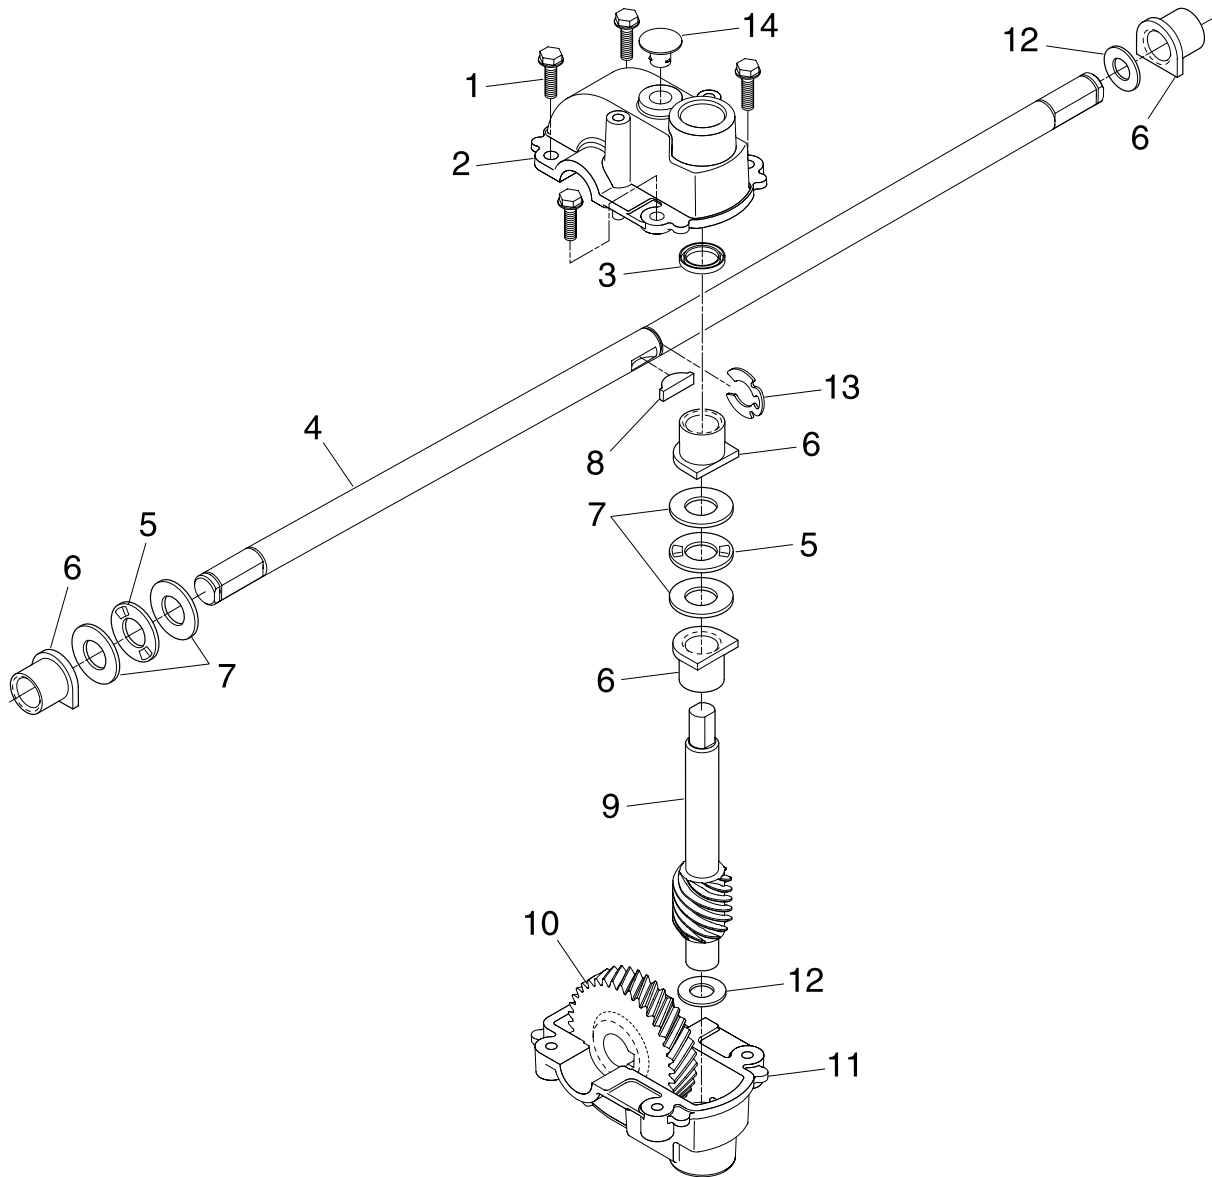

KEY NO.	PART NO.	DESCRIPTION
1	817 54 10-11	Screw, Tapping #10-24 x .668
2	532 16 06-72	Gear Case, Upper
3	532 05 70-72	Seal
4	532 18 39-08	Drive Shaft
5	532 16 08-18	Bearing, Needle, Thrust
6	532 07 78-81	Bearing
7	532 16 08-17	Washer, Thrust
8	532 85 08-48	Key, Hi-pro
9	532 18 41-34	Shaft, Worm
10	532 16 06-79	Gear, Helical
11	532 16 06-73	Gear Case, Lower
12	532 05 70-79	Washer, Hardened
13	812 00 00-39	E-Ring
14	532 08 64-47	Plug
--	532 75 03-69	Grease

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

ROTARY LAWN MOWER - - MODEL NUMBER 65RSW21HV (65RSW21HVA)

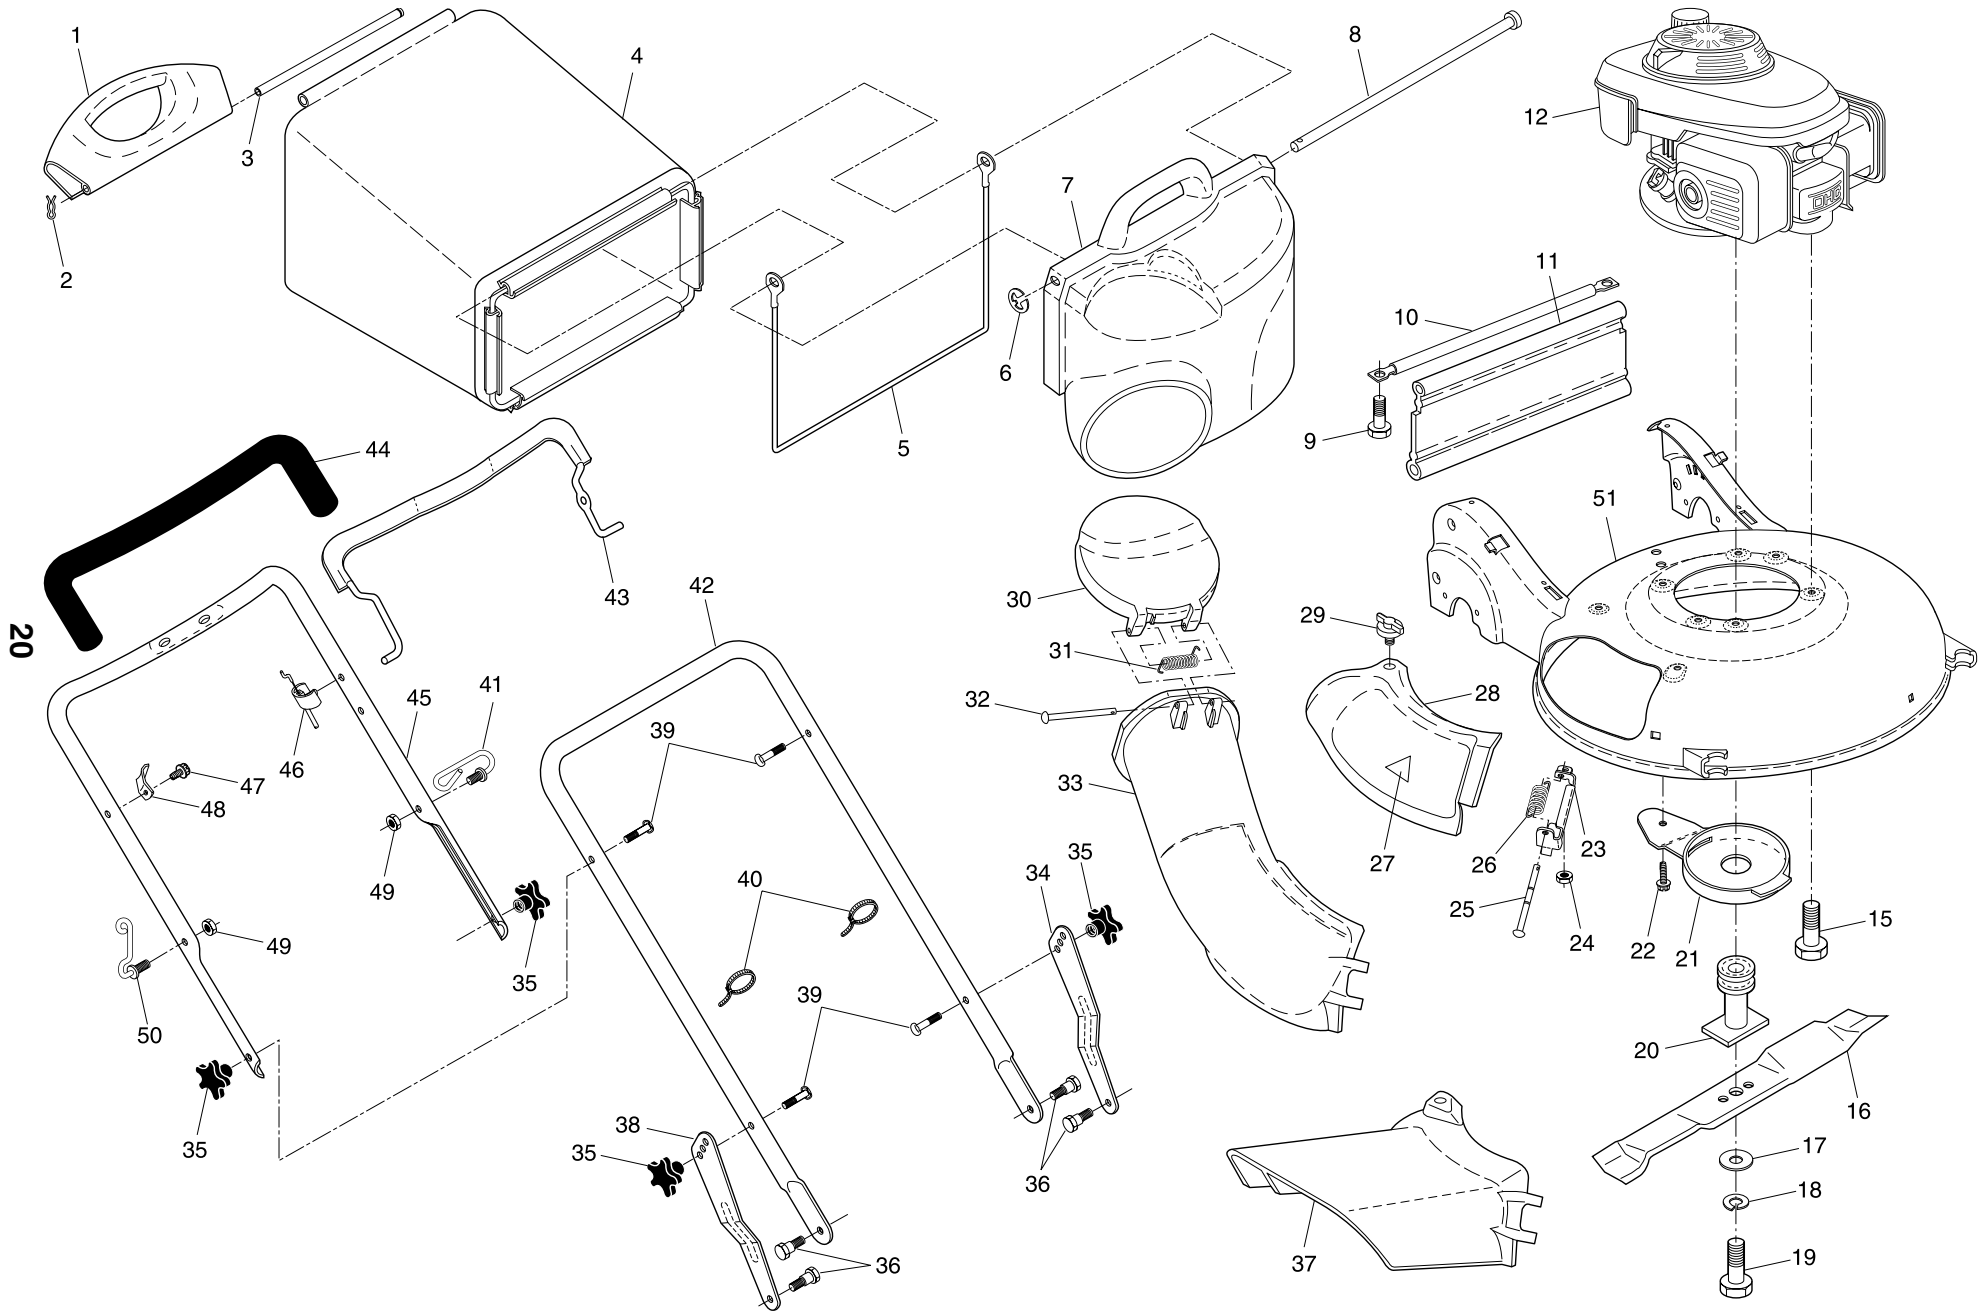

For Husqvarna Parts Call 606-678-9623 or 606-561-4983

ROTARY LAWN MOWER - - MODEL NUMBER 65RSW21HV (65RSW21HVA)

KEY NO.	PART NO.	DESCRIPTION
1	532 18 60-03	Handle, Grassbag, Rear
2	532 06 53-22	Hairpin Cotter
3	532 18 34-83	Rod, Rear Handle, Grassbag
4	532 18 52-28	Grassbag
5	532 18 34-81	Frame, Grassbag
6	812 00 00-14	E-Ring
7	532 18 60-02	Door, Grassbag
8	532 18 34-79	Rod, Pivot
--	532 18 63-02	Grassbag Assembly, Complete (Consists of Key Numbers 1-8)
9	817 41 13-18	Screw
10	532 18 43-31	Tube, Rear Skirt
11	532 18 34-63	Skirt, Rear
12	---	Engine, Honda, Model Number GCV190 (Order parts from Engine Manufacturer)
15	532 15 04-06	Bolt, Engine Mounting
16	532 15 92-67	Blade, 21"
17	532 85 10-74	Washer, Hardened
18	532 85 02-63	Washer, Lock
19	532 18 34-31	Screw, Hex Head, Grade 8
20	532 18 34-28	Adapter, Blade
21	532 18 36-90	Debris Shield
22	817 60 04-06	Screw, Hex Head, Serrated
23	532 18 36-09	Mounting Bracket, Mulcher Door
24	532 75 11-52	Nut, Hex
25	532 18 34-45	Rod, Hinge
26	532 18 34-46	Spring, Mulcher Door
27	532 10 73-39	Decal, Danger
28	532 18 59-95	Mulcher Door

KEY NO.	PART NO.	DESCRIPTION
29	532 18 34-47	Knob
30	532 18 60-01	Door, Discharge Chute
31	532 18 34-78	Spring, Door, Discharge Chute
32	532 18 34-45	Rod, Door, Discharge Chute
33	532 18 60-00	Discharge Chute, Plastic
--	532 18 63-01	Discharge Chute Assembly, Complete (Consists of Key Numbers 30-33)
34	532 18 74-25	Adjustment Bracket, Lower Handle, LH
35	532 18 55-88	Knob, Star
36	532 18 34-65	Bolt, Shoulder
37	532 18 59-96	Deflector, Discharge
38	532 18 74-26	Adjustment Bracket, Lower Handle, RH
39	532 18 45-68	Bolt, Handle
40	532 06 64-26	Wire Tie
41	532 18 71-62	Bracket, Anti-Fold
42	532 18 70-96	Handle Assembly, Lower
43	532 18 62-98	Bail, Control
44	532 18 27-48	Grip, Foam
45	532 18 62-96	Handle Assembly, Upper (Includes Foam Grip)
46	532 18 34-73	Cable, Engine Zone Control
47	532 18 45-70	Screw
48	532 12 52-03	Bracket, Upstop
49	532 18 45-69	Nut, Hex
50	532 18 34-69	Rope Guide
51	532 18 64-77	Kit, Housing
--	532 16 23-00	Decal, Warning (not shown)
--	532 18 74-62	Owner's Manual

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

www.mymoverparts.com



For Husqvarna Parts Call 606-678-9623 or 606-561-4983

ROTARY LAWN MOWER - - MODEL NUMBER 65RSW21HV (65RSW21HVA)

KEY NO.	PART NO.	DESCRIPTION
1	532 18 53-12	Drive Control Assembly, Complete (Consists of Key Numbers 2 through 7)
2	532 18 82-79	Cover, Drive Control, Top
3	532 18 73-53	Pulley, Drive Control
4	532 19 02-83	Lever, Drive Control (blue)
5	532 18 82-78	Cover, Drive Control, Bottom
6	532 18 16-98	Screw, Torx Head #8-5/8
7	532 18 70-97	Bracket, Mounting, Drive Control
8	532 18 62-97	Cap, Drive Control, Bottom
9	532 18 82-80	Cable, Drive Control
10	532 18 59-97	Cover Assembly, Drive
11	532 18 45-71	Screw
12	812 00 00-12	Ring, Retaining
13	532 18 34-50	Screw
14	532 18 71-20	Bearing / Axle Support
15	532 18 36-99	Gear Case Assembly (See Breakdown)
16	532 75 10-68	Bearing, Ball (Wheel)
17	532 18 70-93	Bracket, Gear Case / Drive Pulley
18	817 54 10-11	Screw
19	532 18 47-49	Pulley, Drive
20	532 13 20-10	Nut, Hex, Flangelock
21	532 18 37-01	Bolt, Idler
22	532 18 45-43	Pulley Assembly, V-Groove
23	532 18 81-52	O-Ring
24	532 14 52-12	Nut, Hex, Flangelock
25	873 93 05-00	Nut, Hex, Lock
26	532 18 70-98	Idler Arm
27	532 16 60-43	Pulley, Idler
28	532 16 08-29	Bolt, Hex Head, Shoulder
29	817 06 04-10	Screw 1/4-20 x 1/16
30	532 18 34-57	Cover, Dust, Wheel
31	532 08 83-48	Washer, Flat 3/8
32	532 18 43-68	Wheel Assembly, Rear 9 x 2-1/4
33	532 08 39-23	Nut, Hex
34	532 18 36-95	Hubcap
35	532 18 59-94	Knob

KEY NO.	PART NO.	DESCRIPTION
36	532 18 82-91	Spring, Torsion
37	532 17 50-98	Pawl
38	812 00 00-58	E-Ring
39	532 17 51-03	Gear
40	532 17 51-05	Retainer, Drive, LH
41	532 17 51-04	Disc, Drive
42	532 18 41-72	Seal, Friction
43	532 18 76-81	Lever, Selector, Wheel Height, Rear
44	532 06 53-32	Clip, Retainer
45	532 18 50-51	Spring
46	532 18 50-54	Rod, Lock
47	532 18 72-47	Nut, Hex, Flangelock
48	819 17 17-13	Washer, Flat 1/2
49	532 18 50-50	Bushing
50	532 18 36-88	Belt, Drive
51	532 18 83-31	Pinion Assembly, LH
52	532 17 51-02	Retainer, Drive, RH
53	532 18 70-91	Rear Axle Assembly
54	532 18 83-30	Pinion Assembly, RH
55	532 18 73-56	Decal, Drive Control
56	532 18 59-13	Decal, Drive Control Adjustment (bottom)
57	532 18 76-82	Bracket, Caster Wheel, LH
58	532 18 72-48	Wing Nut 5/16-18
59	532 18 51-11	Spacer
60	532 18 64-40	Wheel Assembly, Front 9 x 2-1/4
61	872 27 05-28	Bolt, Carriage 5/16-18 x 3-1/2
62	532 18 74-74	Bolt, Carriage 5/16-18 x 7/8
63	532 18 74-67	Strap, Front
64	532 18 76-83	Support Tube Assembly, LH
65	532 18 76-84	Bracket, Caster Wheel, RH
66	532 18 76-85	Support Tube Assembly, RH
67	532 18 75-55	Bolt, Carriage 5/16-18 x 5/8
68	532 18 72-63	Nut, Hex 5/16

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm