

 
Clearing Saw Accessories

Freischneider Zubehöre

Débroussailleuse Accessoires

Desbrozadora Accesorios


Röjsågstillbehör

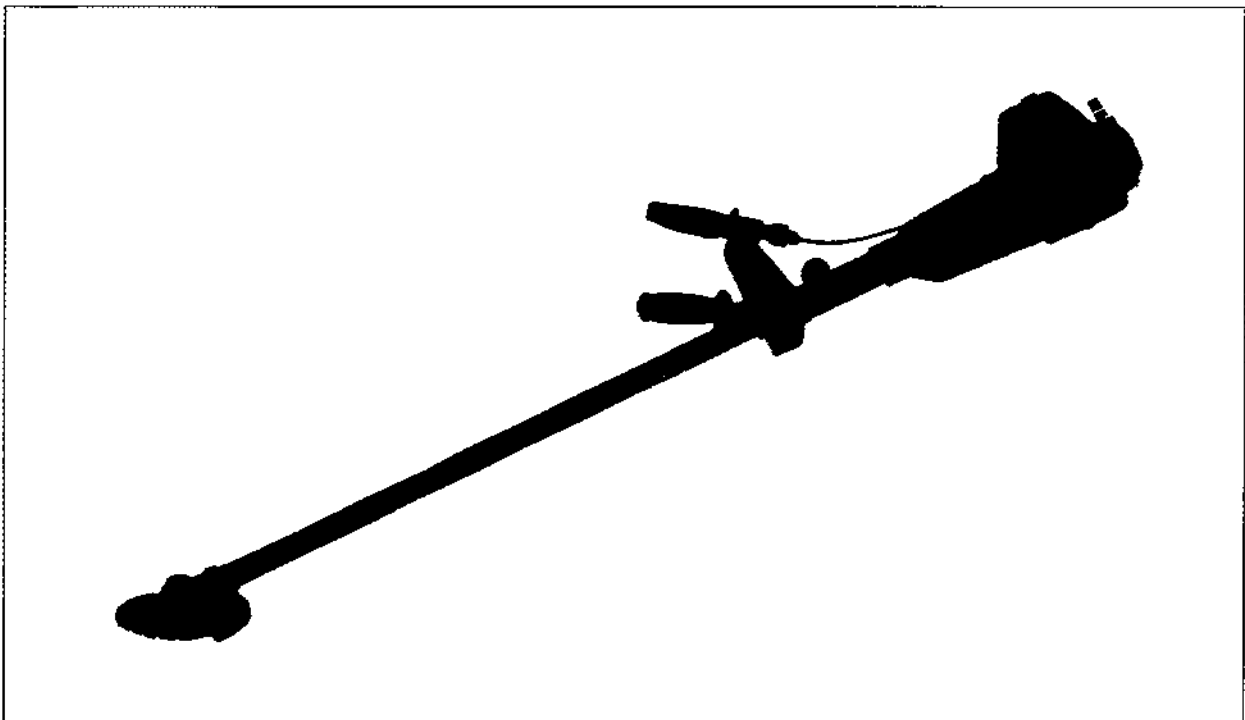

Saw blades 200 mm—8"


Maxi 200 saw blade
502 04 13-02

 For min 24 cc

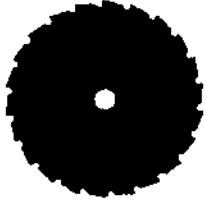


Scarlet 200 saw blade
501 91 34-01

 
For min 24 cc

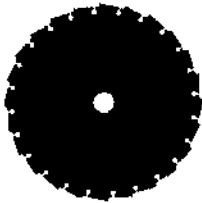

 **Plant protector
(complete)**
502 14 55-01

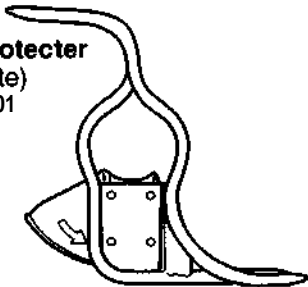


Guard
502 03 93-03

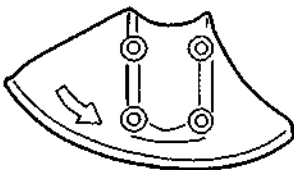 

Saw blades 225 mm—9"


Maxi 225 saw blade
502 01 95-02

 For min 35 cc

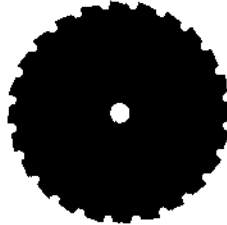

Scarlet 225 saw blade
501 91 35-01

 
For min 35 cc

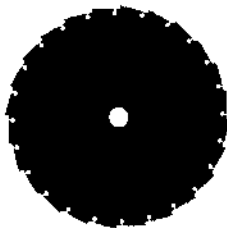


Saw blades 225 mm—9"

Spets 225 pointed-tooth blade
502 14 25-01

 For max 35 cc

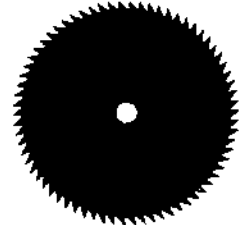

Guard
502 03 94-03

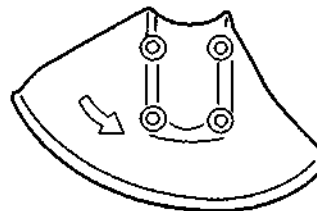 

Brush blades 255 mm—10"

Multi 255-4 brush blade
501 91 05-02

For min 24 cc




Multi 255-3 brush blade
502 17 58-01


For min 24 cc



 Plant protector (complete)
502 12 26-01

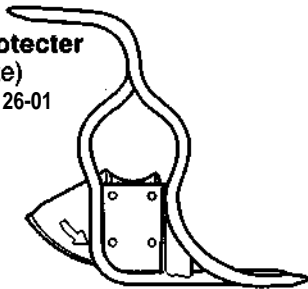

Guard
502 03 95-03

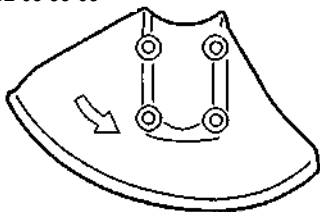 


Brush blades 300 mm—12"

Multi 300 brush blade
502 17 56-01

For min 35 cc



 
Guard
502 03 96-03

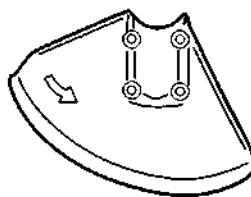

Nylon cordheads


Trimmy Fix
502 13 87-01

 For max 45 cc




Trimmy H
501 91 28-03

 For max 35 cc

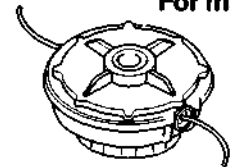


Trimmy Hit II
502 12 65-01

 For max 35 cc

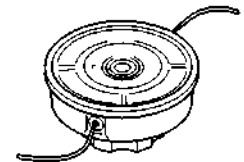


Trimmy Automatic
952 70 85-29

 For max 30 cc

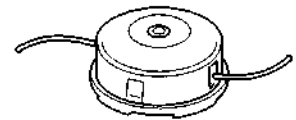

Trimmy S
508 01 01-02

 For min 35 cc

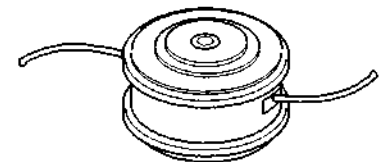

Guard
502 10 47-01



Support cup
502 15 70-01



Support cup
502 13 93-01

 


Nylon cords


98 m, 297 feet
 Ø 2,4 mm
 508 01 51-49




15 m, 45 feet
 Ø 2,4 mm
 502 04 77-01

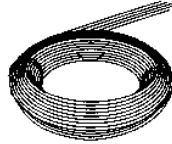

 60 m, 200 feet
 Ø 2,0 mm
 952 70 85-12
 (for trimmy Automatic)

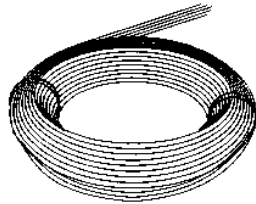

 
Pre cut for Trimmy Fix
 20 strings
 Ø 2,4 mm
 502 13 86-01



Nylon cordheads

Trimmy H

 
compl 501 91 28-03

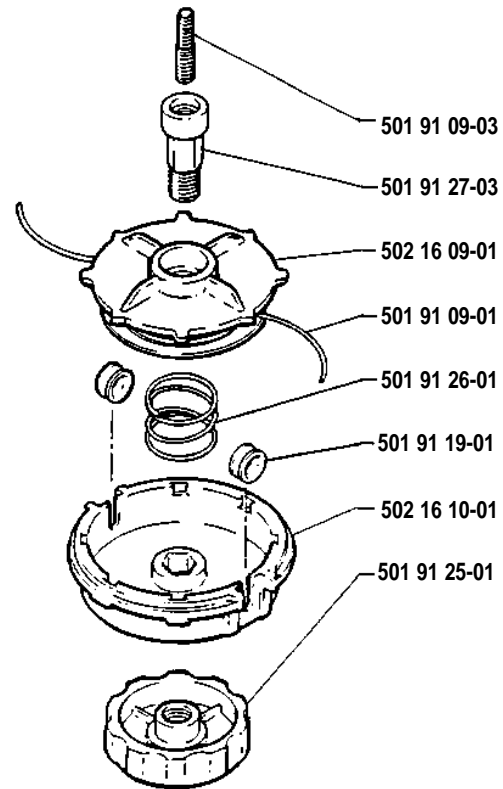

Nylon cordheads


Trimmy Hit II

 * compl. 502 12 65-01

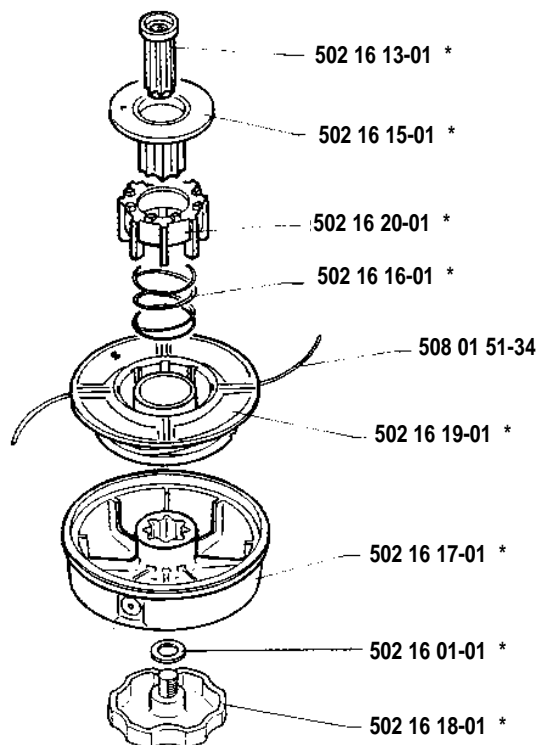

Trimmy S

 * compl. 508 01 51-54

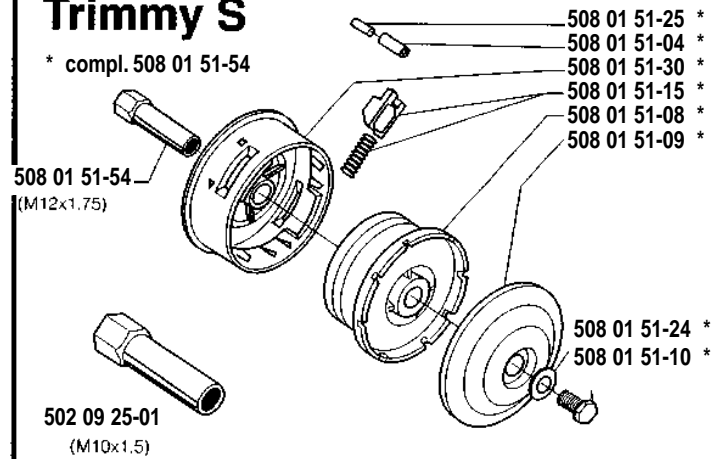

Guard

