


For Husqvarna Parts Call 606-678-9623 or 606-561-4983

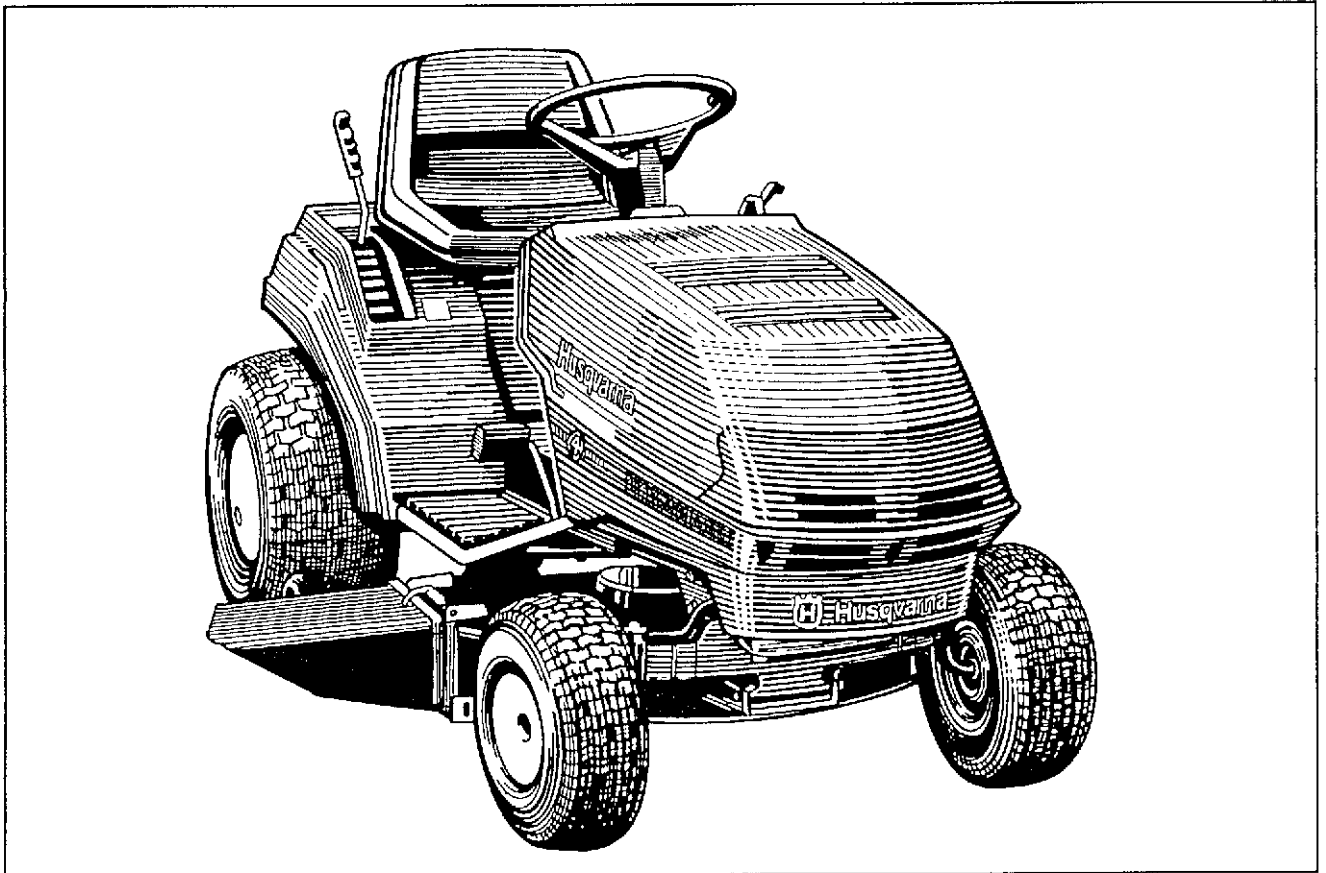

4125H



1.1991

Spare parts


Pièces détachées

Part's Manual 316990B 2/26/91

www.mymowerparts.com

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125H

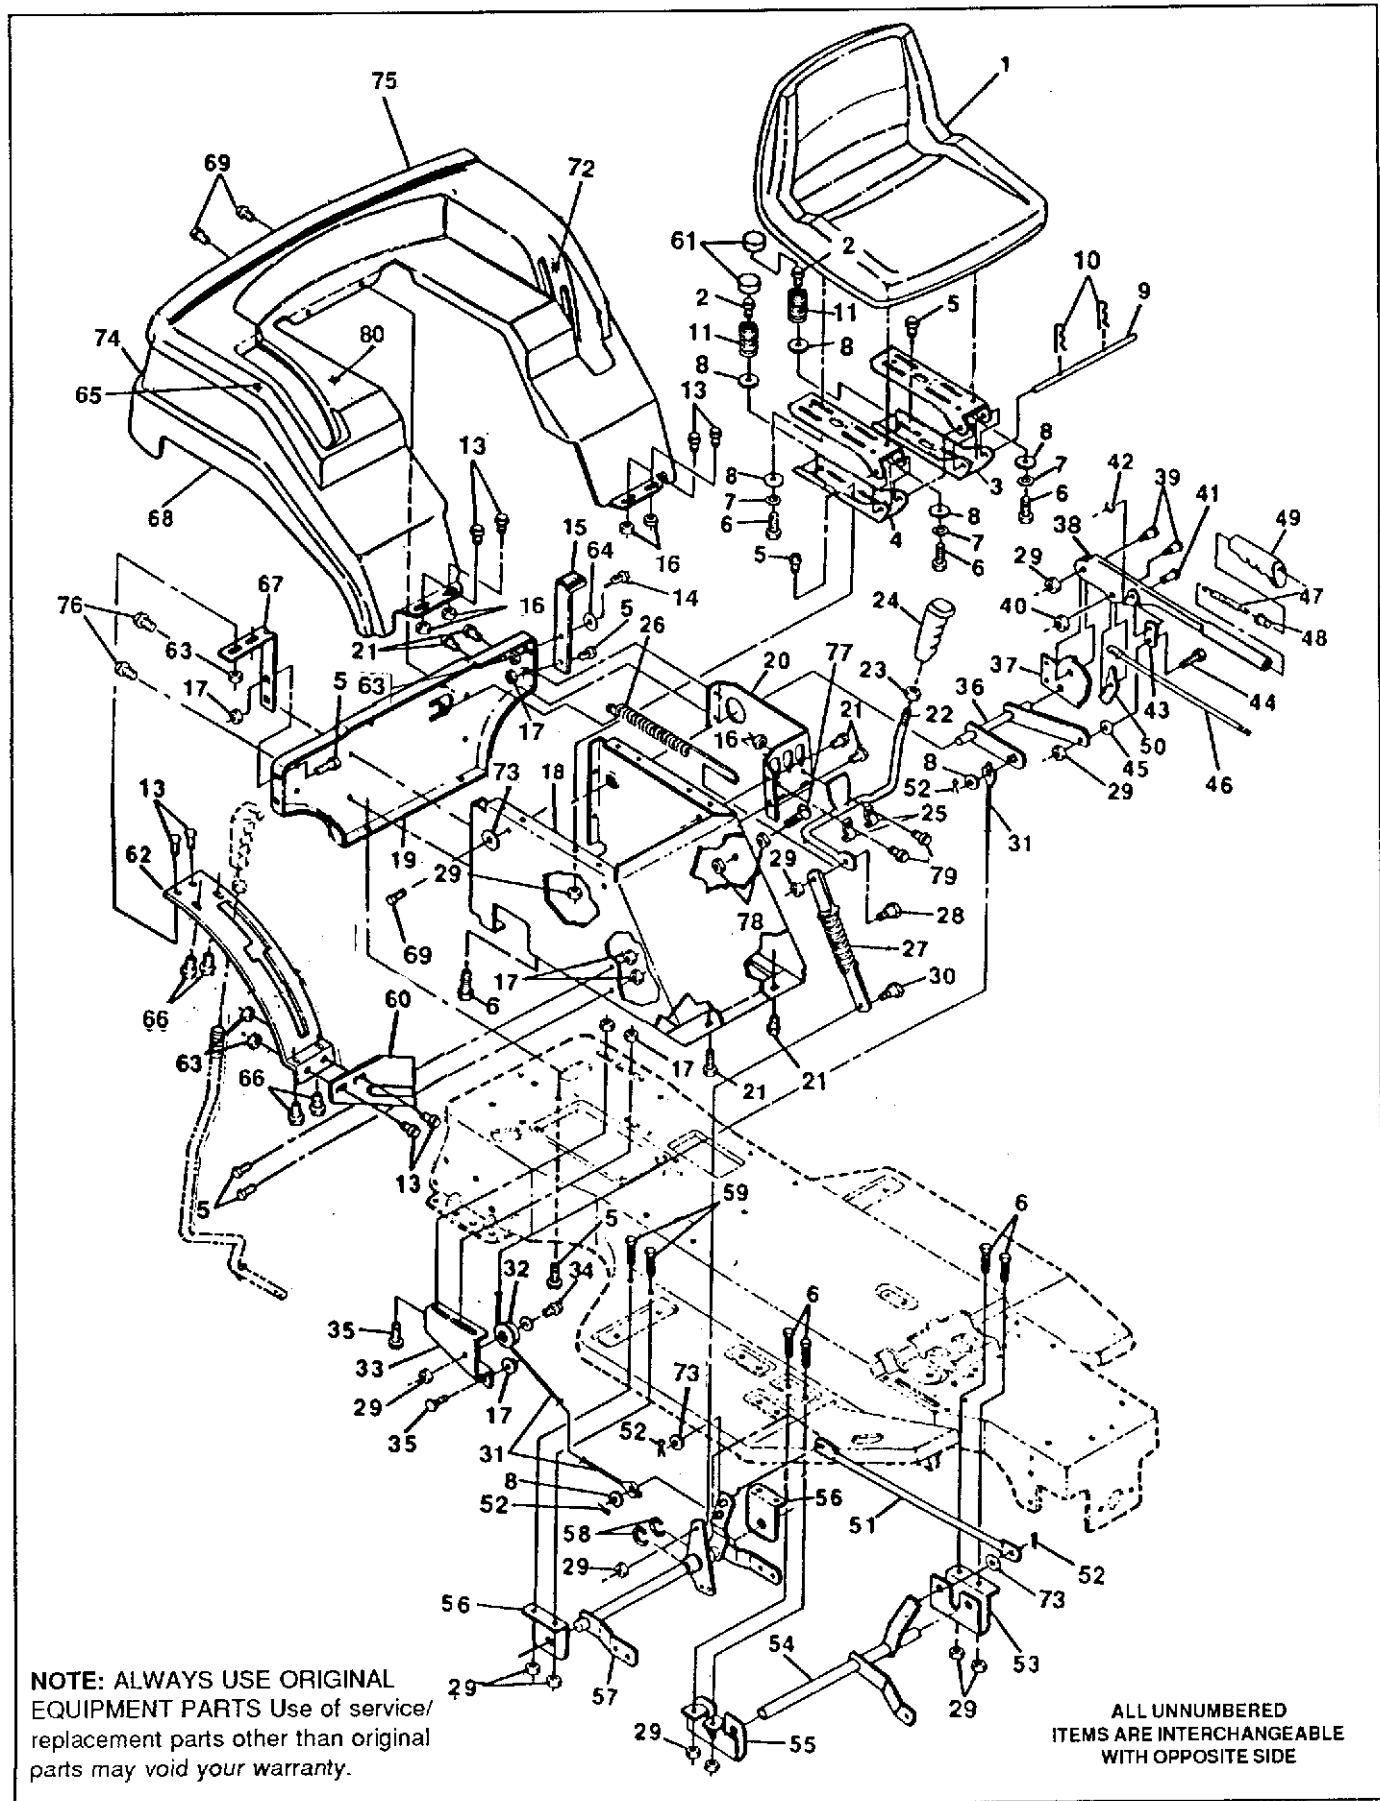

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	310384	Seat	45	45602	Washer
2	451814	Screw, 5/16-18 x 5/8 In.	46	58330	Actuator Rod
3	305991	Channel, Seat L. H.	47	58326	Spring, Height Adjust
4	304480	Channel, Seat R. H.	48	58325	Knob, Height Adjust
5	56030	Screw, Hx Hd, Wd Fl 5/16-18 x 3/4 In.	49	304730	Handle, Lift
6	122007	Screw, Hx Hd, 5/16-18 x 3/4 In.	50	301239	Pawl, Height Adjust
7	120638	Washer, Lock 5/16 In.	51	302380	Tie Rod
8	120393	Washer, Flat, 11/32 In.	52	121222	Cotter Pin
9	304481	Rod, Seat Support	53	308339	Bracket, L. H. Front Hanger
10	36368	Hair Pin, .073 Dia. x 1.13 In.	54	308345	Assembly, Front Lift Shaft
11	305520	Seat Spring	55	308340	Bracket, R. H. Front Hanger
12	1084	Washer, Flat, 9/32 In.	56	308343	Bracket, Hanger
13	180018	Screw, Hx Hd, 1/4-20 x 5/8 In.	57	308342	Assembly, Rear Lift Shaft
14	180020	Screw, 1/4-20 x 3/4 In.	58	36625	E-Ring
15	305379	Fender Support, L. H.	59	180075	Screw, Hx Hd, 5/16-18 x 5/8 In.
16	1502	Nut, Lock 1/4-20 Thd.	60	306293	Support, Shift Plate
17	55273	Nut, Hx, Wd Fl, Lk 5/16-18 Thd.	61	56907	Cover, Seat Spring
18	304475	Seat Support	62	315849	Quadrant
19	304476	Support, Fender & Seat	63	51335	Nut, Hx, Wd Fl Lk, 1/4-20 Thd.
20	302208	Bracket, Support Engage	64	120385	Washer, Flat
21	35497	Screw, Hx Wshr Hd Tap, 5/16-18 x 1/2 In.	65	310609	Decal, Speed Hydro
22	306391	Assembly, Engagement Rod	66	300302	Screw, Hx Hd, Tap #10 x 1/2 In.
23	120238	Nut, Hx Ctrlk, 1/2-13 Thd.	67	306399	Fender Support, R. H.
24	304729	Handle, Lift	68	316329	Fender
25	302197	Clip	69	995338	Screw, Hx, Wshr Hd, Tap 1/4-20 x 5/8 In.
26	305306	Spring, Tension	70	307763	Decal, Gear Shift, 6 Speed
27	304448	Assembly, Spring Cartridge	71	307764	Decal, Gear Shift, Neutral
28	305989	Shoulder Bolt, 7/16 In.	72	307770	Decal, Mower Deck Clutch ON/OFF /Deck Cutting Height
29	1498	Nut, Hx Ctrlk, 5/16-18 Thd.	73	274517	Washer, Flat, 13/32 In.
30	20507	Shoulder Bolt, 5/16-18 Thd.	74	316628	Decal, Hydrostatic
31	303227	Cable, Deck Lift	75	311724	Decal, Rear Fender
32	48306	Pulley	76	50634	Screw, Tap, 5/16-18 x 7/8 In.
33	303230	Assembly, Pulley Bracket	77	122188	Screw, Hx, 3/8-16 x 2-1/4 In.
34	305522	Shoulder Bolt, 5/16-18 Thd.	78	271190	Nut, Hx Keps, 3/8-16 Thd.
35	126211	Bolt, Carriage, 5/16-18 x 5/8 In.	79	180016	Screw, 1/4-20 x 1/2 In.
36	302205	Assembly, Upper Shaft	80	316698	Decal, Husqvarna, USA
37	302383	Quadrant	81	316768	Operator's Manual (Not Illustrated) English
38	9143	Lift Lever	82	316769	Operator's Manual (Not Illustrated) French
39	300171	Shoulder Bolt, 5/16-18 Thd.	83	316990	Parts Manual (Not Illustrated)
40	44108	Nut, Hx Wd Fl Lk 5/16-18 Thd.			
41	300310	Clevis Pin			
42	300311	E-Ring			
43	302357	Link			
44	36149	Shoulder Bolt, 5/16-18 Thd.			

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125H

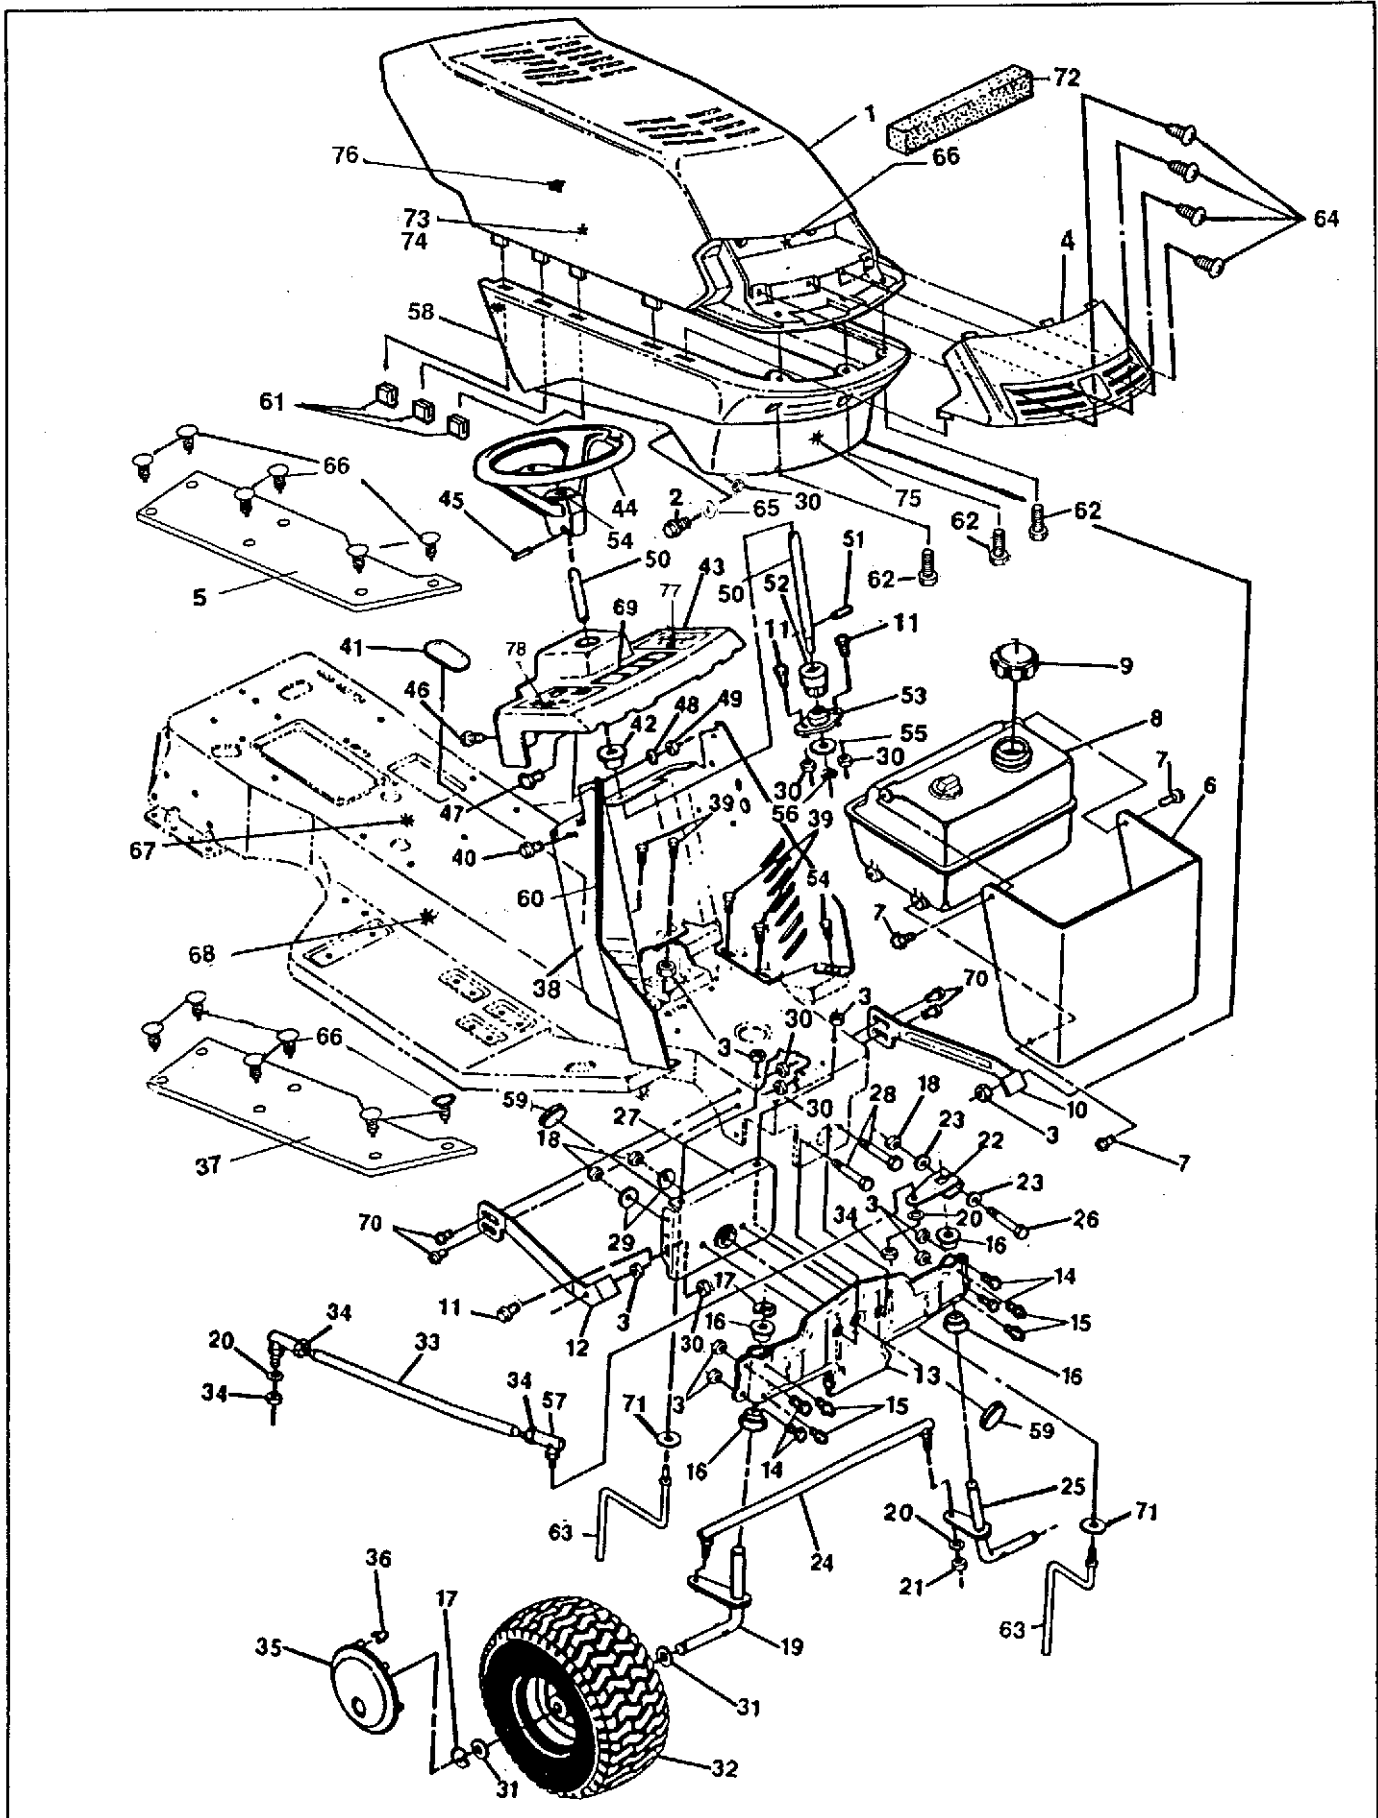

TRACTOR REPAIR PARTS


40" TRACTOR MODEL 4125H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	310577	Hood	41	305280	Cover
2	25086	Shoulder Bolt, 5/16-18 Thd.	42	303228	Bushing, Upper Steering
3	1498	Nut, Hx, Ctrlk, 5/16-18 Thd.	43	307453	Dash, Upper
4	306858	Lens, Headlight	44	303132	Steering Wheel
5	314889	Assembly, Foot Pad L. H.	45	456378	Pin, , Spring, 1/4 x 2 In.
6	307437	Heat Shield, Gas Tank	46	305850	Screw, Tap, 1/4-20 x 1/2 In.
7	300303	Screw, Hx Hd, Plastite 1/4 Dia. x 3/4 In.	47	120854	Screw, Hx Hd, 1/4-20 x 5/8 In.
8	305820	Tank, Gas 1.5 Gal W/Sensor	48	120392	Washer, Flat, 9/32 In.
	305804	Low Fuel Sensor	49	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.
9	12501	Cap, Fuel	50	302307	Shaft, Steering
10	309461	Bracket, Hood L. H.	51	302524	Pin, Dowel
11	56030	Screw, Hx Hd, Wd Fl 5/16-18 x 3/4 In.	52	302314	Pinion, Steering
12	309460	Bracket, Hood R. H.	53	302498	Bearing, Flange
13	310670	Front Axle W/Bearings	54	311728	Decal, Gunsight clear, Steering Wheel
14	180075	Screw, Hx Hd, 5/16-18 x 5/8 In.	55	2968	Washer, Flat, 1/2 In.
15	706	Grease Fitting	56	20864	E-Ring
16	302303	Bearing, Spindle	57	57158	Ball, Joint, 3/8 Thd.
17	36625	E-Ring	58	306856	Grille
18	1499	Nut, Hx, Ctrlk, 3/8-16 Thd.	59	307112	Plug, Front Axle
19	305340	Spindle, R. H.	60	47453	Edging, Wide, 18 (dash)
20	120382	Washer, Split, Lock 3/8 In.	61	306857	Clip, Hood Trim
21	120369	Nut, Hx, 3/8-24 Thd.	62	300302	Screw, #10 x 1/2 In.
22	317019	Steering Arm, Upper	63	300440	Belt Guide
23	996416	Washer, Flat, 25/64 In.	64	312085	Screw, #4-24 x 1/2
24	300328	Assembly, Tie Rod	65	120396	Washer, Flat
25	305339	Spindle, L.H.	66	311087	Ratchet Fastener
26	180134	Screw, Hx Hd, 3/8-16 x 2-1/2 In.	67	307772	Decal, Operating Instructions,
27	306103	Support Bracket, Front Axle	68	311730	Decal, Wheel 4 Steer, LH & RH
28	122207	Screw, Hx Hd, 3/8-16 x 3 In.	69	307409	Decal, Dash
29	2483	Washer, Spring	70	53652	Screw, Hex Wd Fl, 5/16-18 x 3/4 In.
30	55273	Nut, Hx, Wd Fl Lk 5/16-18 Thd.	71	138538	Washer, Internal Tooth
31	642	Washer, Flat, 3/4 In.	72	308115	Hood, Foam Baffle
32	*	Wheel & Tire Assembly, Front	73	316634	Decal, Pin Stripe, RH
	301140	Tire, Rear	74	316635	Decal, Pin Stripe, LH
	312739	Wheel	75	311729	Decal, Gunsight Clear Back
	24167	Valve Stem	76	311724	Decal, Hood
	314416	Bearing	77	316988	Decal, Dash L. H.
33	302908	Drag Link	78	315999	Decal, Dash R. H.
34	124925	Nut, Hx, Jam, 3/8-24 Thd.			
35	306569	Hubcap, Front			
36	306669	Clip, Hubcap			
37	314888	Assembly, Foot Pad R. H.			
38	304702	Dash, Lower			
39	45263	Screw, Tap, 5/16-18 x 3/8 In.			
40	995346	Screw, Self-Tap, 1/4-20 x 1/2 In.			

*Order Parts Individually

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125H

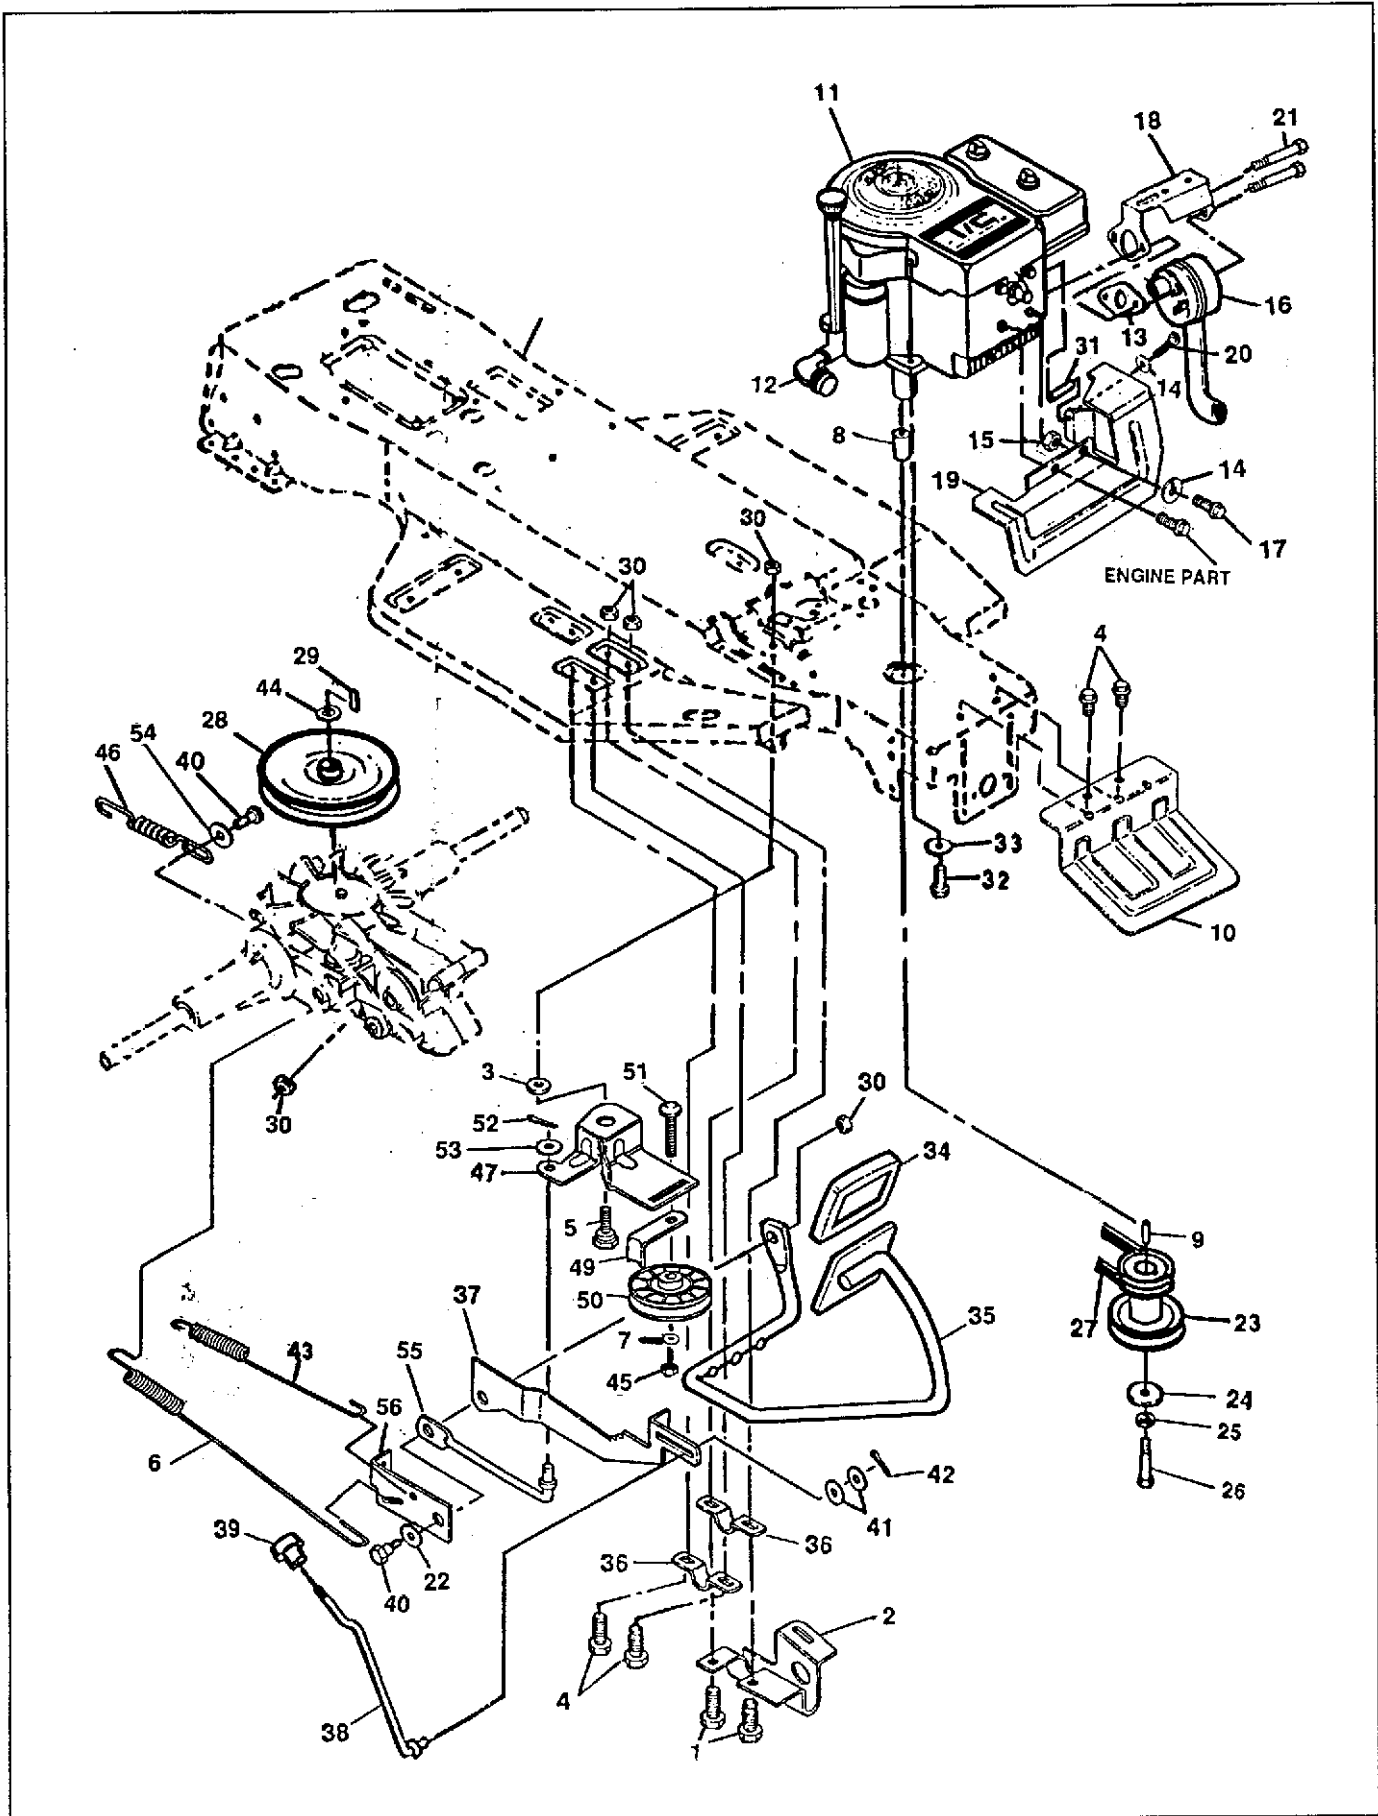

TRACTOR REPAIR PARTS


40" TRACTOR MODEL 4125H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	122007	Screw, 5/16-18 x 3/4 In.	38	304217	Rod, Parking Brake
2	308340	Front Hanger Bracket	39	304367	Knob, Parking Brake
3	45602	Flatwasher	40	310087	Shoulder Bolt, 5/16-18 Thd.
4	35497	Screw, Hx Hd, Wshr Tap, 5/16-18 x 1/2 In.	41	120385	Washer, 9/16 In.
5	310269	Shoulder Bolt, 5/16-18	42	121223	Cotter Pin
6	309935	Spring, Brake, Hydro	43	313660	Spring, Clutch
7	120382	Lockwasher	44	22053	Retaining Ring
8	304246	Spacer, Engine Pulley	45	120377	Nut, Flange, 3/8-16 Thd.
9	57791	Key, Square, 1/4	46	309935	Spring, Brake
10	311530	Deflector, Exhaust	47	314786	Arm, Idler
11		Engine 12.5 Horsepower B&S	48	310269	Shoulder Bolt, 3/8-16 Thd.
12	111316	Elbow, 90°, 3/8 In.	49	39659	Belt Retainer
13	46708	Gasket, Muffler	50	303031	Pulley
14	120380	Washer, Split Lock	51	45892	Carriage Bolt, 3/8-16 x 1-1/2 In.
15	120376	Nut, Hex 5/16-18 Thd.	52	36368	Hair Pin
16	310284	Muffler, Round 5" Diameter	53	120394	Flatwasher, 13/32 In.
17	300314	Screw, Wa Tap, 1/4-20 x 7/8 In.	54	308188	Flatwasher
18	305409	Heat Shield, Carburetor	55	314738	Clutch Rod
19	310340	Heat Shield, Engine	56	310259	Brake Bracket, Neutral
20	189293	Screw, Hex Hd, 1/4-20 x 3-1/2 In.			
21	305407	Bolt, Shoulder, 5/16-18 x 4-1/3 In.			
22	30289	Wave Washer			
23	313546	Pulley, Engine			
24	56431	Washer, Pilot			
25	120383	Washer, Split, Lock 7/8 In.			
26	428644	Screw, Hx Hd, 7/16-20 X 5 In.			
27	310275	V-Belt			
28	303109	Pulley			
29	3021	Key, Woodruff, #606			
30	1498	Nut, Hex, Ctrk, 5/16-18 Thd.			
31	310292	Spacer, Heat Shields			
32	50947	Screw, Hex Hd Tap, 3/8-16 x 1-1/4 In.			
33	138489	Washer, 3/8 In.			
34	304490	Pad, Clutch/Brake, Molded			
35	310258	Assembly, Clutch/Brake Arm			
36	313271	Bracket, Clutch/Brake Arm			
37	310260	Lever, Park Brake			

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125H

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

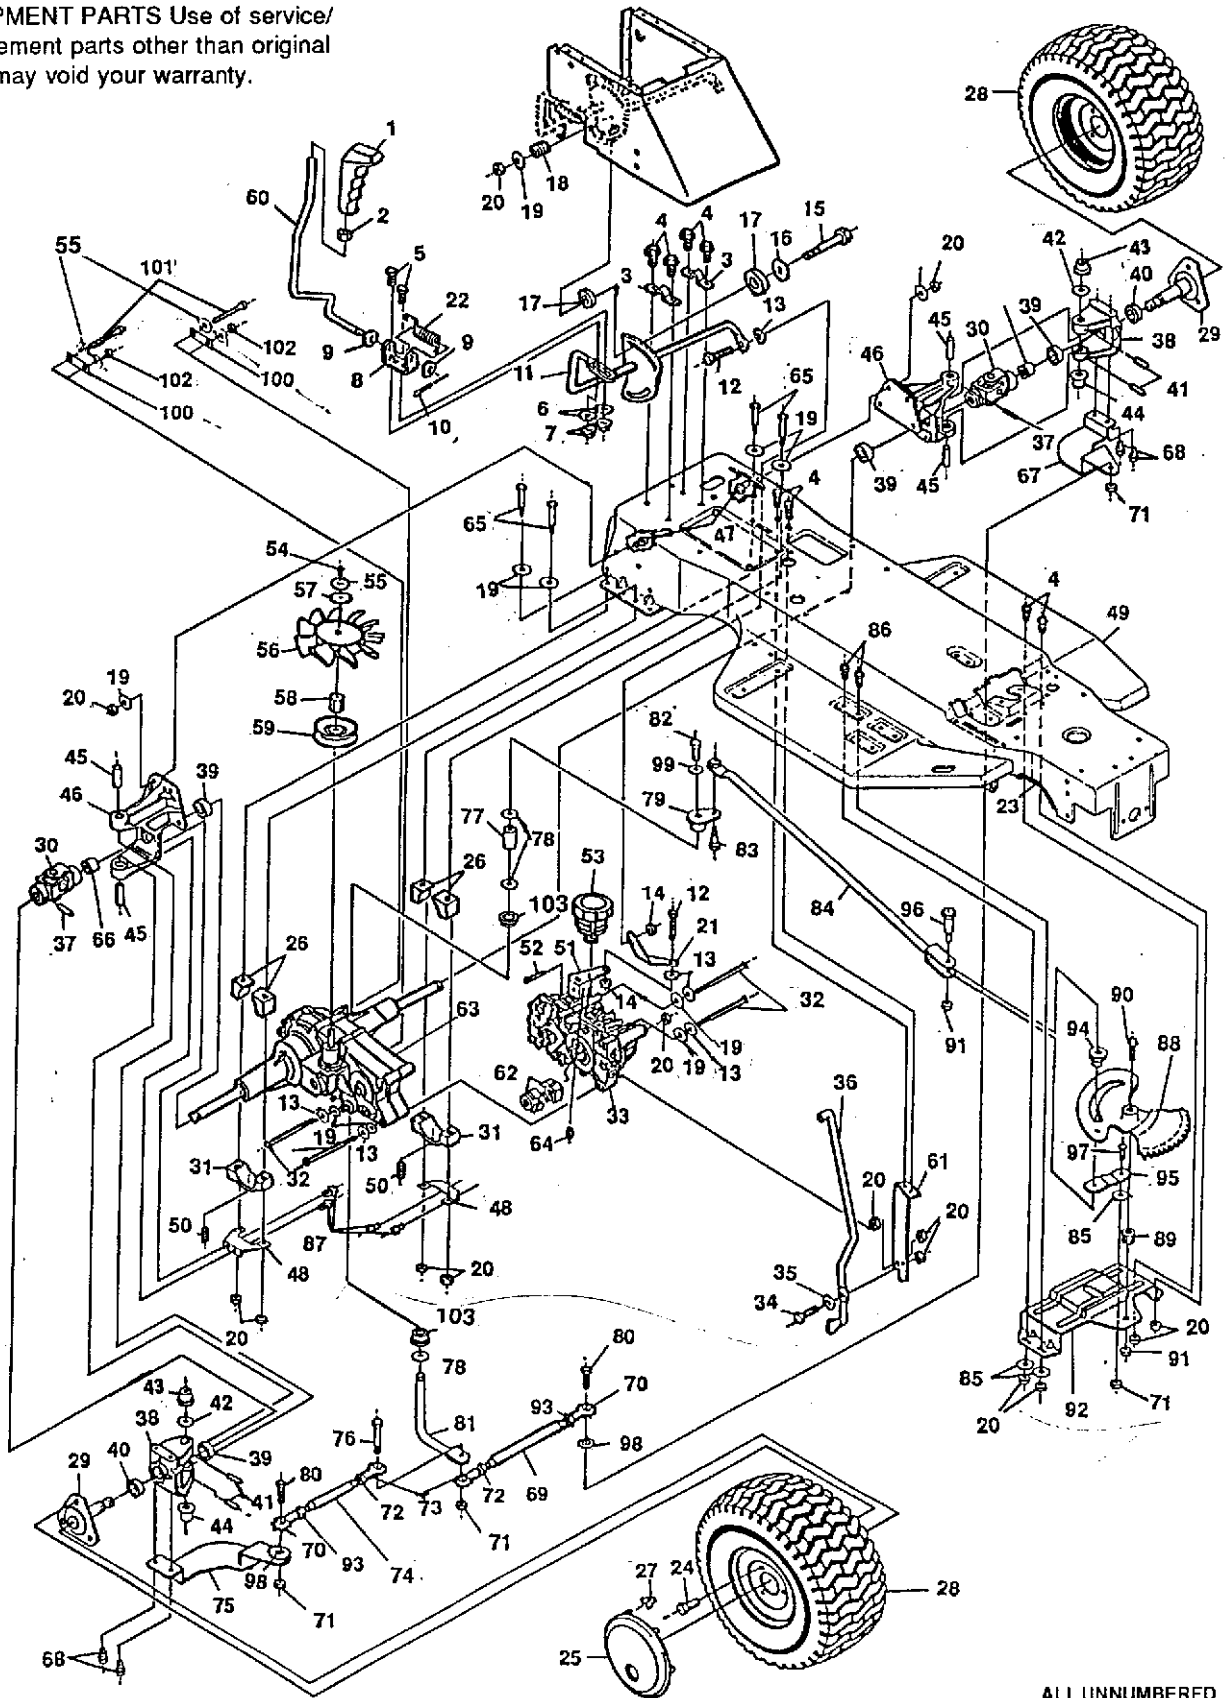

ALL UNNUMBERED
ITEMS ARE INTERCHANGEABLE
WITH OPPOSITE SIDE

TRACTOR REPAIR PARTS


40" TRACTOR MODEL 4125H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	304729	Handle, Deck Engage Lever	52	456652	Pin, Spring
2	120238	Nut, 1/4-13	53	310786	Reservoir, Hydro
3	313271	Bracket, Clutch/Brake Arm	54	180016	Screw, 1/4-20 x 1/2 In.
4	35497	Screw, 5/16-18 x 1/2 In.	55	120380	Washer, Split Lock
5	180018	Screw, 1/4-20 x .62 In.	56	308523	Fan
6	120392	Flatwasher	57	57626	Washer, Flat
7	51335	Nut, 1/4-20	58	310094	Nut, Pulley 1/2-20 and 1/4-20
8	310356	Bracket, Shift	59	310098	Pulley, Assy. Hydro
9	71073	Washer, Flat	60	310264	Shift Rod
10	121222	Pin, Cotter	61	310179	Stabilizer Bracket
11	310806	Shift Rod Assembly	62		Coupling (not a service part)
12	122145	Screw, 3/8-16 x 1-1/4 In.	63	Transaxle	Contact nearest dealer
13	120638	Washer	64	102570	Set Screw
14	1499	Nut, 3/8-16 Thd.	65	180112	Screw, 5/16-18 x 2.75 In.
15	122065	Screw, 5/16-18 x 2 In.	66	304123	Spacer
16	845	Washer, Flat	67	306218	Arm, Rear Wheel Steer, L. H.
17	49922	Washer, Friction	68	39728	Screw, Self-Tap 3/8-16 x 3/4 In.
18	29170	Spring	69	313642	Tie Rod, L.H.
19	120393	Washer, Flat	70	308384	Tie Rod End, L. H.
20	1498	Nut, 5/16-18 Thd.	71	412349	Nut, Hex, Ctrlk, 3/8-24
21	310204	Shift Link	72	124925	Nut, Hex Jam, 3/8-24
22	310336	Spring, Torsion	73	304260	Rod End
23	47453	Trim	74	313643	Tie Rod End, R. H.
24	123418	Screw, Hx Hd, 1/2-20 x 1/2 In.	75	306217	Arm, Rear Wheel Steer, R. H.
25	306570	Hubcap, 8 In.	76	181646	Screw, 3/8-24 x 1 3/4 In.
26	310813	Mounting Block	77	313641	Spacer
27	306669	Clip, Hubcap	78	25177	Washer, Lat 49/64 In.
28	*	Tire	79	308719	Steering Pivot
	58276	Wheel	80	181639	Screw, 3/8-24 x 1 1/4 In.
	24167	Valve System	81	313649	Shaft, Steering Pivot
29	315264	Hub Assembly	82	421051	Screw 5/16-24 x 1 In.
30	12290	U-Joint Assembly	83	12319	Bolt, Shoulder 3/8-24
31	310187	Mounting Block	84	313639	Rod Assembly, Rear Wheel Steer
32	189299	Screw, 5/16-18 x 4-1/2 In.	85	446363	Washer, Flat 3/8 In.
33	310227	Hydrostatic Pump	86	35498	Screw, Self-Tap 5/16-18 x 3/8 In.
34	310088	Shoulder Bolt, 5/16-18 Thd.	87	451814	Screw, Self-Tap 5/16-18 x 5/8 In.
35	2483	Washer	88	302877	Assembly Sector Gear
36	310261	Rod- Relief Valve	89	302878	Bushing, Sector Gear
37	36311	Pin, Grooved, 1/4 x 1 1/2 In.	90	304296	Screw, 1/2-20 x 2 3/8 In.
38	315267	Bracket, Steering Pivot, Outer	91	274654	Nut, Hx, Ctrlk 1/2-20
39	12325	Bearing	92	308341	Plate, 4-Wheel Steer Pivot
40	315268	Bearing	93	308399	Nut, Jam 3/8-24
41	456722	Pin, Spring 1/4 x 1 1/2 In.	94	304116	Cam Yoke Roller
42	21682	Washer, Flat	95	302594	Arm, Roller Swing
43	12288	Bushing, Shouldered	96	304122	Shoulder Bolt, Cam Roller
44	12321	Bushing, Shouldered	97	302588	Shoulder Bolt, Cam Follower Arm Pivot
45	12289	Pin, Steering Hinge	98	120382	Washer, Split Lock
46	12485	Bracket, Steering Pivot, Inner	99	45602	Washer Flat
47	122017	Screw, Hx Hd, 5/16-18 x 1 In.	100	314511	Bracket, Rear Pivot
48	313644	Bracket, Transaxle Mounting	101	180020	Screw 1/4-20 x .75 In
49	315823	Main Frame	102	120375	Nut 1/4-20
50	140880	Screw, #10-32 x 1/4 In.	103	302303	Bearing Spindle
51	310180	Armspeed Control			

*Order Parts Individually

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125H

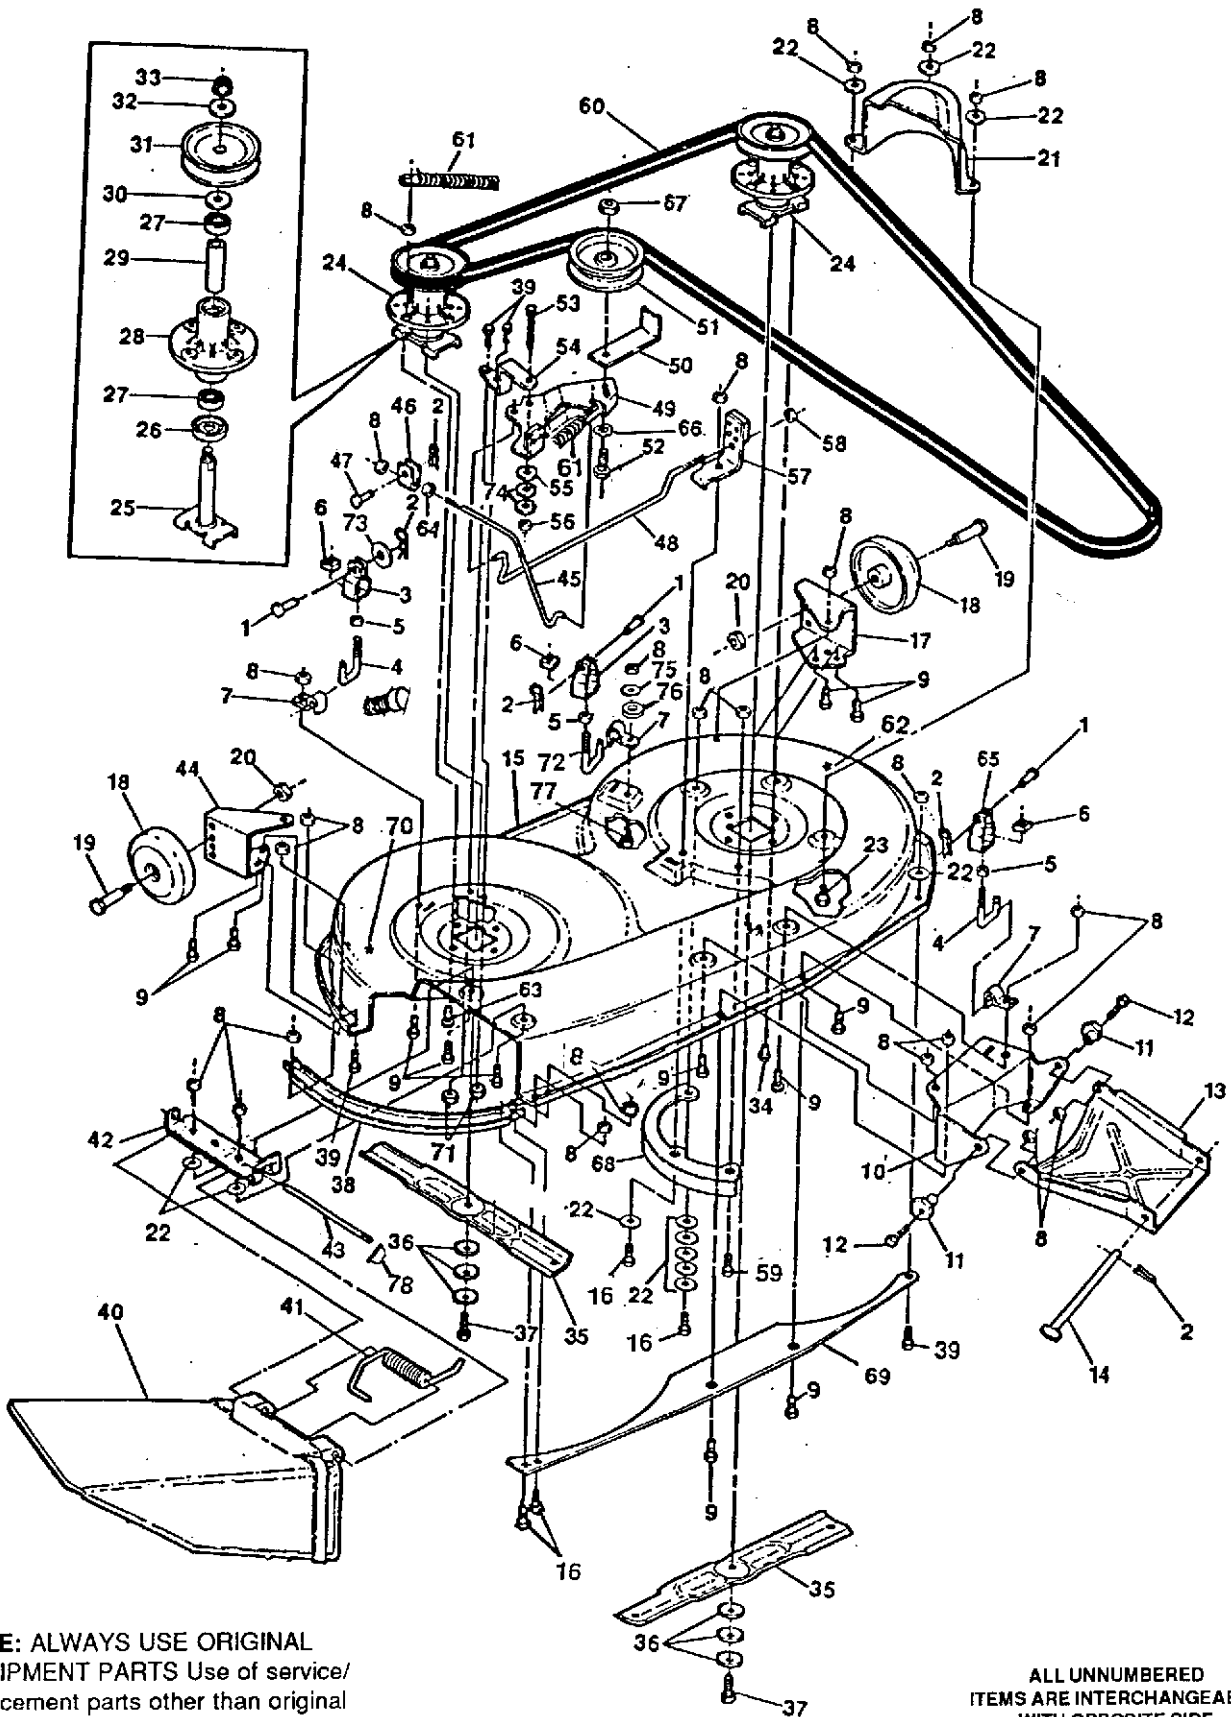

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	300317	Pin, Clevis	42	317017	Bracket, Chute Mount
2	56180	Hairpin, Cotter	43	304424	Rod, Chute
3	305283	Clevis	44	317018	Wheel Bracket, R. H.
4	309615	Lift Rod	45	303072	Clutch Rod
5	120238	Nut, Hx Jam 1/2-13 Thd.	46	305284	Clevis, Clutch
6	109527	Nut, Sq. 1/2-13 Thd.	47	49332	Pin, Clevis
7	302197	Clip	48	302714	Rod, Brake
8	1498	Nut, Hx, Lock 5/16-18 Thd.	49	304414	Idler Assembly
9	180075	Screw, Hx Hd, 5/16-18 x 1 In.			Includes the following parts:
10	312342	Bracket, Front		305298	Idler Arm
11	58247	Nut, Adjusting		306973	Brake Pad
12	122017	Screw, Hx Hd. 5/16-18 x 1 In.		41601	Rivet
13	311942	Channel, Draw Bar	50	300844	Belt Retainer
14	302963	Rod, Drawbar	51	310326	Idler Pulley
15	315788	Mower Deck	52	57325	Carriage Bolt, 3/8-16 x 2 In.
16	122007	Screw, Hx, 5/16-18 x 3/4 In.	53	304420	Shoulder Bolt, 3/8-16 x 3/4 In.
17	317041	Wheel Bracket, L. H.	54	312273	Idler Brace
18	302611	Wheel	55	996307	Washer, Flat
19	23763	Shoulder Bolt, 3/8-16 Thd.	56	45171	Nut, Hx, Wd Fl, 3/8-16 Thd.
20	1499	Nut, Hex, Ctrlk, 3/8-16 Thd.	57	304118	Brake Spring Assembly
21	302833	Belt Cover, Left Pulley	58	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.
22	120393	Flatwasher, 11/32 In.	59	122027	Screw, Hx, 5/16-18 x 1-1/4 In.
23	120228	Screw, Hx Hd, 5/16-18 x 5/8 In.	60	48044	Belt, 82 In. Long
24	317705	Quill Assembly (Incl. Nos. 25-33)	61	35410	Spring
25	56425	Saddle & Shaft Assembly	62	68249	Decal, No Step
26	50616	Dust Shield	63	300345	Screw, Tap, 5/16-18 x 1-3/8 In.
27	1255	Bearing	64	120376	Nut, Hx, 5/16-18 Thd.
28	50702	Quill Housing	65	304443	Clevis
29	50818	Spacer Tube	66	120382	Washer, Split, Lock 3/8 In.
30	51449	Spacer	67	120377	Nut, Hx, 3/8-16 Thd.
31	313898	Pulley	68	306477	Baffle, Deck
32	56365	Washer	69	306478	Baffle, Deck Front
33	1282	Nut, Wd Fl, Lk 7/16-20 Thd.	70	68547	Decal, Danger
34	50634	Screw, Wshr Hd, 5/16-18 x 7/8"	71	44108	Nut, 5/16-18 Thd.
35	309070	Blade	72	312302	Lift Rod
36	2483	Washer, Spring	73	274517	Washer, Flat
37	39573	Screw, Hx Hd, 3/8-24 x 1 In.	74	996416	Washer, Flat
38	317039	Toe Guard	75	35214	Washer, Flat
39	180077	Screw, Hx Hd, 5/16-18 x 3/4 In.	76	50520	Spacer
40	304422	Chute Deflector	77	180079	Screw, 5/16-18 x 1 In.
41	305124	Spring	78	3535	Push Nut

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125H

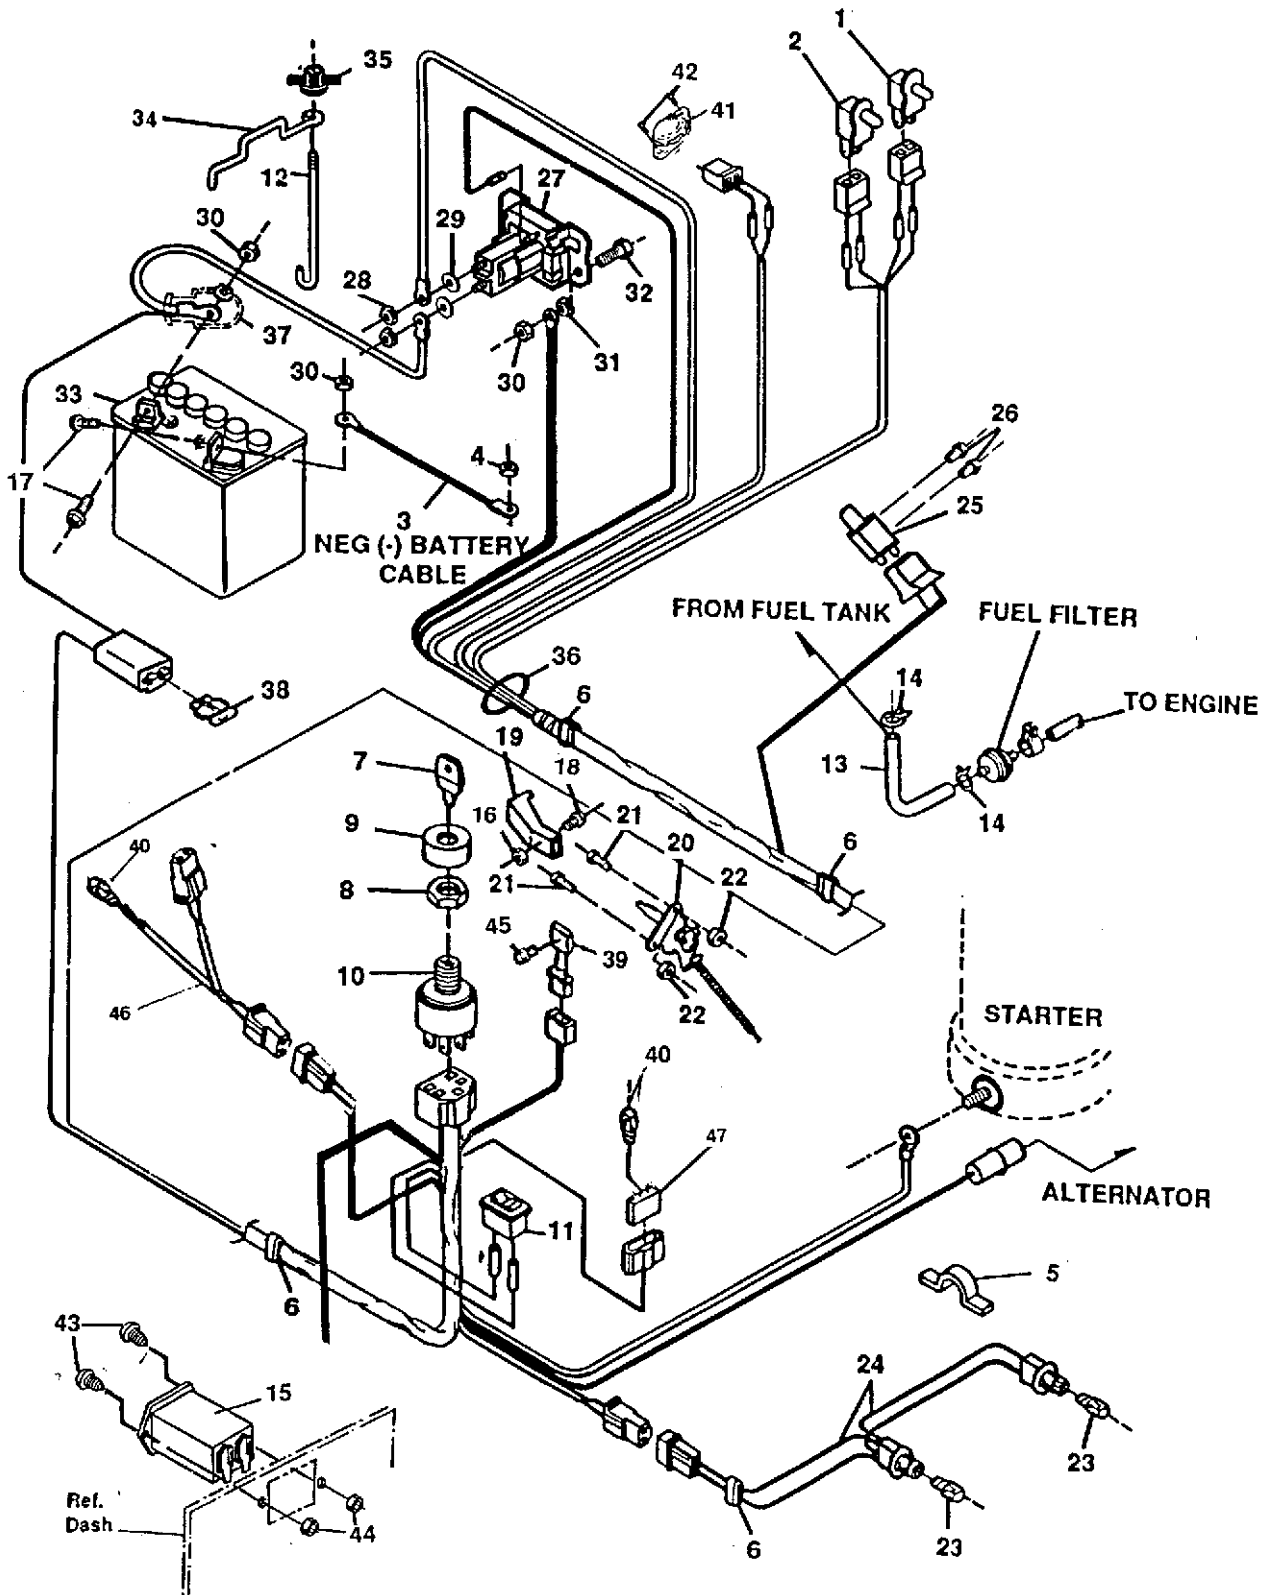

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.


ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE

TRACTOR REPAIR PARTS

40" TRACTOR MODEL 4125H

Key No.	Part No.	Description	Key No.	Part No.	Description
1	308187	Seat Switch	27	53716	Solenoid
2	12553	Deck Safety Switch	28	120368	Nut, Hx 5/16-24 Thd.
3	55511	Cable, Battery, Negative	29	138485	Washer, Lock 5/16 In.
4	271184	Nut, Hx, Keps, 5/16-18 Thd.	30	271172	Nut, Hx, Keps, 1/4-20 Thd.
5	41482	Press Clip	31	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.
6	57444	Tie Cable	32	187745	Screw, 1/4-20 X 3/4 In.
7	300626	Key, Ignition Switch	33	302257	Battery
8	300193	Nut, Switch	34	302912	Bracket, Battery Hold-Down
9	300194	Boot, Switch	35	310067	Wingnut
10	305720	Switch, Ignition	36	315691	Wiring Harness
11	300334	Switch, Light	37	308201	Boot, Rubber (Battery Cable)
12	57551	Rod, Battery Hold-Down	38	302031	Fuse, 15A-32V
13	47452	Gas Line, 13-1/2" (cut to length)	39	307056	Low Voltage Sensor
14	47345	Clamp, Gas Line	40	57769	Bulb Indicator
15	304739	Minature Hour Meter	41	57547	Seat Switch
16	120622	Nut, Hex, #8-32 Thd.	42	160505	Screw, 1/4-20 x .38
17	120854	Screw, 1/4-20 x .63	43	308347	Screw, #6-32 x 1/2 In.
18	159585	Screw, Ph Pn, #8-32 x 3/8 In.	44	271482	Nut, #6-32 Thd.
19	304439	Knob, Throttle Control	45	300302	Screw, Plastite
20	315716	Throttle Control	46	305778	Low Fuel Wire
21	159943	Screw, #10-24 X 5/8 In.	47	305702	Lamp holder 4 Pin
22	308459	Nut, Hx, Nylon Lock, #10-24 Thd.			
23	52572	Bulb Headlamp			
24	303064	Assembly, Light Wire			
25	57476	Switch			
26	57220	Screw, Pn Hd, Tap #12 x 1/2 In.			

AGRI-FAB HYDROSTATIC TRANSAXLE

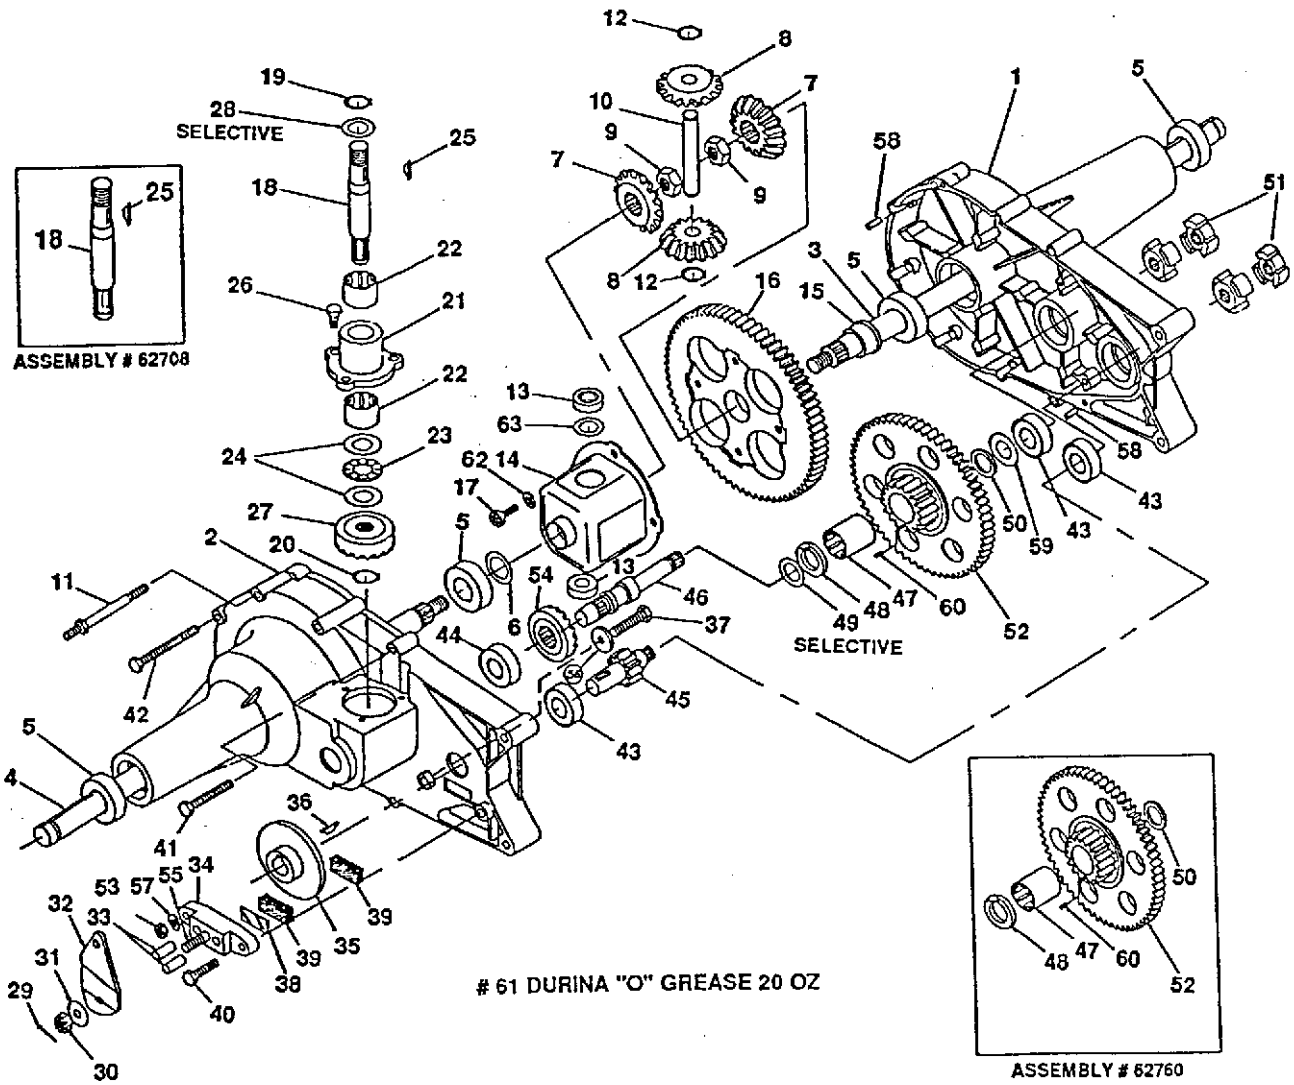


AGRI-FAB HYDROSTATIC TRANSAXLE

REF	PART NO	QTY	DESCRIPTION
1	44077	1	HOUSING HALF LH
2	44076	1	HOUSING HALF RH
3	44273	1	AXLE LH 3/4"
4	44272	1	AXLE RH 3/4"
5	44121	4	BEARING, BALL
6	44008	1	WASHER, FLAT 3/4ID X 1-1/8 OD X .030 THK
7	44096	2	GEAR, MITER
8	44097	2	GEAR, MITER
9	44133	2	NUT, HEX JAM W/PATCH 1/2-20
10	44089	1	SHAFT, CROSS
11	44271	2	SCREW/STUD
12	44146	2	SNAP RING
13	44128	2	BEARING, THRUST
14	62590	1	HOUSING ASSY, DIFFERENTIAL
15	44129	1	BEARING, FLANGE
16	44095	1	GEAR, DIFFERENTIAL 72 TOOTH
17	44126	4	BOLT, TORX HEAD 1/4-28 X 5/8" LG.
18	44104	1	SHAFT, INPUT
19	44145	1	SNAP, RING
20	44144	1	RETAINING RING 7/16" DIA. EXT.
21	44081	1	HOUSING, INPUT BEARING
22	44099	2	BEARING, NEEDLE
23	44139	1	BEARING, THRUST
24	44109	2	WASHER, FLAT 5/8 ID X 1-1/8 OD X .030 THK
25	44136	1	KEY, HI-PRO 3/32 X 5/8 DIA.
26	44122	3	SCREW, HEX W/PATCH 1/4-20 X 3/4 LONG
27	44078	1	GEAR, INPUT PINION 17 TOOTH
28	44371	1	WASHER, FLAT .62 ID X 1.0 OD X .050 THK
-	44110	AR	WASHER, FLAT .62 ID X 1.125 OD X .060 THK
-	44151	AR	WASHER, FLAT .62 ID X 1.0 OD X .040 THK
29	44101	1	PIN, COTTER
30	44142	1	NUT, CASTLE 5/16-24
31	44130	1	WASHER, FLAT .343 ID X .88 OD X .062 THK
32	44094	1	ARM, BRAKE ACTUATOR
33	44127	2	PIN, BRAKE ACTUATING
34	44092	1	BRAKE, YOKE
35	44090	1	DISC, BRAKE
36	44143	1	KEY, HI-PRO 3/16 X 5/8" DIA.
37	44277	1	SCREW HEX 1/4-20 X 1.50 LONG
38	44134	1	PLATE, PUCK
39	44132	2	PUCK, BRAKE
40	44433	1	SCREW, HEX W/PATCH 1/4-20 X 1.00 LG
41	44123	2	SCREW, HEX SELF-TAP 1/4-20 X 2.00 LG.
42	44124	4	SCREW, HEX SELF-TAP 1/4-20 X 3.00 LG.
43	44147	3	BEARING, BALL
44	44232	1	BEARING, BALL
45	44083	1	SHAFT, PINION W/11 TOOTH GEAR
46	44080	1	SHAFT, DRIVE
47	44342	1	BEARING, NEEDLE
48	44343	1	BRONZE THRUST BRG 5/8 ID X 1-1/4 OD X 7/64 THK
49	44151	1	WASHER, FLAT .62 ID X 1.0 OD X .040 THK
-	44371	AR	WASHER, FLAT .62 ID X 1.0 OD X .050 THK
50	44394	1	SEAL, GREASE
51	44084	4	COUPLING
52	44523	1	GEAR, 60 AND 17 TOOTH
53	43178	1	NUT, HEX 1/4-20
54	44079	1	GEAR, DRIVE PINION 17 T.
55	44138	1	BOLT, SQUARE HEAD
56	44278	1	WASHER, 15/16 OD X .265 ID X .125 THK
57	43177	1	WASHER, 1/4" SPRING LOCK
58	44269	2	PIN, ROLL 3/16" DIA X 1/2" LG.
59	44125	1	WASHER, FLAT .62 ID X 1.0 OD X .030 THK
60	44346	1	PIN, DOWEL 3/32 X 1/4
61	44098	20	SHELL DURINA-O GREASE)20 OZ.)
62	44504	4	WASHER, HD SPRG LOCK 1/4" (YELLOW DI-CHROM)
63	44137	1	WASHER, FLAT .50 ID X 1.0 OD X .020 THK
	44421	AR	WASHER, FLAT .50 ID X 1.0 OD X .030 THK
	44499	1	SERVICE MANUAL

IMPORTANT

Replacement parts must be obtained from
AGRI-FAB
 303 W. Raymond St.
 Sullivan IL. 61951
 (217) 728-8388 or Contact
 one of their authorized
 representatives

HYDRO-STATIC PUMP

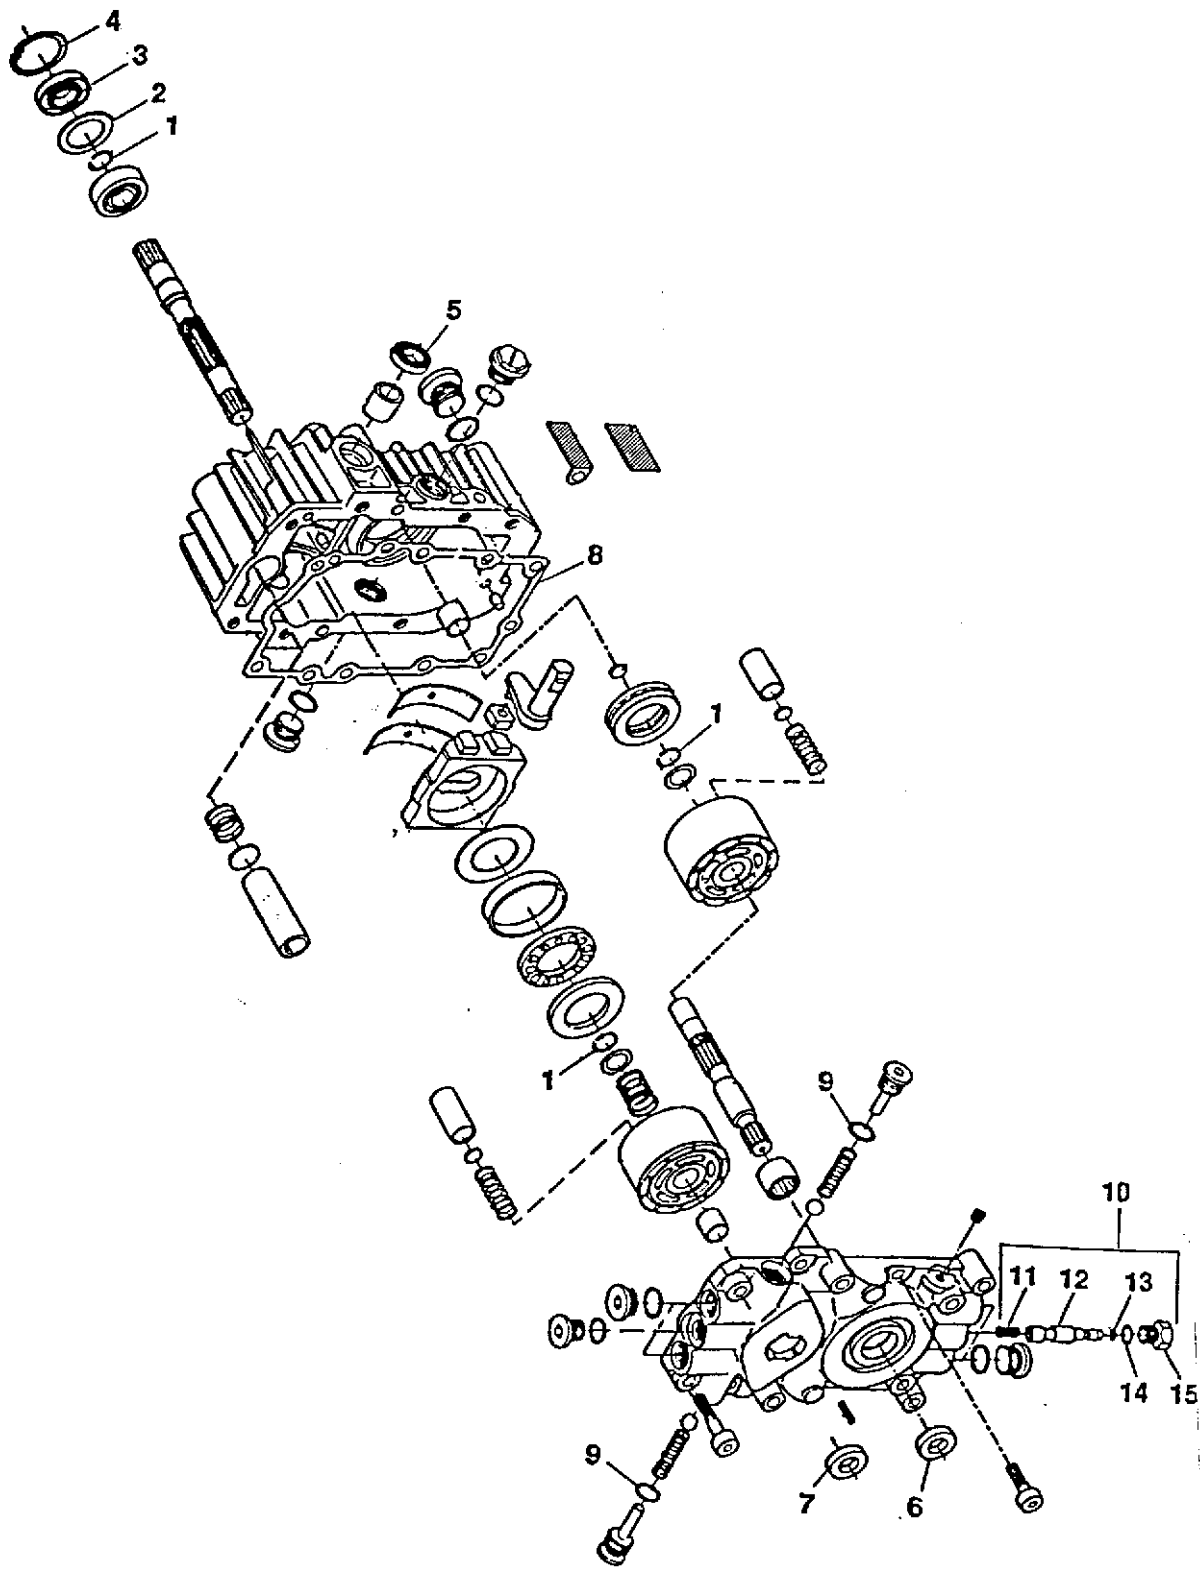

HYDRO-STATIC PUMP

Key No.	Part No.	Description
+	310227	Hydro-Static Pump (Complete)
+	313306	Overhaul Seal Kit (Contains Key No's. 1 thru 9 , 13 and 14)
1		Ring-Retaining
2		Spacer
3		Seal - Lip
4		Ring-Retaining
5		Seal - Lip
6		Seal - Lip
7		Seal - Lip
8		Gasket - Center Section
9		O-Ring
10	313305	By - Pass Valve Kit - Complete (Contains Key No's. 11-15)
11		Spring - Helical Comp
12		By - Pass Spool
13		O - Ring
14		O - Ring
15		Plug - By - Pass

+ Not Shown