



For Husqvarna Parts Call 606-678-9623 or 606-561-4983

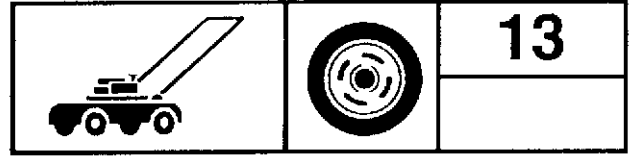

4140G

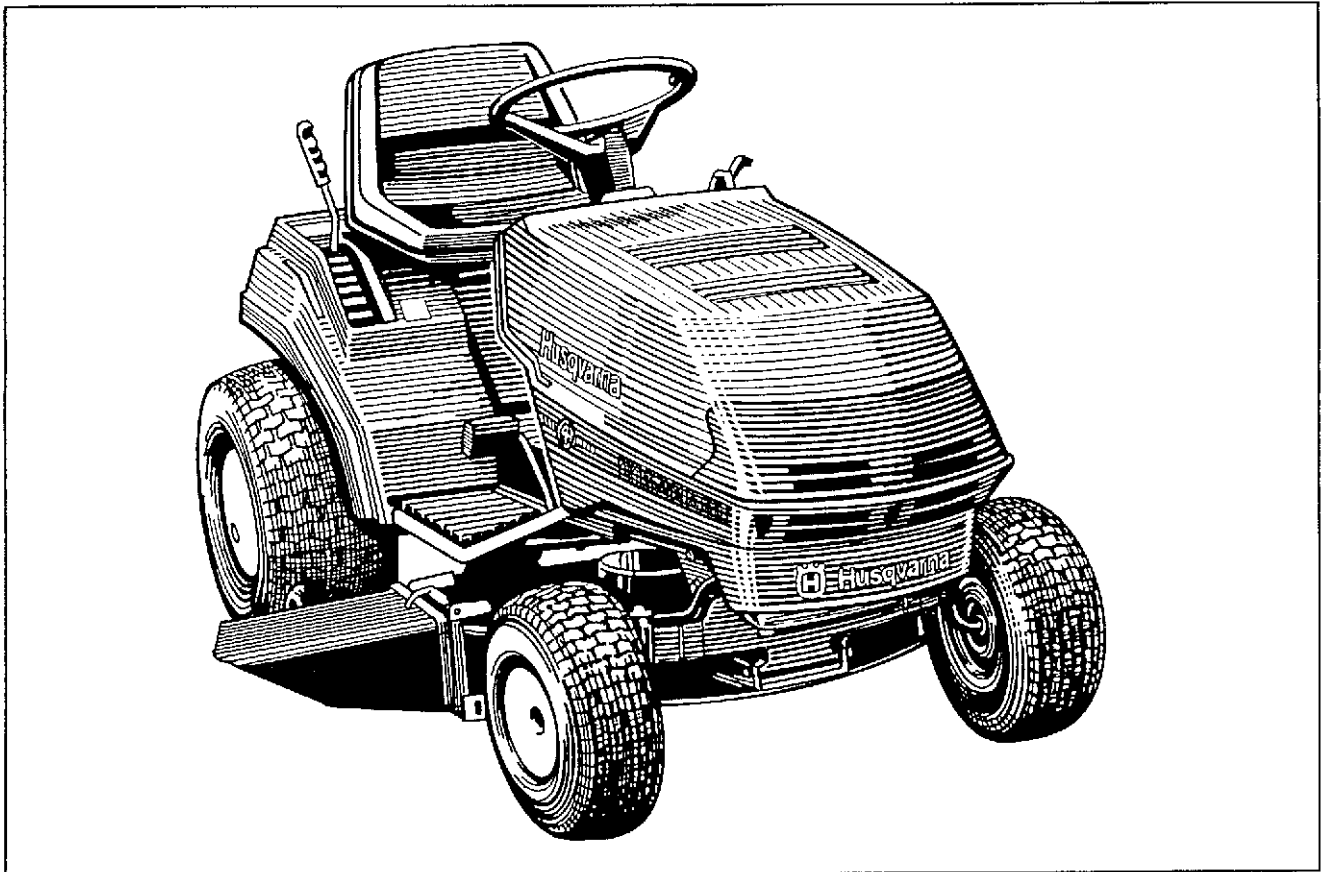


1.1991

Spare parts

Pièces détachées

TRACTOR REPAIR PARTS

46" TRACTOR MODEL NUMBER 4140G

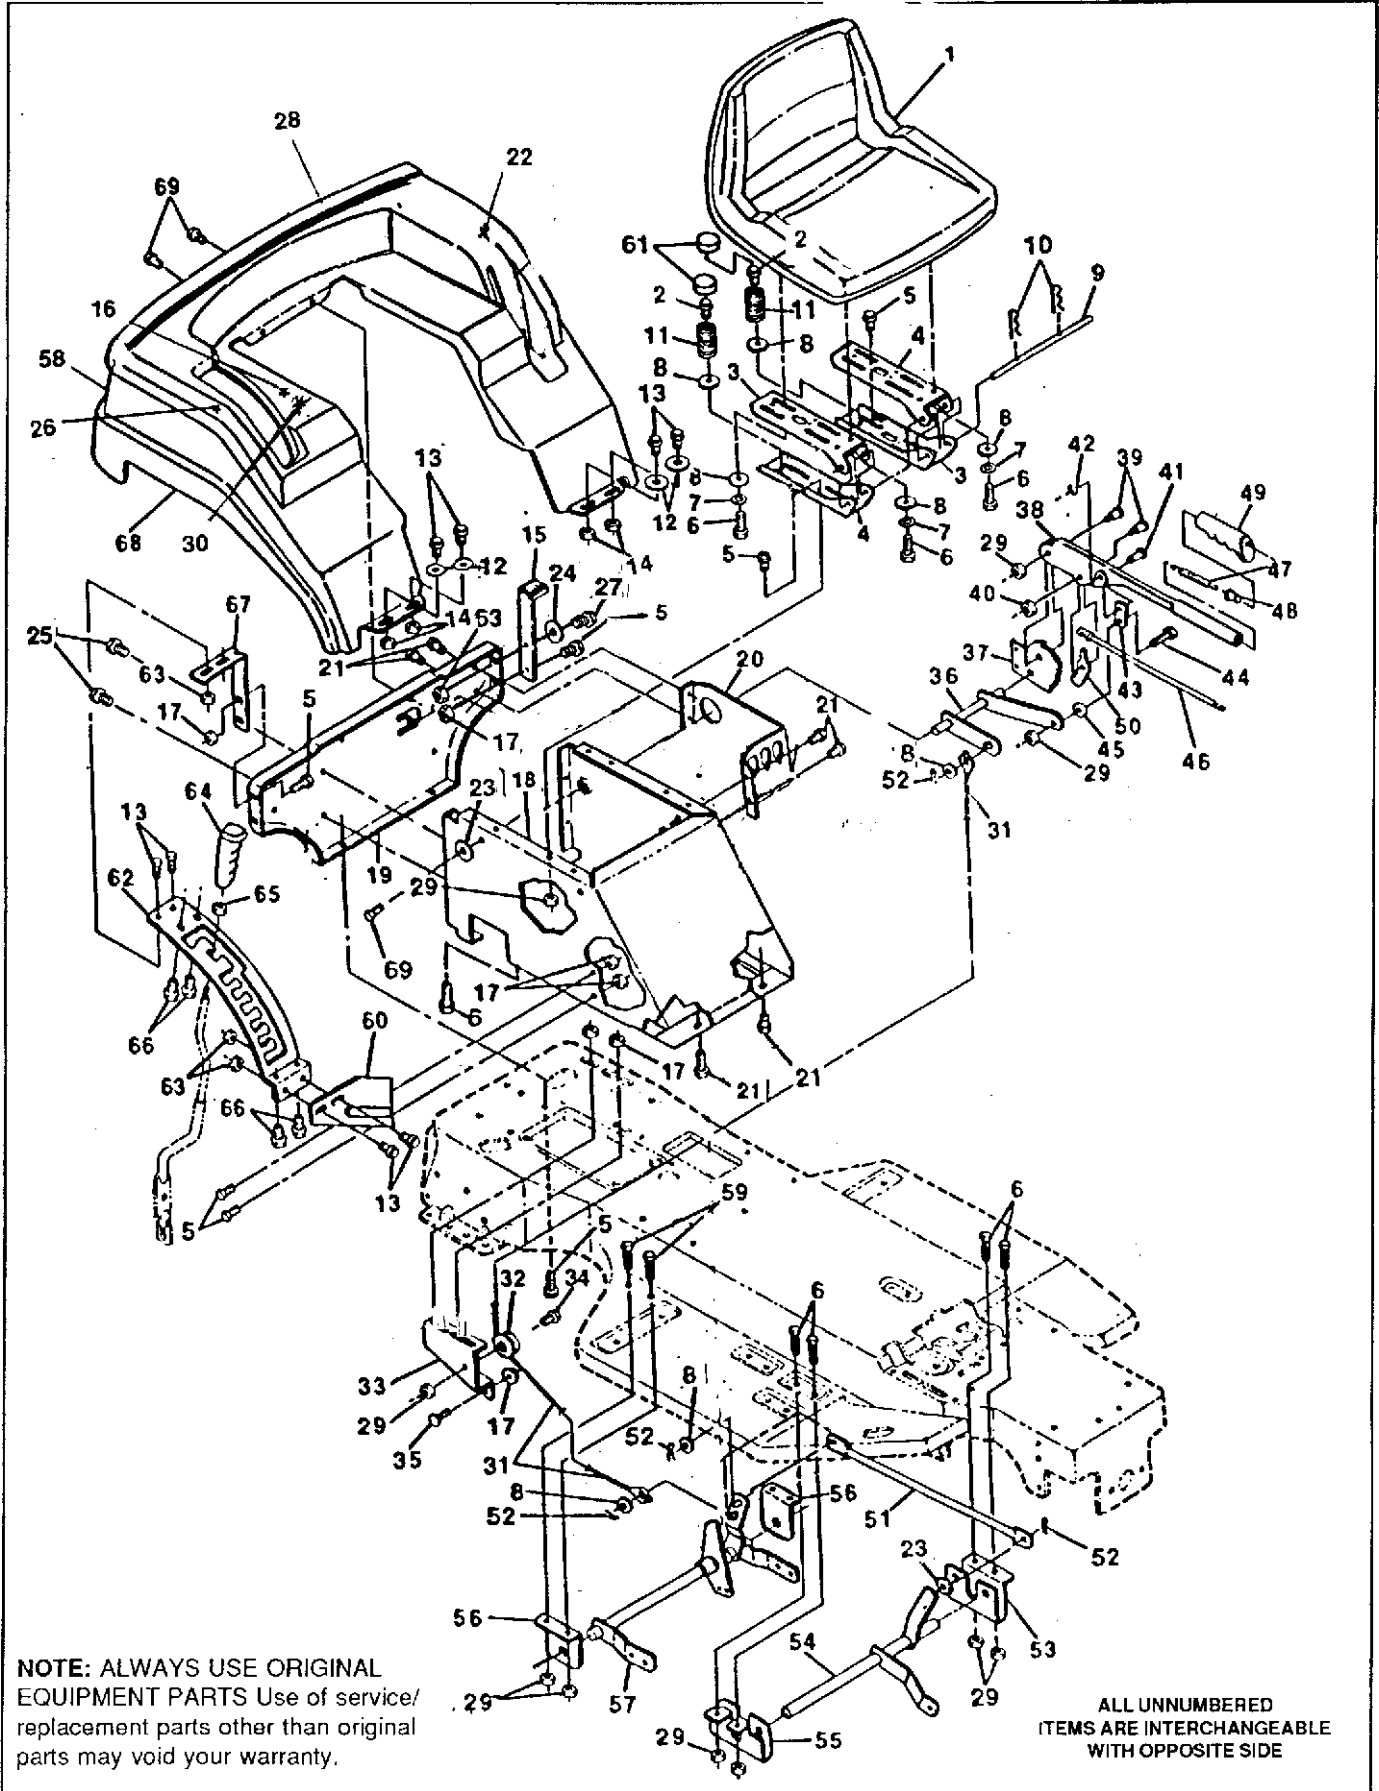

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140G

Key No.	Part No.	Description	Key No.	Part No.	Description
1	310384	Seat	47	58326	Spring, Height Adjust
2	451814	Screw, 5/16 18 x .63	48	58325	Knob, Height Adjust
3	305991	Channel, Seat L. H.	49	304730	Handle, Lift
4	304480	Channel, Seat R. H.	50	301239	Pawl, Height Adjust
5	56030	Screw, Hx Hd, Wd Fl 5/16-18 x 3/4 In.	51	302380	Tie Rod
6	122007	Screw, Hx Hd, 5/16-18 x 3/4 In.	52	121222	Cotter Pin
7	120638	Washer, Lock 5/16 In.	53	308339	Bracket, L. H. Front Hanger
8	120393	Washer, Flat, 11/32 In.	54	308345	Assembly, Front Lift Shaft
9	304481	Rod, Seat Support	55	308340	Bracket, R. H. Front Hanger
10	36368	Hair Pin, .073 Dia. x 1.13 In.	56	308343	Bracket, Hanger
11	305520	Seat Spring	57	308955	Assembly, Rear Lift Shaft
12	1084	Washer, Flat, 9/32 In.	58	316625	Decal Shift-n-go (Husq.).
13	180018	Screw, Hx Hd, 1/4-20 x 5/8 In.	59	180075	Screw, Hx Hd, 5/16-18 x 5/8 In.
14	1502	Nut, Lock, 1/4-20 Thd.	60	306401	Support, Shift Plate
15	306397	Fender Support, L. H.	61	56907	Cover, Seat Spring
16	316698	Decal, Husqvarna U.S.A.s	62	306294	Quadrant
17	55273	Nut, Hx, Wd Fl, Lk 5/16-18 Thd.	63	51335	Nut, Hx, Wd Fl Lk, 1/4-20 Thd.
18	304475	Seat Support	64	304728	Handle
19	304476	Support, Fender & Seat	65	120377	Nut, Hx 3/8-16 Thd.
20	302208	Bracket, Support Engage	66	300302	Screw, Hx Hd, Tap #10 x 1/2 In.
21	35497	Screw, Hx Wshr Hd Tap, 5/16-18 x 1/2 In.	67	306399	Fender Support, R. H.
22	311591	Decal, Decal Height EURO Elec/ Clutch	68	316329	Fender
23	274517	Flatwasher, 13/32 In.	69	995338	Screw, Hx, Wshr Hd, Tap 1/4-20 x 5/8 In.
24	120385	Flatwasher	70	316938	Operator's Manual (Not Illustrated) English
25	50634	Screw, Tap, 5/16-18 x 7/8 I	71	316939	Operator's Manual (Not Illustrated) French
26	307764	Decal, Gear Shift Neutral EURO	72	316693	Parts Manual (Not Illustrated) (English)
27	180020	Screw, 1/4-20 x 3/4 In			
28	311724	Decal, Fender Rear, Hood Husq.			
29	1498	Nut, Hx Ctrlk, 5/16-18 Thd.			
30	307763	Decal, Gear Shift 6 Speed EURO			
31	303227	Cable, Deck Lift			
32	48306	Pulley			
33	303230	Assembly, Pulley Bracket			
34	305522	Shoulder Bolt, 5/16-18 Thd.			
35	126211	Bolt, Carriage, 5/16-18 x 5/8 In.			
36	302205	Assembly, Upper Shaft			
37	302383	Quadrant			
38	9143	Lift Lever			
39	300171	Shoulder Bolt, 5/16-18 Thd.			
40	44108	Nut, Hx Wd Fl Lk 5/16-18 Thd.			
41	300310	Clevis Pin			
42	300311	E-Ring			
43	302357	Link			
44	36149	Shoulder Bolt, 5/16-18 Thd.			
45	45602	Washer			
46	58330	Actuator Rod			

TRACTOR REPAIR PARTS

46" TRACTOR MODEL NUMBER 4140G

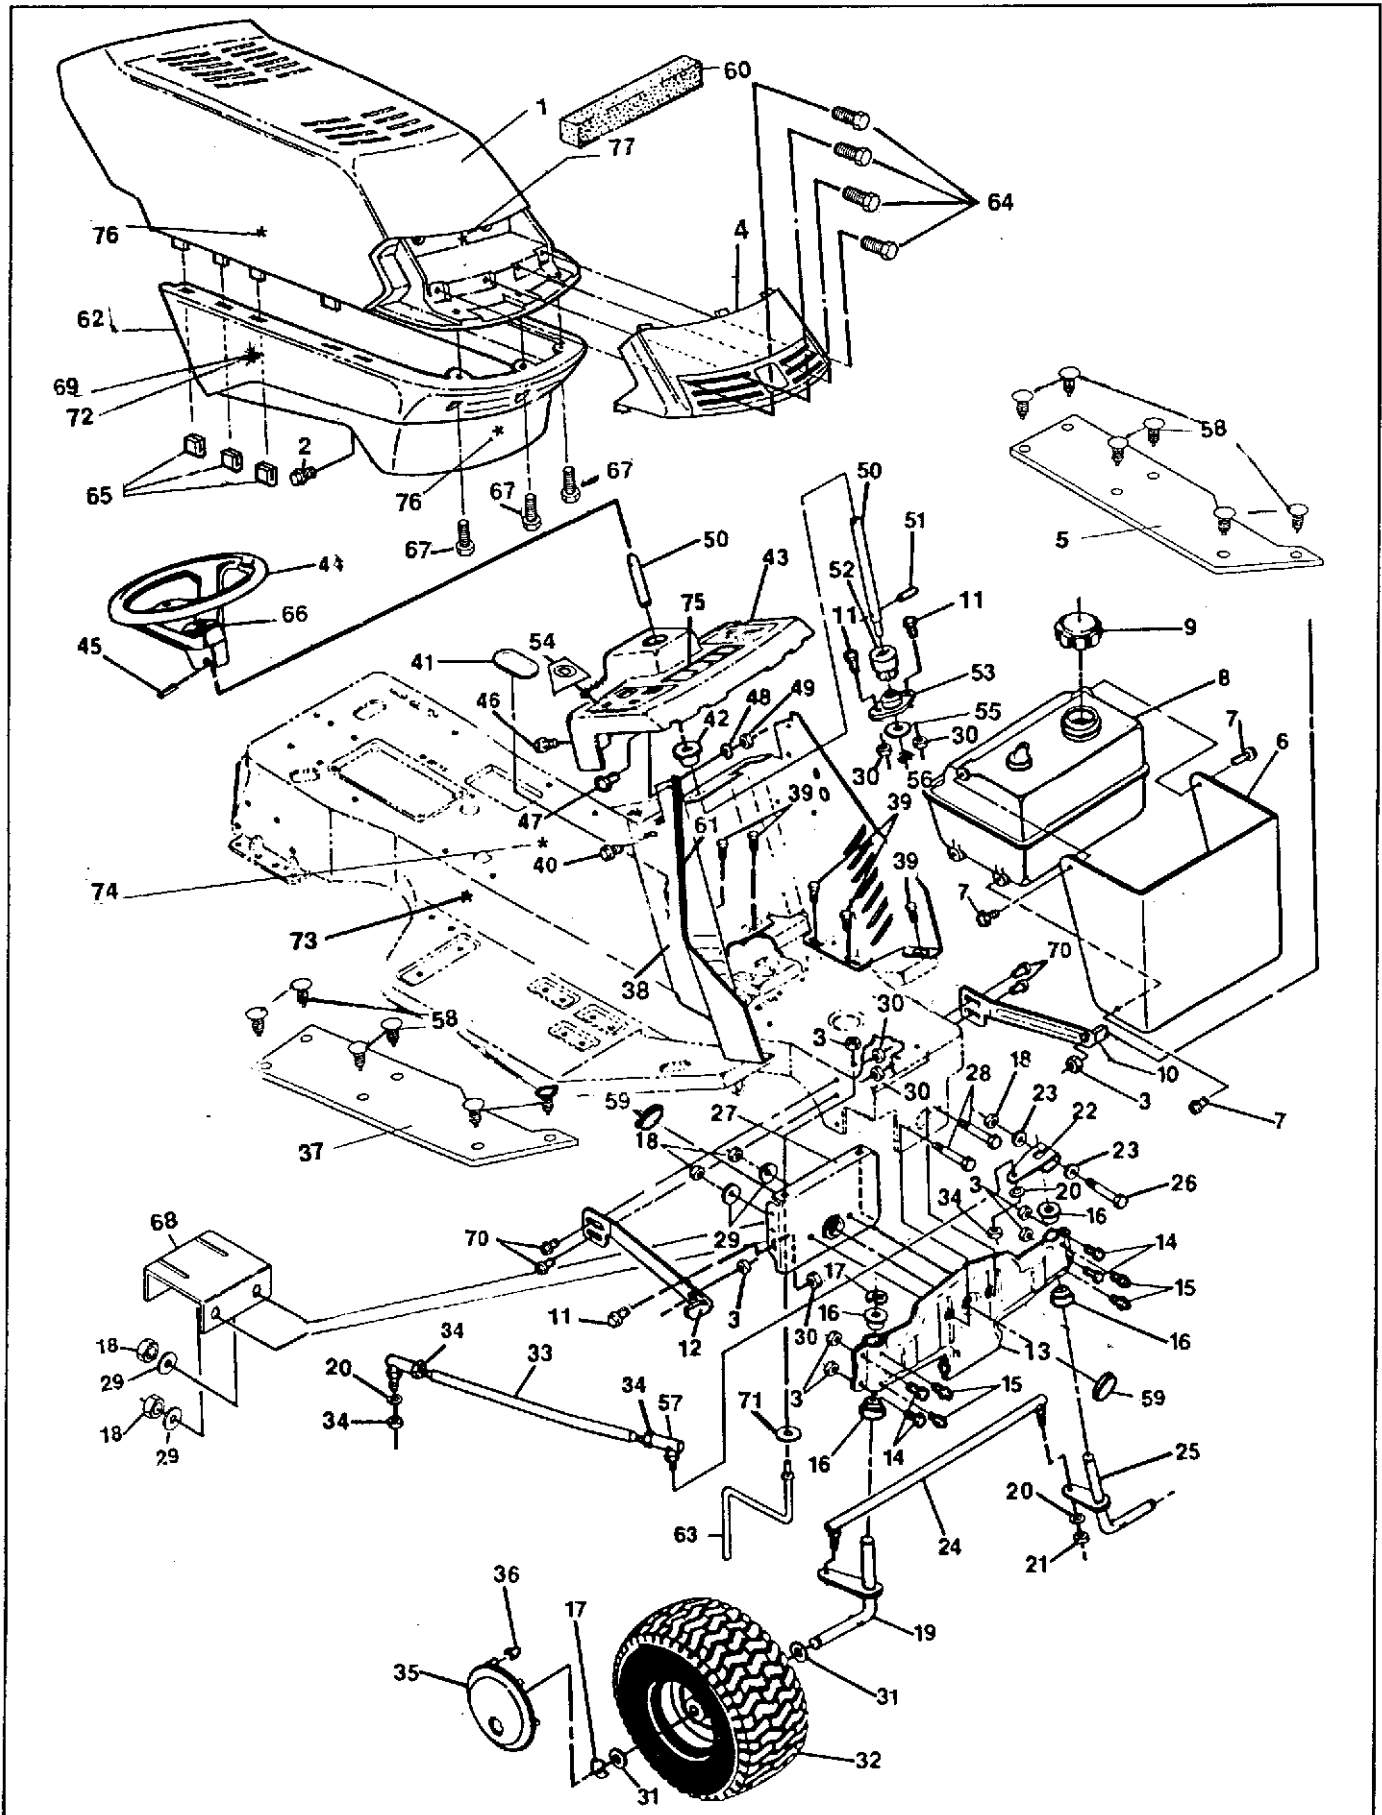

TRACTOR REPAIR PARTS


46" TRACTOR MODEL 4140G

Key No.	Part No.	Description	Key No.	Part No.	Description
1	310577	Hood	38	304702	Dash, Lower
2	25086	Shoulder Bolt, 5/16-18 Thd.	39	45263	Screw, Tap, 5/16-18 x 3/8 In.
3	1498	Nut, Hx, Ctrlk, 5/16-18 Thd.	40	995346	Screw, Self-Tap, 1/4-20 x 1/2 In.
4	306858	Lens, Headlight	41	305280	Cover
5	314885	Assembly, Foot Pad L. H.	42	303228	Bushing, Upper Steering
6	307437	Heat Shield	43	309199	Dash, Upper
7	300303	Screw, Hx Hd, Plastite 1/4 Dia. x 3/4 In.	44	303132	Steering Wheel
8	305820	Tank, Gas 1.5 Gal W/Sensor	45	456378	Pin, , Spring, 1/4 x 2 In.
	305804	Low Fuel Sensor	46	305850	Screw, Tap, 1/4-20 x 1/2 In.
9	12501	Cap, Fuel	47	120854	Screw, Hx Hd, 1/4-20 x 5/8 In.
10	309461	Bracket, Hood L. H.	48	120392	Washer, Flat, 9/32 In.
11	56030	Screw, Hx Hd, 5/16 -18 x 3/4 In.	49	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.
12	309460	Bracket, Hood R. H.	50	302307	Shaft, Steering
13	310670	Front Axle W/Bearings	51	302524	Pin, Dowel
14	180075	Screw, Hx Hd, 5/16-18 x 5/8 In.	52	302314	Pinion, Steering
15	706	Grease Fitting	53	302498	Bearing, Flange
16	302303	Bearing, Spindle	54	309195	Plate, Electric Clutch
17	36625	E-Ring	55	2968	Washer, Flat, 1/2 In.
18	1499	Nut, Hx, Ctrlk, 3/8-16 Thd.	56	20864	E-Ring
19	305340	Spindle, R. H.	57	57158	Ball, Joint, 3/8 Thd.
20	120382	Washer, Split, Lock 3/8 In.	58	311087	Ratchet Fastener
21	120369	Nut, Hx, 3/8-24 Thd.	59	307112	Plug, Front Axle
22	317019	Steering Arm, Upper	60	308115	Foam, Hood Baffle
23	996416	Washer, Flat, 25/64 In.	61	47453	Wide Trim 18 "
24	300328	Assembly, Tie Rod	62	306856	Grille
25	305339	Spindle, L.H.	63	300440	Belt Guide
26	180134	Screw, Hx Hd, 3/8-16 x 2-1/2 In.	64	312085	Screw, #4-24 x 1/2 In.
27	306103	Support Bracket, Front Axle	65	306857	Clip, Tinnerman
28	122207	Screw, Hx Hd, 3/8-16 x 3 In.	66	311728	Decal, Gunsight Cent. Steer Wheel
29	2483	Washer, Spring	67	300302	Screw, #10 x 1/2 In.
30	55273	Nut, Hx, Wd Fl Lk 5/16-18 Thd.	68	312904	Bracket, Stop
31	642	Washer, Flat, 3/4 In.	69	316634	Decal, Pin Stripe R.H..
32	^	Wheel & Tire Assembly, Front	70	53652	Screw, Hex Fl, 5/16-18 x 3/4 In.
	301140	Tire, Rear	71	138538	Washer, Internal Tooth
	312739	Wheel/With Bearing	72	316635	Decal, Pin Stripe L.H.
	24167	Valve Stem	73	311730	Decal, Wheel 4 Steer Husq.
	314416	Bearing	74	307772	Decal Oper Instr ERO Top Frame
33	302907	Drag Link	75	307280	Decal, Dash, Chg , Oil, Fuel, All Systems
34	124925	Nut, Hx, Jam, 3/8-24 Thd.	76	311724	Decal, Fender Rear, Hood, Husq.
35	306569	Hubcap, Front	77	310534	Decal, Reflector
36	306669	Clip, Hubcap			
37	314888	Assembly, Foot Pad R. H.			

(^) Order Parts Individually

TRACTOR REPAIR PARTS

46" TRACTOR MODEL NUMBER 4140G

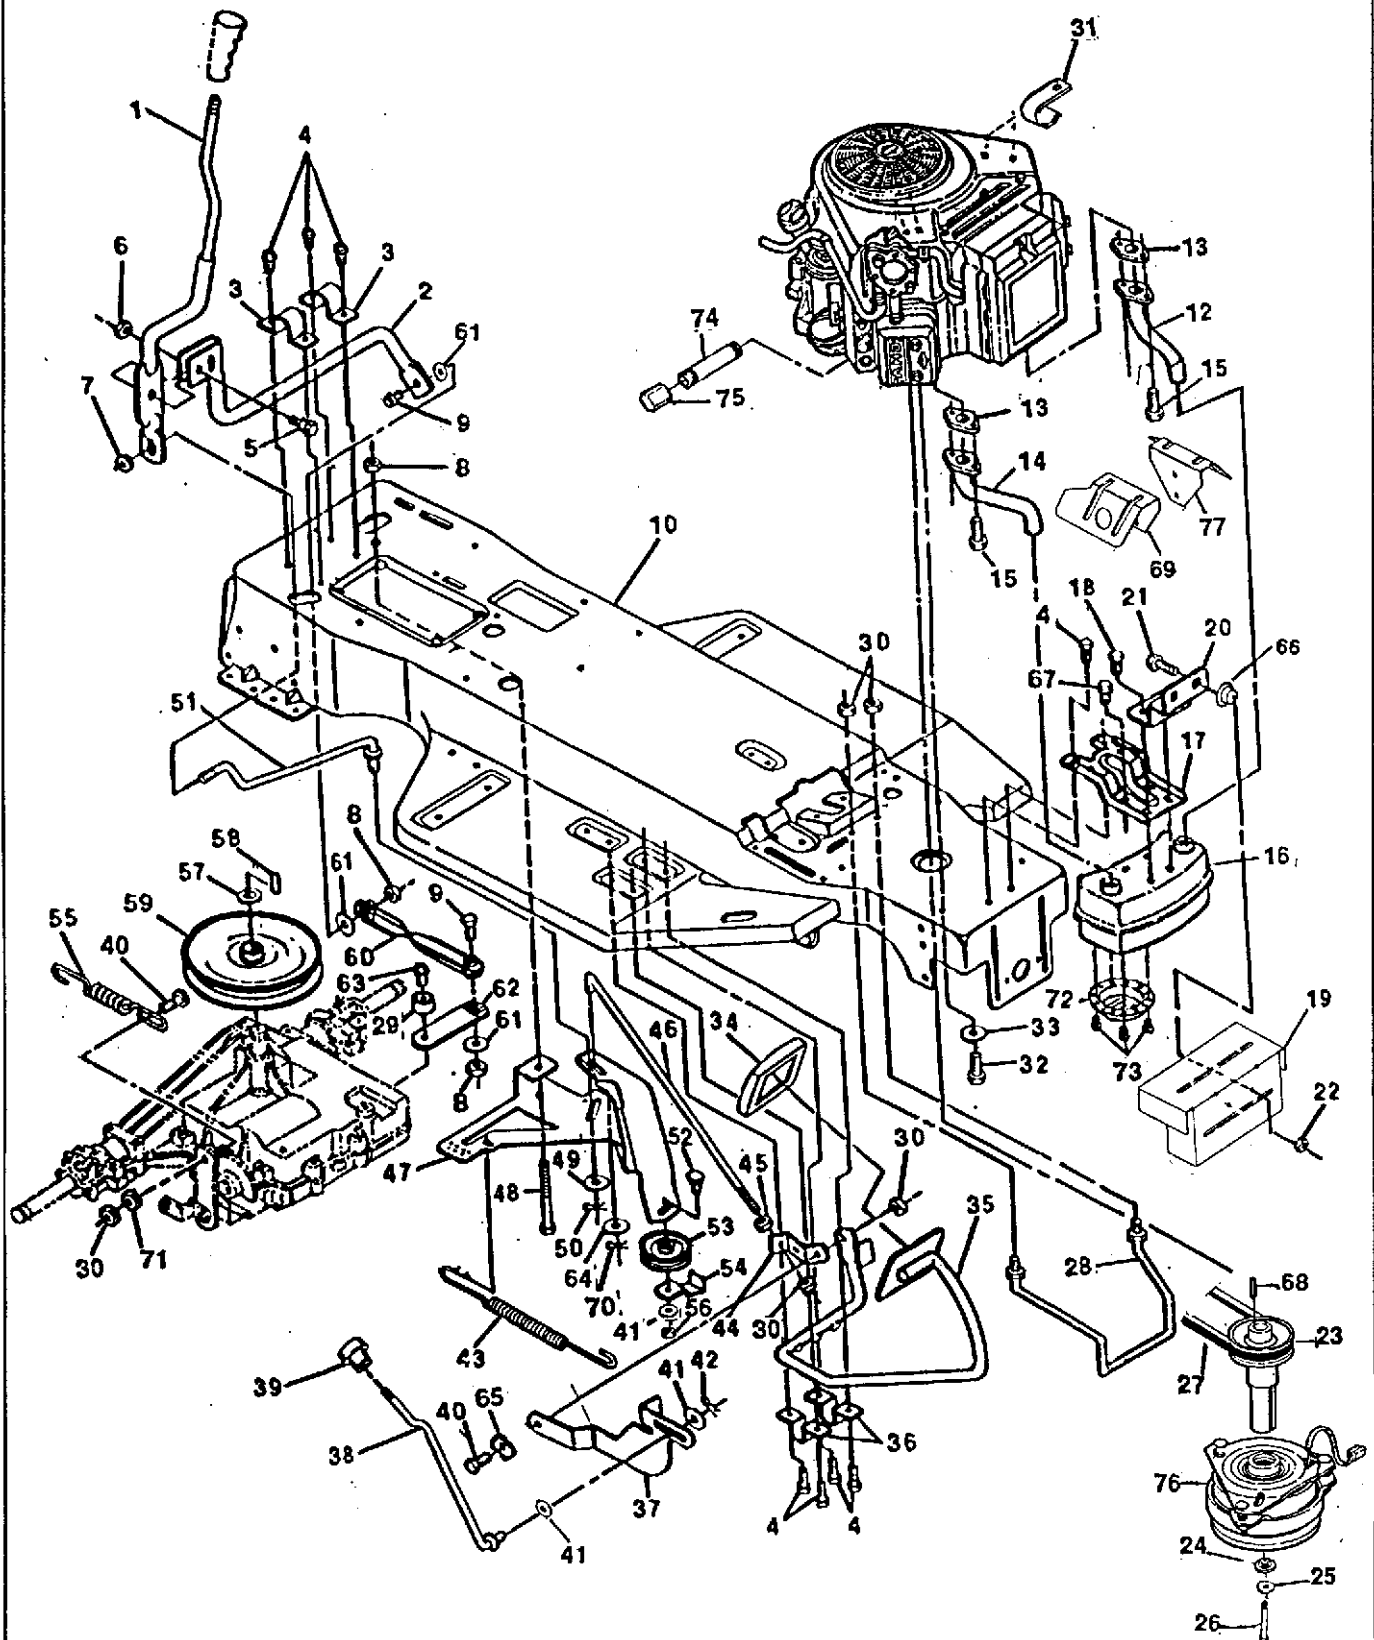


TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140G

Key No.	Part No.	Description	Key No.	Part No.	Description
1	304406	Tube Assembly, Shift Pivot	39	304367	Knob, Park Brake
2	304024	Tube Assembly, Shift	40	25086	Shoulder Bolt, 5/16-18 Thd.
3	302538	Clip, Shift Lever	41	120385	Washer, 9/16 In.
4	35497	Screw, Hx Hd, Wshr Tap, 5/16-18 x 1/2 In.	42	121223	Cotter Pin
5	304086	Shoulder Bolt	43	304209	Spring, Clutch
6	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.	44	304125	Bracket, Brake Rod
7	71046	Nut, Hx, Nylon, Lock 3/8-16 Thd.	45	271184	Nut, Hx, Keps, 5/16-18 Thd.
8	1499	Nut, Hx, Ctrlk, 3/8-16 Thd.	46	304212	Rod, Clutch
9	122145	Screw, 3/8-16 x 1-1/4 In.	47	304049	Arm, Idler
10	315823	Main Frame	48	51189	Shoulder Bolt, 3/8-16 Thd.
11		Engine 14 Horsepower B&S	49	274517	Washer, Flat, 13/32 In.
12	305555	Exhaust Tube, L. H.	50	36368	Hairpin
13		Gasket, Muffler (Engine Part)	51	304083	Rod, Shift-On-The-Go
14	305554	Exhaust Tube, R. H.	52	57325	Carriage Bolt, 3/8-16 x 2 In.
15		Screw, Sem, Engine Part	53	40223	Idler Sheave, Backside
16	305553	Muffler	54	304105	Belt Retainer
17	306577	Bracket Muffler	55	304130	Spring, Brake
18	995346	Screw, Hx Hd, Tap 1/4-20 X1/2 In.	56	45171	Nut, Flange, 3/8-16 Thd,
19	308144	Heat Shield, Muffler	57	22053	Retaining Ring
20	9796	Bracket, Transaxle	58	3021	Key, Woodruff, #606
21	126211	Bolt, Carriage, 5/16-18 X 5/8 In.	59	303109	Pulley
22	55273	Nut, Hx, Wd Fl, Lk 5/16-18 Thd.	60	309546	Shift Link
23	309388	Pulley Assembly, Engine	61	120394	Washer, Flat, 13/32 In.
24	302879	Bearing, Sleeve Sector Gear	62	302582	Shift Lever, Transaxle
25	120383	Washer, Split, Lock 7/8 In.	63	56255	Screw, Hx Hd, 1/4-28 X 3/4 In.
26	215649	Screw, Hx Hd, 7/16-20 X 5 -1/2 In.	64	120392	Flatwasher
27	303241	V-Belt, 90 In. Long	65	30289	Washer, Wave
28	310162	Belt Guide	66	309436	Push Nut, 5/16 Bolt Retainer
29	57157	Washer, Special	67	995338	Screw, Hex Hd Tap, 1/4-20 x 5/8 In.
30	1498	Nut, Hex, Ctrlk, 5/16-18 Thd.	68	305562	Key, Square 1/4
31	57569	Cable Clip	69	313044	Air Deflector
32	50947	Screw, Hx Hd Tap, 3/8-16 X1-1/4 In.	70	121222	Pin, Cotter
33	138489	Washer, 3/8 In.	71	308188	Washer
34	304490	Pad, Clutch/Brake, Molded	72	56472	Deflector
35	306083	Assembly, Clutch/Brake Arm	73	35287	Screw, Hx Wa Hd, #8-32 x 3/8 In.
36	313271	Bracket, Clutch/Brake Arm	74	307174	Nipple, 3/8-18 x 4 In.
37	304208	Lever, Park Brake	75	47828	Cap, Pipe
38	304217	Rod, Parking Brake	76	308950	Electric Clutch
			77	313043	Air Deflector

TRACTOR REPAIR PARTS

46" TRACTOR MODEL NUMBER 4140G

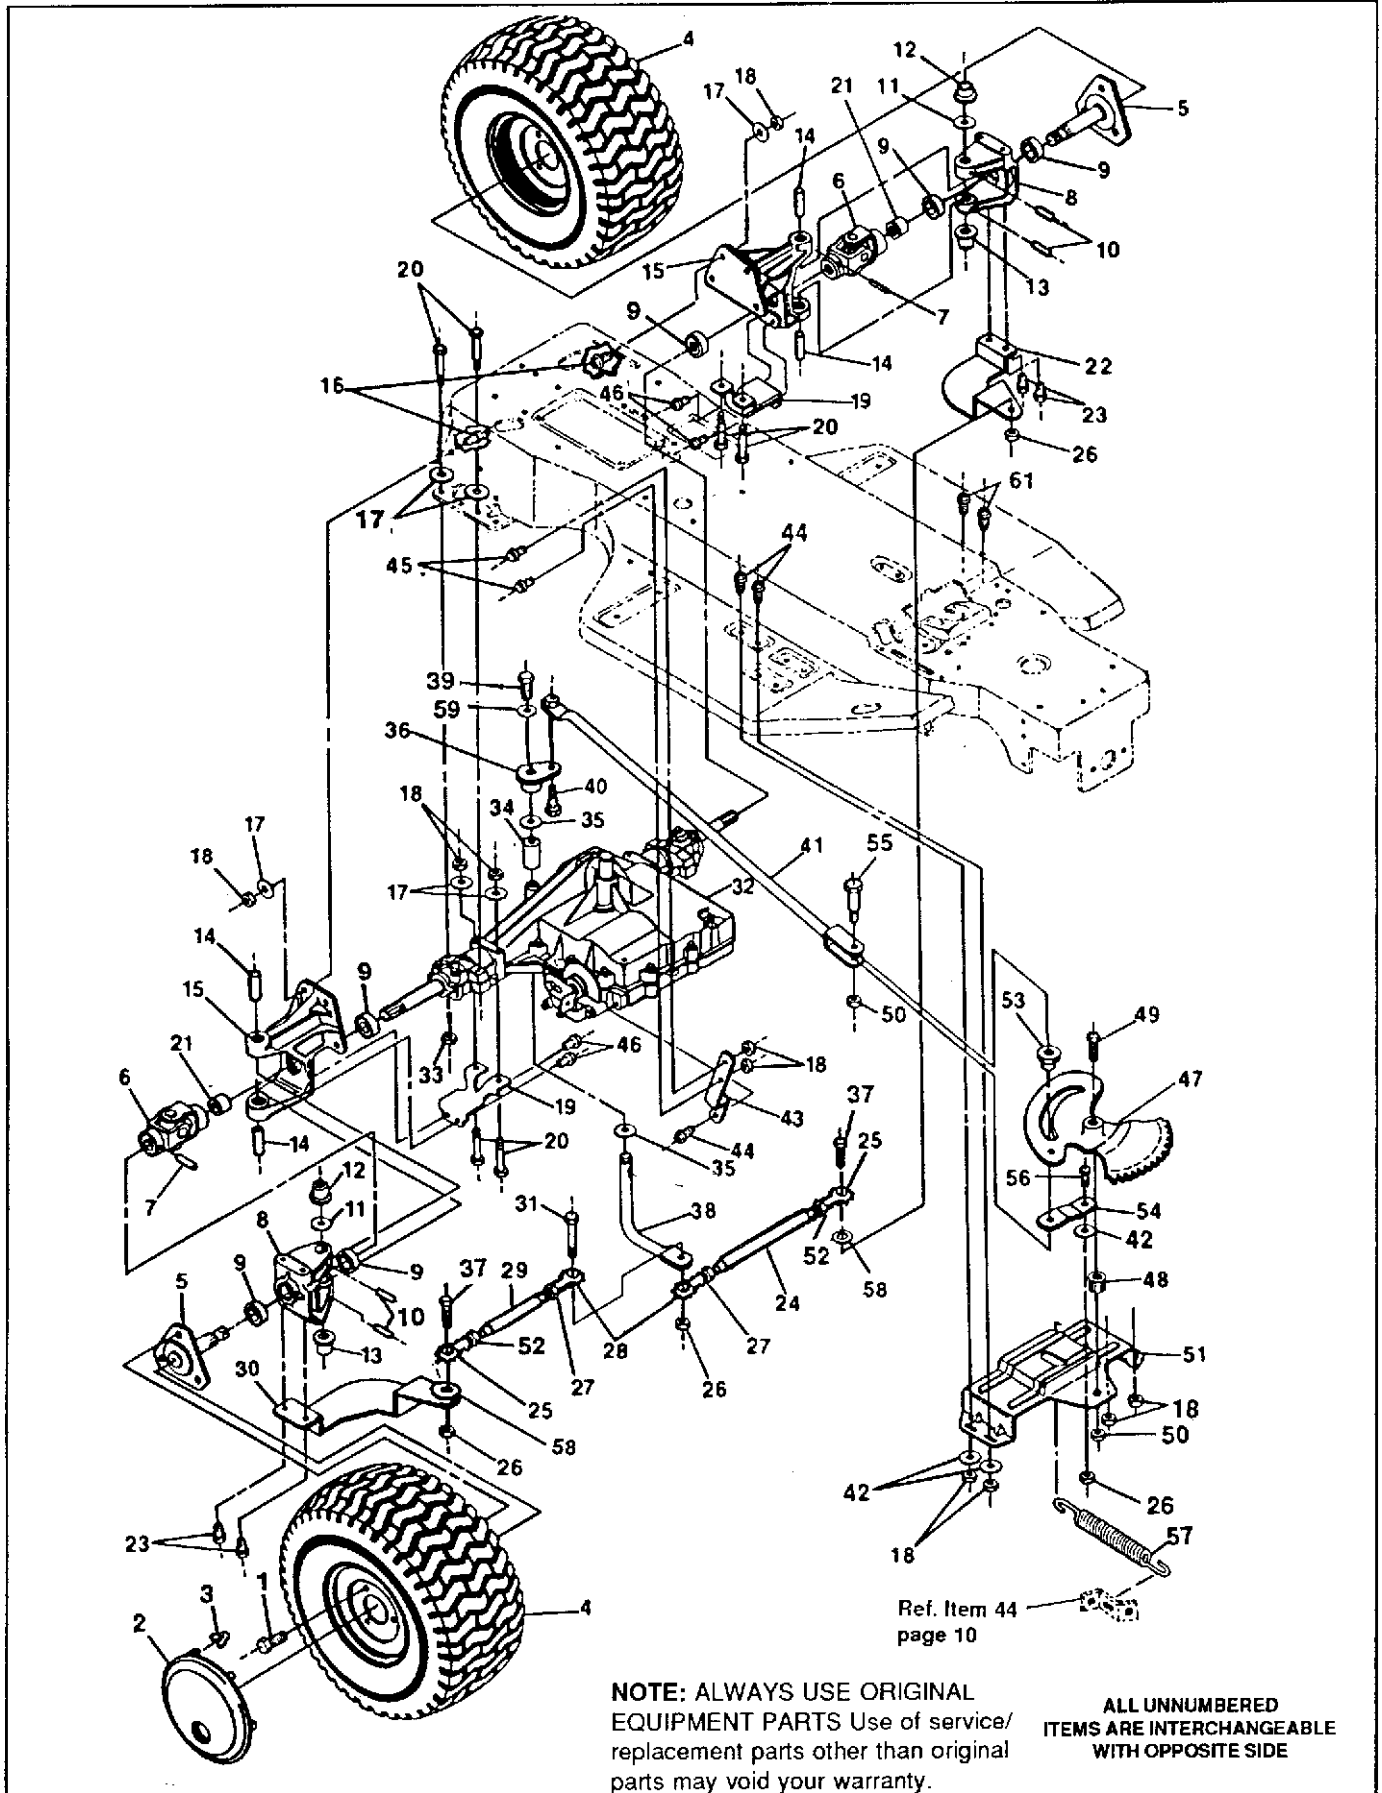

TRACTOR REPAIR PARTS


46" TRACTOR MODEL 4140G

Key No.	Part No.	Description	Key No.	Part No.	Description
1	123418	Screw, Hx Hd, 1/2-20 x 1/2 In.	33	44108	Nut, Hx, Wd Fl, Lk 5/16-18 Thd.
2	306570	Hubcap, 8 In.	34	304115	Spacer
3	306669	Clip, Hubcap	35	25177	Washer, Flat, 49/64 In.
4	^	Wheel & Tire Assembly, Rear	36	308719	Steering Pivot
	58276	Tire	37	181639	Screw, Hx Hd, 3/8-24 x 1-1/4 In.
	12467	Wheel	38	308720	Shaft, Steering Pivot
	24167	Valve Stem	39	421051	Screw, 5/16-24 x 1 In.
5	315480	Hub Assembly	40	12319	Bolt, Shoulder, 3/8-24 Thd.
6	12290	U-Joint Assembly	41	302593	Rod Assembly, Rear Wheel Steer
7	36311	Pin, Grooved, 1/4 x 1-1/2 In.	42	446363	Washer, Flat, 3/8 In.
8	12465	Bracket, Steering Pivot, Outer	43	304127	Bracket, Transaxle Stabilizer
9	12325	Bearing	44	35498	Screw, Hx Hd, Self-Tap, 5/16-18 x 3/4 In.
10	456722	Pin, Spring, 1/4 x 1-1/2 In.	45	180075	Screw, Hx Hd, 5/16-18 x 5/8 In.
11	21682	Washer, Flat	46	451814	Screw, Hx Hd, Self-Tap, 5/16-18 x 5/8 In.
12	12288	Bushing, Shouldered	47	302877	Assembly, Sector Gear
13	12321	Bushing, Shouldered	48	302878	Bushing, Sector Gear
14	12289	Pin, Steering Hinge	49	304296	Screw, Hx Hd, 1/2-20 x 2-3/8 In.
15	12485	Bracket, Steering Pivot, Inner	50	274654	Nut, Hx, Ctrlk, 1/2-20 Thd.
16	122017	Screw, Hx Hd, 5/16-18 x 1 In.	51	308341	Plate, 4-Wheel Steer Pivot
17	120393	Washer, Flat, 11/32 In.	52	308399	Nut, Jam, 3/8-24 Thd.
18	1498	Nut, Hx, Ctrlk 5/16-18 Thd.	53	304116	Cam Yoke Roller
19	306001	Bracket, Transaxle Mounting	54	302594	Arm, Roller Swing
20	180089	Screw, Hx Hd, 5/16-18 x 2-1/4 In.	55	304122	Shoulder Bolt, Cam Roller
21	304123	Spacer	56	302588	Shoulder Bolt, Cam Follower Arm Pivot
22	306218	Arm, Rear Wheel Steer, L. H.	57	35410	Spring, Clutch/Brake Pedal Return
23	39728	Screw, Self-Tap, 3/8-16 x 3/4 In.	58	120382	Washer, Split Lock
24	308446	Tie Rod, L. H.	59	45602	Washer, Flat
25	308384	Tie Rod End, L. H.	60	3021	Woodruff Key, #606
26	412349	Nut, Hex, Ctrlk, 3/8-24 Thd.	61	35497	Screw, Tap, 5/16-18 x 1/2 In.
27	124925	Nut, Hex, Jam, 3/8-24 Thd.			
28	304260	Rod End			
29	308447	Tie Rod End, R. H.			
30	306217	Arm, Rear Wheel Steer, R. H.			
31	181646	Screw, Hx Hd, 3/8-24 x 1-3/4 In.			
32	Transaxle	Contact nearest dealer			

(^) Order Parts Individually

TRACTOR REPAIR PARTS

46" TRACTOR MODEL NUMBER 4140G

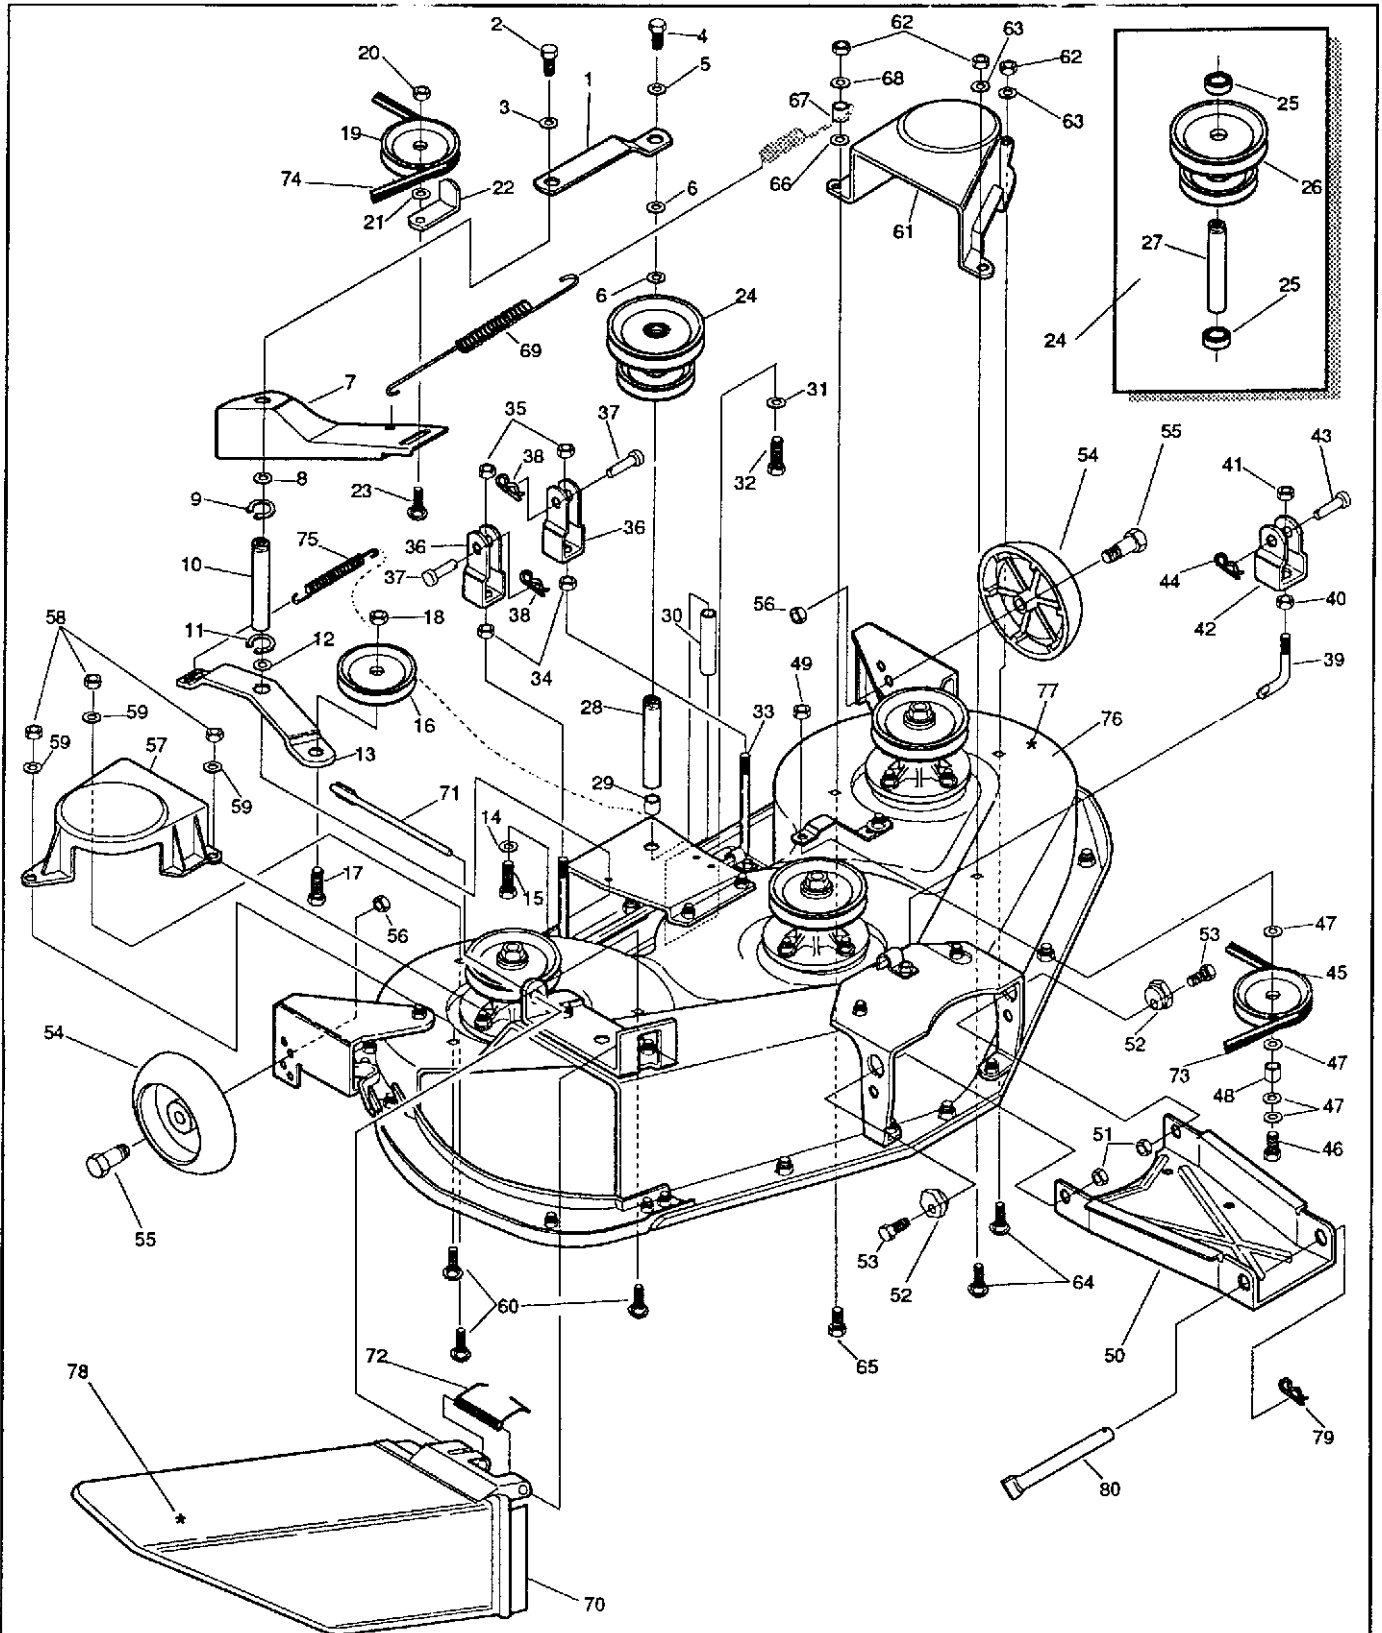

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/ replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140G

Key No.	Part No.	Description	Key No.	Part No.	Description
1	306845	Bracket, Jackshaft	44	56180	Hair Pin
2	181596	Screw, 5/16-24x.88 HHC	45	303030	Idler Pulley
3	120638	Washer, Splitlock, .328x.60x.11	46	122194	Screw, 3/8-16 x 2.50
4	39573	Screw, 3/8-24 x 1.00 Nylon	47	996416	Washer, Flat
5	120382	Washer, Splitlock	48	305309	Spacer
6	2483	Washer, .391x2.25Dx.07	49	1499	Nut, 3/8-16 Centerlock
7	309230	Bracket, Idler	50	311941	Channel Drawbar
8	40677	Washer, Flat .640x1.25x.06	51	1498	Nut, 5/16-18 Centerlock
9	302270	Ring, Retaining	52	58247	Adjusting Nut
10	302272	Idler Shaft	53	122017	Screw, 5/16-18 x 1.00 In.
11	302270	Ring, Retaining	54	302611	Wheel
12	40677	Washer, Flat .640x1.25x.06	55	23763	Shoulder Bolt, 3/8-16
13	306847	Bracket, Idler	56	1499	Nut, 3/8-16 Centerlock
14	120638	Washer, Splitlock, .328x.60x.11	57	304817	Guard, Belt R.H.
15	181596	Screw, 5/16-24x.88	58	1502	Nut, 1/4-20 Centerlock
16	303030	Pulley, Idler	59	120392	Washer, Flat
17	122168	Screw, 3/8-16x 1-3/4 In.	60	36602	Carriage Bolt, 1/4-20 x 5/8 In.
18	1499	Nut, 3/8-16 Centerlock	61	304792	Cover, Belt LH
19	310326	Pulley, Idler	62	1502	Nut, 1/4-20 Centerlock
20	120377	Nut, Hex, Ctrlk, 3/8-16 Thd.	63	120392	Washer, Flat
21	996416	Washer, Flat .391x1.00x.125	64	36602	Carriage Bolt, 1/4-20 x 5/8 In.
22	300844	Belt Retainer	65	180024	Screw, 1/4-20 x 1.25 HHC
23	57325	Bolt, 3/8-16 x 2.00 Carriage	66	120392	Washer, Flat
24	309107	Shaft, Assy. Jack	67	50520	Spacer
25	49562	Bearing, Ball	68	54569	Flatwasher
26	302142	Pulley, Assy.	69	309253	Spring
27	302147	Spacer Tube	70	311831	Chute
28	302242	Jackshaft	71	305251	Rod, Pivot
29	302278	Spacer Tubing, 46" Deck	72	314975	Torsion Spring
30	312270	Spacer Tube 46" Deck	73	302290	Belt, V 4L
31	39573	Washer, Splitlock, .393x.68x.10	74	302291	Belt, V 5L 63.70
32	71015	Screw, 3/8-24 x 1 In.	75	301464	Tension Spring
33	302644	Rod, Lift 46" Deck Long	76	315806	Deck, Mower Assy.
34	120238	Nut, 1/2-13 Hex Jam	77	68249	Decal, No Step
35	109527	Nut, 1/2-13 Square	78	68547	Decal, Cut Hand
36	304443	Clevis	79	56180	Hair Pin
37	300317	Clevis Pin	80	302963	Rod, Draw Bar
38	56180	Hair Pin			
39	302899	Rod, Lift Front Short			
40	120238	Nut, 1/2-13 Jam			
41	109527	Nut, 1/2-13 Square			
42	304443	Clevis			
43	300317	Clevis Pin			

TRACTOR REPAIR PARTS

46" TRACTOR MODEL NUMBER 4140G

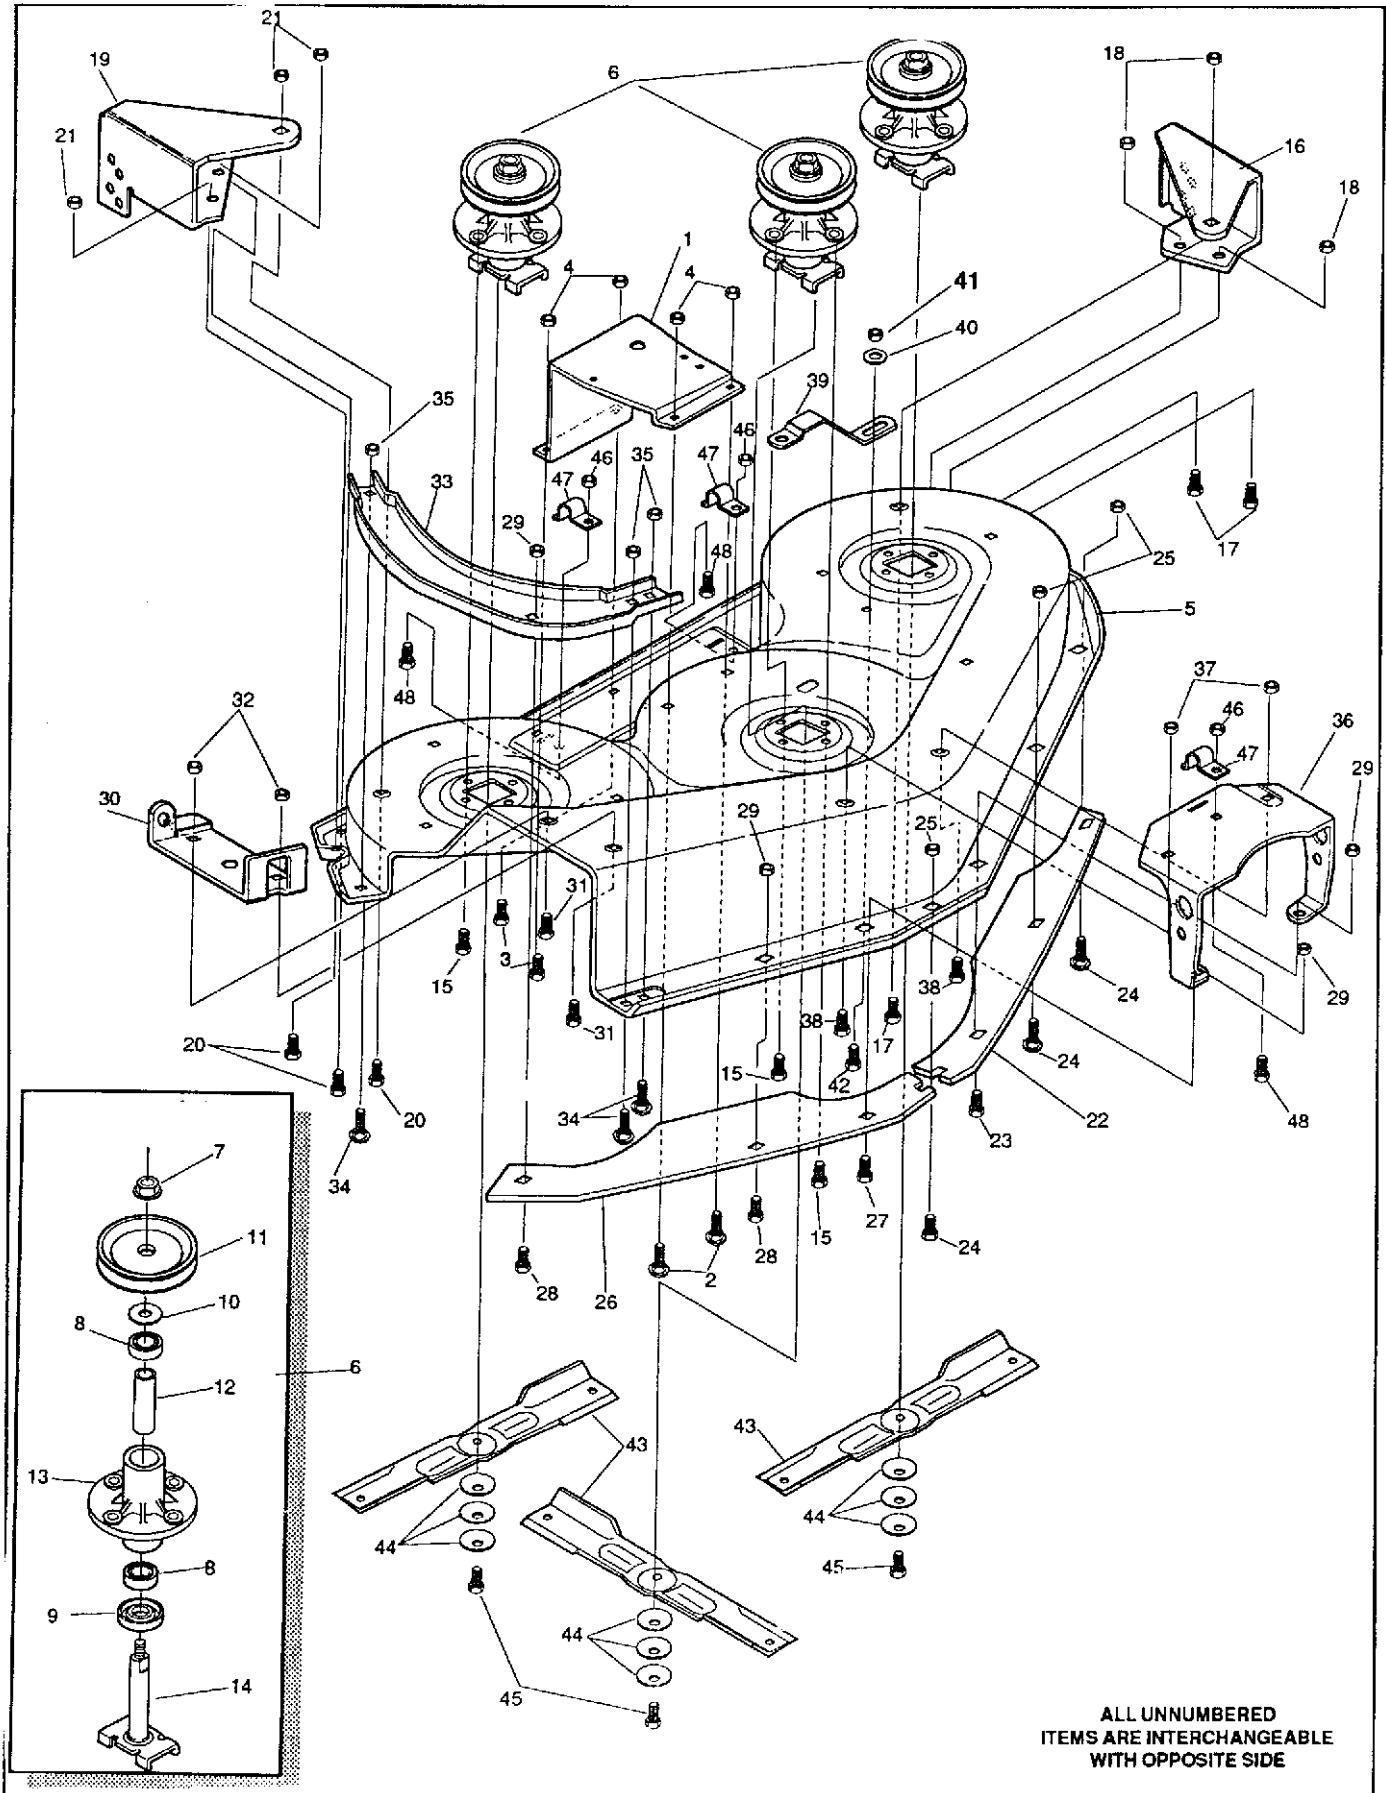

ALL UNNUMBERED
ITEMS ARE INTERCHANGEABLE
WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140G

Key No.	Part No.	Description	Key No.	Part No.	Description
1	312699	Support Bracket 46"	25	1498	Nut, 5/16-18 Centerlock
2	126211	Bolt, 5/16-18 x 5/8 In. Carr.	26	312706	Baffle RH 46" Deck
3	180075	Screw, 5/16-18 x .63 In.	27	180075	Screw, 5/16-18 x 5/8 In.
4	1498	Nut, 5/16-18 Centerlock	28	126211	Carriage Bolt, 5/16-18 x 5/8 In.
5	313229	Mower Deck 46" Sus.SD	29	1498	Nut, 5/16-18 Centerlock
6	312270	Quill Assy.	30	312702	Bracket Chute Mount
7	1282	Nut, 7/16-20 Wide Fl. Lock	31	180075	Screw, 5/16-18 x 5/8 In.
8	49562	Bearing, Ball	32	1498	Nut, 5/16-18 Centerlock
9	50616	Dust Shield	33	302868	Brace, Skid
10	56280	Spacer	34	126211	Carriage Bolt, 5/16-18 x 5/8 In.
11	312283	Quill Pulley	35	1498	Nut, 5/16-18 Centerlock
12	58128	Spacer, LH & RH Quill	36	312705	Lift Support Bracket
13	58162	Casting LH	37	1498	Nut, 5/16-18 Centerlock
14	302295	Saddle & Shaft Assy.	38	180075	Screw, 5/16-18 x 5/8 In.
15	50634	Screw, 5/16-18 x .87 Taptite	39	314020	Support Bracket
16	312708	Bracket Gauge Wheel L.H.	40	120393	Flatwasher
17	180075	Screw, 5/16-18 x .63 In.	41	1498	Nut, 5/16-18 Centerlock
18	1498	Nut, 5/16-18 Centerlock	42	180075	Screw, 5/16-18 x 5/8 In.
19	312700	Bracket Gauge Wheel R.H.	43	317071	Balde, 16/13 High-Lift
20	180075	Screw, 5/16-18 x .63In.	44	2483	Washer, Bellville
21	1498	Nut, 5/16-18 Centerlock	45	39573	Screw, 3/8-24 x 1.00 Nylock
22	312710	Baffle 46" Deck	46	1498	Nut, 5/16-18 Centerlock
23	180075	Screw, 5/16-18 x .63 In.	47	312701	Clip
24	126211	Carriage Bolt, 5/16-18 x 5/8 In.	48	180075	Screw, 5/16-18 x 5/8 In.

TRACTOR REPAIR PARTS

46" TRACTOR MODEL NUMBER 4140G

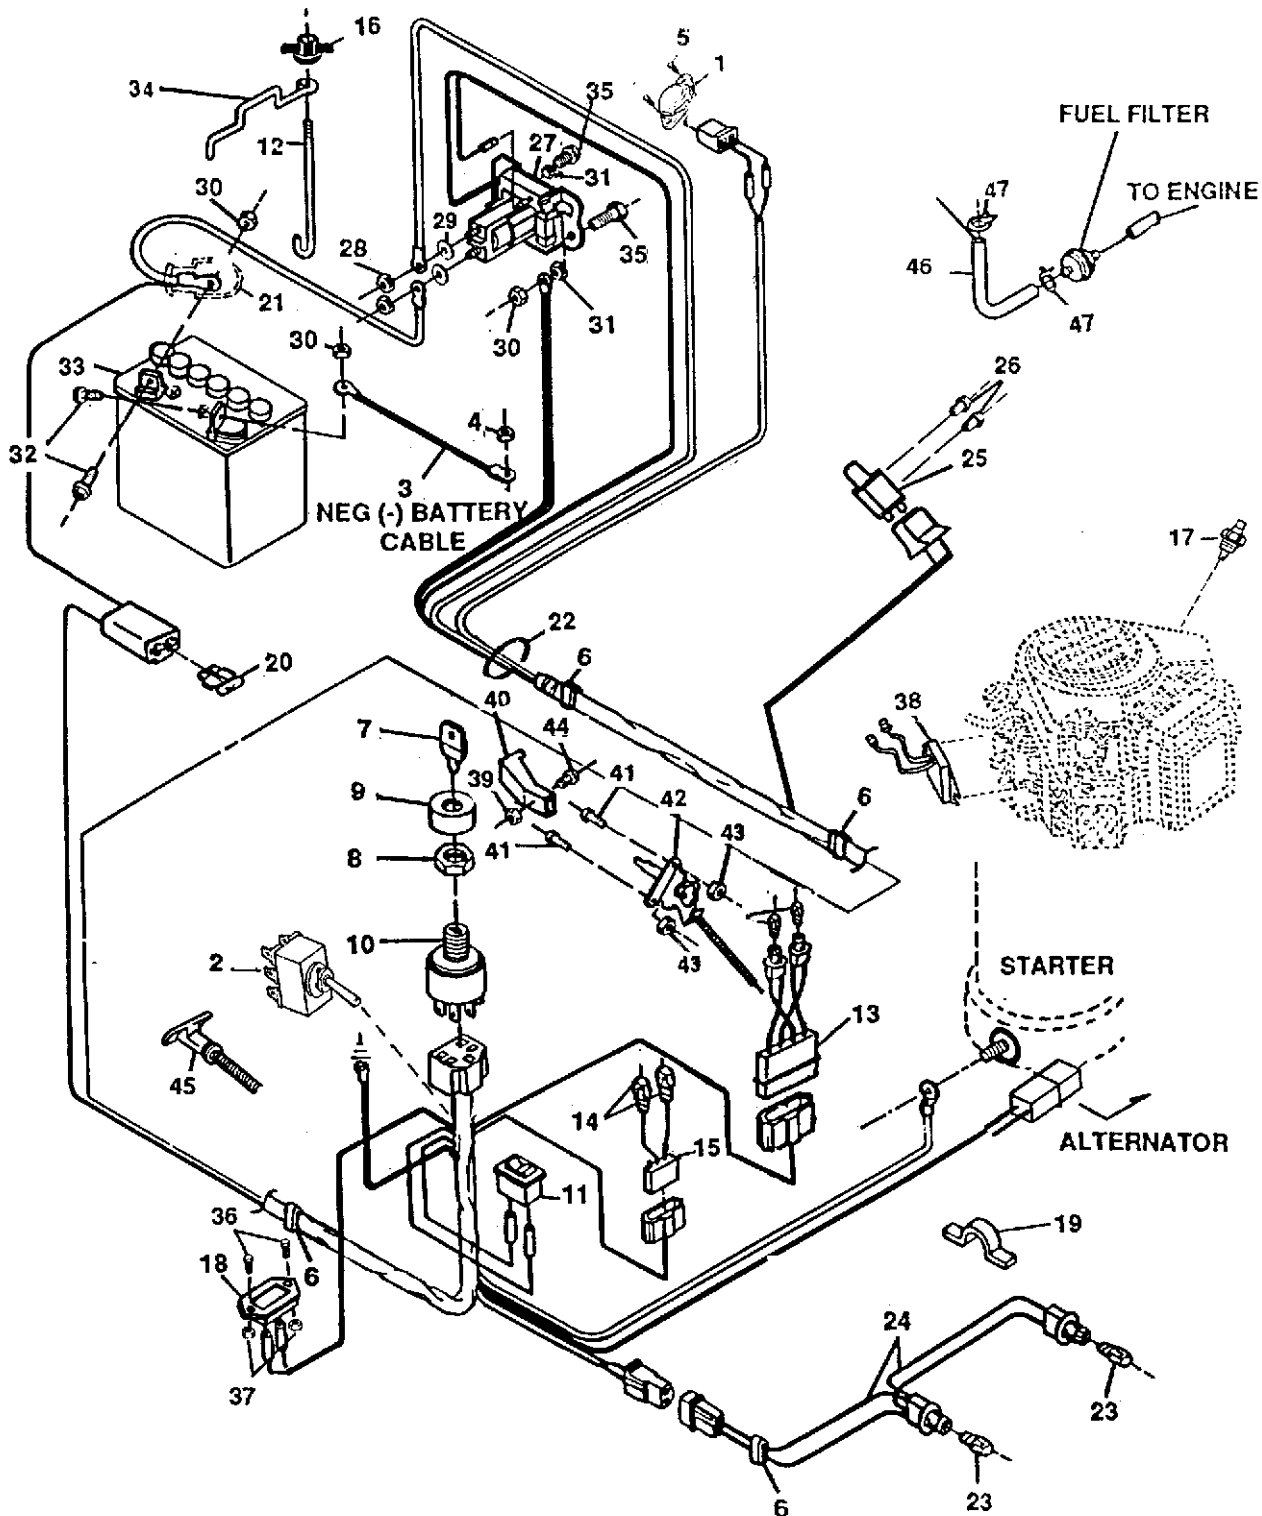

NOTE: ALWAYS USE ORIGINAL EQUIPMENT PARTS Use of service/replacement parts other than original parts may void your warranty.

ALL UNNUMBERED ITEMS ARE INTERCHANGEABLE WITH OPPOSITE SIDE


TRACTOR REPAIR PARTS

46" TRACTOR MODEL 4140G

Key No.	Part No.	Description	Key No.	Part No.	Description
1	57547	Seat Switch	28	120368	Nut, Hx 5/16-24 Thd.
2	309285	Switch, Elec./Clutch Actuator	29	138485	Washer, Lock 5/16 In.
3	55511	Cable, Battery, Negative	30	271172	Nut, Hx, Keps, 1/4-20 Thd.
4	271184	Nut, Hx, Keps, 5/16-18 Thd.	31	1502	Nut, Hx, Ctrlk, 1/4-20 Thd.
5	160505	Screw, 1/4-20 x .38	32	120854	Screw, 1/4-20 x 5/8 In.
6	57444	Tie Cable	33	306694	Battery
7	300626	Key, Ignition Switch	34	302912	Bracket, Battery Hold-Down
8	300193	Nut, Switch	35	187745	Screw, 1/4-20 x 3/4 In.
9	300194	Boot, Switch	36	308347	Screw, #6-32 x .50
10	305720	Switch, Ignition	37	271482	Nut, Hx Keps 6-32
11	300334	Switch, Light	38	315602	Regulator, Sen. Volt BS with Sensor
12	57551	Rod, Battery Hold-Down	39	120622	Nut, Hex. #8-32 Thd.
13	305701	Lamp Holder,Low Fuel and Oil Pressure	40	304439	Knob, Throttle Control
14	57769	Bulb,Indicator	41	159943	Screw #10-24 x 5/8
15	305702	Lamp Holder,All Systems Go and Charge	42	307362	Throttle Control
16	310067	Wingnut	43	308459	Nut, Hex, Nylon Lock #8-32 x 3/8 In.
17	314797	Oil Sensor	44	159585	Screw,Ph, Pn, #8-32 x 3/8 In.
18	304739	Minature Hour Meter	45	307113	Choke Control
19	41482	Press Clip	46	47452	Gas Line
20	302031	Fuse, 15A-32V, Spade Type	47	47345	Clamp, Gas Line
21	308201	Boot, Rubber (Battery Cable)			
22	315695	Wire Harness			
23	52572	Bulb Headlamp			
24	303064	Assembly, Light Wire			
25	57211	Switch			
26	57220	Screw, Pn Hd, Tap #12 x 1/2 In.			
27	310966	Solenoid			

FOR MODELS 4140H & 4140G

For Husvarna Parts Call 606-678-9623 or 606-561-4983

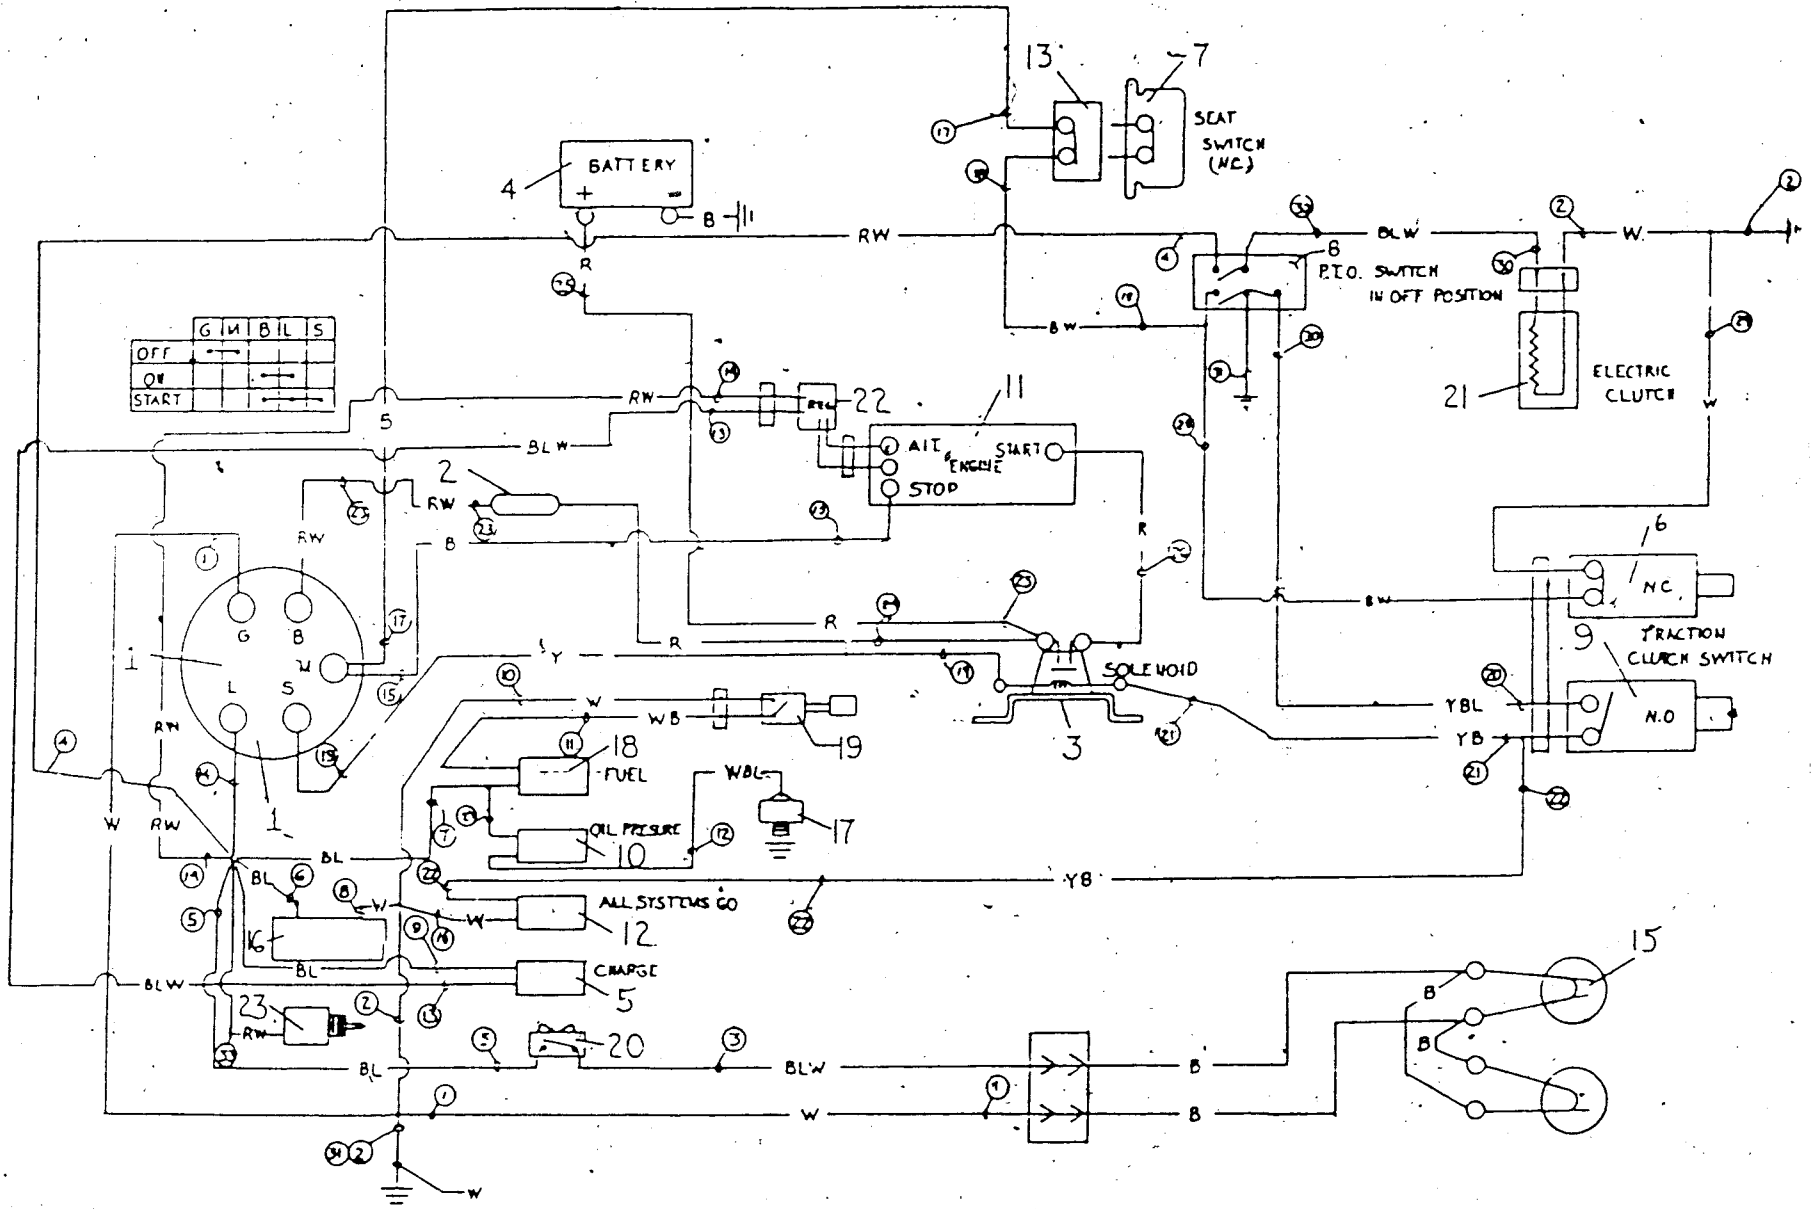

MODELS 4140H & 4140G CONT.

W= WHITE
R= RED
B= BLACK
Y= YELLOW
BL= BLUE
BW= BLACK/WHITE
RW= RED/WHITE
WB= WHITE/BLACK
YB= YELLOW/BLACK
WBL= WHITE/BLUE
YBL= YELLOW/BLUE
BLW= BLUE/WHITE

1 IGNITION SWITCH
2 FUSE-25 AMP B
3 SOLENOID
4 BATTERY
5 ALTERNATOR LIGHT
6 **CLUTCH SWITCH (SAFETY CIRC. HYDRO)
7 SEAT SWITCH (SAFETY CIRCUIT)
8 SWITCH, ELECTRIC P.T.O.
9 CLUTCH SWITCH (START CIRCUIT)
10 WARNING LIGHT, CLUTCH & MOWER
11 ENGINE
12 WARNING LIGHT, CLUTCH & MOWER
13 *PLUG, SEAT SWITCH
14
15 HEADLIGHTS
16 **HOUR METER
17 OIL PRESSURE SWITCH
18 WARNING LIGHT-LOW FUEL
19 LOW FUEL SWITCH
20 HEAD LIGHT SWITCH
21 ELECTRIC CLUTCH
22 REGULATOR
23 AFTER FIRE SOLENOID

*SWITCH PLUG CLOSES CIRCUIT
**IF SO EQUIPPED