

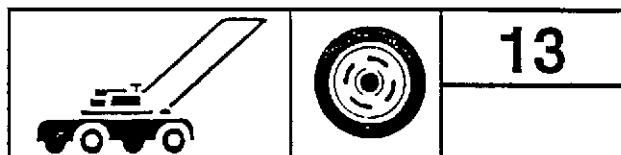


For Husqvarna Parts Call 606-678-9623 or 606-561-4983

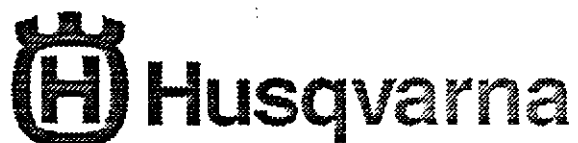

LTH140



HN14H42A

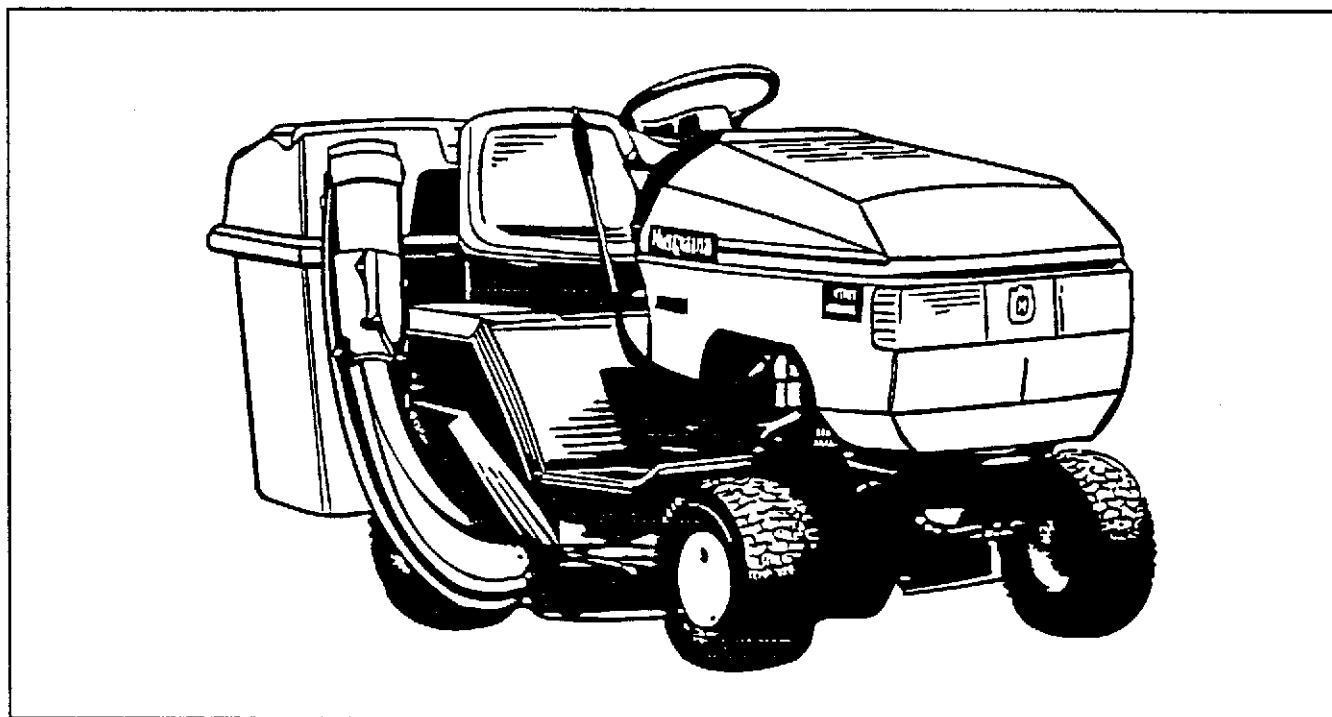

1.1994
Spare parts

Operator's Manual 532 14 15-63

For Husqvarna Parts Call 606-678-9623 or 606-561-4983
14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
SCHEMATIC

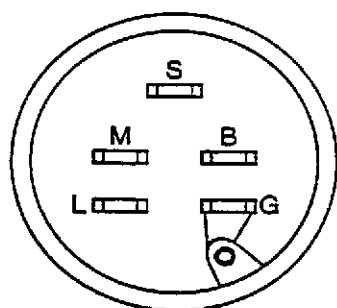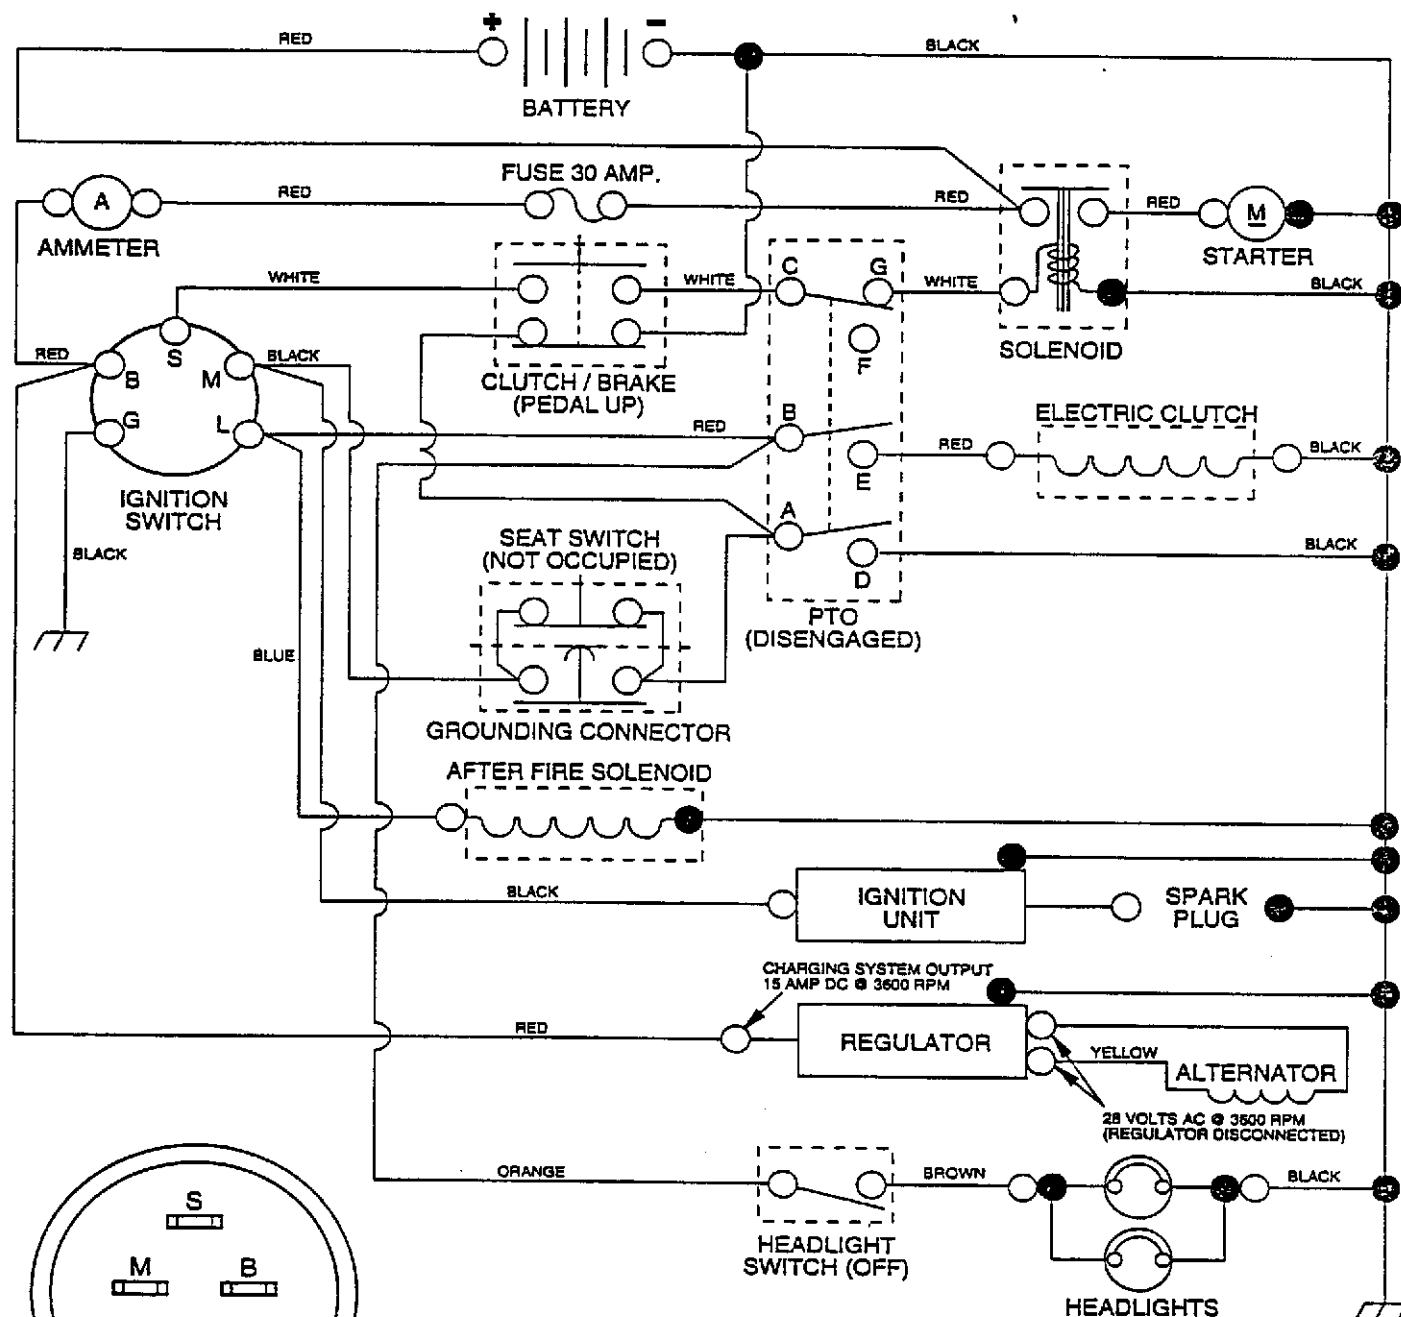

IGNITION SWITCH


POSITION	CIRCUIT
OFF	M + G
ON	B + L
START	B + S + L

NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS

WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING

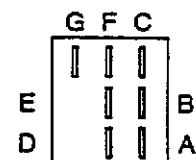


PTO SWITCH

POSITION	CIRCUIT
OFF	C + G
ON	C + F, B + E, A + D

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
ELECTRICAL

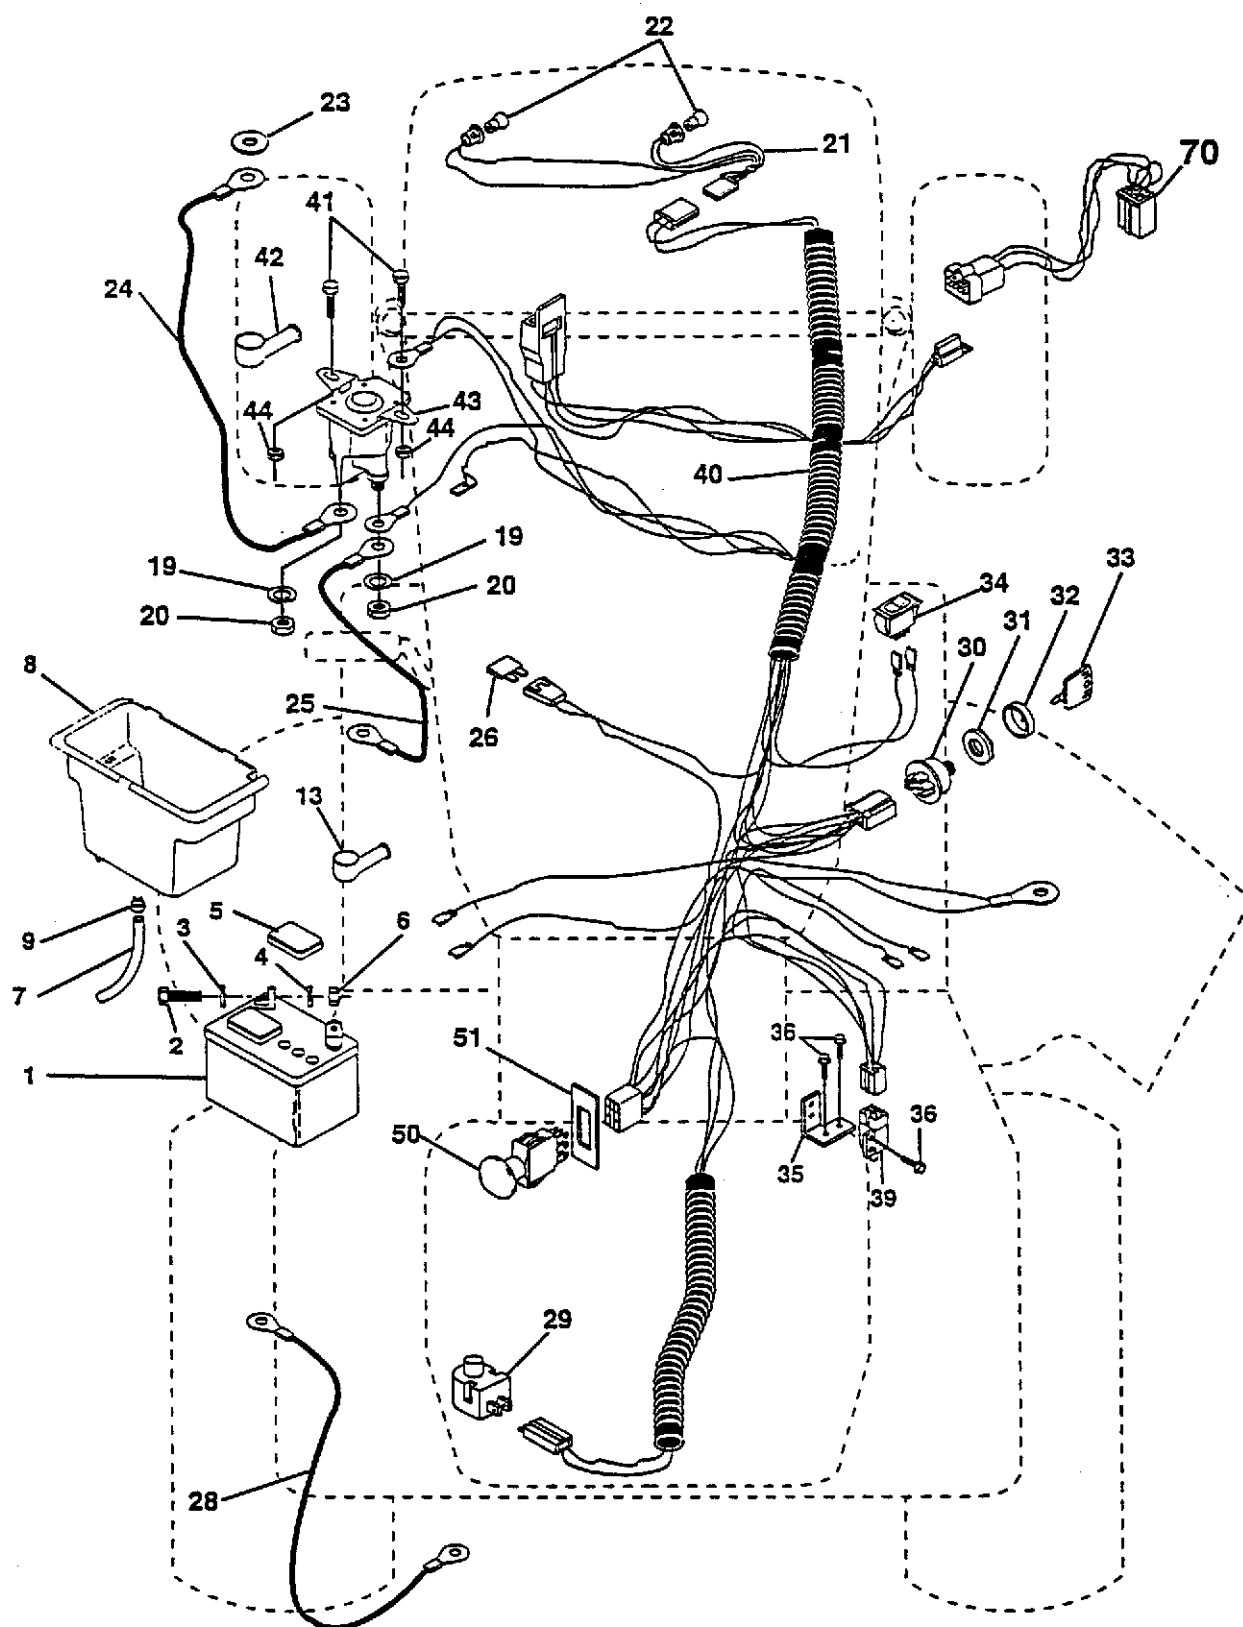

For Husqvarna Parts Call 606-678-9623 or 606-561-4983

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	532121537	Battery 12 Volt 30 Amp
2	874760412	Bolt Hex Hd 1/4-20unc X 3/4
3	819091016	Washer 9/32 X 5/8 X 16 Ga
4	810040400	Washer Lock Hvy Helical 1/4
5	532121264	Caps Battery 20/25/30 Amp
6	873220400	Nut Fin Hex 1/4-20 Unc
7	532109238	Tube Plastic 12"
8	532133753	Case Battery w/o Lid
9	532109596	Clamp Hose Olive
13	532124783	Cover, Terminal
19	810090400	Washer Lock 1/4
20	873350400	Nut Jam Hex 1/4-20 Unc
21	532136850	Harness Socket Light
22	532004152	Bulb, Light # 1156
23	811150400	Washer, Lock Int. Tooth 1/4
24	532124770	Cable Battery 6ga 22" red
25	532124964	Cable Battery 6ga 39" Red
26	532108824	Fuse 30 Amp Auto Green
28	532124773	Cable Ground 6ga 12"black
29	532121305	Switch Plunger Nc Gray
30	532140399	Switch Ign 3 pos
31	532140400	Nut Ignition
32	532141226	Cover Sw Key
33	532140401	Key Ign Molded Generic
34	532110712	Switch Light Blk Blk Red
35	532108236	Bracket Switch Clutch
36	817021008	Screw Hex Tapping # 10-24 X 1/2
39	532109553	Switch Interlock Clutch
40	532140421	Harness Ign Kohl Fend HI Amm
41	871110408	Bolt Fin Hex 1/4-20uncx1/2 Gr5
42	532131563	Cover Terminal Red
43	532138406	Solenoid
44	87360400	Nut Keps Hex 1/4-20 Unc
45	532122822	Ammeter Rectangular
50	532140404	Switch PTO 3 pdt deltg
51	532140405	Ring Retainer PTO
70	532140426	Harness Engine Koh. cmd I .15AR

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm


REPAIR PARTS

Exploded view diagram of a mechanical assembly. The parts are labeled A through X, and their quantities are indicated in boxes next to them:

- A: 2
- B: 47
- C: 40
- F: 51
- G: 11, 21
- H: 49
- J: 59
- K: 82
- L: 41
- M: 71
- N: 61
- O: 62
- P: 41
- Q: 44
- R: 64
- S: 56
- U: 59
- V: 39
- W: 74
- X: 65

Additional quantities for some parts are shown in smaller boxes:

- 29 (under C)
- 31 (under F)
- 42 (under G)
- 42 (under G)
- 43 (under G)
- 67 (under G)
- 68 (under G)
- 69 (under G)
- 50 (under H)
- 57 (under J)
- 83 (under K)
- 42 (under L)
- 43 (under L)
- 72 (under M)
- 63 (under M)
- 73 (under M)
- 43 (under N)
- 43 (under O)
- 43 (under P)
- 43 (under Q)
- 43 (under R)
- 42 (under R)
- 43 (under R)
- 78 (under S)
- 38 (under U)
- 57 (under U)
- 31 (under W)
- 40 (under W)
- 60 (under X)

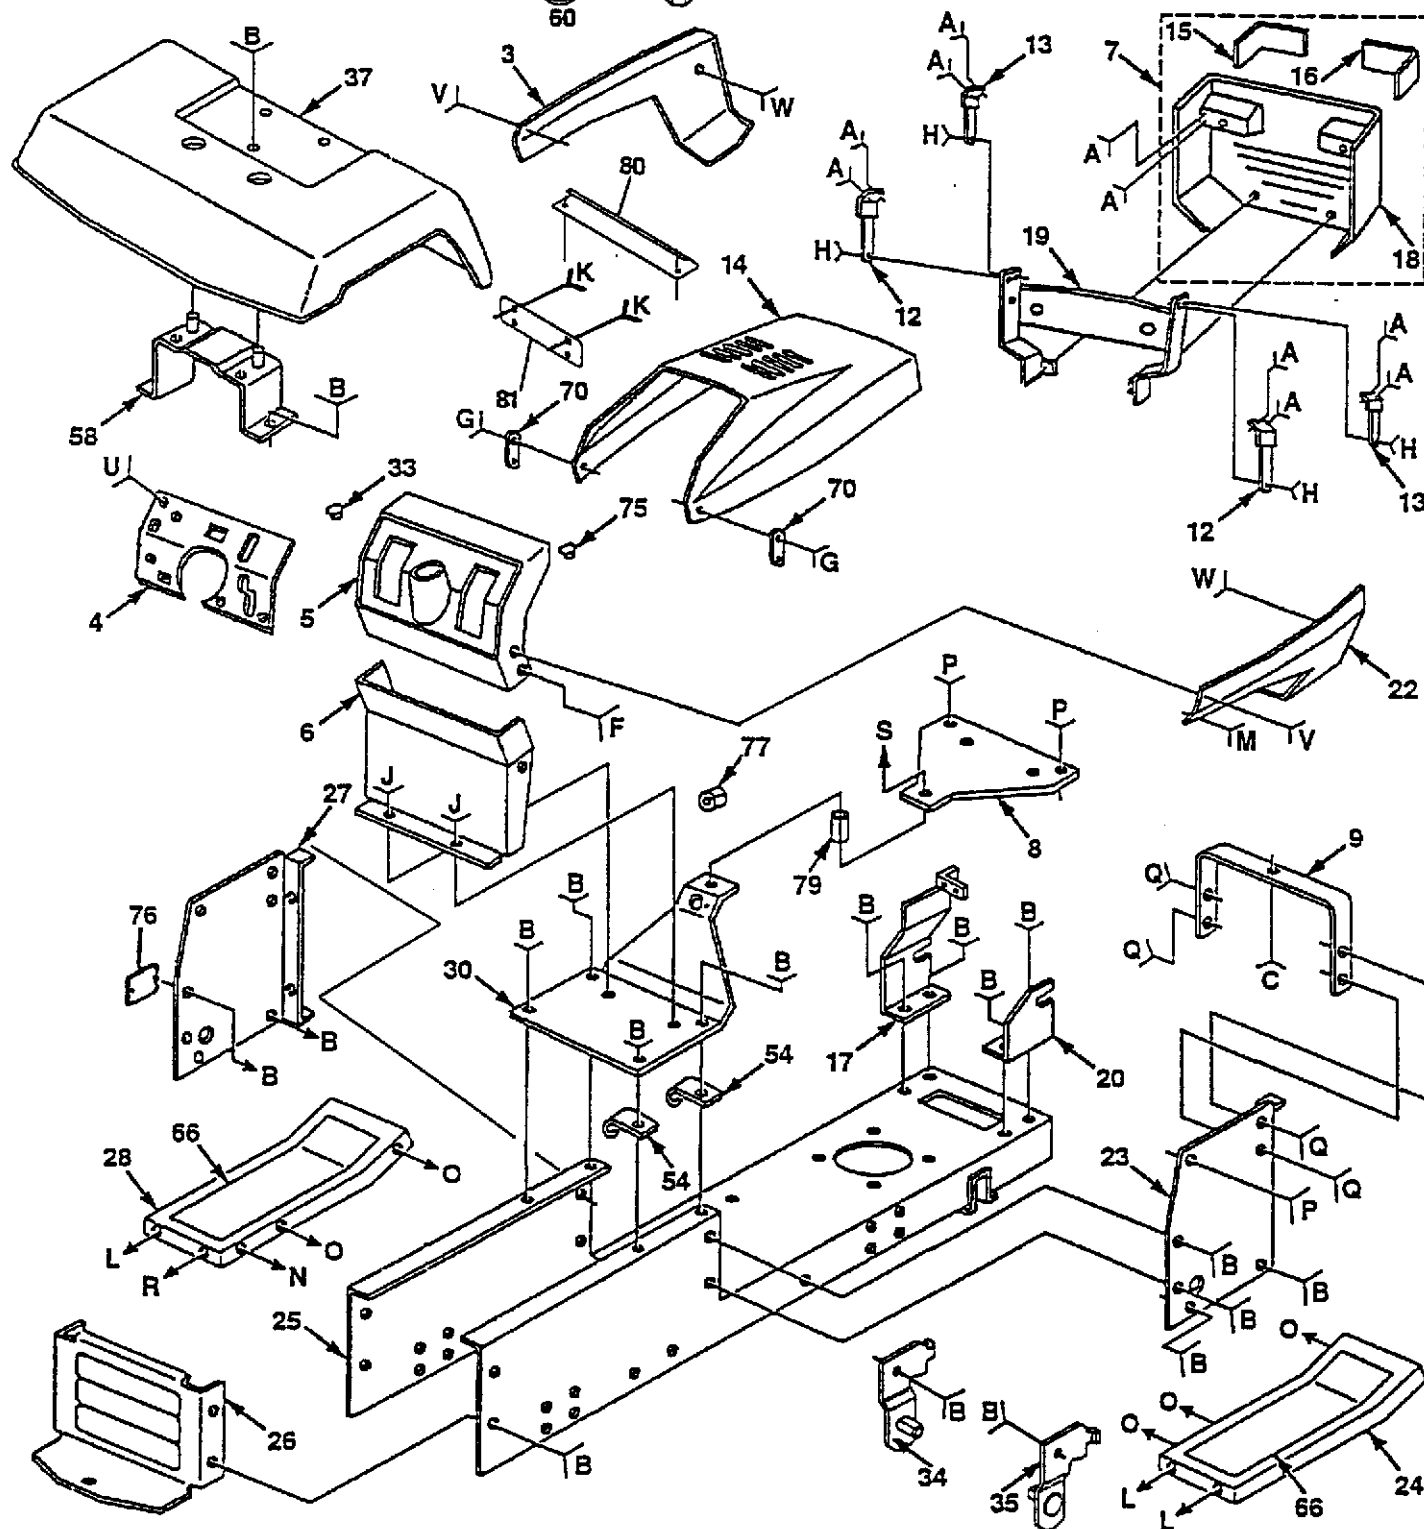

For Husqvarna Parts Call 606-678-9623 or 606-561-4983

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
CHASSIS AND ENCLOSURES

KEY PART NO. NO.	DESCRIPTION
2 873510400	Nut, Hex, Keps 1/4-20 UNC
3 532125393	Side Panel, LH
4 532143049	Plate, Dash
5 532140452	Dashboard
6 532104783	Dash, Lower
7 532127321	Grill Assembly
8 532140181	Plate, Battery Support
9 532124130	Support, Dash
11 532110356	Cap, Black
12 532106784	Strap Assembly, Hinge, Rear
13 532104618	Strap Assembly, Hinge, Front
14 532125454	Hood
15 532124250	Lens, Headlight, LH, Smoked
16 532124251	Lens, Headlight, RH, Smoked
17 532110853	Pivot Bracket Assembly, LH
18 532127325	Grille
19 532126025	Support Assembly, Grille
20 532110852	Pivot Bracket Assembly, RH
21 532110357	Washer, Cap
22 532138886	Side Panel, RH
23 532136970	Dash Panel, RH
24 532124914	Footrest, RH
25 532140341	Chassis 11 ga
26 532140356	Drawbar
27 532136967	Dash Panel, LH
28 532124899	Footrest, LH
29 810040400	Washer, Lock, Hvy Helical 1/4
30 532125453	Saddle
31 819091216	Washer 9/32 x 3/4 x 16 Gauge
33 532005479	Plug, Button
34 532134774	Pivot Bracket Assembly, Rear, LH
35 532134775	Pivot Bracket Assembly, Rear, RH
36 532134014	Plug, Dome, Black
37 532125456	Fender
38 819111116	Washer 11/32 x 11/16 x 16 Gauge
39 532123198	Wing Nut, Plastic 1/4-20
40 873220400	Nut, Hex, Fin. 1/4-20 UNC
41 874760612	Bolt, Hex, Fin. 3/8-16 UNC x 3/4
42 819131312	Washer 13/32 x 13/16 x 12 Gauge


KEY PART NO. NO.	DESCRIPTION
43 873680600	Nut, Crownlock 3/8-16 UNC
44 874760616	Bolt, Hex, Fin. 3/8-16 UNC x 1
45 532105037	Strip, Foam
47 817490612	Screw, Thd., Roll. 3/8-16 x 3/4
49 532123481	Bolt, Shoulder 1/4-20 UNC
50 873680400	Nut, Crownlock 1/4-20 UNC
51 874760620	Bolt, Hex, Fin. 3/8-16 UNC x 1-1/4
54 532124996	Clip, Fuel Line
56 874760532	Bolt, Hex, Fin. 5/16-18 UNC x 2
57 873510500	Nut, Hex, Keps 5/16-18 UNC
58 532139976	Bracket Fender
59 874180512	Screw, Machine 5/16-18 UNC x 3/4
61 872140608	Bolt, Carriage 3/8-16 UNC x 1
62 872110606	Bolt, Carriage 3/8-16 x 3/4
63 819070818	Washer 7/32 x 1/2 x 18 Gauge
64 874760614	Bolt, Hex, Fin. 3/8-16 UNC x 7/8
66 532108256	Pad, Footrest
67 874191008	Screw, Machine, Cross Pan Head #10-24 x 1/2
68 810071000	Washer, Lock #10
69 532125004	Nut, Weld
70 532109808	Latch, Chute
71 874981020	Screw, Machine, Cross Pan Head #10-24 x 1-1/4
72 532007206	Spacer, Split #10 x 3/4
73 873731000	Nut, Hex, Keps #10-24 UNC
74 532001260	Spacer 17/64 x 1/2 x 3/8
75 532125085	Plug Dash
76 532121794	Cover Access
77 532110436	Bushing Snap Split
78 873680500	Nut Lock 5/16-18
79 532121236	Spacer Split
80 532139977	Spacer Fender LT
81 532139978	Plate Extension Fender
82 872110608	Bolt rdhd sqnk 3/8-16 x 1 Gr5
83 819171416	Washer 17/32 x 7/8 x 16Ga

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

For Husqvarna Parts Call 606-678-9623 or 606-561-4983

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06 42
DRIVE

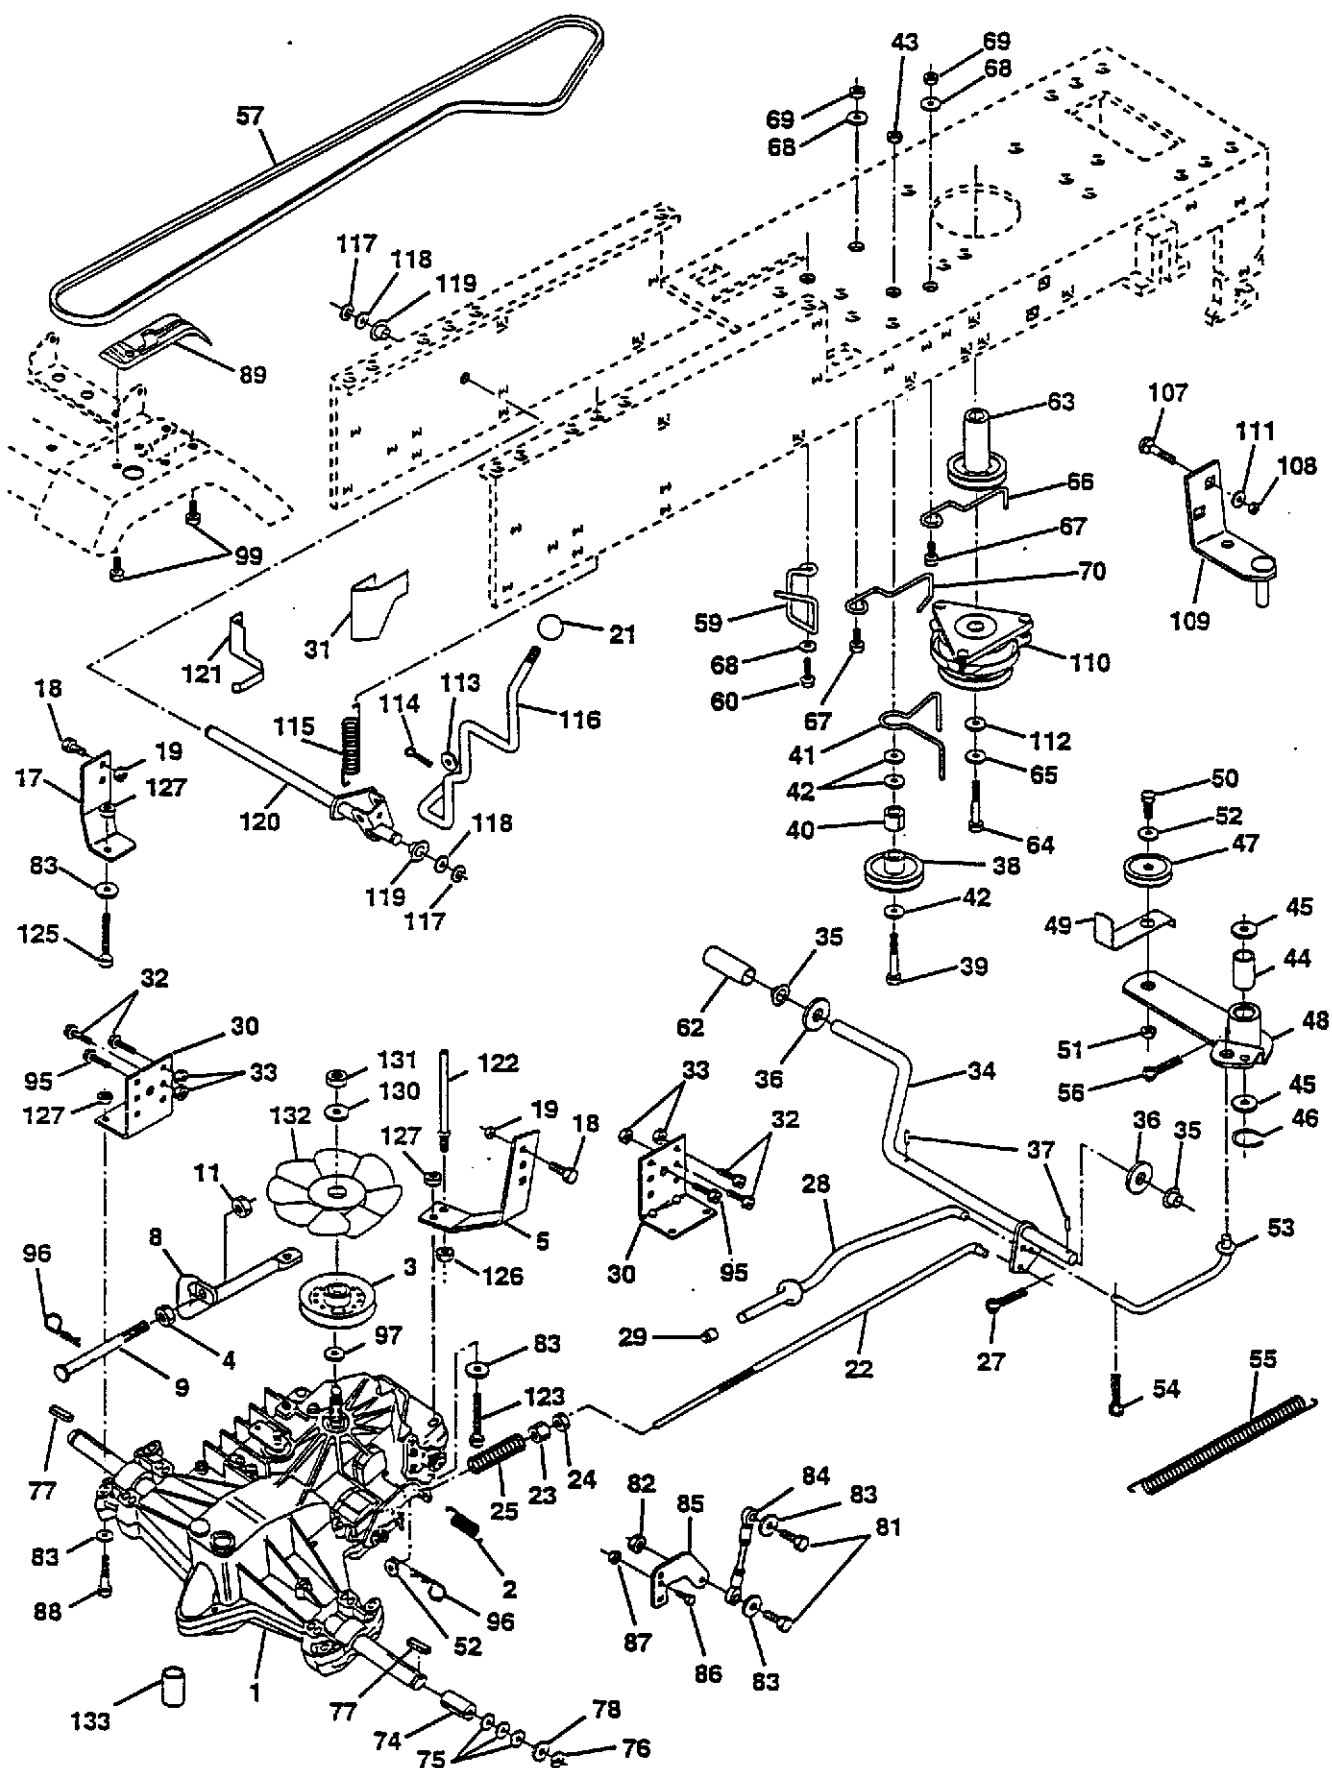

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06 42
DRIVE


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532140295	Transaxle Assembly	65	810040700	Washer
2	532142431	Spring, Return, Brake	66	532121218	Keeper Belt Engine
3	532140293	Pulley, Transaxle	67	874760616	Bolt
4	873350500	Nut Hex Jam 5/16-18 Unc	68	819131312	Washer 13/32 x 13/16 x 12 Gauge
5	532140157	Strap Torque Rh Hydro 18/20" T	69	873680600	Nut
8	532140357	Control Bypass Hydro 20" Tires	70	532105730	Keeper Belt Engine
9	532140550	Rod Bypass Hydro 18/20"	73	873680600	Nut Crownlock 3/8-16
11	873800500	Nut Lock Hex W/Ins 5/16-18 Unc P	75	532121749	Washer 25/32 x 1-1/4 x 16 Gauge
17	532140158	Strap Torque Lh Hydro 18/20" T	76	812000001	E-Ring
18	874780616	Bolt Fin Hex 3/8-16 Unc x 1 Gr.5	77	532123583	Key, Square
19	783800600	Nut Lock Hex W/Wsh 3/8-16 Unc	78	532121748	Washer 25/32 x 1-5/8 x 16 Gauge
21	532121274	Knob, Duckhead 1/2-13	81	874780520	Bolt Fin Hex 5/16-18 Unc x 1-1/4
22	532140217	Rod, Brake Hydro	82	873800500	Nut Lock Hex W/Ins. 5/16-18 Unc P
23	873350600	Nut	83	819111216	Washer 11/32 x 3/4 x 16 Ga.
24	873800600	Locknut	84	532140548	Rod, Tie Hydro 20" Tires
25	532106888	Spring, Brake Rod	85	532140156	Arm, Control Hydro
27	876020412	Pin Cotter 1/8 x 3/4 CAD.	86	871070516	Screw Cap Hex 5/16 x 18 x 1
28	532133261	Rod, Parking Brake	87	873800500	Nut Lock Hex W/Ins. 5/16-18 Unc P
29	532071673	Cap, Parking Brake	88	874780544	Bolt Fin Hex 5/16-18 Unc
30	532130807	Bracket, Transaxle	89	532139988	Console, Shift
31	532127275	Keeper Belt Lh	95	817490612	Screw, Thdroll. 3/8-16 x 1 Type TT
32	874760512	Bolt Hex Hd 5/16-18 Unc x 3/4	96	532124788	Retainer Spring 1" Zinc/Cad
33	873800500	Nut Lock Hex W/Ins. 5/16-18 Unc	97	819211616	Washer 21/32 x 1 x 16 Ga.
34	532122424	Shaft, Foot Pedal	99	532142432	Screw
35	532120183	Bearing, Nylon	113	819171216	Washer 17/32 x 3/4 x 16 Ga.
36	819211616	Washer	114	876020416	Pin Cotter 1/8 x 1 CAD
37	532124963	Pin, Roll	115	532123782	Spring Torsion T/A
38	532123674	Pulley, Idler, Flat	116	532141003	Rod Shift Hydro LT
39	874760644	Bolt	117	812000008	Ring Klip #5304-62
40	532124965	Spacer Split	118	819212016	Washer 21/32 x 1-1/4 x 16 Ga.
41	532109070	Keeper, Belt Retainer	119	532071208	Bushing Rod Strig. 629/632 ID
42	819131312	Washer 13/32 x 13/16 x 12 Gauge	120	532140154	Shaft Asm. Cross Hydro 20" Tires
43	873800600	Nut	121	532140470	Keeper Belt Lh Hydro 0750.18/20"
44	532105706	Bearing, Nylon	122	532140469	Keeper Belt Rh Hydro 0750.18/20"
45	532110812	Washer, Hardened	123	874780536	Bolt Fin Hex 5/16-18 x 2-1/4
46	812000039	Ring, Klip	125	874780524	Bolt Fin Hex 5/16-18 Unc x 1-1/2
47	532127783	Pulley, Idler, V-Groove	126	873510600	Nut Keps Hex 3/8-16 Unc
48	532123789	Bellcrank Assembly	127	873800500	Nut Lock Hex W/Ins 5/16-18 Unc P
49	532123205	Retainer, Belt	130	532141322	Washer Belleville .501D x 1.50D
50	874760624	Bolt	131	532050831	Nut Nylon Insert 1/2-20 Unf
51	873680600	Nut	132	532140462	Fan, Hydro 7"
52	819131316	Washer	133	532142564	Line Fuel Hydro 4"
53	532105710	Link, Clutch			
54	876020412	Pin			
55	532105709	Spring, Return, Clutch			
56	876020412	Pin			
57	532140294	V-Belt, Ground Drive			
59	532140312	Keeper, Center Span			
60	817490612	Screw Thdroll. 3/8-16 x 3/4 Ty. TT			
62	532123533	Cover, Pedal			
63	532140189	Pulley, Engine			
64	532125120	Bolt, Hex			

NOTE All component dimensions given in U. S. inches.
1 inch = 25.4 mm

For Husqvarna Parts Call 606-678-9623 or 606-561-4983



REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
ENGINE

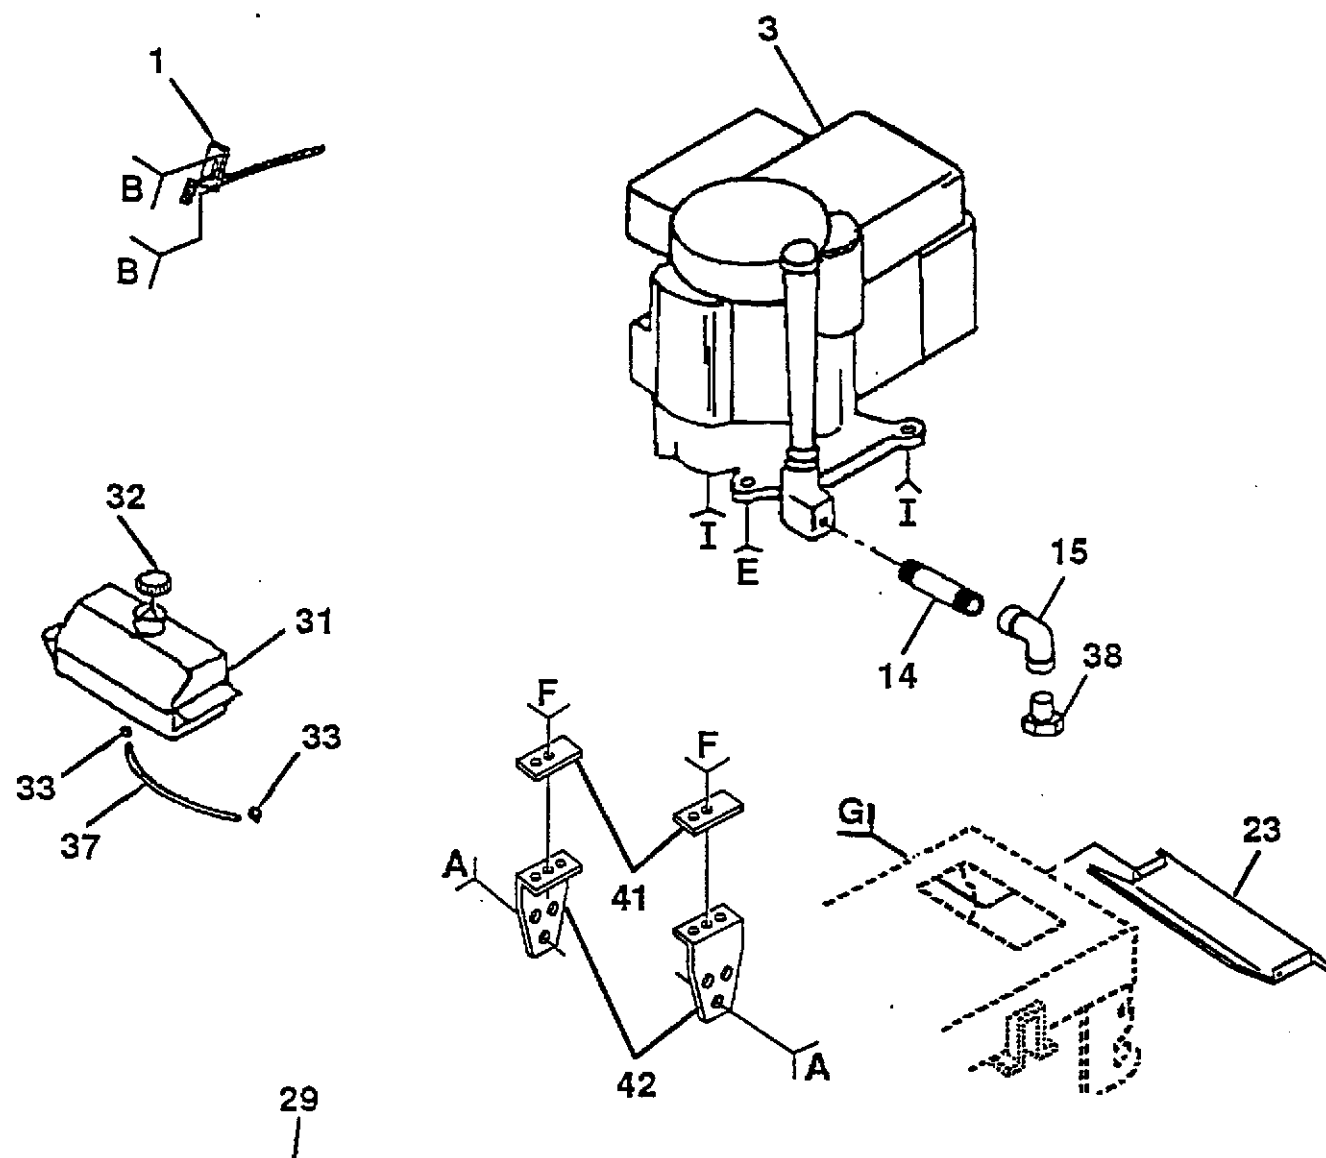

OPTIONAL EQUIPMENT

Spark Arrester

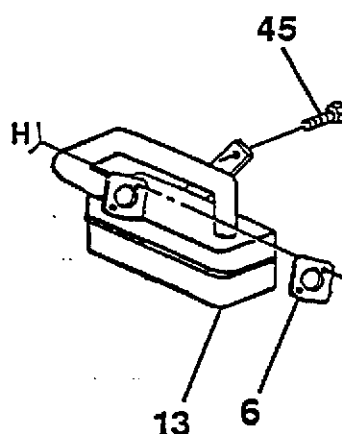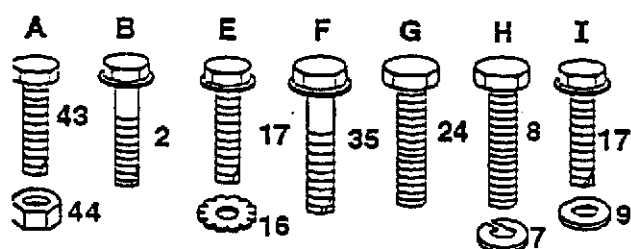

REPAIR PARTS


14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
ENGINE

KEY PART NO. NO.	DESCRIPTION
1 532132753	Control Th/ch
2 817720410	Screw Hex Thd Cut 1/4-20x5/8 T
3 -----	Engine Kohl 14 HP Model No. PS1456
6 -----	Gasket, Eng (Order from Engine Mfg.)
7 810040500	Washer Lock Hvy Hicl Spr 5/16
8 874760508	Bolt, Fin Hex 5/16-18 X 5/8
9 819101216	Washer, Flat
13 532137350	Muffler LT Kohler
14 813280328	Nipple Pipe 3/8 Npt X 3-1/2"
15 813200300	Elbow Std 90° 3/8-18 Npt
16 811050500	Washer Lock Ext Tooth 5/16
17 532125398	Bolt Hex
23 532128953	Shield Heat Browning
24 817021008	Screw Hex Thd Cut #10-24unc X 1/2
29 532137180	Kit Spark Arrestor
31 532109202	Fuel Tank Front 1 25
32 532140527	Cap Asm Fuel W/sym Vented
33 532123487	Hose Clamp
35 817490612	Screw Hexwash Thdrol 3/8-16x3/4 Ty-tt
37 532101335	Fuel Line
38 -----	Plug Oil Drain (Order from Engine Mfg.)
41 532128230	Strap Support Fuel Tank
42 532128229	Bracket Support Tank Fuel
43 874760612	Bolt, Hex 3/8-16unc X 1
44 873680600	Nut, Crownlock 3/8-16 Unc
45 -----	Bolt, Hex (Order from Engine Mfg.)

NOTE: All component dimensions given in U. S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
STEERING ASSEMBLY

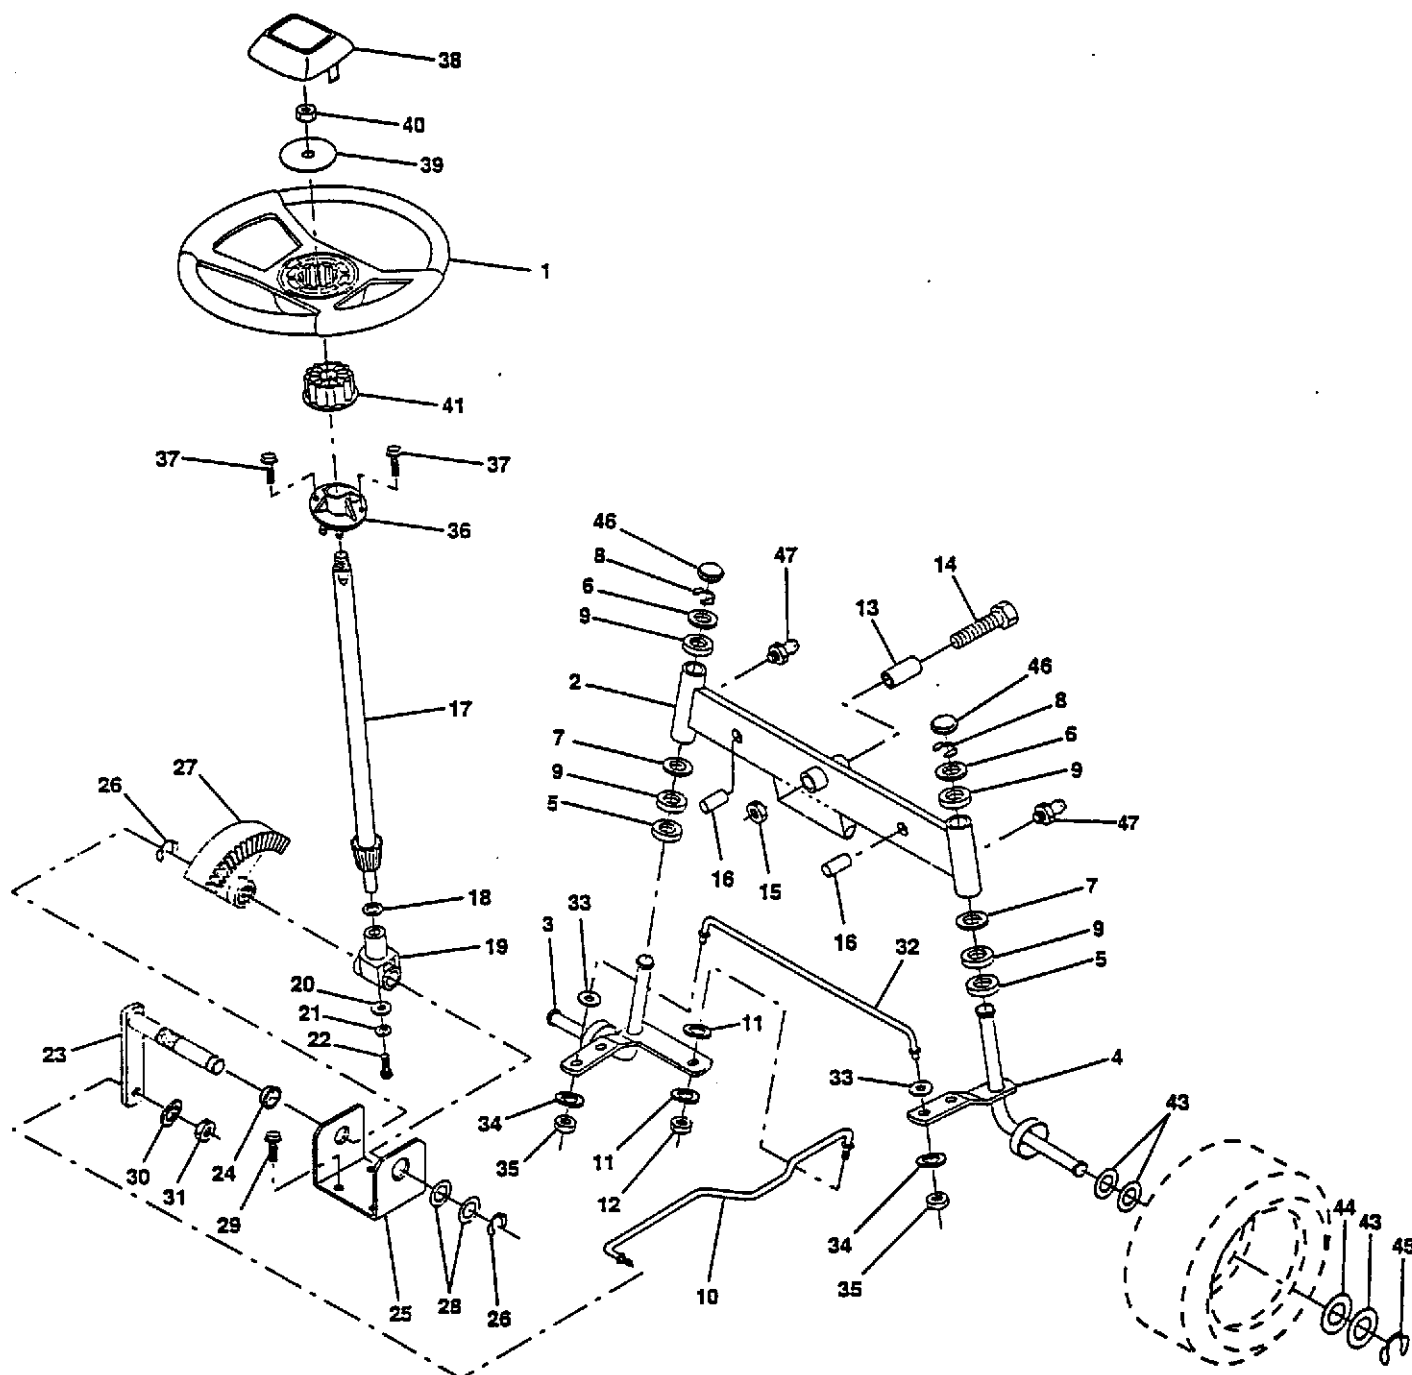

REPAIR PARTS


14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
STEERING ASSEMBLY

KEY PART NO.	NO.	DESCRIPTION
1	532124415	Wheel Steering
2	532142033	Axle Asm Fr LT W/gzks 38/42
3	532135227	Spindle Asm LH
4	532135228	Spindle Asm RH
5	532124931	Bearing Race Thrust Harden
6	532121748	Washer 25/32 X 1-5/8 X 16 Ga
7	819272016	Washer 27/32 X 1-1/4 X 16 Ga
8	812000029	Ring Klip #t5304-75
9	532124937	Bearing Col Strg
10	532130468	Link Drag Sol Ball Jt
11	810040600	Washer Lock Hvy Hlcl Spr 3/8
12	873610600	Nut Fin 3/8-24 Unf
13	532110438	Spacer Bearing Axle Front
14	874011056	Bolt Hex 5/8-11 Unc X 3-1/2
15	873901000	Nut Lock Flange 5/8-11 Unc
16	532132624	Pin Axle 5/8 X 1 55/1 54 Lg
17	532128758	Shaft Asm Strg 18 31x3/4
18	532057079	Washer Thrust 515x 750x 033
19	532124035	Support Shaft
20	532126684	Washer Shim 1/4 X 5/8 X 062
21	810040400	Washer Lock Hvy Helical 1/4
22	871070410	Screw Hex Socket 1/4-20 X 5/8
23	532127501	Shaft Asm Pittman
24	532109816	Nyliner Snap In
25	532124036	Bracket Steering
26	812000029	Ring Klip #t5304-75
27	532136874	Gear Sector
28	532124931	Bearing Race Thrust Harden
29	817490612	Screw Thdrol 3/8-16x3/4 Ty-tt
30	810040600	Washer Lock Hvy Hlcl 3/8
31	873610600	Nut Fin Hex 3/8-24 Unf
32	532130467	Rod Tie Wire Form
33	819111216	Washer 11/32 x 12/16 x 16 Ga.
34	810040500	Washer, Lock, Hvy Hlcl Spr 5/16
35	873810500	Locknut 5/16-24 Unf
36	532124720	Bushing Link Drag
37	817431008	Screw Slftp #10-16 X 1/2 Ty-b
38	532124416	Insert Cap Strg Wh Aut
39	532100712	Washer 53 X 2 25 X 160
40	873940800	Nut Hex Jam Taplock 1/2-20 Unf
41	532100711	Adapter Wheel Strg
43	532121749	Washer 25/32 X 1 1/4 X 16 Ja
44	532121748	Washer 25/32 X 1-5/8 X 16 Ja
45	812000029	Ring Klip #t5304-75
46	532121232	Cap Spindle Fr Top
47	532124836	Fitting Grease

NOTE: All component dimensions given in U. s. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
SEAT ASSEMBLY

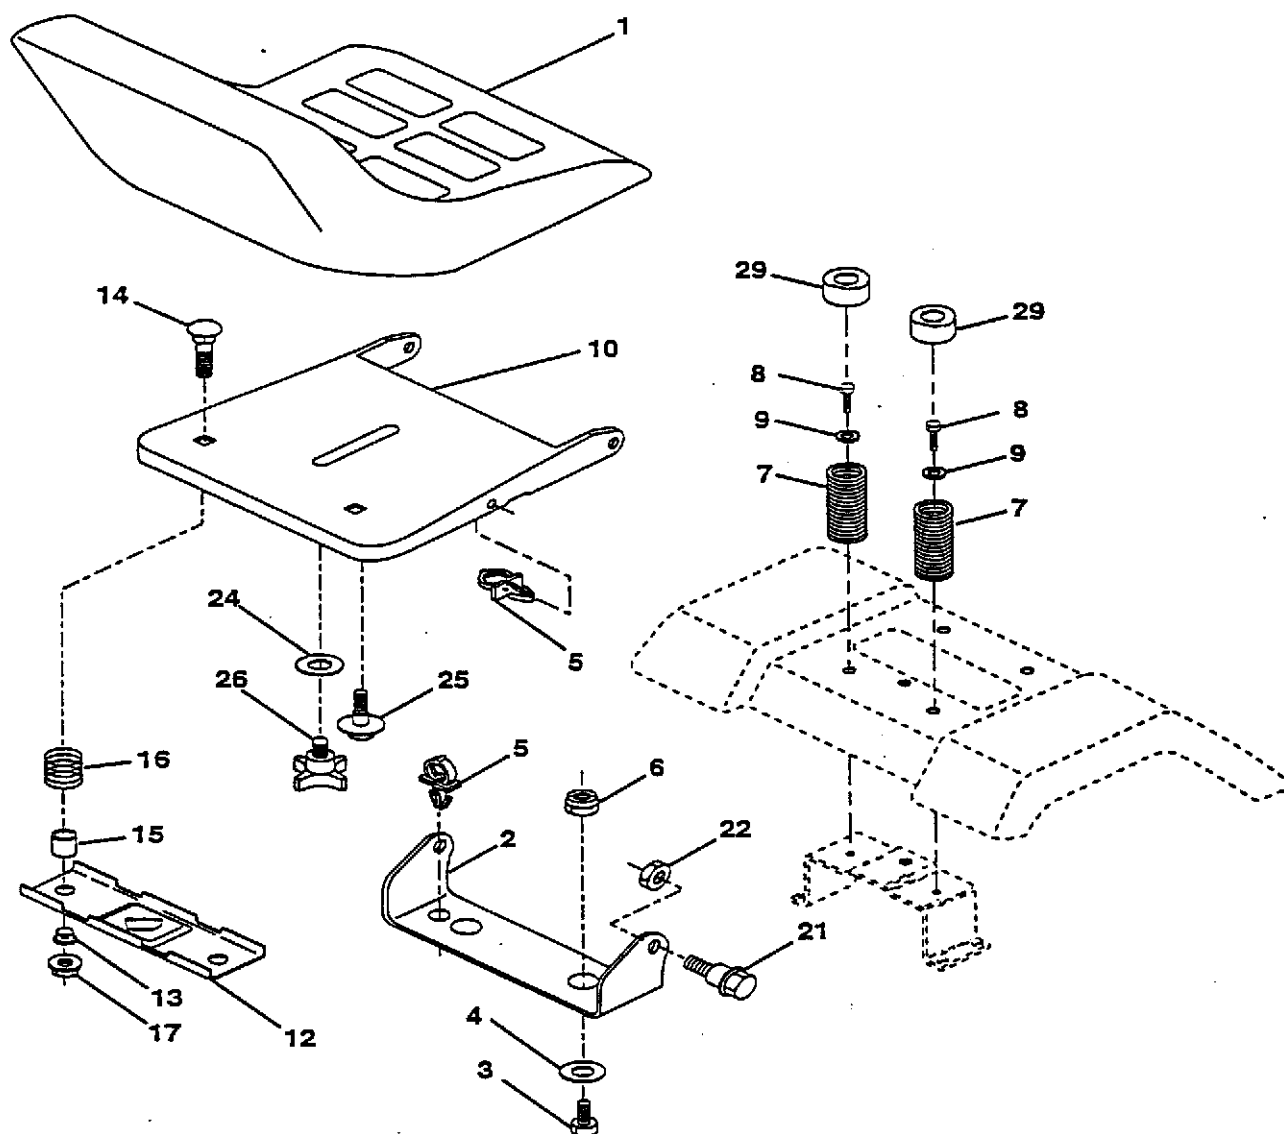

KEY NO.	PART NO.	DESCRIPTION
1	532124185	Seat
2	532140551	Bracket Pivot Seat
3	874760612	Bolt, Hex 3/8-16unc X 2-1/2
4	819131610	Washer 13/32 X 1 X 10 Ga
5	532140407	Clip Push in .375 x .250
6	873800600	Nut, Crownlock 3/8-16 Unc
7	532124181	Spring Seat Cprsn
8	817490616	Screw Hwsh Thdrol 3/8-16x1
9	819131614	Washer 13/32 X 1 X 14 Ga
10	532140552	Pan Seat
12	532121246	Bracket Mounting Switch
13	532121248	Bushing Snap
14	872050411	Bolt 1/4-20x1-3/8
15	532134300	Spacer Split


KEY NO.	PART NO.	DESCRIPTION
16	532121250	Spring Cprsn
17	532123976	Locknut 1/4 Gr. 5
21	532139888	Bolt, Shoulder 5/16-18 Unc
22	873680500	Nut, Crownlock 5/16-18
24	819171912	Washer 17/32 X 1-3/16 X 12 Ga
25	532127018	Bolt, Shoulder 5/16-18 X 62
26	532120068	Knob Seat 1/2-13unc
29	532124238	Cap Spring Seat

NOTE All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42

DECALS

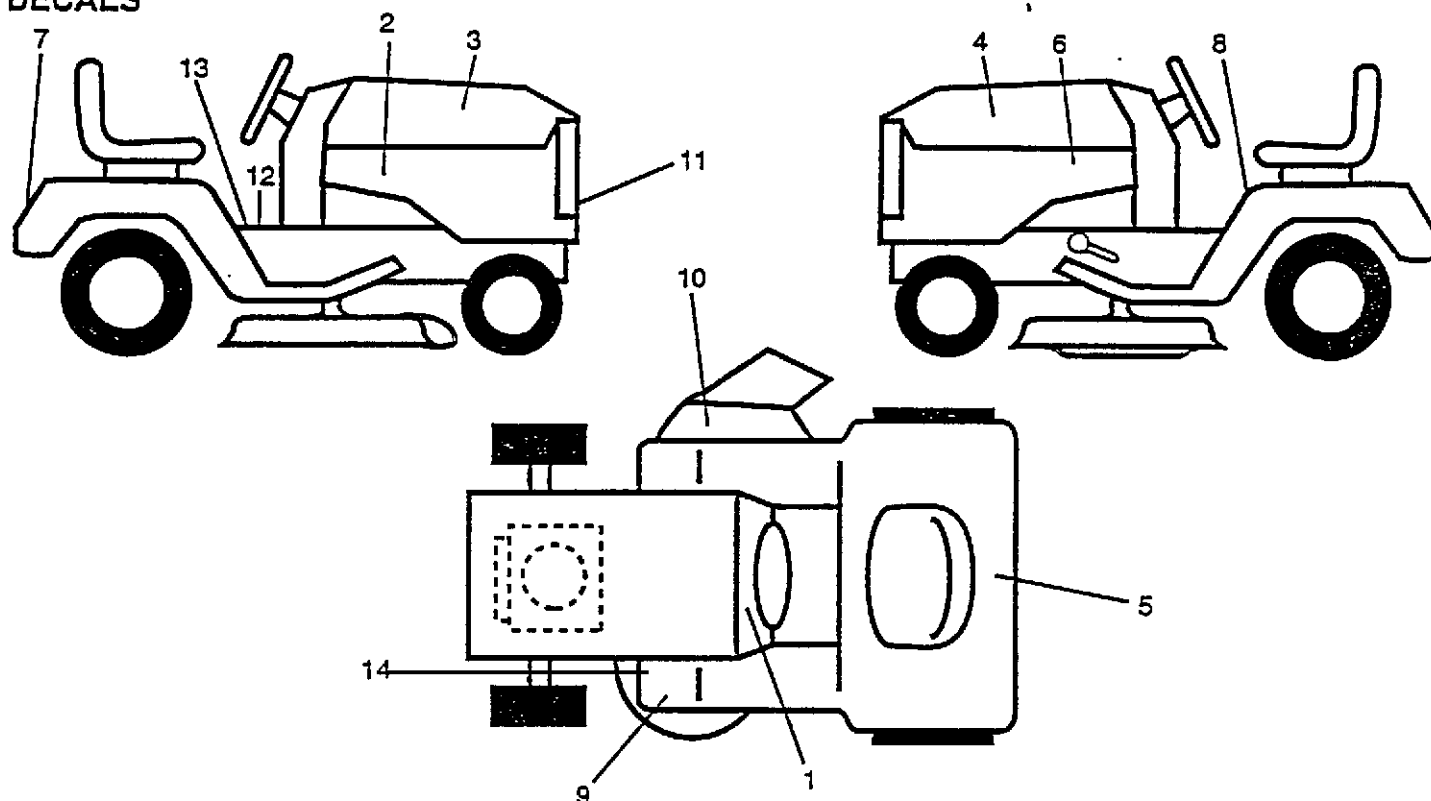


KEY NO.	PART NO.	DESCRIPTION
1	532138956	Decal Instruction Dash Eng/fr
2	532140863	Decal Ins Hood RH LTH140 Hydro
3	532140728	Decal Hood RH Husq
4	532140729	Decal Hood LH Husq
5	532121549	Decal Caution Battery Fr/ger
6	532140865	Decal Ins Hood LH LTH140 Hydro
7	532131582	Decal Fender.Husqvarna
8	532133795	Decal Caution Fender Eng/fr
9	532101892	Decal Clutch/brake Eng/fr
10	532137259	Decal Warning MULT-LANGUAGE
11	532125989	Decal Grille Husqvarna™h™logo

KEY NO.	PART NO.	DESCRIPTION
12	532142337	Decal Sdl Cold Start Hyd. e/f
13	532140837	Decal Brake Parking Saddle
14	532136830	Decal VBelt Sch. 38" and 42" LT
-	532138311	Decal Lift Handle(Lift Handle)
-	532142342	Decal D-Bar Control Mnt. Hyd. ytgt
-	532141563	Manual Owner's English
-	532141564	Manual Owner's French

Available accessories not included with tractor:

- BD20 42" Snow blade
- CE42 42" Bagger
- LC05 33 lb. Weights (pairs)
- SB20 40" Snow Thrower

WHEELS & TIRES

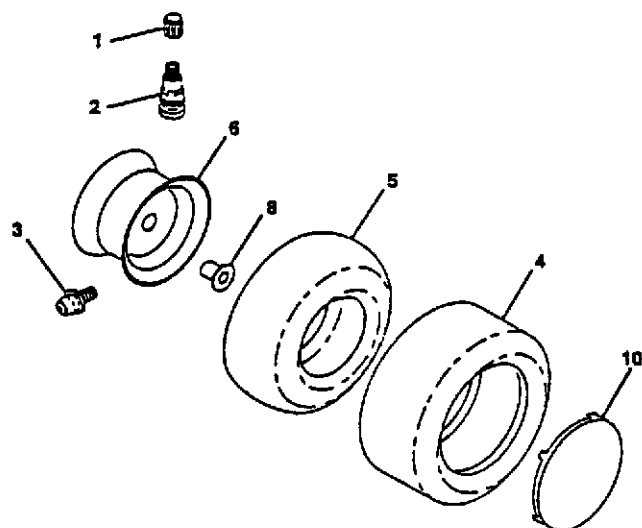


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap Valve Tire
2	532065139	Stem Valve
3	532124957	Fitting Grease (Front Wheel Only)
4	532106222	Tire F Ts 15 X 6 0 - 6 Service
	532122082	Tire R Ts 20x10 -8C Service
5	532059904	Tube Front (Service Item Only)
	532124926	Tube Rear (Service Item Only)
6	532141447	Rim Asm 8"rear White Service
	532141446	Rim Asm Front 6"
8	532124959	Bearing Flange (Front Wheel Only)
10	532124577	Cover Wheel 6"white
	532124578	Cover Wheel 8"white

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

For Husqvarna Parts Call 606-678-9623 or 606-561-4983

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
42" MOWER

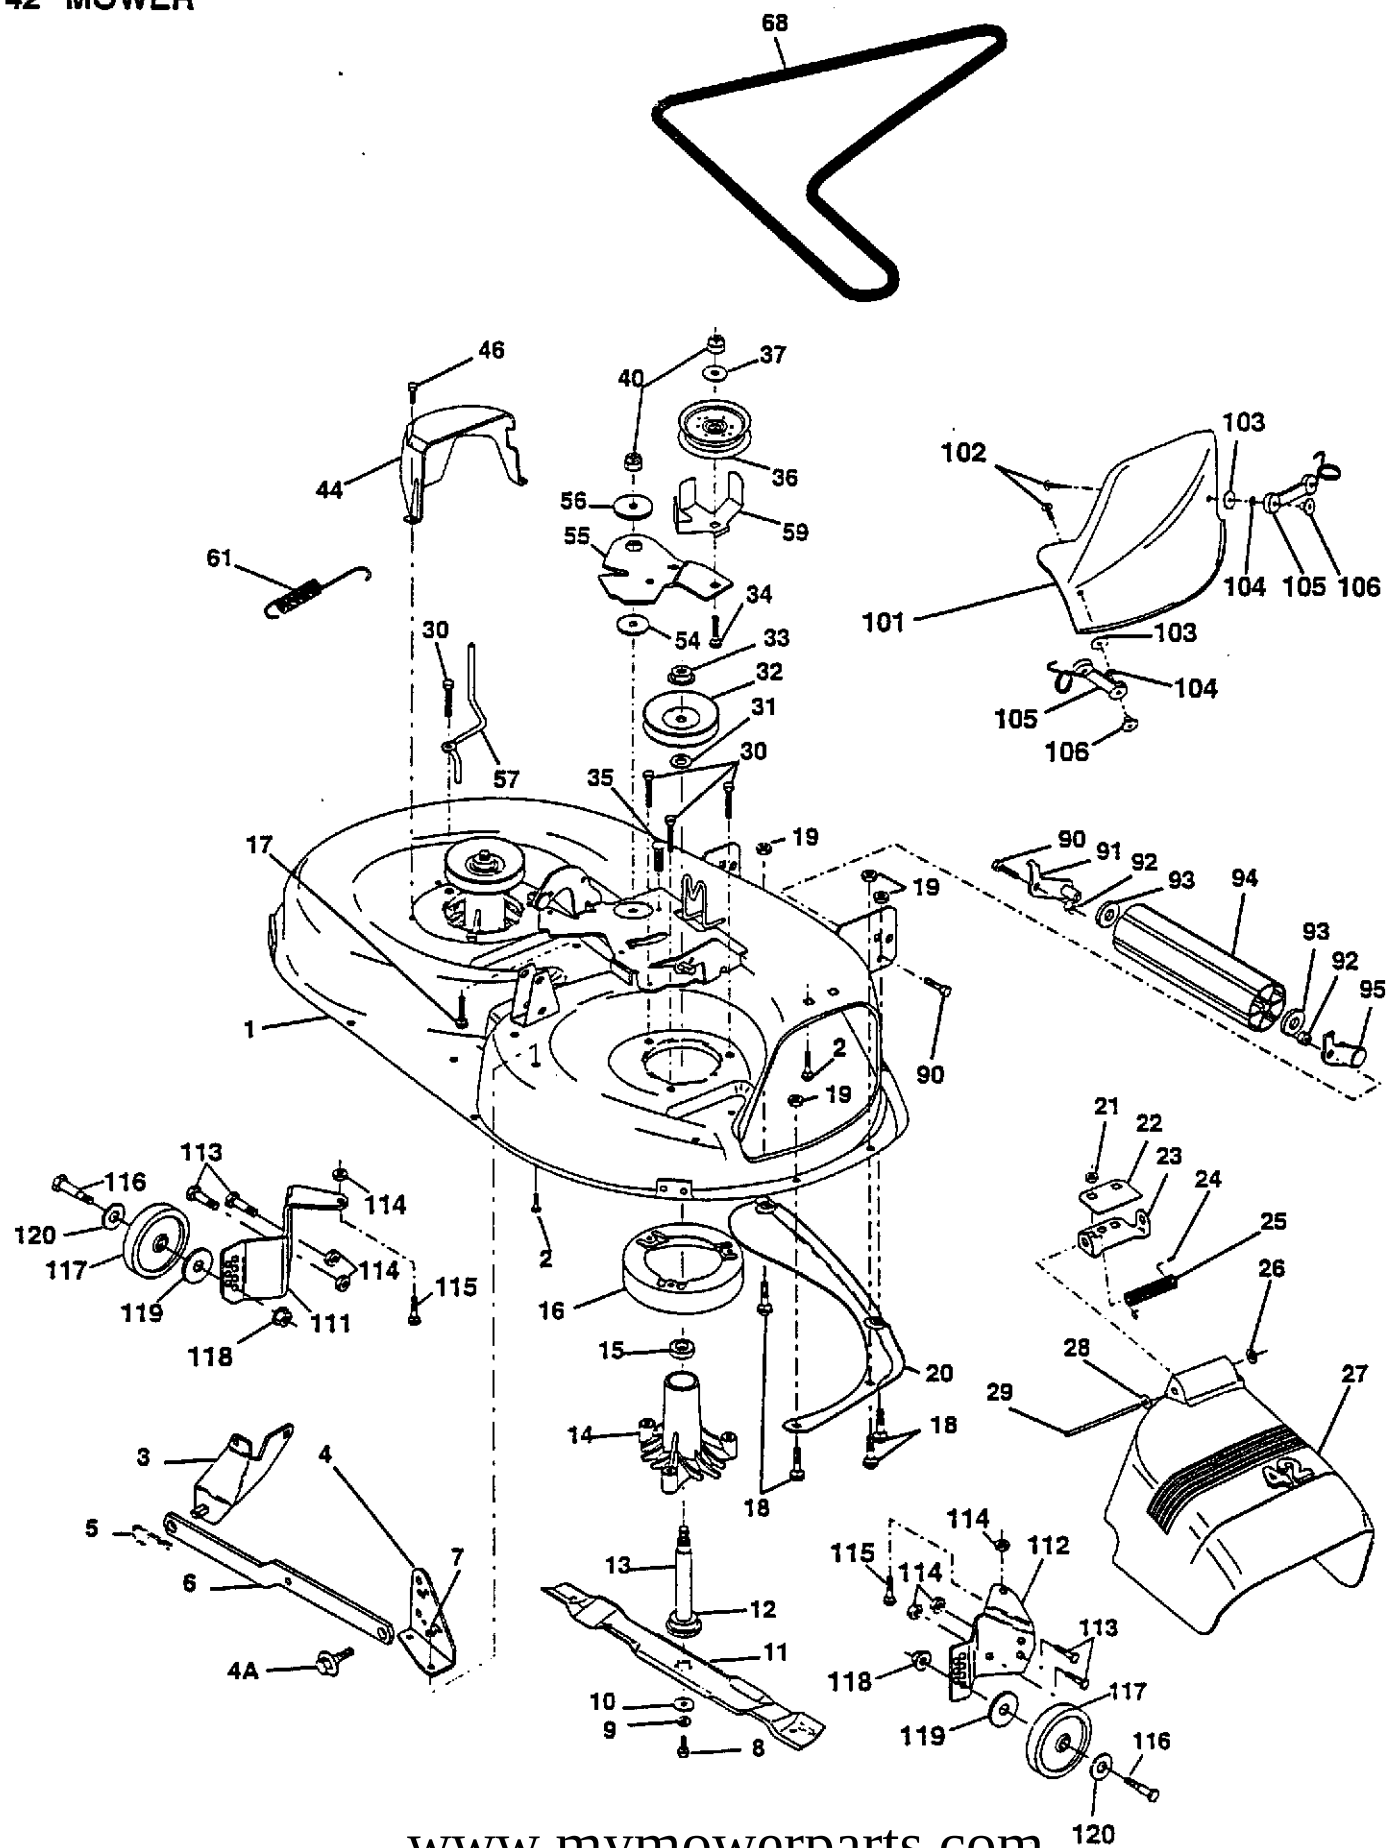

REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
42" MOWER

KEY PART NO. NO.

DESCRIPTION

1	532140081	Deck Asm MWR 42"weldment
2	872140506	Bolt Rdhd Sqnk 5/16-18unc X3/4
3	532138017	Bracket Asm Fr Sway Bar 38/42
4	532138440	Bracket Asm Deck 42"sway Bar
4A	532132827	Bolt Shoulder
5	532124670	Retainer Spring
6	532130832	Arm Suspension Rear
7	873800500	Locknut-hex W/ins 5/16-18unc P
8	532850857	Bolt 3/8-24x1 25 Gr8 Patched
9	810030600	Washer Lock Hvy 3/8 Unplated
10	532140296	Washer Hard Blade Mower Vented
11	532134149	Blade Mower Mulching 42"
12	532129895	Bearing Ball #6204 (Mandrel)
13	532137645	Shaft Asm W/lower Bearing
14	532128774	Housing Mandrel Vented(machd)
15	532110485	Bearing Ball Mandrel
16	532136929	Stripper Mower Vented
17	872110610	Bolt Rdhd Sqnk 3/8-16 X 2
18	872140505	Bolt Carr 5/16-18 X 5/8
19	873800500	Locknut-hex W/ins 5/16-18unc P
20	532136888	Baffle Vortex 42
21	873800500	Nut Lock 5/16-18
22	532134753	Stiffener Bracket 42"deck
23	532131267	Bracket Deflector Mower 42"
24	532105304	Cap Sleeve 80x 112 Blk Mower
25	532123713	Spring Torsion Deflector 2 52
26	532110452	Nut Push Phos & Oil
27	532130968	Shield Deflector Mower 42" Blk
28	819111016	Washer 11/32 X 5/8 X 16 Ga
29	532131491	Rod Hinge 42"6 75 Wlg
30	532138776	Screw Thdrol Hex Hd Zinc Mwr.
31	532129963	Washer Spacer Mower Vented
32	532129861	Pulley Mandrel 42"
33	532137266	Nut 9/16top Lock Flng Cntr
34	872110614	Bolt Rdhd 3/8-16uncx2-3/4 Gr5
35	532133835	Fastner Christmas Tree
36	532131494	Pulley Idler Flat 3 060
37	819131316	Washer 13/32 X 13/16 X 16 Ga
40	873800600	Nut Lock 3/8-16 Unc

KEY PART NO. NO.


DESCRIPTION

41	532132823	Spacer Spring Stop Idler
44	532140088	Guard Mandrel LH Black
46	532137729	Screw Thdrol 1/4-20x5/8
54	532133943	Washer Hardened
55	532140084	Arm Idler 42"mower LT/YT
56	532122052	Spacer Retainer Pm Mower
57	532140090	Guide, Belt
59	532141043	Guard, Belt
61	532131950	Spring Ext. Elect
68	532140067	V-Belt Mower 42"
90	874760616	Bolt Fin Hex 3/8-16unc X 1
91	532132274	Bracket Asm Noseroller LH
92	873680600	Nut Crownlock 3/8-16 Unc
93	819171416	Washer 17/32 X 7/8 X 16 Ga
94	532132264	Roller Nose 38 & 42
95	532132273	Bracket Asm Noseroller RH
101	532136420	Cover Mulching 42" Blk
102	871161010	Screw
103	810071000	Washer Lock #10
104	819061216	Washer #10
105	532130758	Latch Asm Bagger
106	532125004	Nut Weld .327/.304 #10-24
111	532140353	Bracket Wheel Guage Lh 42" Deck
112	532132262	Bracket Guage Wheel Rh 42" Deck
113	874760512	Bolt Hex Hd 5/16 - 18 UNC x 3/4
114	873510500	Nut Keps 5/16 - 18 UNC
115	872110504	Bolt Carriage 5/16 - Unc x 1/2
116	532124892	Bolt Shld "A" 2.41 "B" 1.66
117	532105455	Wheel Guage blk. 4.93
118	873930600	Nut Centerlock 3/8 - 16 UNC
119	819121414	Washer 3/8 x 7/8 x 14 Ga.
120	819171512	Washer 17/32 x 15/16 x 12 Ga.
--	532140476	Deck Serv 42" Elec Vent (Standard Deck - Order Nose Roller, Gauge Wheel and Mulcher Plate components separately Key Nos. 90-95, 101-106 and 111-120)
--	532130794	Mandrel Assembly (Includes Key Numbers 8-10, 12-15, 31 and 33)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

For Husqvarna Parts Call 606-678-9623 or 606-561-4983
REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
MOWER LIFT ASSEMBLY

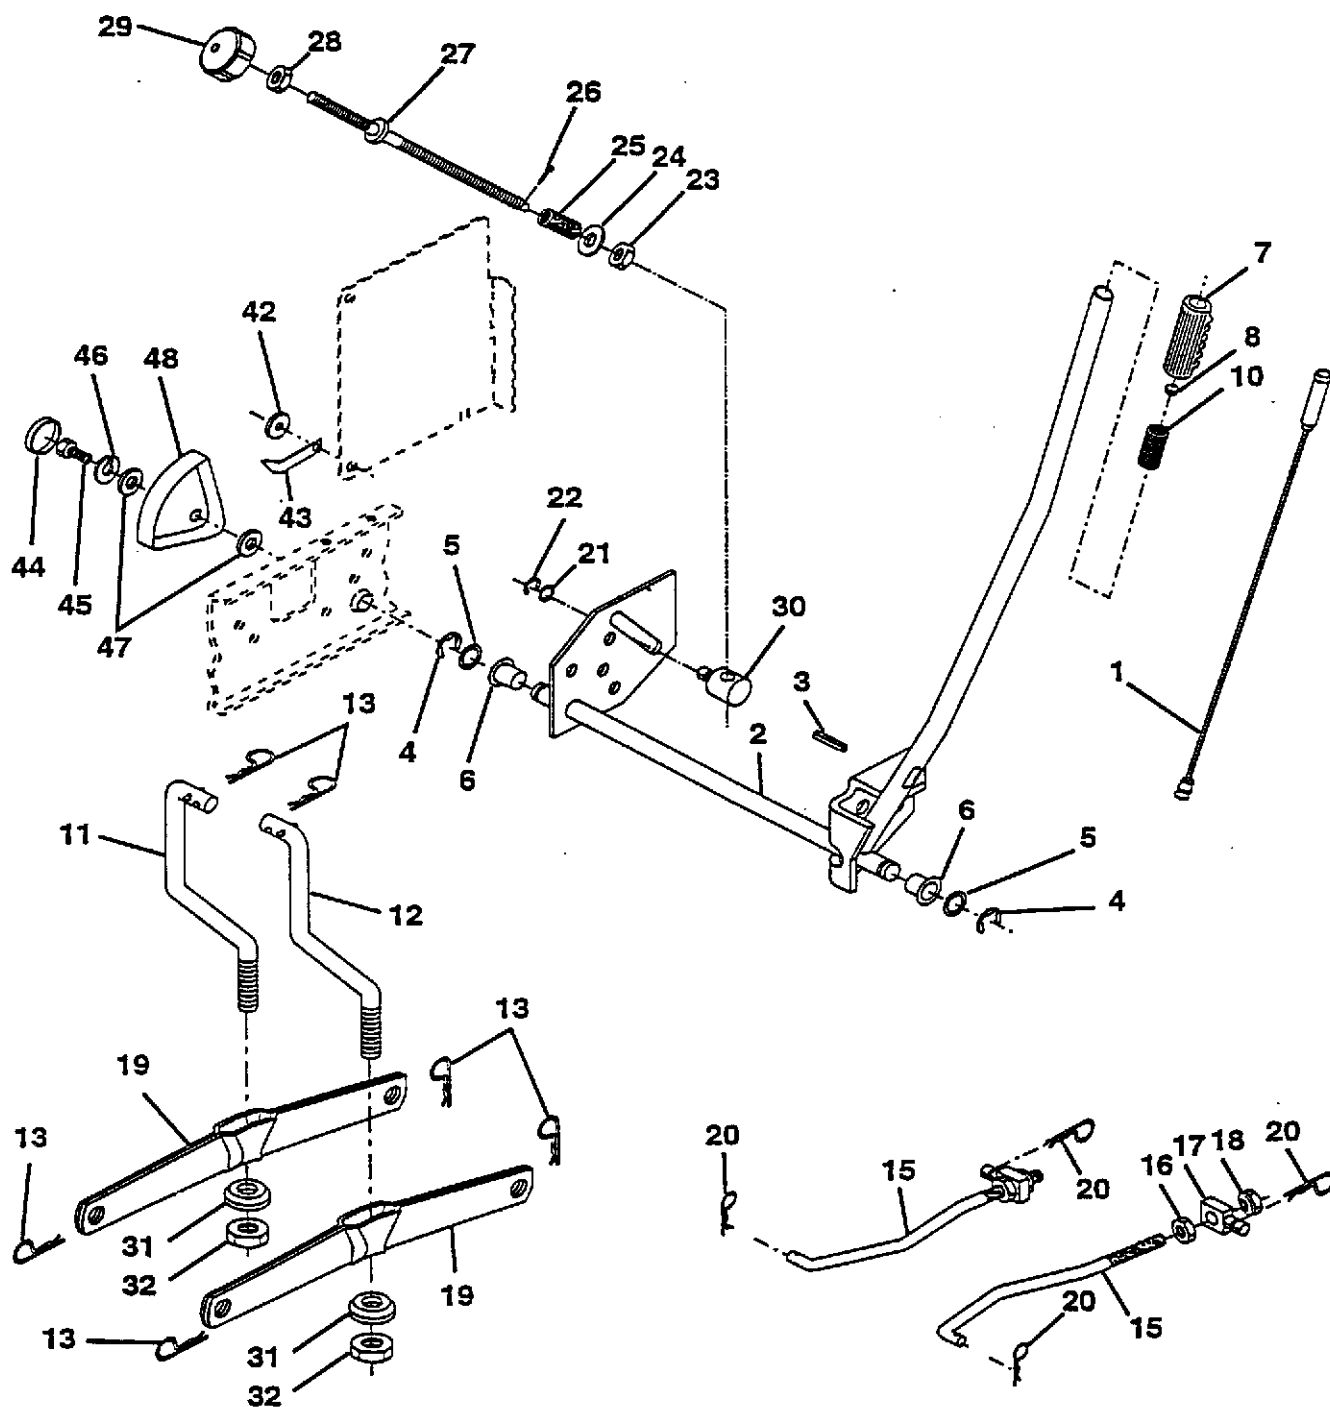

For Husqvarna Parts Call 606-678-9623 or 606-561-4983
REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
MOWER LIFT ASSEMBLY

KEY PART NO. NO.	DESCRIPTION
1 532136971	Wire Asm Inner W/plunger 17 32
2 532136968	Shaft Asm Lift 93 RH
3 532138284	Pin Groove 1 500 Zinc
4 812000002	E Ring #5133-62
5 819211416	Washer 21/32 X 7/8 X 16 Ga
6 532120183	Bearing Nylon Blk 629 Id
7 532125631	Grip Handle Fluted Blk
8 532124526	Button Plunger Black
10 532122512	Spring Cprsn 3 750 Oiled
11 532139865	Link Lift LH
12 532139866	Link Lift RH
13 532124670	Retainer Spring
14 532135563	Pin Roll SLT 5/16 X 1 25 Blk O
15 532127218	Link Front
16 873350800	Nut Jam Hex 1/2-13 Unc
17 532130171	Trunnion Blk Zinc
18 873800800	Nut Lock W/wsh 1/2-13unc
19 532139868	Arm Suspension Rear
20 532124660	Retainer Spring
21 819151216	Washer 15/32 X 3/4 X 16 Ga
22 812000037	Ring Klip #t5304-37
23 532110807	Nut Special
24 819131016	Washer 13/32 X 5/8 X 16 Ga
25 532124874	Spring 2-1/8"
26 876020308	Pin Cotter 3/32 X 1/2
27 532110729	Rod Adj Lift Zinc 9 00 Wrk Lg
28 873350600	Nut Hex Jam 3/8-16 Unc
29 532138057	Knob Inf 3/8-16 Unc Blk W/sym
30 532110810	Trunnion Dp Stop Dbl Thds PLT
31 532140302	Bearing pvt. Lift Sphencal
32 873810600	3/8-24 Nylock Nut
42 532120529	Washer Nylon .44 x .75 x 032
43 532138346	Pointer prnt height ind.
44 532123935	Plug hole Blk 1.485/1.515 Dia
45 874780516	Bolt Fin hex 5/16-18 UNC x 1.00
46 810040500	Washer lock hvy hicl spr. 5/16
47 819112410	Washer 11/32 x 1-1/2 10 Ga
48 532123934	Scale Ind. Hieght Black

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

HYDRO-GEAR TRANSAXLE - MODEL NO. 310-0750



REPAIR PARTS

14 HP 42" TRACTOR - MODEL NO. LTH140 (HN14H42A), PRODUCT NO. 954 00 06-42
HYDRO-GEAR TRANSAXLE - MODEL NO. 319-0750

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 142930	Housing, Lower	43 142884	Washer 7/16 x 7/8 x .060
2 142931	Assembly, Upper Housing	44 142959	Differential Assembly
3 142932	Seal, Lip	52 142960	Washer 3/4 x 1.5 x .03
4 142928	Ring, Wire Retaining	53 142961	Seal .75 x 1.25 x .250
5 142933	Ring, Retaining	54 142962	O-Ring .103 x 2.987 ID
6 142934	Bearing, Shaft Ball	56 142963	Shaft, Input
7 142935	Bearing, Cradle	58 142964	Bolt 1/4-20 x 1.38
8 142936	Bearing, Thrust 30 x 52 x 13	59 142965	Pin .5 OD x .43 ID x .750
9 142937	Swashplate, Variable	62 142966	Arm, Control
13 142938	Block, Cylinder Assembly	63 142967	Puck, Dampener
14 142939	Arm, Trunnion	64 142920	Set Screw
15 142940	Seal, Lip	65 142968	Bolt #8-32 x .875
17 142941	Guide, Slot	68 142969	Spring
18 142942	Shaft, Motor	69 142970	Socket Set Screw
19 142943	Bearing, Thrust 42 x 68 x 16	83 142971	Jack Shaft Assembly
23 142944	Block, Cylinder Assembly	85 142972	Jack Shaft
24 142945	Seal, Lip 10 x 25 x 7	88 142973	Capscrew
25 142946	Actuator, Bypass	89 142974	Washer
26 142947	Center Section Assembly Kit	90 142975	Sleeve Bearing
27 142948	Seal, Lip 26 x 42 x 8	91 142976	Seal, Wiper
28 142949	Ring, Retaining	92 142977	Spring, Block
29 142950	Washer 26 x 35 x 1	93 142978	Washer, Block Thrust
34 142951	Oil Filter Element	95 142979	Strap, Locking
35 142952	Arm, Bypass	113 142917	Cap, Vent Assembly
36 142953	Ring, Retaining	114 142918	Fitting, O-Ring Assembly
37 142954	Arm, Actuating	119 142980	Spacer
38 142955	Pin, Actuating	121 142981	Jam Nut 5/16-24
39 142956	Bolt 5/16-24 x 1-3/4		
40 142957	Locknut, Hex 5/16-24 UNJC		
41 142958	Brake Rotor/Stator Kit		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm