

Remember, any power equipment can cause injury if operated improperly or if the user does not understand how to operate the equipment.

Exercise caution at all times when using power equipment.

1. Read the Owner's Manual and know how to operate your tiller before using tiller or attachment.
2. Never operate tiller attachments without wearing protective footwear.
3. Never allow children to operate tiller attachments and do not allow adults to operate without proper instructions.
4. Always begin with engine speed at lowest possible setting and gradually increase speed as required.

**10" FURROW OPENER
 (FOR REAR TINE TILLER ONLY)**

ASSEMBLY - FURROW OPENER

To assemble your Furrow Opener you will need:

(1) 9/16" open or boxed end wrench

1. Assemble Furrow Assembly to bottom of Depth Stake using U-Bolts, Lockwashers, and Nut (Fig. 1).

OPERATION

1. Use Furrow Opener only in areas that have been tilled.
2. Operate tiller in "F" position.
3. Tine removal is optional. See tiller Owner's Manual.

MAINTENANCE

1. Keep Furrow Opener clean and oiled after use.


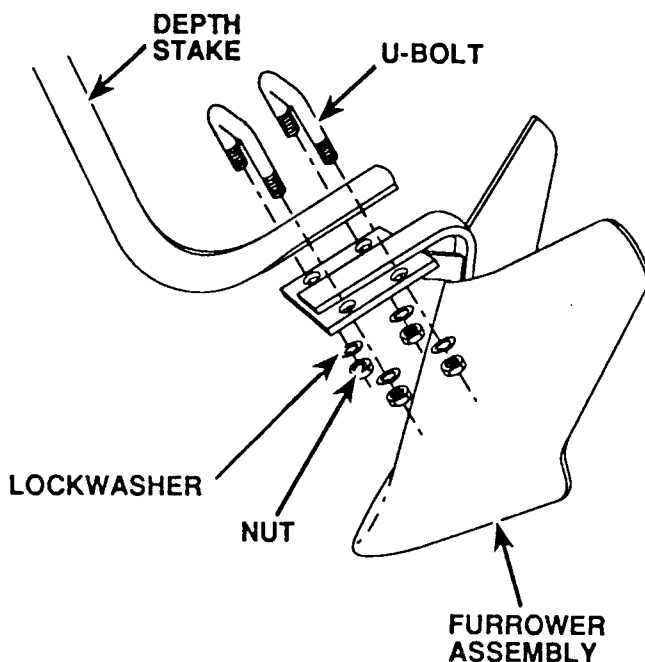


FIGURE 1

REPAIR PARTS

10" FURROW OPENER MODEL NUMBER - 62691

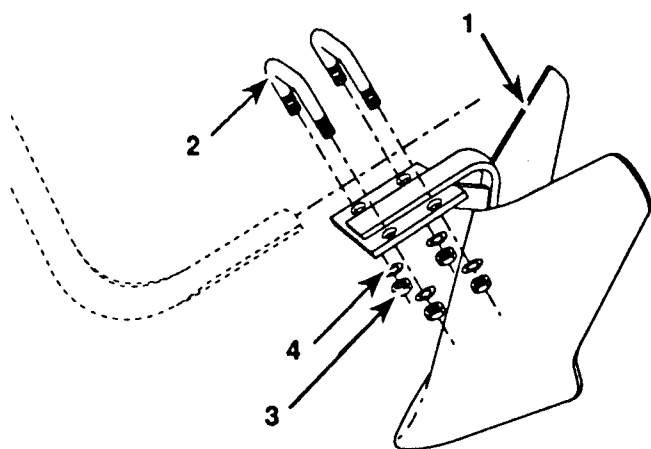

KEY NO.	PART NO.	DESCRIPTION
1.	62690	Furrow Assembly
2.	44400	U-Bolt
3.	43015	Nut, Hex 3/8-16 UNC
4.	43003	Lockwasher 3/8
--	44402	Instruction Sheet