


For Husqvarna Parts Call 606-678-9623 or 606-561-4983

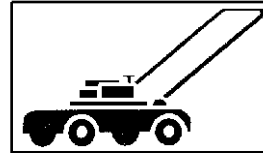

13


ST522H



1.1997
PARTS LISTING


601 00 23-27

ST522 Engine Assembly

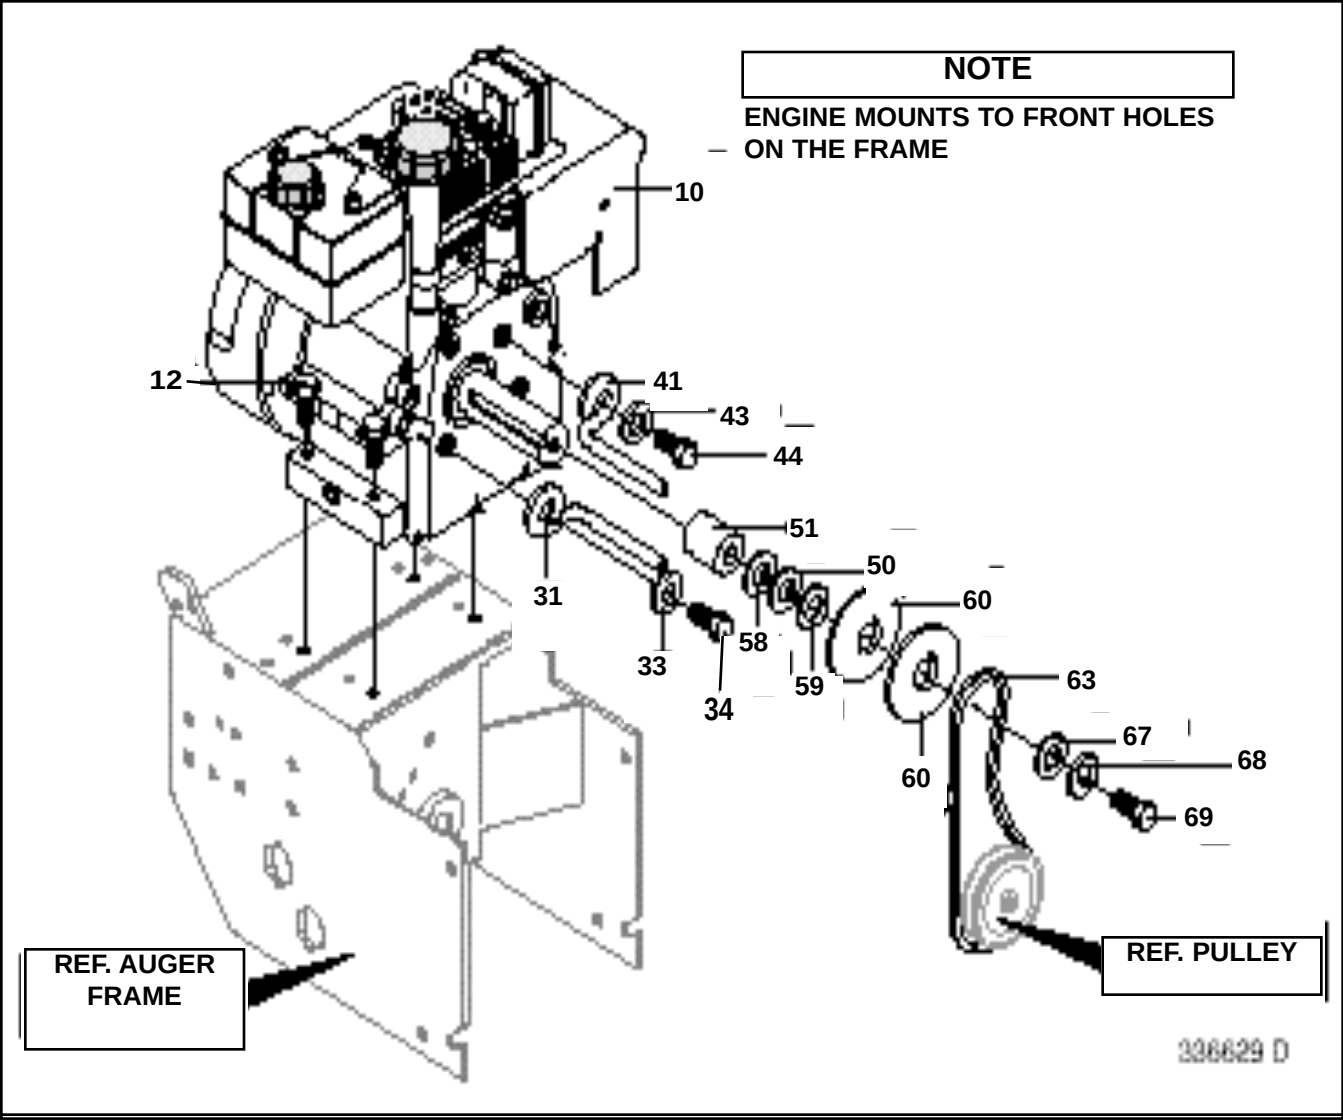


REF NO.	PART NO.	PART NAME
10	Engine	See Engine Manual
12	601 00 21 62	Screw, 5/16-18
31	601 00 14 32	Guide, Rod Belt, RH
33	601 00 00 23	Washer, .328x.60x.09
34	601 00 14 43	Screw, 5/16-24x.625
41	601 00 14 32	Guide, Rod Belt RH
43	601 00 00 23	Washer, .328x.60x.09
44	601 00 14 43	Screw, 5/16-24x.625
51	601 00 21 45	Spacer, Slev .75x1.25x1.32
58	601 00 14 38	Flatwasher .765x1.12x.06
59	601 00 20 20	Spacer, Slev .753x1.12x.38
60	601 00 20 21	Pulley, Eng V4L 3.00x.75
63	601 00 21 48	Belt, V 4L 35.23Lg.
67	601 00 14 41	Flatwasher
68	601 00 00 15	Washer, Regsptlk
69	601 00 05 27	Screw, 3/8-24x1.00
	601 00 23 27	Owner's Manual

ST522 Frame Components Assembly

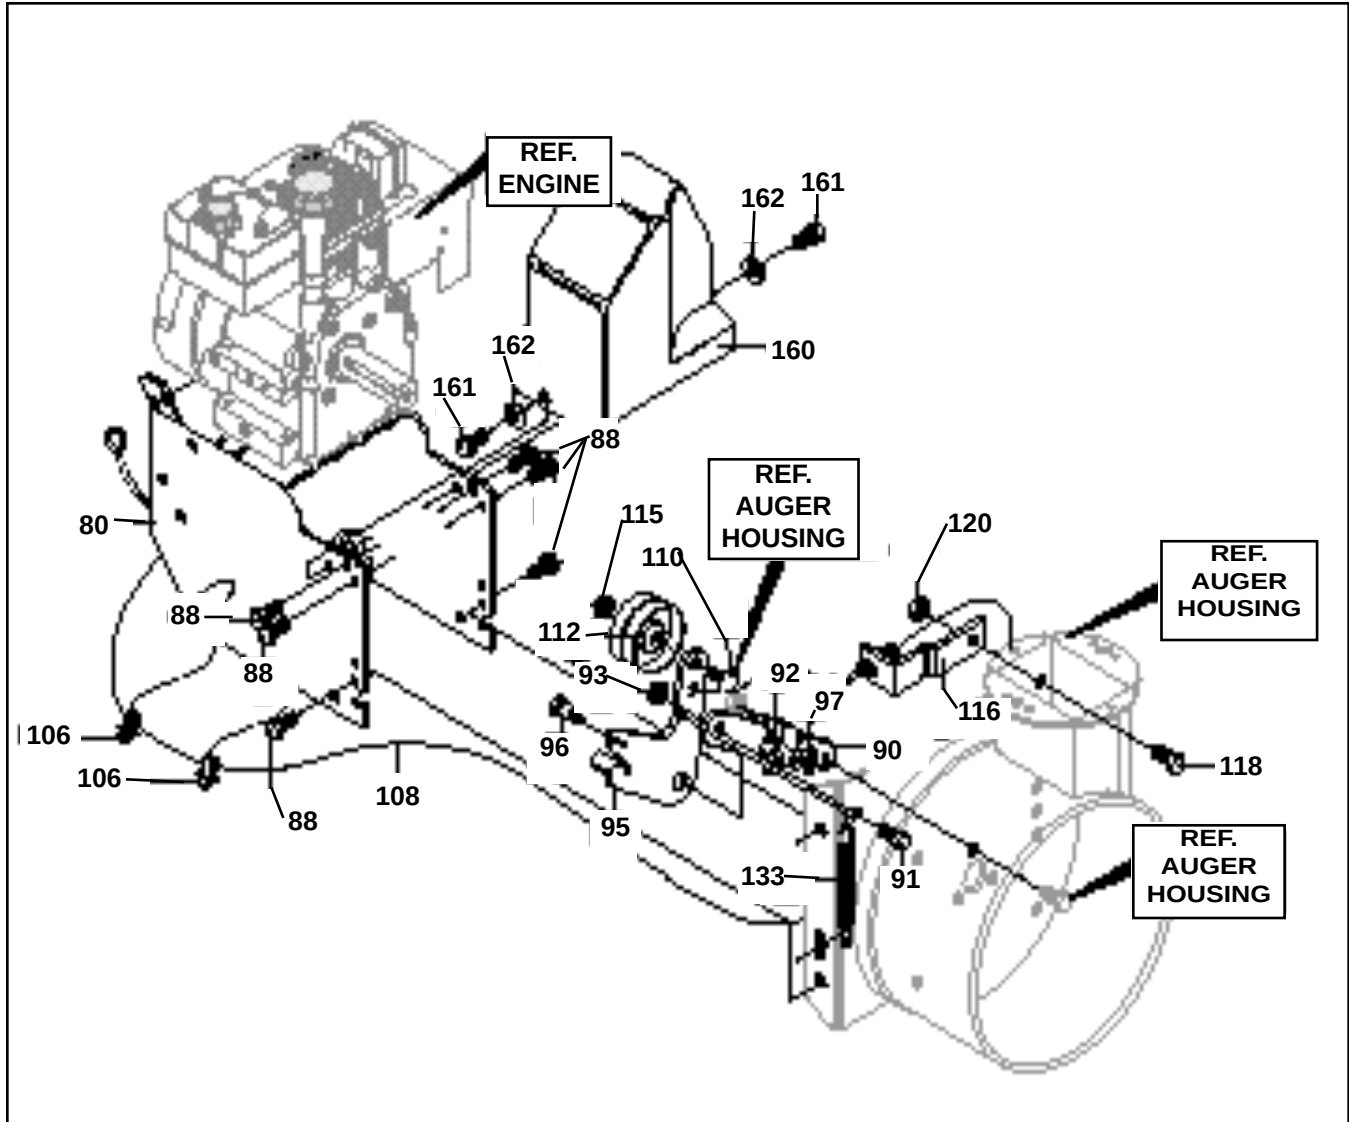


REF NO.	PART NO.	PART NAME	REF NO.	PART NO.	PART NAME
80	601 00 21 00	Frame Assy	106	601 00 20 27	Clip, Cable
88	601 00 05 20	Screw, 5/16-18x.75	108	601 00 24 21	Cable, Auger Clutch Ctrl
90	601 00 23 47	Plate-Clutch Arm	110	601 00 17 40	Screw, 3/8-16x1.25
91	601 00 20 61	Screw, 3/8-16x.75	112	601 00 14 54	Pulley, Idler
92	601 00 00 15	Washer, Regsptlk	115	601 00 13 35	Nut, 3/8-16 Hexctrlkjam
93	601 00 22 97	Nut, 3/8-16	116	601 00 21 02	Bracket, Compact Cable
95	601 00 23 48	Arm-Clutch	118	601 00 20 16	Screw, 3/8-16x1.25
96	601 00 23 49	Bolt, .497x.138 3/8-16	120	601 00 00 60	Nut, 3/8-16 Reghexctrlk
97	601 00 00 60	Nut, 3/8-16 Reghexctrlk	133	601 00 10 89	Spring, Idler
106	601 00 20 27	Clip, Cable	160	601 00 14 65	Cover, Belt w/Storage
108	601 00 24 21	Cable, Auger Clutch Ctrl	161	601 00 14 45	Screw, 1/4-20x.63
110	601 00 17 40	Screw, 3/8-16x1.25	162	601 00 00 18	Flatwasher, .281x.63x.065

ST522 Gear Case Assembly

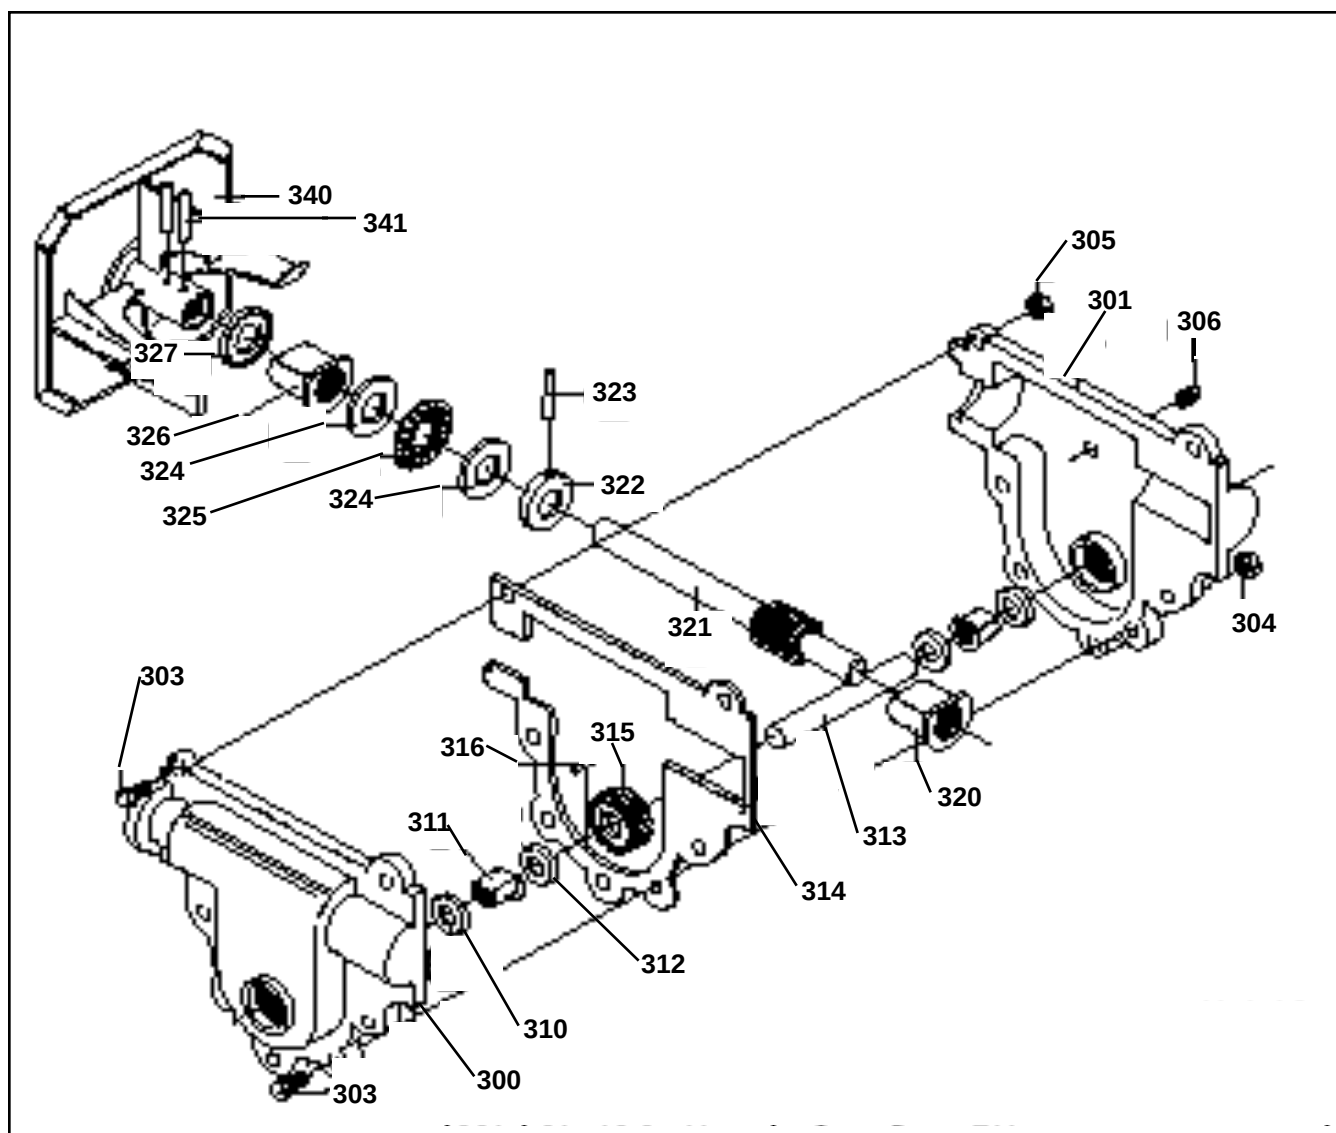


REF NO.	PART NO.	PART NAME	REF NO.	PART NO.	PART NAME
300	601 00 21 03	Gear Case, RH	320	601 00 05 67	Bearing, Flange
301	601 00 21 04	Gear Case, LH	321	601 00 21 11	Shaft, Worm Imp Input
303	601 00 23 45	Screw, 1/4-20x.75	322	601 00 21 12	Collar, Thrust .753x1.24x.50
304	601 00 08 27	Nut, 1/4-20	323	601 00 10 54	Pin, Spring
305	601 00 17 90	Nut, 1/4-20 Hexkeys	324	601 00 23 26	Flatwasher, .752x1.24x.093
306	601 00 21 05	Screw, 3/8-16x.50	325	601 00 15 01	Bearing, Roll
310	601 00 18 66	Seal, Oil	326	601 00 21 06	Bearing, Flange
311	601 00 21 06	Bearing, Flange	327	601 00 18 66	Seal, Oil
312	601 00 23 26	Flatwasher, .752x1.24x.093	340	601 00 23 46	Impel, Assy
313	601 00 21 07	Shaft, Auger Output	341	601 00 10 54	Spring Pin
314	601 00 21 08	Gasket, Gear Case			
315	601 00 21 09	Gear, Worm			
316	601 00 21 10	Key, Woodruff			

ST522 Auger Housing Assembly

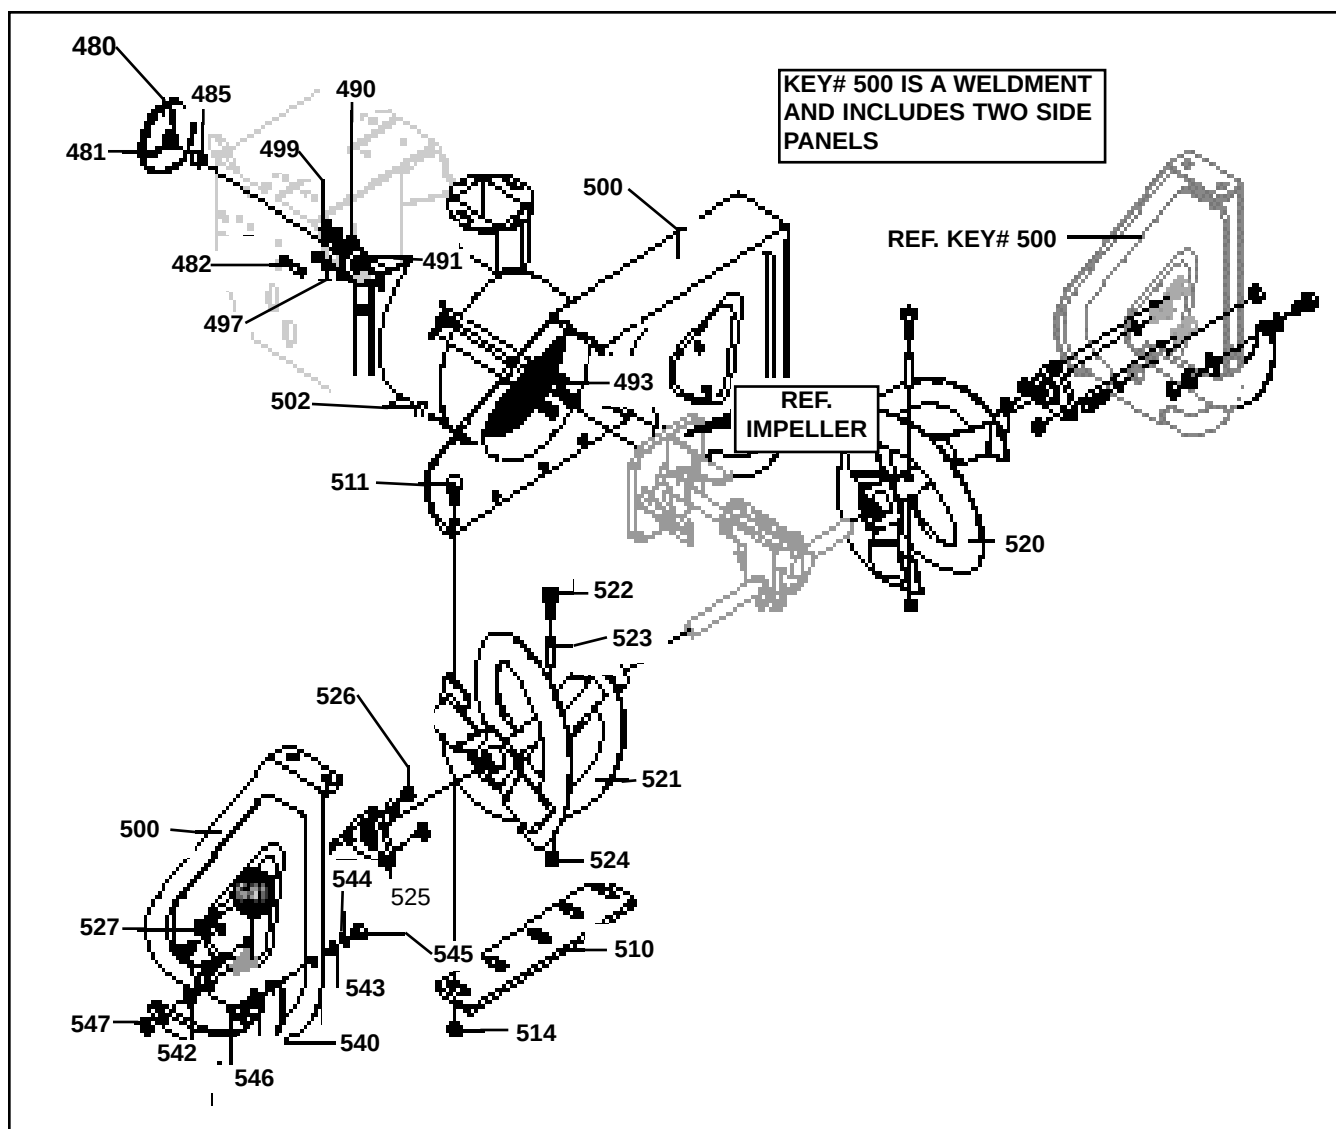


REF NO.	PART NO.	PART NAME	REF NO.	PART NO.	PART NAME
480	601 00 21 14	Pulley, V4L	521	601 00 23 44	Auger, Assy RH
481	601 00 21 16	Screw, 5/16-18x.50	522	601 00 08 97	Screw, 1/4-20x1.75
482	601 00 15 07	Key, Square	523	601 00 15 17	Spacer, Slve .250x.47x.20
485	601 00 16 10	Spacer, Slve .676x1.00x.53	524	601 00 23 18	Nut, 1/4-20
490	601 00 15 09	Retainer, Ball Bearing	525	601 00 21 22	Bearing, Flange
491	601 00 05 39	Bearing, Ball	526	601 00 21 23	Nut, 5/16-18
493	601 00 00 73	Screw, 5/16-18x.75	527	601 00 21 24	Screw, 5/16-18x.75
497	601 00 00 23	Washer, .328x.60x.09	540	601 00 21 25	Skid
499	601 00 00 12	Nut, 5/16-18	541	601 00 14 11	Bolt, 5/16-18x.75
500	601 00 23 40	Housing, Assy	542	601 00 06 69	Washer, Flat
502	601 00 10 04	Ratchet Fastener	543	601 00 00 19	Washer, Flat
510	601 00 21 18	Blade, Scraper 22"	544	601 00 00 23	Washer, Splitlock
511	601 00 23 41	Carr. Bolt, 1/4-20x.75	545	601 00 00 12	Nut, 5/16-18
514	601 00 23 42	Nut, 1/4-20 Whiz-loc	546	601 00 00 73	Screw, 5/16-18 x .75
520	601 00 23 43	Auger, Assy LH	647	601 00 21 23	Nut, 5/16-18, HXWDFLLK

ST522 Chute Assembly

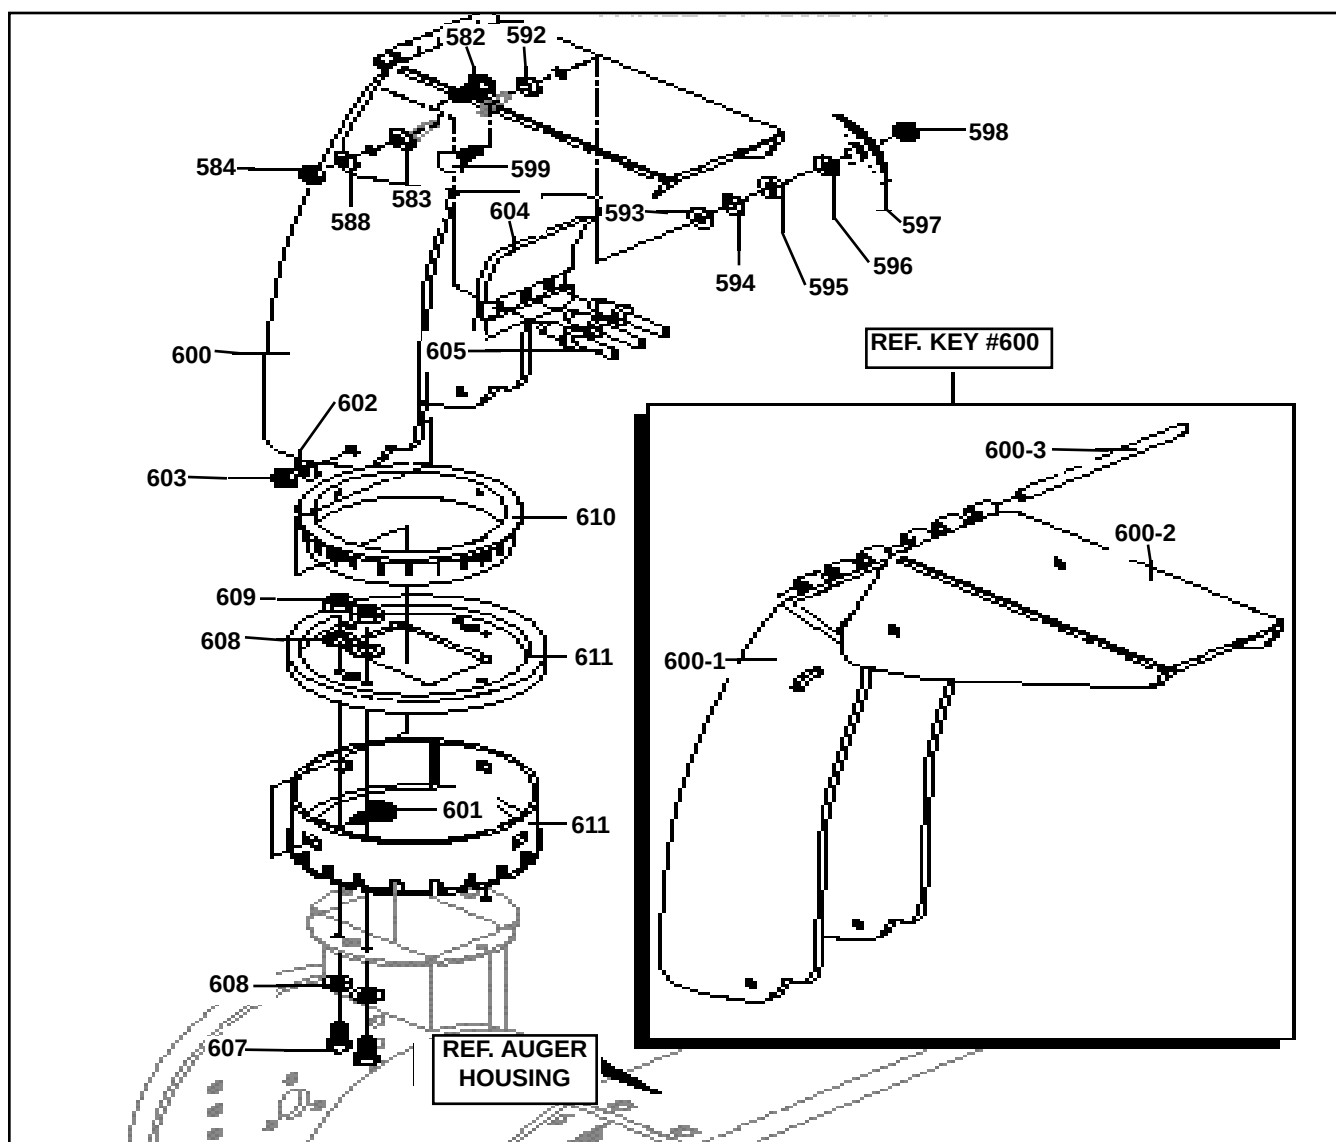


REF NO.	PARTNO.	PARTNAME	REF NO.	PARTNO.	PARTNAME
582	601 00 14 11	Bolt, 5/16-18x.75	601	601 00 20 40	Bolt, 5/16-18x1.00
583	601 00 21 16	Washer, Pl .438x.75x.064	602	601 00 00 19	Flatwasher, .344x.69x.065
584	601 00 00 59	Nut, 5/16-18	603	601 00 14 64	Nut, 5/16-18 Hexnyl
588	601 00 15 24	Washer, .315x.75x.064	604	601 00 23 38	Flap, Chute inset Assy
592	601 00 21 16	Washer, Pl .438x.75x.064	605 -	Included in 604 assembly	
593	601 00 15 24	Washer, .315x.75x.064	606	601 00 20 14	Collar, Chute
594	601 00 00 19	Flatwasher .344x.69x.065	607	601 00 00 68	Screw, 1/4-20x.75
595	601 00 00 23	Washer, .328x.60x.09	608	601 00 00 18	Flatwasher, .281x.63x.065
596	601 00 00 19	Flatwasher .344x.69x.065	609	601 00 23 18	Nut, 1/4-20 Reghexctrlk
597	601 00 06 84	Knob, T	610	601 00 18 39	Retainer, Ring Inner
598	601 00 00 12	Nut, 5/16-18 Reghex	611	601 00 18 40	Retainer, Ring Outer
599	601 00 08 99	Bolt, Carr. 5/16-18x1.00			
600	601 00 23 36	Chute Assembly			
600-1	601 00 23 37	Lower Chute			
600-2	601 00 21 29	Upper Chute			
600-3	601 00 21 30	Hinge Pin			

ST522 Wheels Assembly

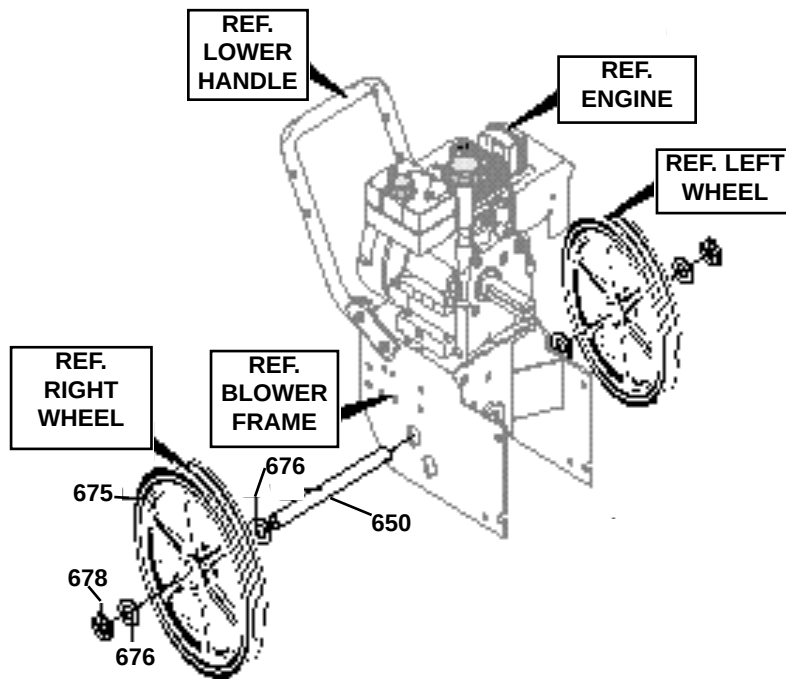


REF NO.	PART NO.	PART NAME
650	601 00 21 31	Axle, .50x20"
675	601 00 23 33	Tire & Rim
676	601 00 14 46	Flatwasher, .53x1.00x.063
678	601 00 00 89	Ring Retaining E

Handle Assembly

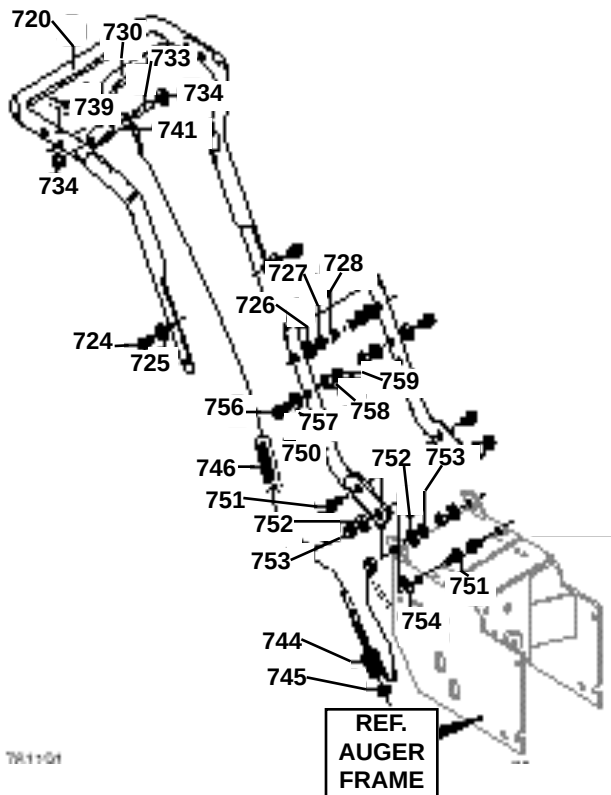

REF NO.	PART NO.	PART NAME
720	601 00 23 35	Handle, Upper
724	601 00 21 34	Screw, 5/16-18x2.75
725	601 00 00 19	Flatwasher, .344x.69x.065
726	601 00 00 23	Washer, .328x.60x.09
727	601 00 00 12	Nut, 5/16-18
728	601 00 21 35	Stop, Red Plastic
730	601 00 21 36	Kit for Handle, Assy RH
733	601 00 23 34	Pin, Clutch
734	601 00 05 16	Nut, Push on Cap
739	601 00 15 50	Bumper, Rect
741	601 00 21 37	Cable, Clutch
744	601 00 15 53	Spring, Auger Clutch
745	601 00 23 18	Nut, 1/4-20 Reghexctrlk
746	601 00 13 95	Boot, Clutch Spring
750	601 00 21 38	Handle, Lower
751	601 00 00 74	Screw, 5/16-18x1.00
752	601 00 00 23	Washer, .328x.60x.09
753	601 00 00 12	Nut, 5/16-18 Reghex
754	601 00 03 55	Push nut
756	601 00 21 39	Screw, 5/16-18x2.00
757	601 00 00 19	Flatwasher, .344x.69x.065
758	601 00 00 23	Washer, .328x.60x.09
759	601 00 00 12	Nut, 5/16-18 RegheX


ST522 Chute Control Rod Assembly

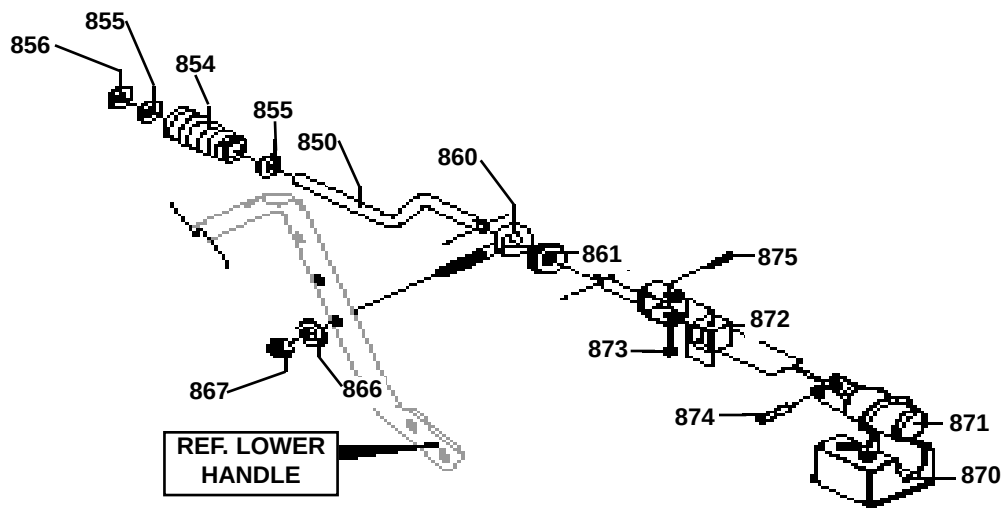

REF NO.	PART NO.	PART NAME
850	601 00 17 49	Crank, Assy w/Yoke
854	601 00 20 48	Handle, Chute Crank
855	601 00 20 49	Flatwasher, .39x.70x.05
856	601 00 20 50	Ring, Ret E
860	601 00 21 40	Bolt, Eye
861	601 00 14 08	Grommet, Eye Bolt
866	601 00 00 20	Flatwasher, .406x.81x.065

REF NO.	PART NO.	PART NAME
867	601 00 06 53	Nut, 3/8-16
870	601 00 18 30	Bracket, Worm
871	601 00 18 31	Worm, Gear Chute
872	601 00 20 53	Block, Univ Piv
873	601 00 20 54	Pin, Clevis
874	601 00 20 55	Pin, Univ Joint
875	601 00 18 35	Pin, Cotter

Decals

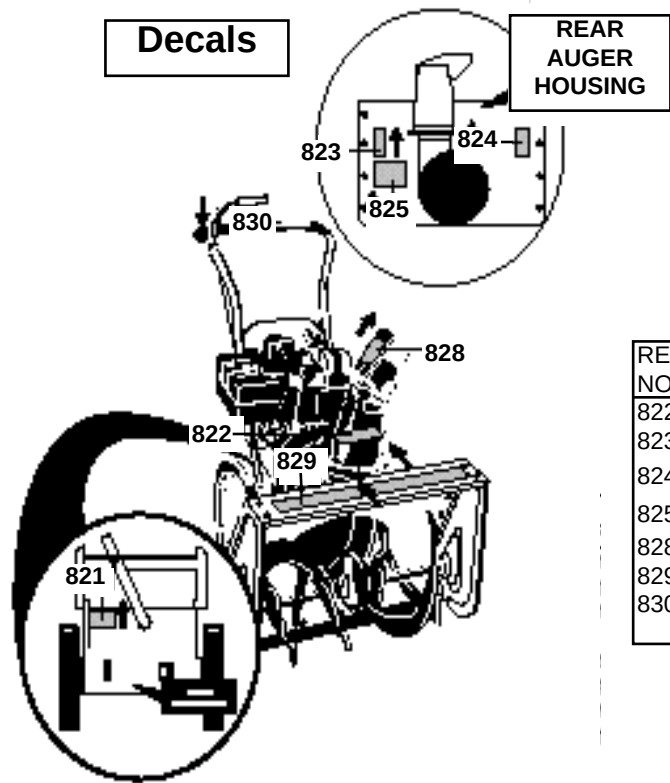

REF NO.	PART NO.	PART NAME
822	601 00 23 28	Decal, 9" Impeller
823	601 00 23 32	Decal, Danger Chute
824	601 00 23 29	Decal, Danger Auger Foot
825	601 00 23 31	Decal, Danger English
828	601 00 20 97	Decal, Husq. Crown
829	601 00 21 43	Decal, ST522H
830	601 00 00 68	Decal, Auger DriveEngage