

**owners
manual**


Model No.

95-1160-1

954 04 06-08R

BP 11

CAUTION:
Read Rules for
Safe Operation
and Instructions
Carefully

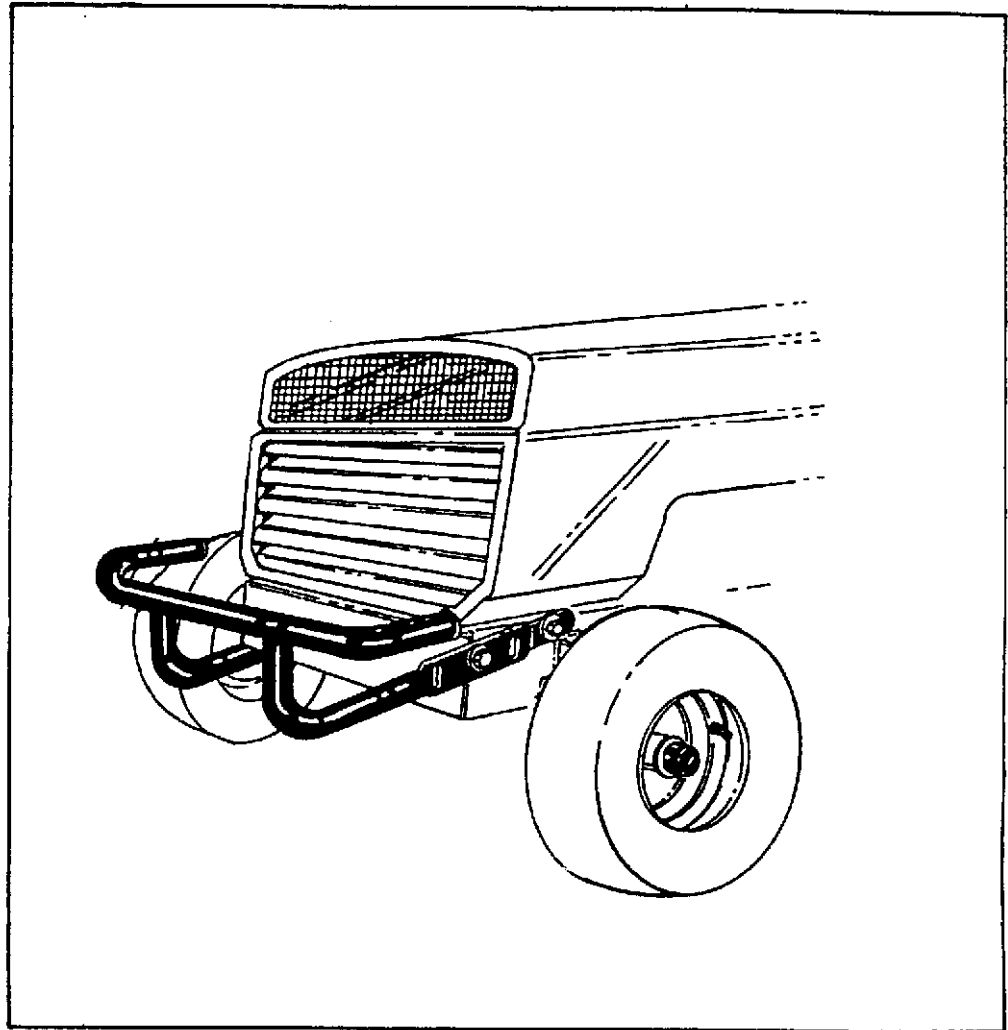

FRONT BUMPER

- **Assembly**
- **Repair Parts**

RULES FOR SAFE OPERATIONS

Any power equipment can cause injury if operated improperly or if the user does not understand how to operate the equipment.

Exercise caution at all times, when using power equipment.

1. Refer to your tractor owners manual for "Rules For Safe Operation."



Your bumper carton contains parts listed below. The hardware package contains parts shown in figure 1. Identify all parts and layout as shown in figure 1.

CARTONS CONTENTS

1. #44741 Bumper (See figure 3)
2. Hardware Package (See figure 1)

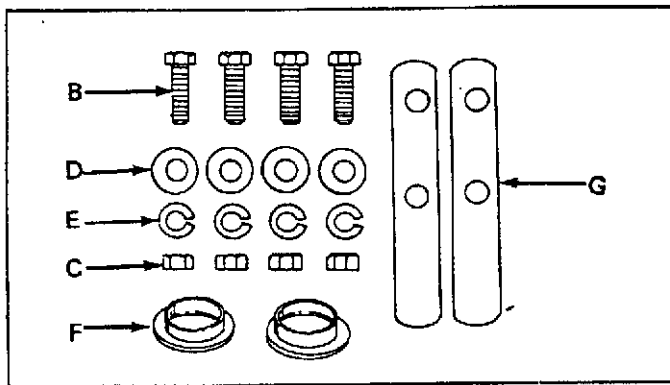


FIGURE 1 — HARDWARE PACKAGE


REPAIR PARTS FOR MODEL 95-1160-1 FRONT BUMPER

REF. No.	PART NO.	QTY.	DESCRIPTION
A	150300	1	Bumper
B	43062	4	Hex Bolt 3/8 -16 x 1-1/2" Lg.
C	43015	4	Hex Nut 3/8-16
D	43070	4	Washer, 3/8"
E	43003	4	Washer, Lock 3/8"
F	44742	2	Plug
G	23928	2	Bumper Extension Brackets
	46749	1	Owners Manual



NOTE

If your tractor is equipped with a heat deflector assembled with caged nuts, the caged nuts must be removed and the heat deflector reinstalled with the 3/8" hex bolts used to installed the bumper.

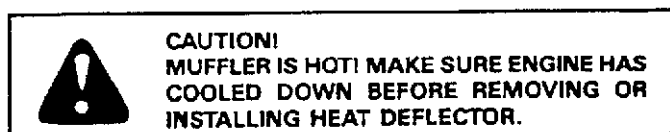

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED

- (2) 9/16" Open End of Box Wrench

1. Place plug on a work bench or solid table. Set end of bumper onto plug until it rests on short step on plug. Using even pressure, push down on bumper until end of bumper slips over plug. See figure 2. Repeat for other end of bumper.

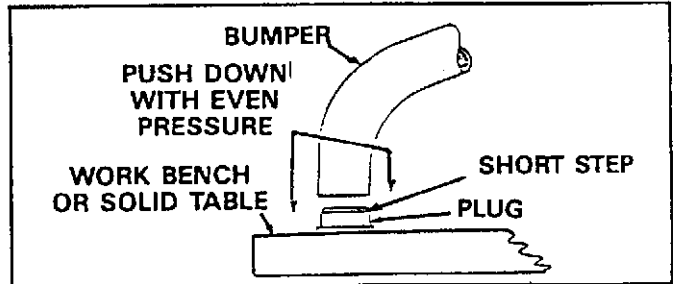


FIGURE 2



NOTE

It may be necessary on some tractors to extend the bumper forward for hood clearance by using the bumper extension brackets. Slide extension brackets inside bumper mounting tubes until hole B aligns with hole A. See figure 3.

2. Assemble bumper to sides of tractor frame using four 3/8" x 1-1/2" hex bolts and four 3/8" flat washers. Secure loosely with four 3/8" lock washers and four 3/8" hex nuts as shown in figure 3. Push bumper down to allow hood tilt clearance. Tighten nuts securely.

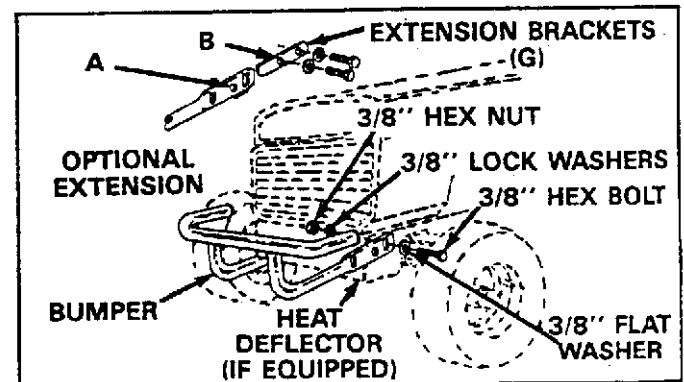


FIGURE 3