





|  |  |                 |
|--|--|-----------------|
| <b>SERVICE</b><br> |  | <b>14</b>       |
|  |  | <b>B0100040</b> |

English 1 (1)

## SB, 325 P 4, Tool, 2001-09

A tool is now available for removing and fitting the vibration damper in the cutting head.

For further information see Workshop Manual 114 00 11-26.

| <b>New part no.</b> | <b>Description</b> | <b>Excl. part no.</b> | <b>Remark</b> |
|---------------------|--------------------|-----------------------|---------------|
| 502 52 37-01        | Tool               |                       |               |

