



**Service
Bulletin**

B0402004

2004-03


Products: LTH/ YTH Tractors with Serviceable Oil Drain Valve
(Husqvarna serial numbers starting with 021704 and earlier)

Subject: Oil Drain Valve Removal & Installation

When servicing the oil drain valve please follow the instructions listed below.

Removal of the Oil Drain Valve:

1. Drain oil from the engine
2. Use a 15/16 Crow Foot to loosen the oil drain valve
3. While only being able to turn the drain valve 1/4 turn at a time, the drain valve should loosen quickly and can then be turned and removed by hand.

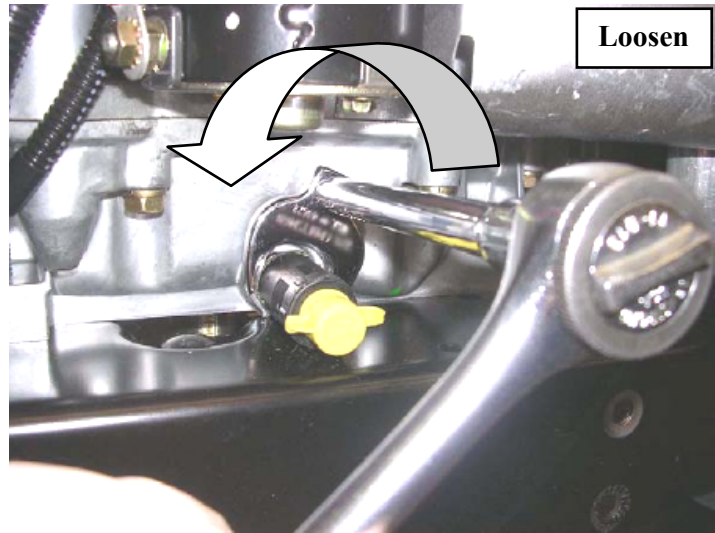

Installation of the Oil Drain Valve:

1. Add sealant to the threads of the oil drain valve
2. Screw the oil drain valve into the engine by hand until tight
3. Torque the oil drain valve with the 15/16 Crow Foot to the recommended specification:

Briggs & Stratton - 160 in/lbs (13 ft/lbs)
Kohler - 120 in/lbs (10 ft/lbs)

