



**MODEL 7-3697
BODY SECTION**

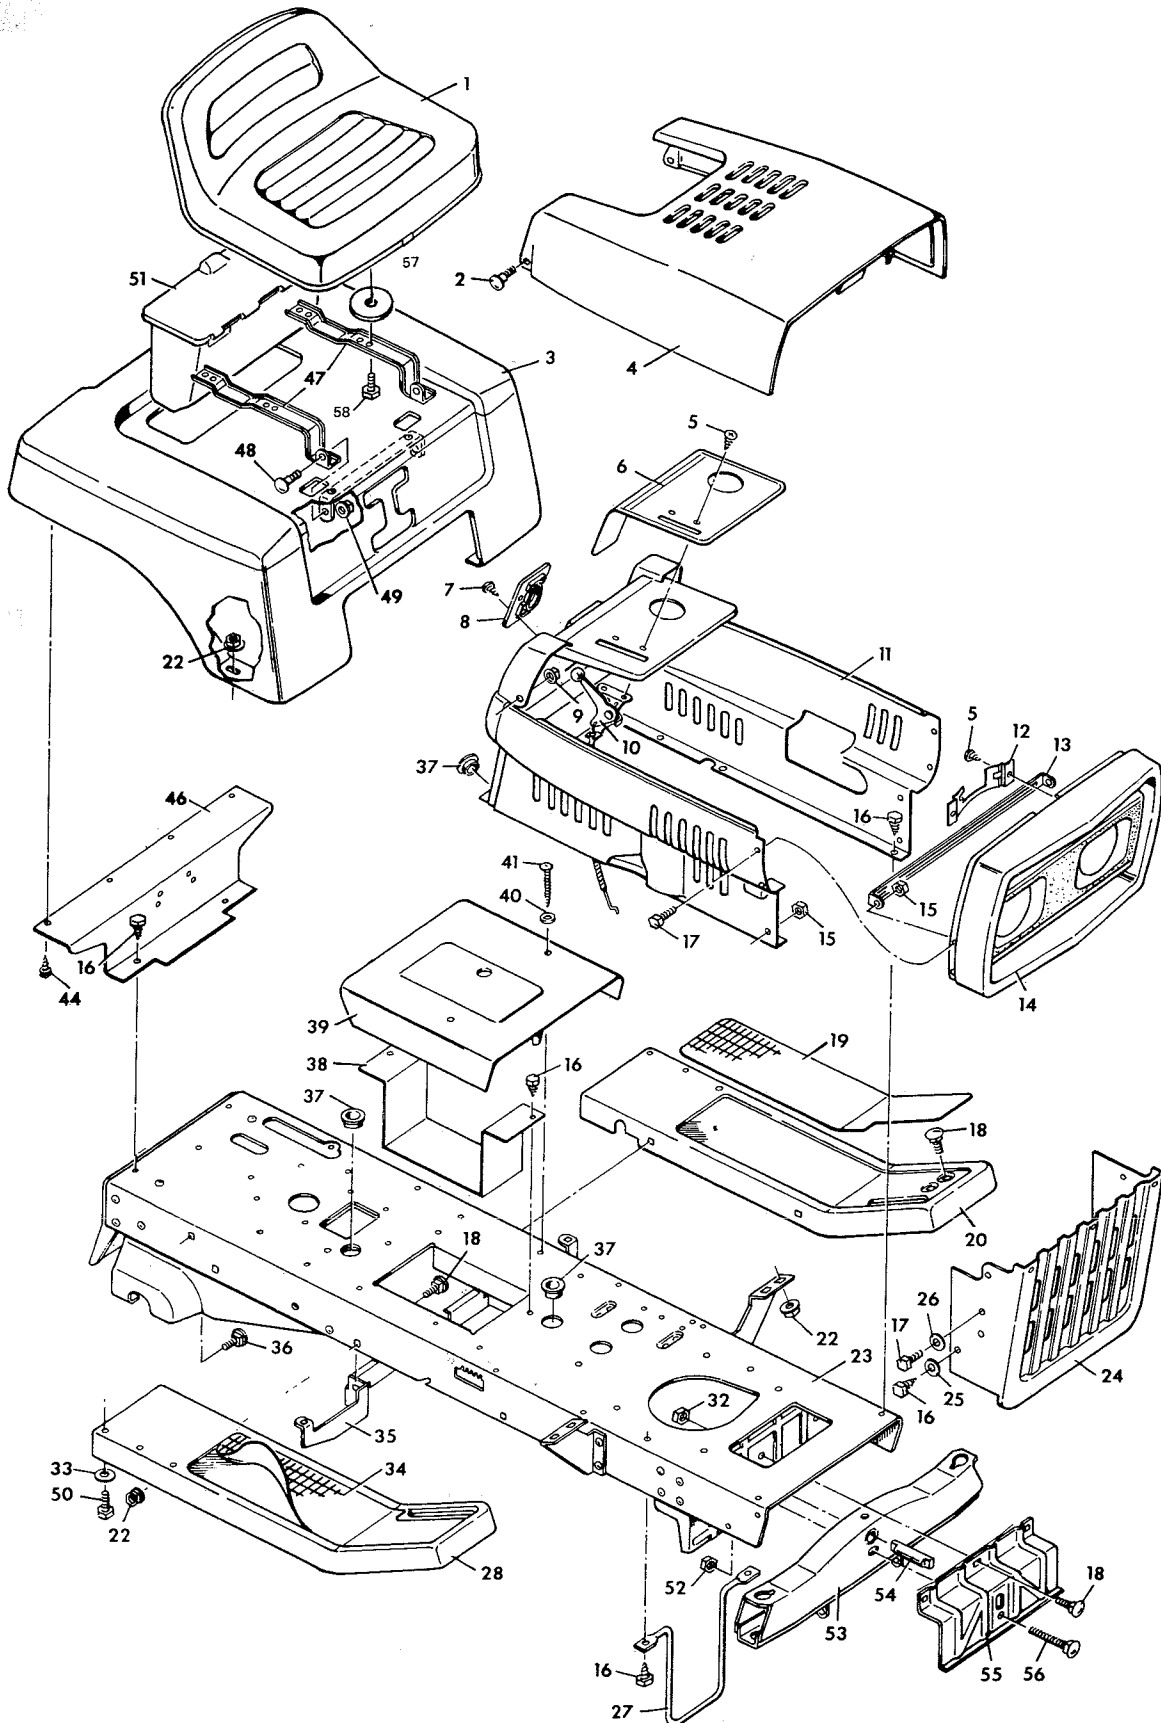

MODEL 7-3697

KEY NO.	PART NO.	DESCRIPTION
1	21970	Seat
2	20661	Shoulder Bolt $\frac{3}{8}$ "-16X $\frac{7}{8}$ "
3	21418	Rear Shroud Ass'y.
4	21435	Hood
5	26X159	Screw #8X $\frac{3}{8}$ " Type A
6	21691	Control Plate
7	26X186	Screw #10X $\frac{1}{2}$ " Type AB
8	21531	Steering Post Bearing
9	15X68	Flange Nut $\frac{3}{8}$ "-16
10	21540PA	Remote Control Unit
11	21458	Engine Shroud Ass'y.
12	21485Z	Sealed Beam Retainer
13	21650Z	Grille & Shroud Brace
14	21406	Grill
15	15X82Z	Flange Nut $\frac{1}{4}$ "-20
16	26X174	Screw 5/16"X $\frac{3}{4}$ " Type A
17	1X38Z	Bolt $\frac{1}{4}$ "-20X $\frac{5}{8}$ "
18	2X53	Carriage Bolt
19	21569	Mat L.H.
20	21933	Running Board L.H.
22	15X79Z	Flange Nut 5/16"-18
23	403035	Frame Ass'y.
24	21446	Lower Grill
25	17X47Z	Washer
26	17X37Z	Washer
27	23146Z	Belt Guide
28	21932	Running Board R.H.
32	15X88Z	Locknut 5/16"-18
33	17X47Z	Washer
34	21568	Mat R.H.
35	21547	Support & Clip Ass'y.
36	2X56	Carriage bolt $\frac{3}{8}$ "-16X $\frac{3}{4}$ "
37	21268	Grommet
38	23094	Battery Support
39	21403	Battery Cover
40	17X112	Finishing Washer
41	26X193	Screw #10X3- $\frac{1}{8}$ " Type AB
44	26X185	Screw #10X $\frac{3}{8}$ " Type AB
46	21411	Shroud Support
47	23110Z	Seat Hinge
48	20662	Shoulder Screw
49	15X84Z	Flange Locknut
50	1X45Z	Bolt 5/16"-18X $\frac{5}{8}$ "
51	21404	Tool Box
52	15X84Z	Lock Nut $\frac{3}{8}$ "-16
53	21331	Front Axle Assembly
54	21469	Front Axle Spacer
55	21534	Front Axle Hanger
56	2X60	Carriage Bolt $\frac{3}{8}$ "-16X3"
57	20094Z	Washer
58	1X84Z	Bolt


**MODEL 7-3697
STEERING SECTION**

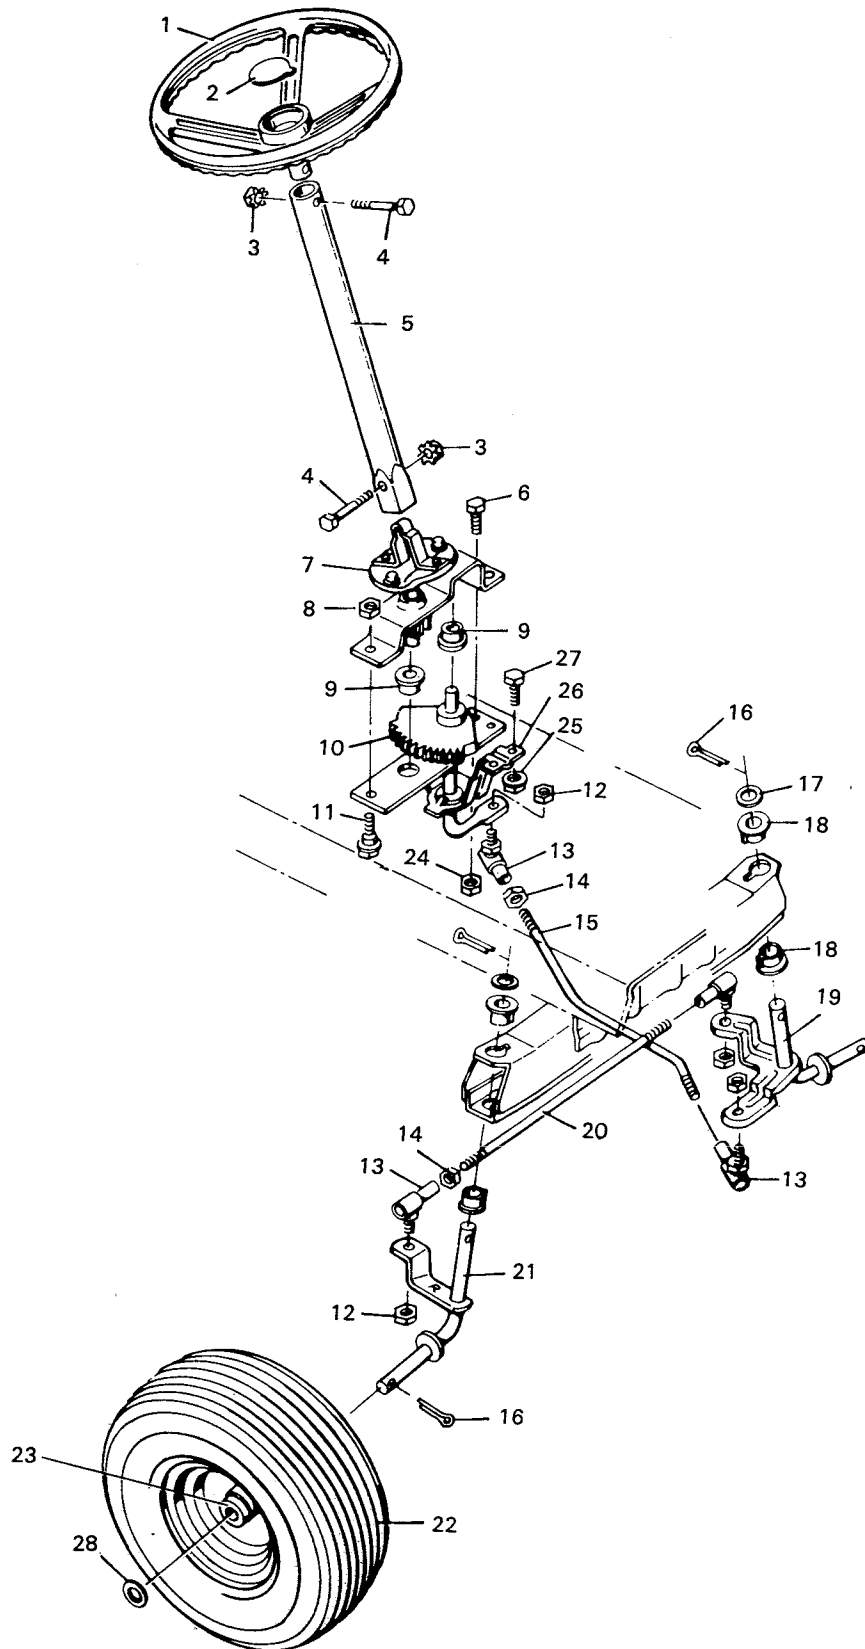

MODEL 7-3697

KEY NO.	PART NO.	DESCRIPTION
1	21688	Steering Wheel
2	21303	Steering Wheel Cap
3	15X76	Keps Nut 5/16"-18
4	1X75	Bolt 5/16"-18X1 ³ / ₄ "
5	21486C	Steering Post
6	1X73Z	Screw 5/16"-18X7/8"
7	21493	Steering Gear & Coupling Ass'y.
8	15X84Z	Locknut 3/8"-16
9	20587	Bearing
10	21692	Steering Arm Gear & Brkt. Ass'y.
11	21426	Shoulder Bolt
12	15X87Z	Locknut 3/8"-24
13	21031	Ball Joint
14	15X61Z	Hex Nut 3/8"-24
15	21482	Drag Link Rod
16	30X49	Cotter Pin 1 ¹ / ₄ "
17	17X83Z	Washer
18	21401	Spindle Bearings
19	21476	Spindle Ass'y. L.H.
20	21475	Tie Rod Ass'y.
21	21479	Spindle Ass'y. R.H.
22	21527	Front Wheel & Tire
	403000	Rim Only
	403001	Tire Only
	400162	Valve Stem & Cap
	21662	Hub Cap
23	403010	Front Wheel Bearing
24	15X43Z	Locknut 5/16"-18
25	15X79Z	Flange Nuts 5/16-18
26	21693	Steering Bracket
27	1X45Z	Bolt 5/16-18X5/8"
28	17X115	Washer
	23273	Parts Bag

MODEL NO. 3697 (10 hp.)

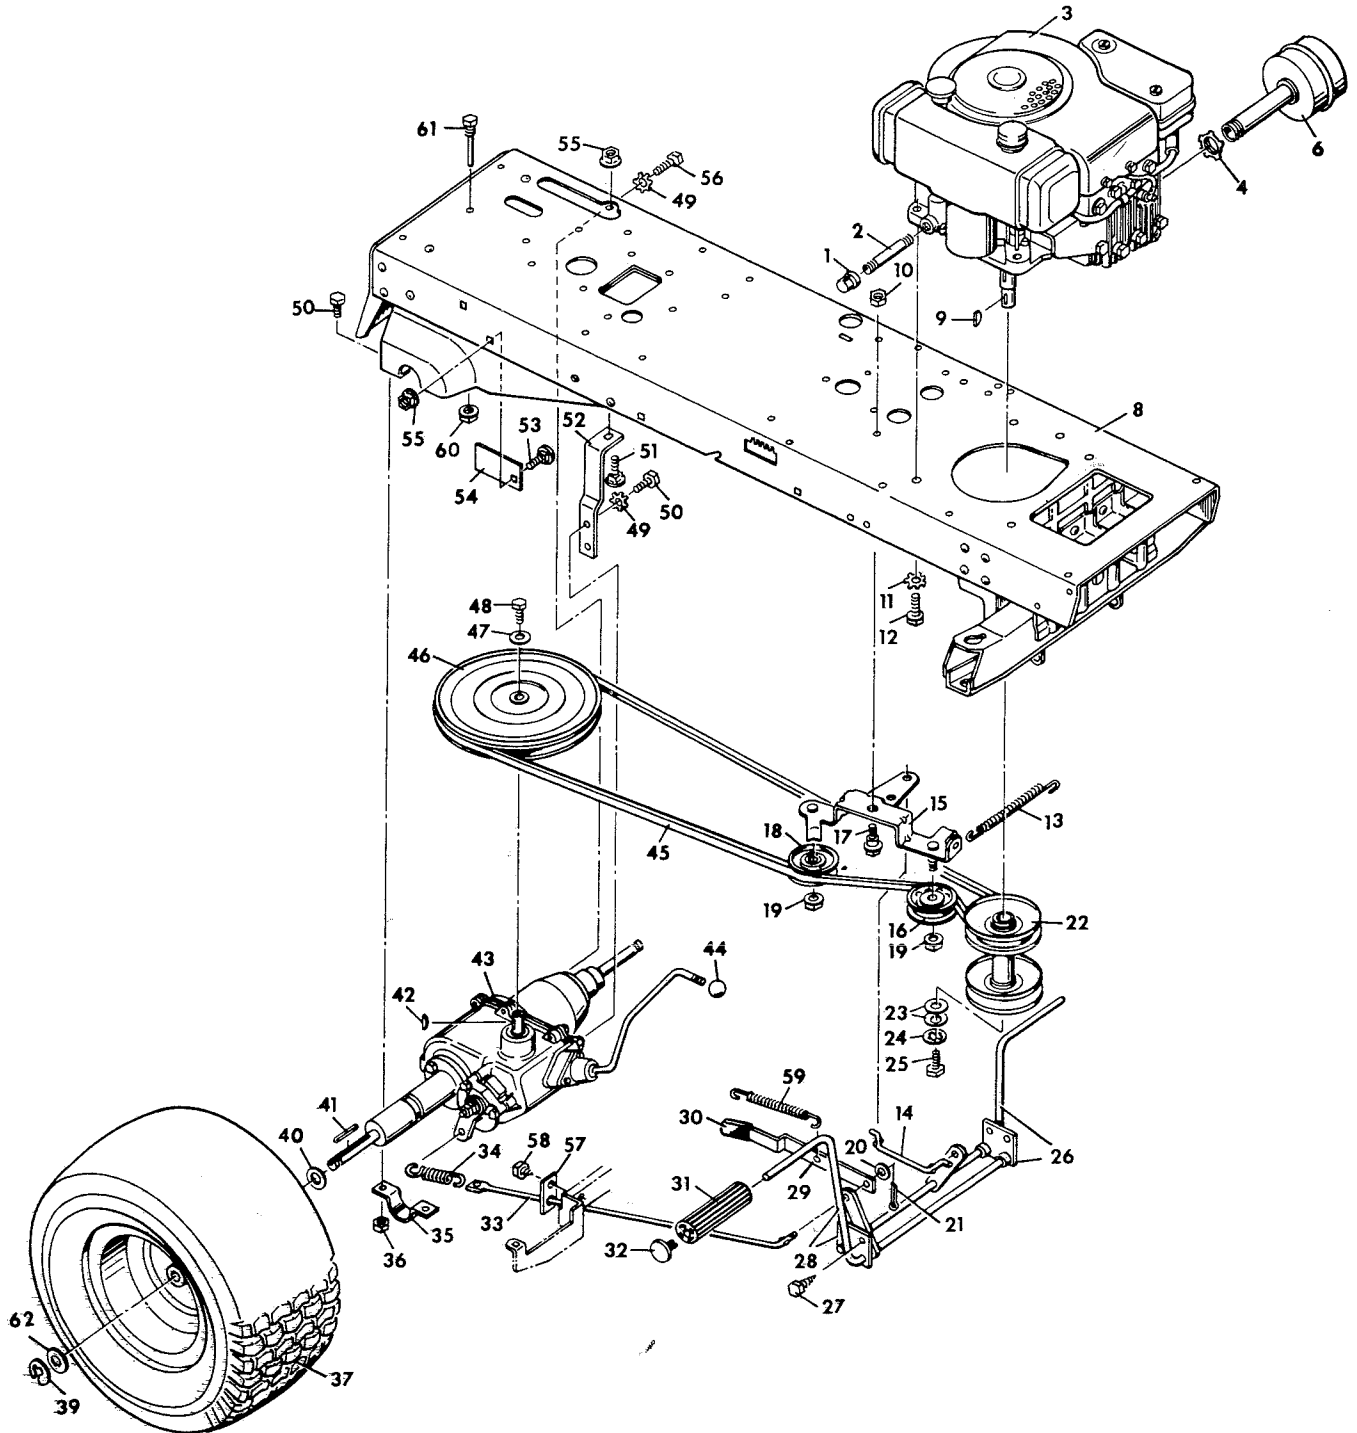


MODEL NO. 3697 10 hp.

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	21651	Cap	33	21472Z	Brake Rod
2	21652	Oil Drain Extension	34	21675	Spring
3	-----	Engine†	35	21473	Transaxle Clamp
4	21618	Lock Nut	36	15X88Z	Lock Nut 5/16"-18
6	-----	Muffler (10 hp.)†	37	21526	Wheel & Tire 18X9.50-8
7	21664Z	Heat Shield		403004	Wheel Only
8	403035	Frame Ass'y.		403005	Tire 18X9.50-8
9	20662	Woodruff Key #6		400162	Valve Stem & Cap
10	15X84Z	Lock Nut 3/8"-16		21662	Hub Cap
11	19X8	Lock Washer	39	11X3	E-Ring
12	20103	Engine Bolt 3/8"-16X1	40	21521	Washer
13	20684	Spring	41	21553	Square Key
14	21681	Clutch Link Rod	42	21539	Woodruff Key
15	21428	Idler Bracket & Stud Ass'y.	43	-----	Transaxle#
16	21409	Idler Pulley	44	20841	Knob
17	21426	Shoulder Bolt 3/8"-16X7/8"	45	21615	Drive Belt 1/2"X95"
18	20613	Idler Pulley	46	21447	Input Pulley
19	15X84Z	Flange Lock Nut 3-16	47	18X30	Lockwasher
20	17X47Z	Washer	48	1X38Z	Bolt 1/4"-20X5/8"
21	30X20	Cotter Pin 3/4"	49	18X15	Lock Washer
22	21415Z	Stack Pulley	50	1X73	Bolt 5/16"-18X7/8"
23	10851Z	Washer	51	2X57	Carriage Bolt 3/8"-16X7/8"
24	19X39	Shakeproof Washer	52	21440Z	Transaxle Support Bracket
25	1X20	Bolt 3/8"-24X1"	53	2X56	Carriage Bolt 3/8"-16X3/4"
26	21950	Clutch Lever Ass'y.	54	21683	Belt Guide
27	26X174	Screw	55	15X68	Lock Nut 3/8"-16
28	21946	Brake Lever Ass'y.	56	1X84Z	Bolt 5/16"-18X1"
29	21484Z	Parking Brake Arm	57	21678Z	Brake Rod Support
30	21434	Grip	58	26X185	Screw #10X1/2" Type AB
31	21544	Pedal	59	20682	Spring
32	21535	Cap	60	15X79Z	Lock Nut
			61	20619	Belt Guide
			62	17X115	Washer

†NOTE: Your engine Model, type an Code Number is stamped on Blower Housing.

#NOTE: Transaxle parts available through Tecumseh Dealer's Only.

**MODEL 7-3643
MODEL 7-3666
MODEL 7-3667
MODEL 7-3697
BLADE HOUSING**

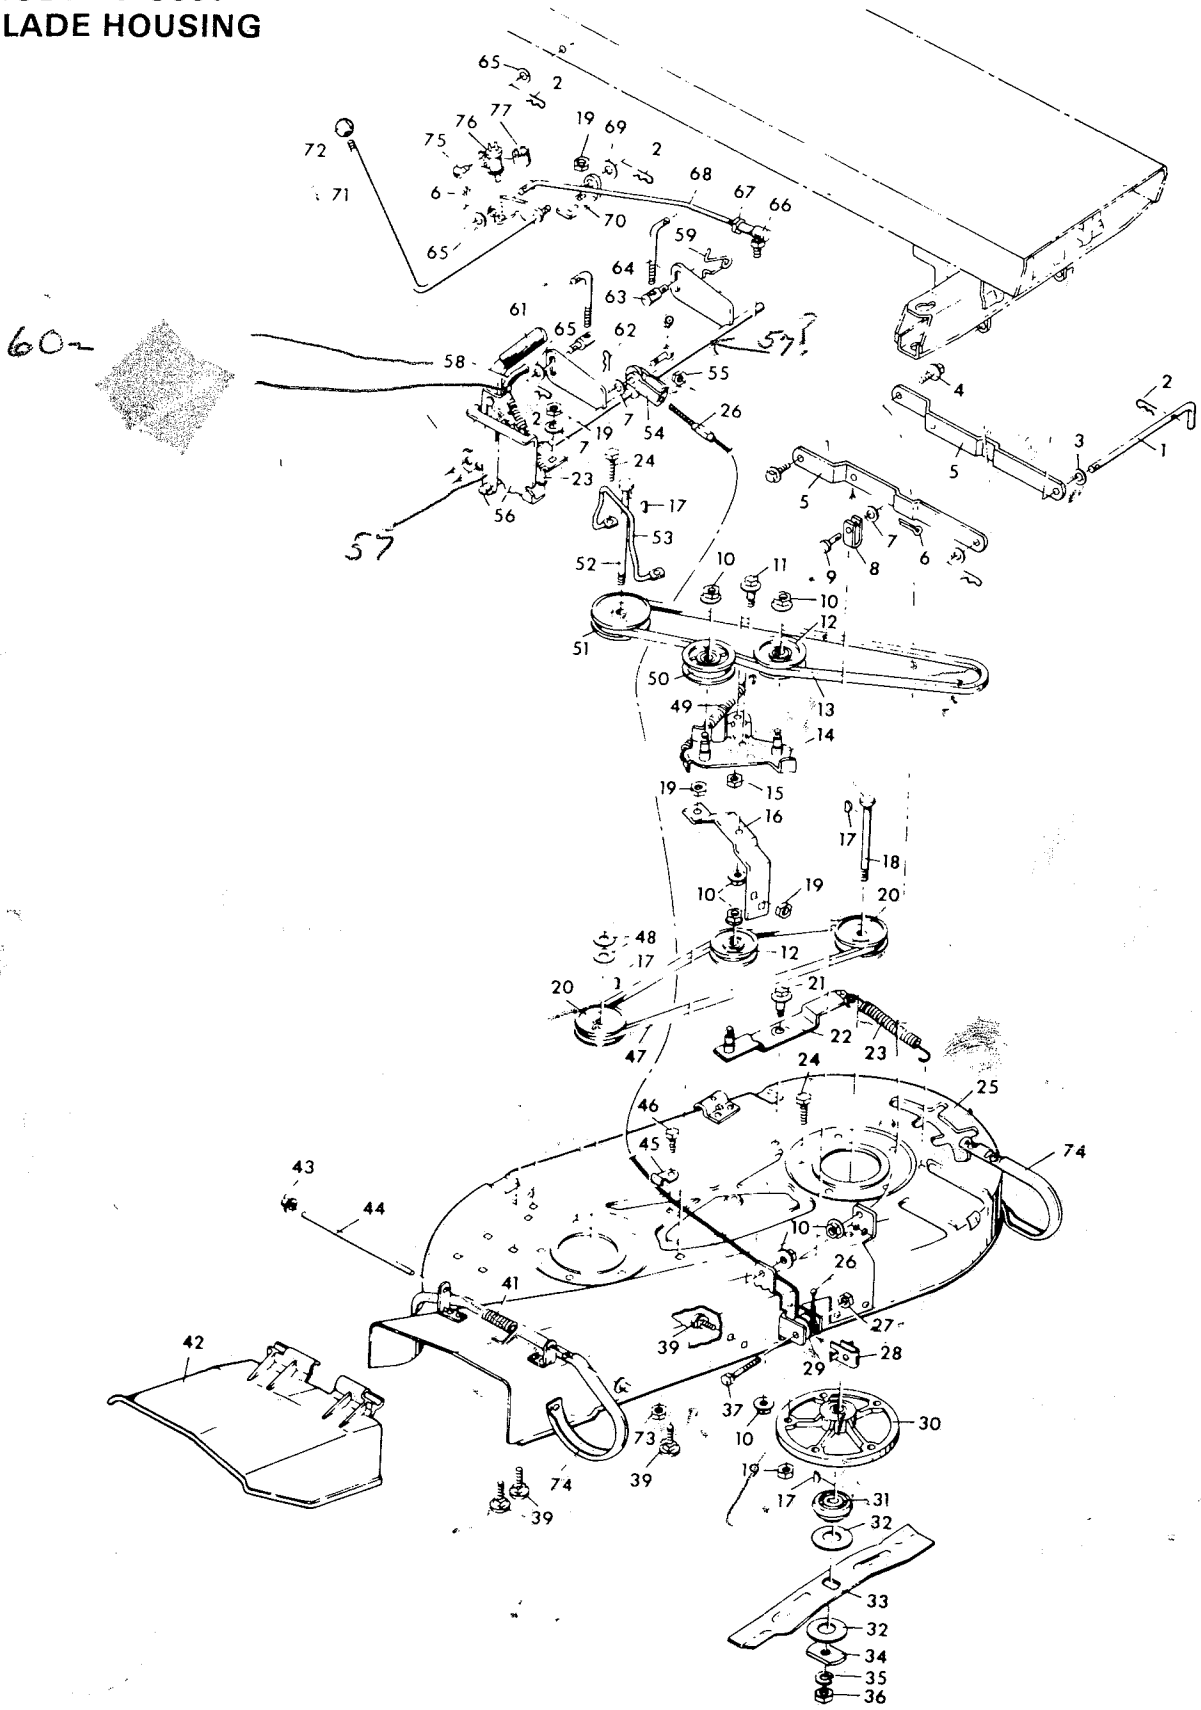

36" BLADE HOUSING

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	21912Z	Pull Pin	39	2X53	Carriage Bolt
2	20692	Hair Pin	41	21189	Torsion Spring
3	17X57Z	Washer	42	21154	Chute Deflector
4	20661	Shoulder Bolt	43	28X23	Push-On-Cap
5	21911	Support Arms	44	21198Z	Pivot Rod
6	30X20	Cotter Pins	45	21953Z	Cable Guide
7	17X47Z	Washer	46	1X38Z	Bolt 1/4"-20X5/8"
8	21914Z	Clevis	47	20557	Cross Drive Belt 1/2"X46"
9	29X93	Clevis Pin	48	17X87Z	Washers
10	15X84Z	Flange Locknut 3/8"-16	49	23126	Idler Spring
11	21426	Shoulder Bolt 3/8"-16X7/8"	50	21409	Idler Pulley
12	20613	Idler Pulley	51	21096	Jackshaft Pulley
13	21649	Blade Drive Belt 1/2"X55"	52	21024	Jackshaft - Long
14	21927	Blade Drive Idler Ass'y.	53	21504Z	Belt Guide
15	15X77	Locknut 3/8"-24	54	21915Z	Adjusting Clevis
16	21496	Idler Support Bracket	55	15X2	Hex Nut 5/16"-18
17	20062	Woodruff Key #6	56	21500	Lifter Bracket
18	20616	Jackshaft - Short	57	21906	Lifter Ass'y.
19	15X88Z	Nut 5/16"-18	58	23127	Grip
20	21022	Jackshaft Pulley	59	23139Z	Spring
21	20662	Shoulder Bolt	60	21308Z	Lifter Latch
22	21139Z	Idler Bracket Ass'y.	61	21249	Grip
23	20682	Spring	62	20101	Hair Pin
24	1X84Z	Bolt 5/16"-18X1	63	21920	Adjusting Nut
25	21907	Blade Housing	64	21918Z	Adjusting Rod
26	21913	Lift Cable	65	17X53Z	Washer
27	15X67	Hex Nut 1/4"-20	66	21031	Ball Joint
28	21917Z	Cable Guide	67	15X61Z	Hex Nut 3/8"-24
29	21916	Nylon Pulley	68	21517	Link Rod
30	20551	Jackshaft Housing	69	17X67Z	Washer
31	20617	Blade Adapter	70	20934	Bracket
32	21673Z	Washer	71	21515C	Blade Drive Lever Ass'y.
33	20930	Blade	72	20739	Knob
34	20663Z	Blade Washer	73	15X66	Hex Nut 1/4"-20
35	18X27	Lockwasher	74	404015	Skid Set
36	15X72	Hex Nut 1/2"-20	75	26X159	Screw #8X3/8"
37	1X90	Bolt 1/4"-20X1-3/4"	76	21549	Safety Switch
			77	21670	Safety Switch Protector
				404036	Complete Blade Housing Assembly


~~23108~~ 21591

158-6X46 shoulder screw

†NOTE: Your Engine Model, Type and Code Number is stamped on Blower Housing. Replacement parts may be obtained from your nearest Briggs & Stratton Service Center.

#NOTE: Transaxle parts available through Tecumseh Dealer's Only.

**MODEL 3697
WIRING DIAGRAM**

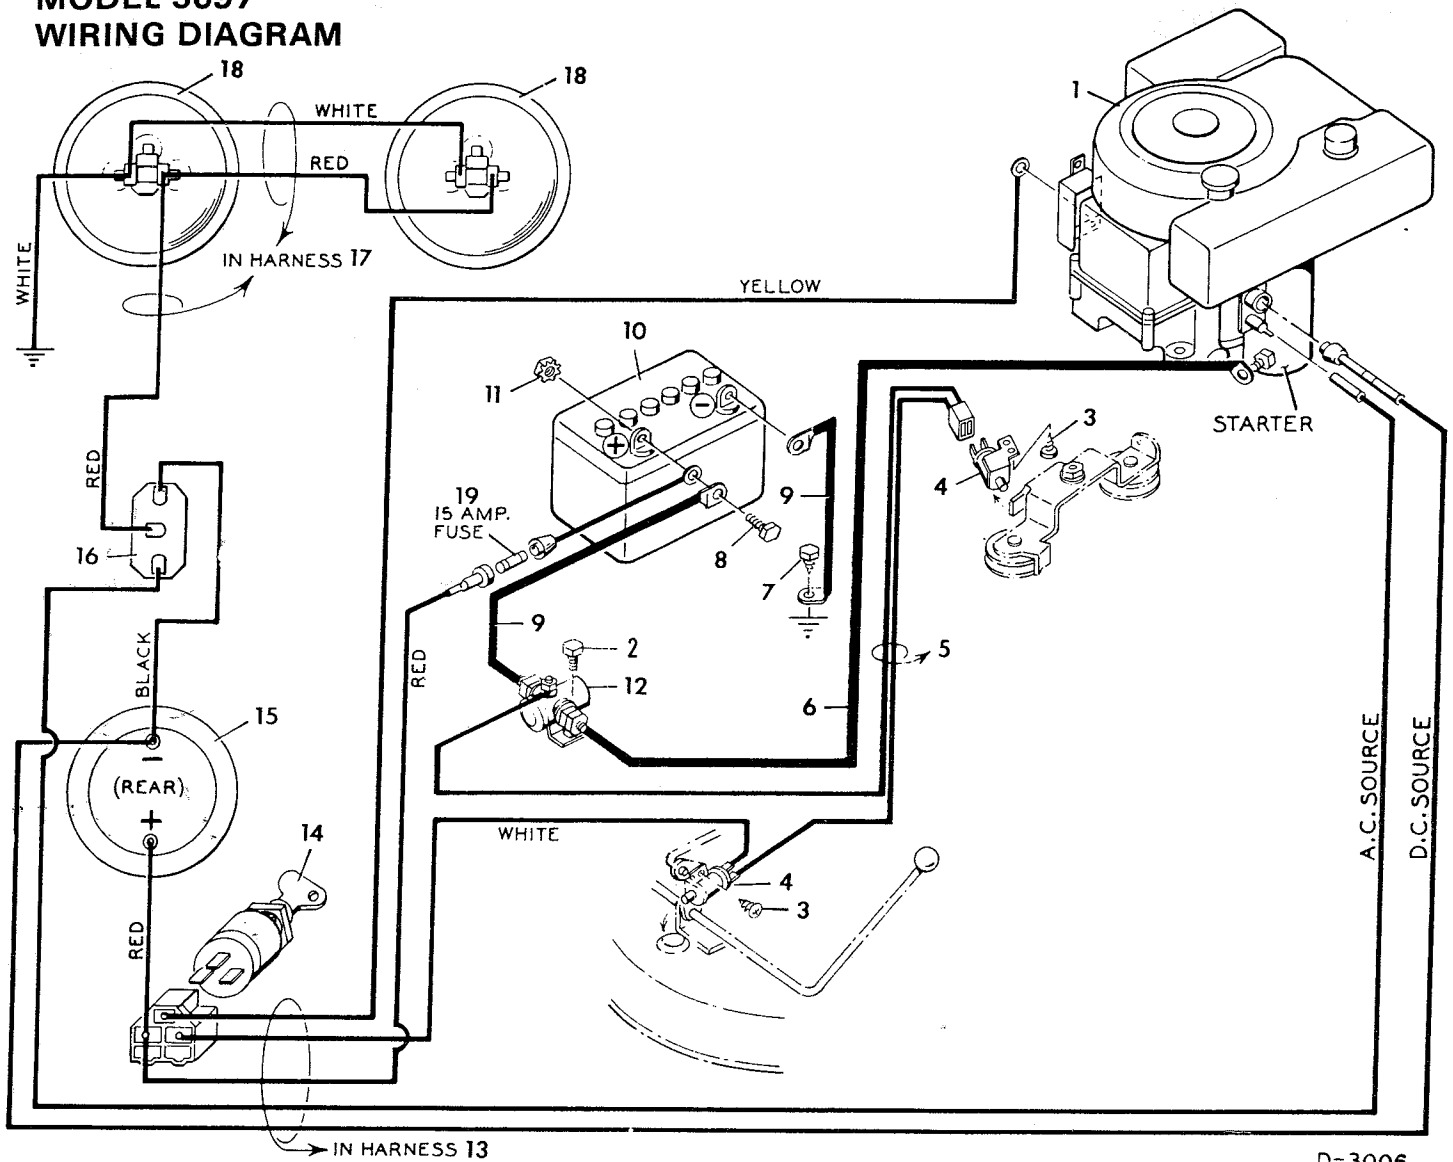

D-3006

KEY NO.	PART NO.	DESCRIPTION
1	----	Engine
2	26X186	Screw
3	26X159	Screw #8X ³ / ₈ " Type A
4	21549	Safety Switch
5	21612	Jumper Wire
6	21577	Battery Cable
7	26X197	Screw 5/16"X ³ / ₄ " Type A
8	1X38Z	Hex Bolt 1/4"-20X ⁵ / ₈ "
9	21613	Battery Cable
10	23095	Battery
11	15X66	Keps Nut 1/4"-20
12	21261	Solenoid
13	21609	Wiring Harness
14	21064PA	Switch & Key
15	21057PA	Ammeter Ass'y.
16	21686PA	Light Switch
17	21687	Wiring Harness
18	20837	Seal Beam Light
19	21023	Fuse 15 Amp.
	20729	Key Only