



MODEL 9-4297 BODY SECTION

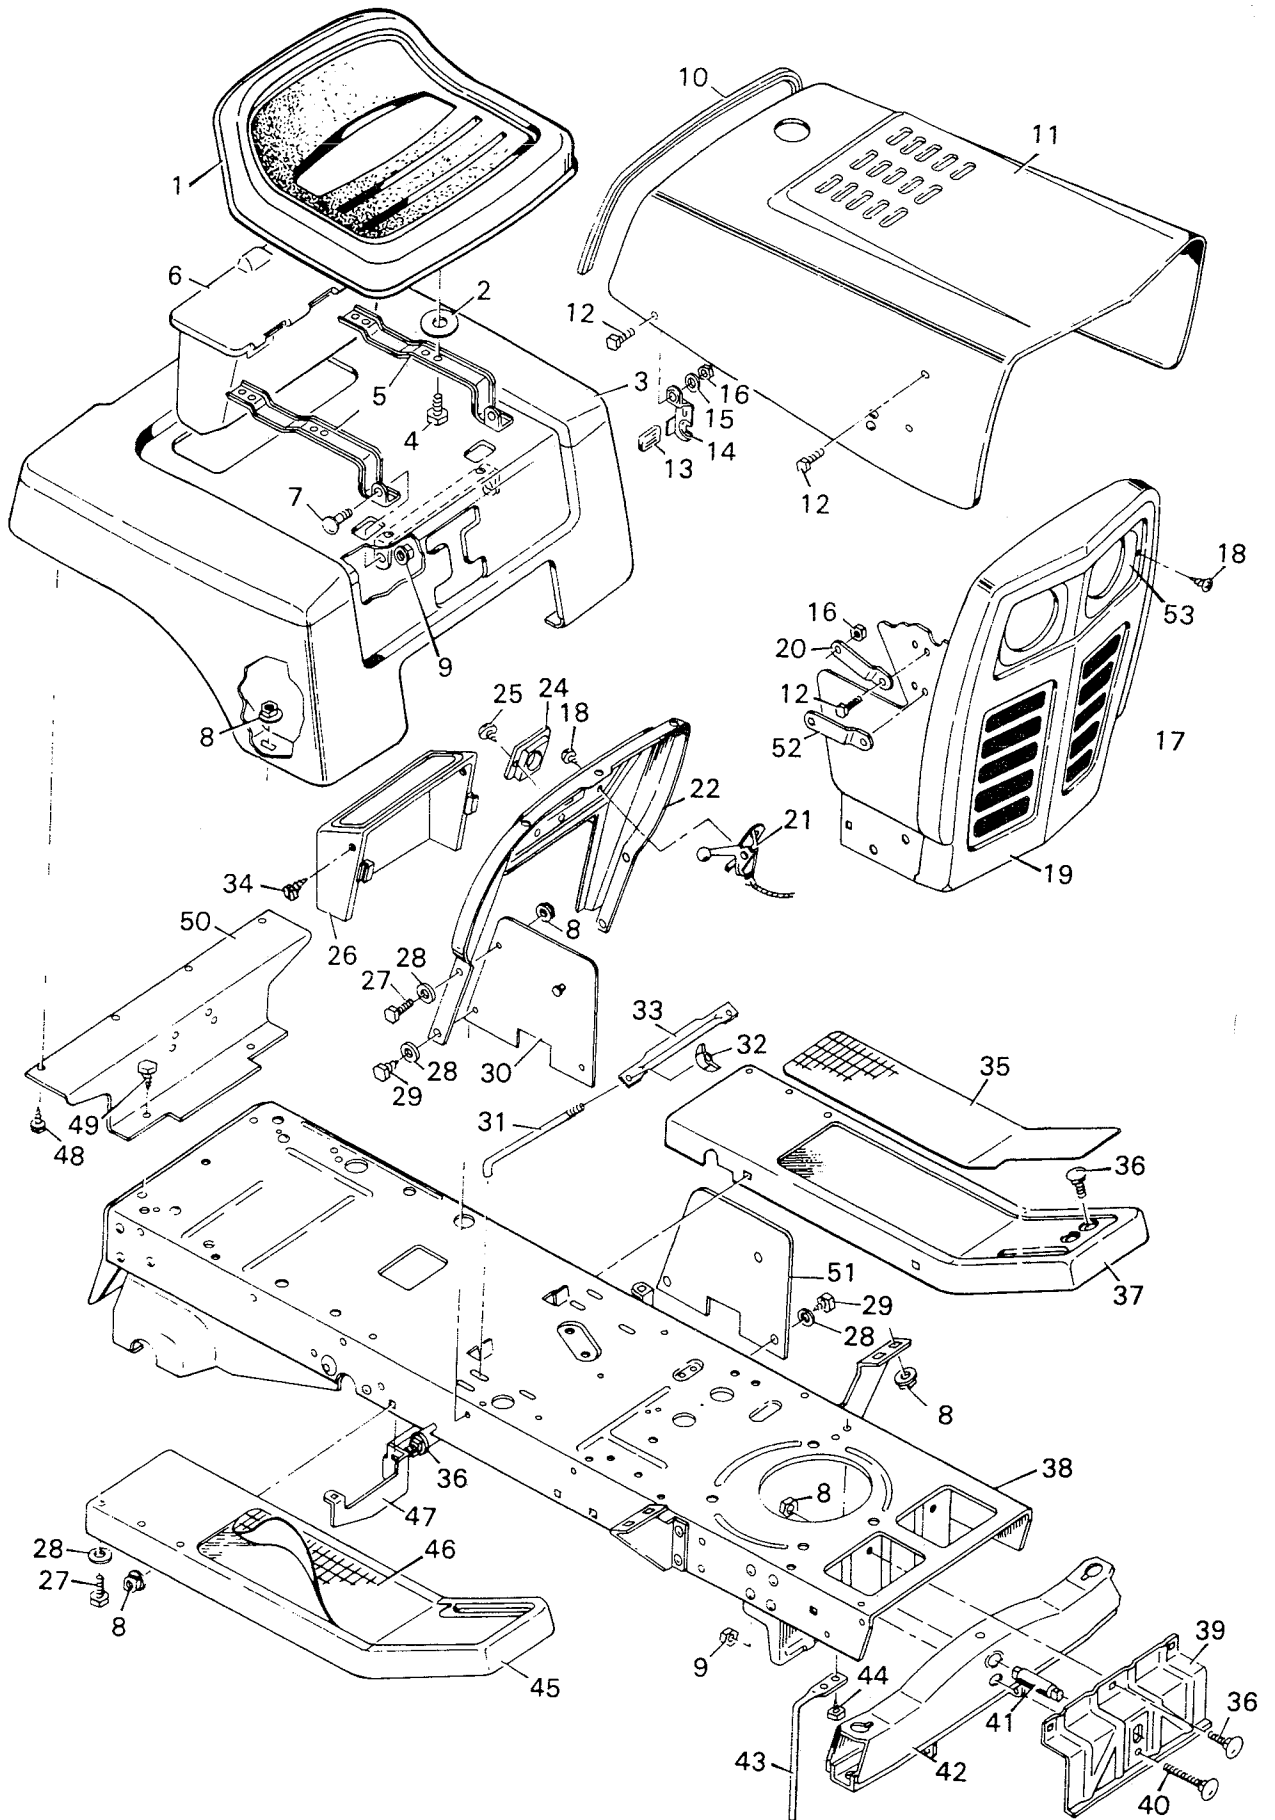

MODEL 9-4297

Key No.	Part No.	Description
1	23884	Seat
2	20094Z	Washer
3	23338	Rear Shroud Assembly
4	1X84Z	Bolt 5/16"-18X1"
5	23110Z	Seat Hinge
6	21404	Tool Box
7	9X15	Shoulder Screw
8	15X79Z	Hex Locknut 5/16"-18
9	15X84	Flange Locknut 3/8"-16
10	21765	Edge Trim
11	24084	Hood Assembly
12	4X24Z	Screw 1/4"-20X1/2"
13	21434	Grip
14	403040	Hood Latch - R.H.
---	403041	Hood Latch - L.H.
15	17X17Z	Washer I.D. 13/64"
16	15X81	Hex Nut # 10-24
17	23302C	Grill Insert
18	26X159	Screw # 8X3/8"
19	23307	Grill Assembly
20	23046	Pivot Bar
21	24011PA	Remote Control
22	23970	Control Panel
23	26X202	Screw 3/8"X5/8"
24	21707	Steering Post Bearing
25	26X186	Screw
26	23940	Battery Cover
27	1X45Z	Bolt 5/16"-18X5/8"
28	17X47Z	Washer I.D. 11/32"
29	26X197	Screw
30	23292	Side Plate - R.H.
31	21762Z	Battery Clamp Rod
32	14X81	Wing Nut
33	21761Z	Battery Clamp
34	26X195	Screw
35	21569	Rubber Mat - L.H.
36	2X53	Carriage Bolt 5/16"-18X5/8"
37	21933	Running Board L.H.
38	403034	Frame Assembly
39	21534	Front Axle Hanger
40	2X60	Carriage Bolt 3/8"-16X3
41	21469	Pivot Pin
42	21441	Front Axle Assembly
43	23789Z	Belt Guide
44	26X49	Screw
45	21932	Running Board - R.H.
46	21568	Rubber Mat - R.H.
47	21547	Running Board Support and Clip Assembly
48	26X185	Screw
49	26X174	Screw
50	21411	Rear Shroud Support
51	23293	Side Plate - L.H.
52	23088	Pivot Bar Assembly
53	23303C	Headlight Retainer


MODEL 9-4297 STEERING SECTION

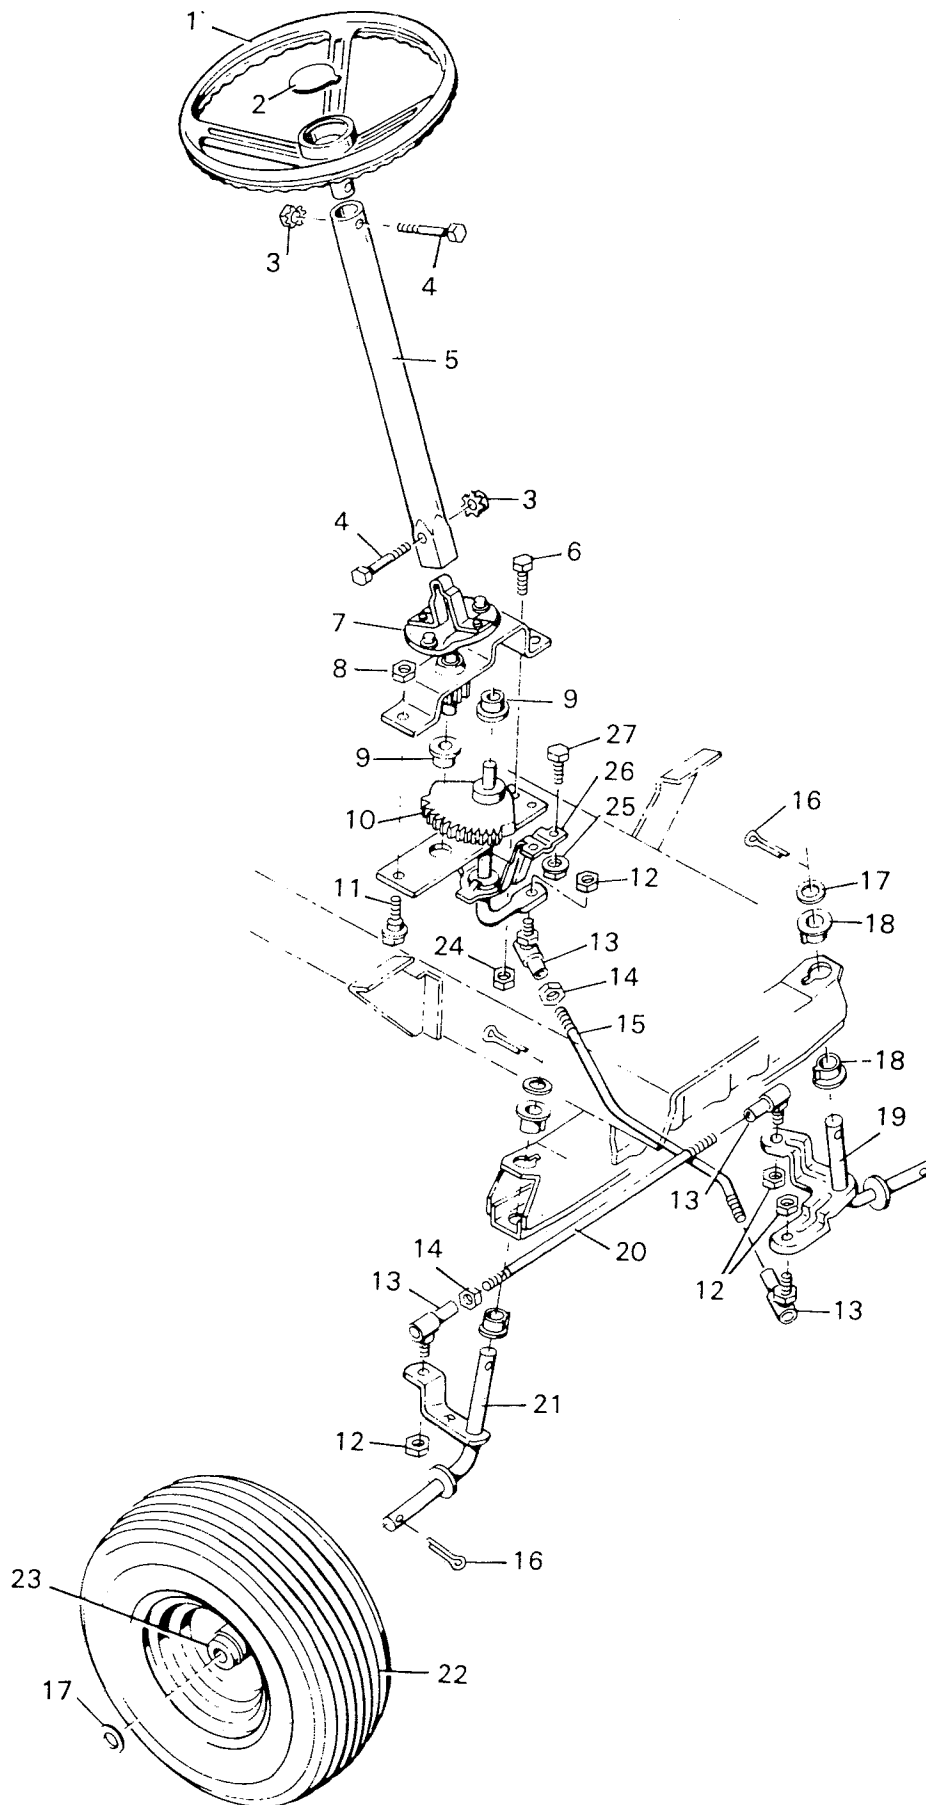

MODEL 9-4297

Key No.	Part No.	Description
1	21688	Steering Wheel
2	21303	Steering Wheel Cap
3	15X76	Keps Nut 5/16"-18
4	1X75	Bolt 5/16"-18X1-3/4"
5	21486C	Steering Post
6	1X45	Screw 5/16"-18X7/8"
7	21493	Steering Gear & Coupling Assembly
8	15X84	Locknut 3/8"-16
9	20587	Bearing
10	21692	Steering Arm Gear & Bracket Assembly
11	9X12	Shoulder Bolt
12	15X87Z	Locknut 3/8"-24
13	21031	Ball Joint
14	15X61	Hex Nut 3/8"-24
15	21482	Drag Link Rod
16	30X49	Cotter Pin 1-1/4"
17	17X83Z	Washer
18	23820	Spindle Bearings
19	24045	Spindle Assembly L.H.
20	21475	Tie Rod Assembly
21	24044	Spindle Assembly R.H.
22	21527	Wheel & Tire
	403000	Rim Only
	403001	Tire Only
	400162	Valve Stem & Cap
23	403010	Front Wheel Bearing
24	15X43	Locknut 5/16"-18
25	15X79Z	Flange Nut 5/16"-18
26	21693	Steering Bracket
27	1X45	Bolt 5/16"-18X5/8"
	23243	Parts Bag

**MODEL 9-4297
DRIVE SECTION**

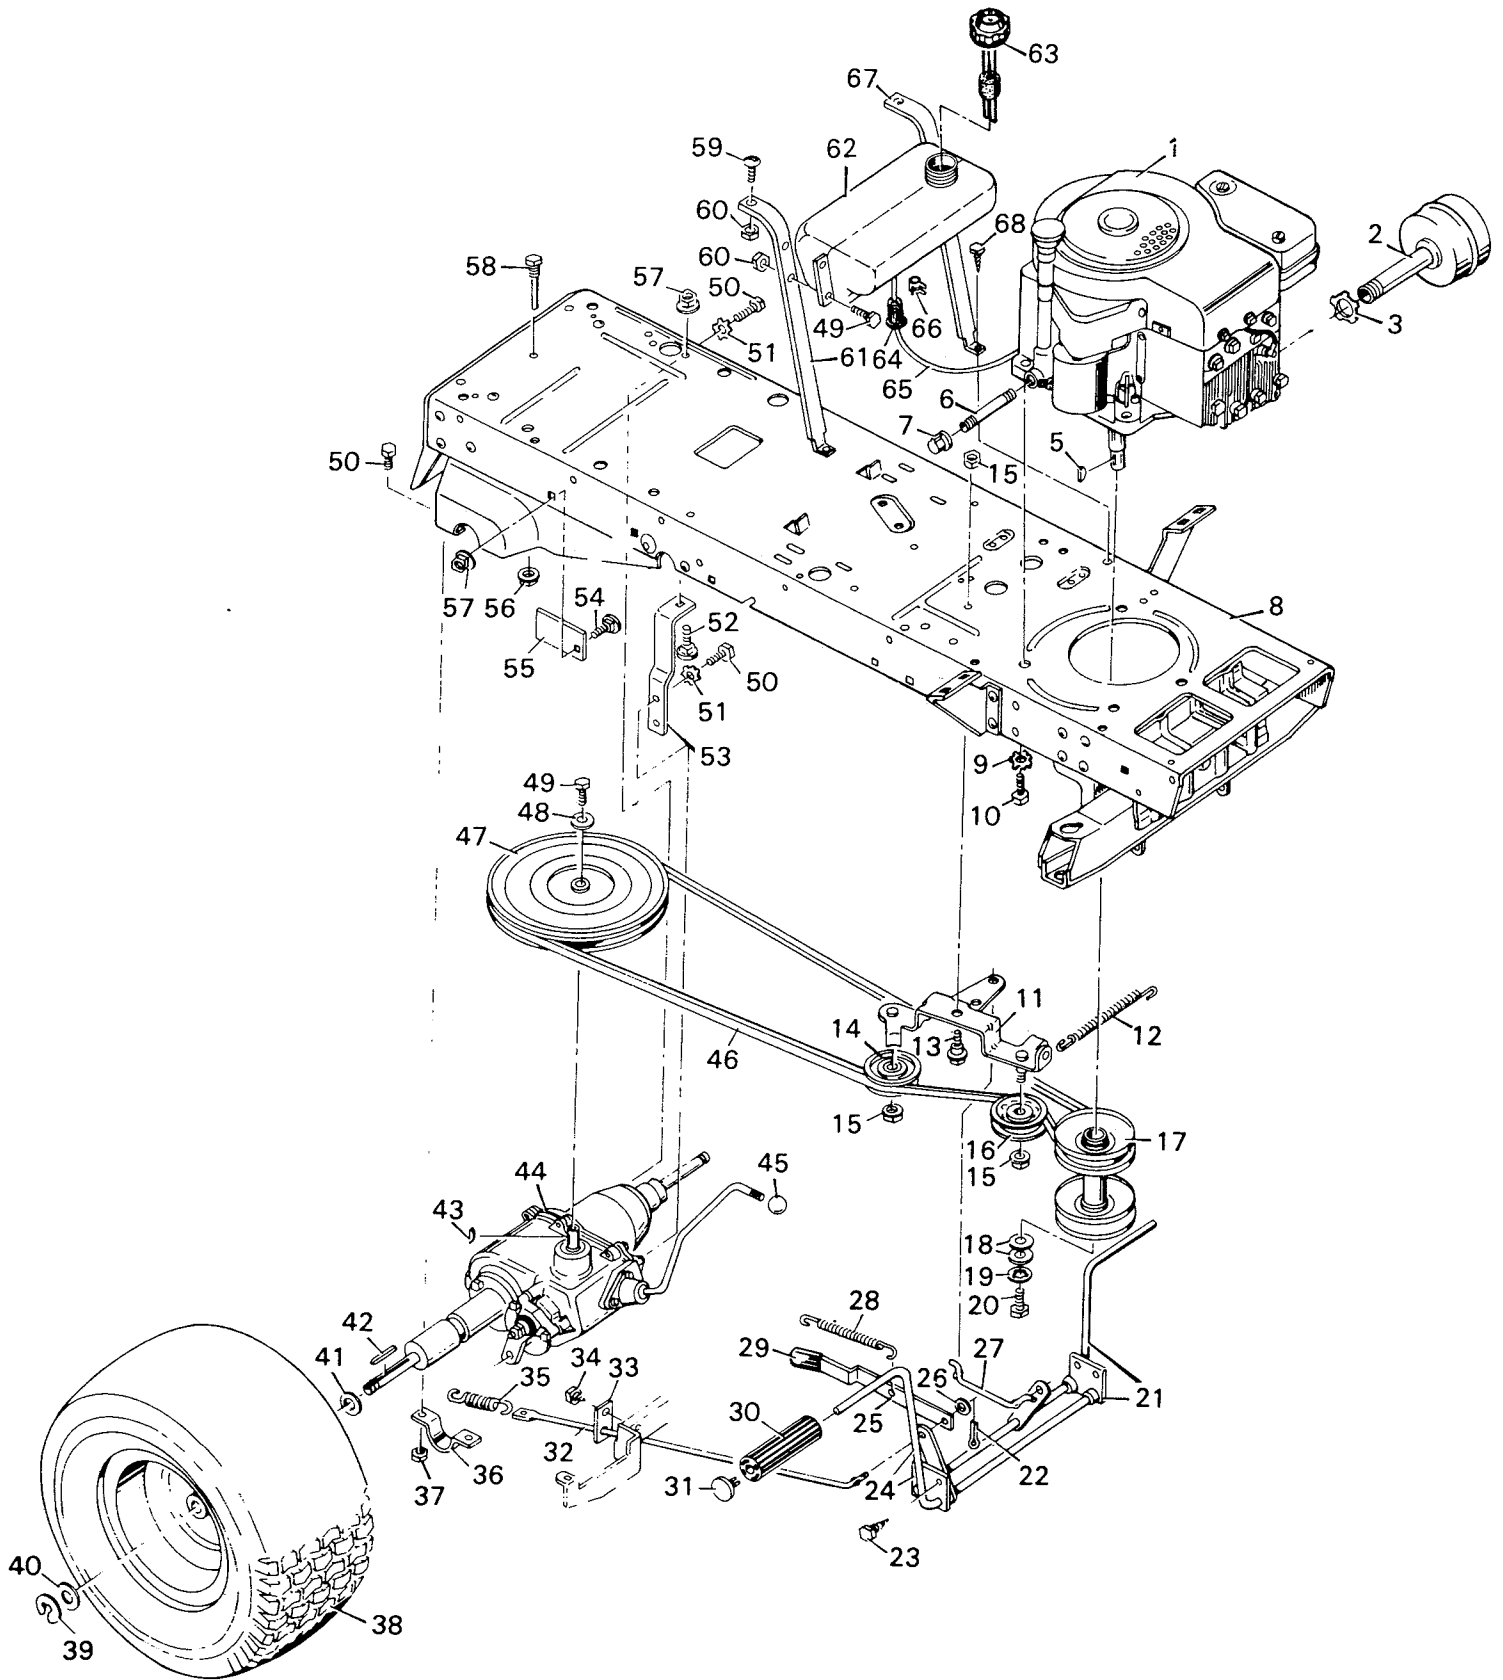


MODEL 9-4297

Key No.	Part No.	Description	Key No.	Part No.	Description
1	-----	Engine†	38	21526	Wheel & Tire
2	23343	Muffler	---	403004	Wheel Only
3	21616	Pipe Lock Nut	---	403005	Tire
5	20062	Woodruff Key # 6	---	400162	Valve Stem & Cap
6	21652	Oil Drain Extension	39	11X3	E-Ring
7	21651	Oil Drain Cap	40	17X115	Washer
8	403034	Frame Assembly	41	21521	Transaxle Washer
9	19X8	Shakeproof Washer	42	21553	Square Key
10	20103	Engine Bolt	43	21539	Woodruff Key # 61
11	21428	Idler Bracket & Stud Assembly	44	-----	Transaxle - 3-Speed #
12	23724	Drive Idler Spring	45	20844	Shift Knob
13	9X12	Shoulder Bolt	46	21615	Drive Belt 1/2"-95"
14	20613	Clutch Idler Pulley	47	21447	Input Pulley
15	15X84Z	Flange Locknut 3/8"-16	48	18X30	Spring Lockwasher
16	21409	Clutch Idler Pulley	49	1X38Z	Bolt 1/4"-20X5/8"
17	23725Z	Stack Pulley Assembly	50	1X84Z	Bolt
18	10851Z	Washer	51	18X15	Lockwasher
19	19X39	Shakeproof Washer	52	2X57	Carriage Bolt
20	1X20	Bolt	53	21440Z	Transaxle Support Bracket
21	21976	Clutch & Lever Assembly	54	2X56	Carriage Bolt
22	30X20	Cotter Pin	55	21683	Belt Guide
23	26X174	Screw	56	15X79	Flange Nut
24	21946	Brake Lever Assembly	57	15X68	Flange Nut
25	21484Z	Parking Brake Arm	58	20619	Guide Screw
26	17X47Z	Washer	59	2X67	Carriage Bolt
27	21681	Clutch Link Rod	60	15X89	Flange Locknut
28	20682	Parking Brake Spring	61	23910	Gas Tank Support R.H.
29	21434	Grip	62	23300	Gas Tank
30	21544	Clutch & Brake Pedal	63	24064	Gas Cap
31	21535	Push On Cap	64	23712	Filter
32	21472Z	Brake Rod	65	23715	Fuel Line
33	21678Z	Brake Rod Support	66	23713	Hose Clamp
34	26X185	Screw	67	23911	Gas Tank Support R.H.
35	21675	Tension Spring	68	26X197	Screw
36	21473	Transaxle Clamp	69	21268	Grommet
37	15X88Z	Flange Locknut .31-18			

Complete illustration of Transaxle shown on pages 94 & 95.


MODEL 9-4297
42" BLADE HOUSING
TOP HALF

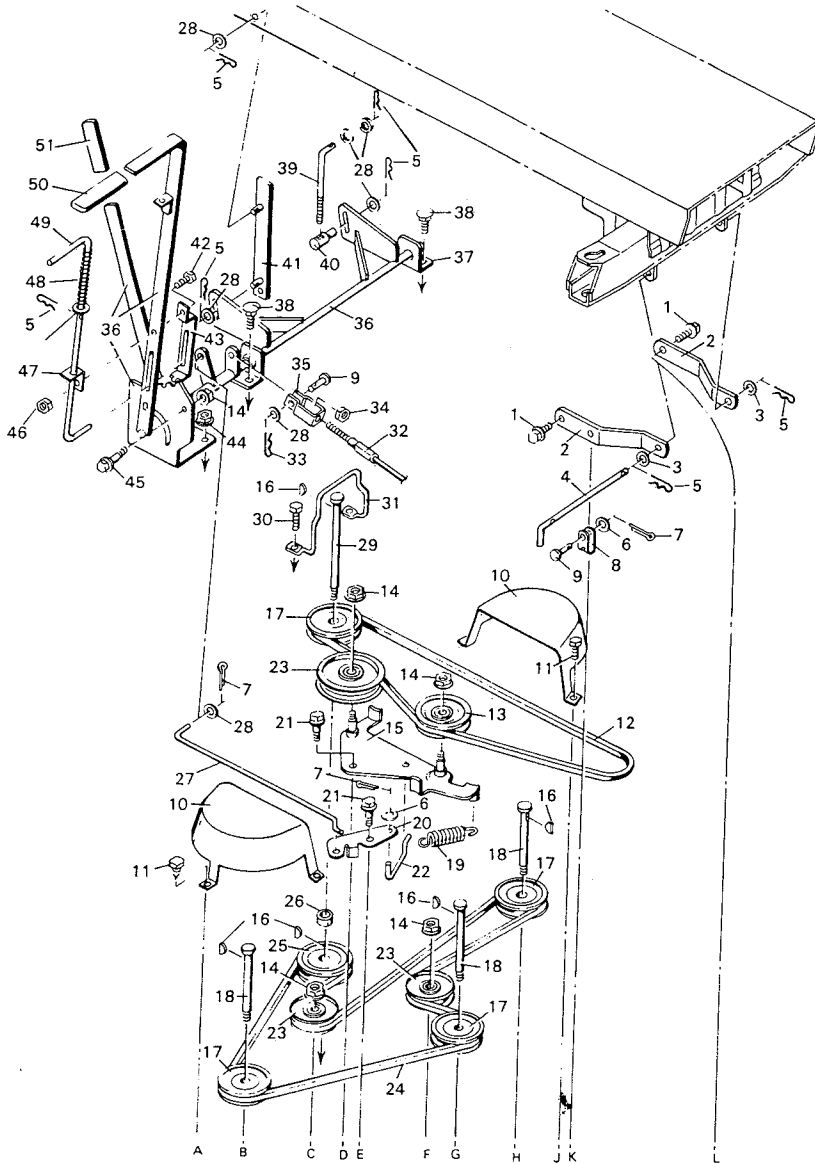

Key No.	Part No.	Description
1	9X14	Shoulder Bolt
2	23185	Support Arm
3	17X57Z	Washer I.D. 15/32"
4	21912Z	Pull Pin
5	20692	Hair Pin
6	17X47Z	Washer I.D. 11/32"
7	30X20	Cotter Pin
8	24073	Clevis
9	29X93	Clevis Pin
10	23231	Pulley Cover
11	26X195	Screw 1/4"X1/2" Type AB
12	23748	Blade Drive Belt
13	23211	Idler Pulley
14	15X84	Flange Locknut 3/8"-16
15	23179Z	Blade Drive Idler
16	20062	Woodruff Key
17	20615	Pulley
18	20616	Jackshaft
19	24074	Spring - Blade Drive
20	23226Z	Engagement Link
21	9X12	Shoulder Bolt 3/8"-16X7/8"
22	23228Z	Engagement Link Rod
23	23238	Backside Idler Pulley
24	23749	Cross Drive Belt
25	23739	Jackshaft Pulley
26	23213Z	Spacer
27	23232Z	Link Rod
28	17X53Z	Washer I.D. 13/32"
29	23180	Jackshaft
30	1X84Z	Hex Bolt 5/16"-18X1"
31	23751Z	Belt Guide
32	24072	Lifter Cable
33	20692	Hair Pin
34	15X2	Hex Nut 5/16"-18
35	21915Z	Adjusting Clevis
36	24015	Lifter Assembly
37	23184	Lifter Support
38	2X53	Carriage Bolt 5/16"-18X3/4"
39	23275Z	Adjusting Rod
40	21920	Adjusting Nut
41	23188Z	R.H. Mounting Bracket
42	1X95	Hex Bolt 1/4"-20X7/8"
43	23192Z	Guide Bracket
44	15X88Z	Flange Nut 5/16"-18
45	9X13	Shoulder Bolt 3/8"-16
46	15X66	Keps Nut 1/4"-20
47	23193Z	Guide Bracket
48	23221	Lifter Spring
49	23194Z	Lifter Latch
50	23222	Lifter Grip
51	21249	Engagement Lever Grip


**MODEL 9-4297
42" BLADE HOUSING**

LOWER HALF

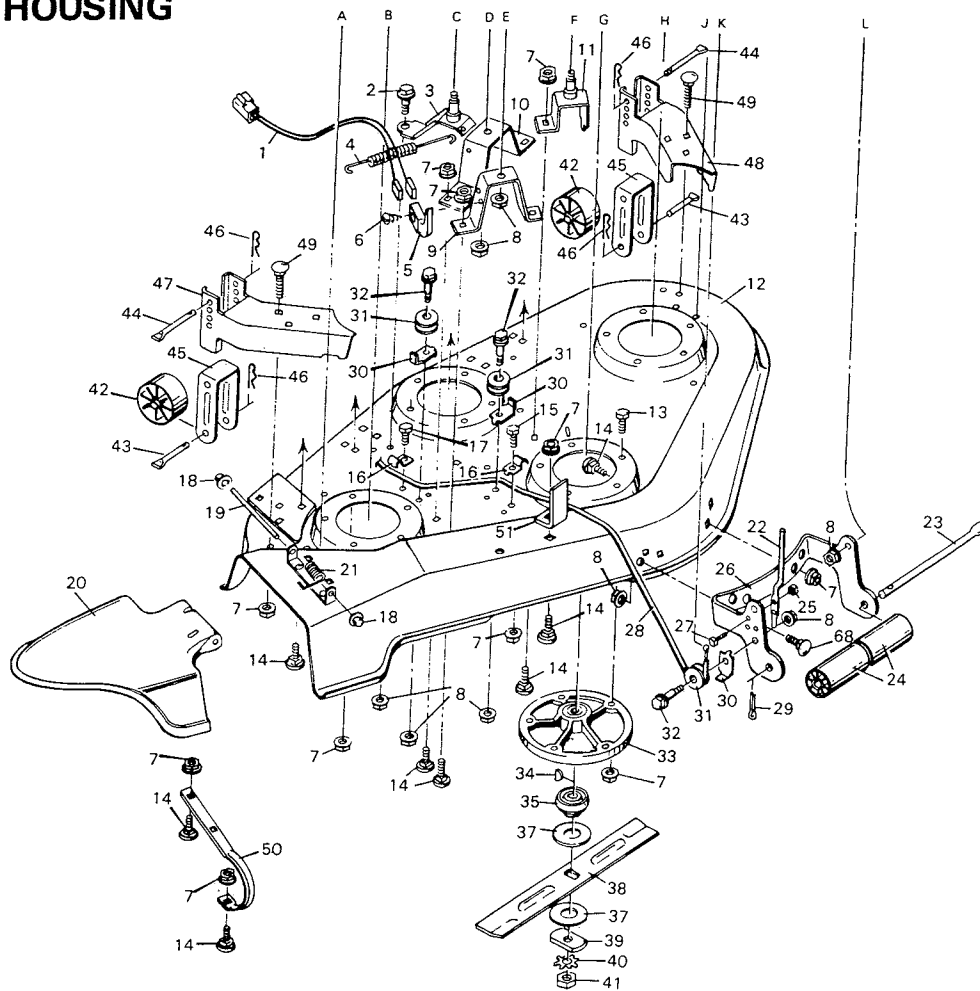

Key No.	Part No.	Description	Key No.	Part No.	Description
1	23983	Wire Harness	27	1X95	Hex Bolt 1/4"-20X7/8"
2	9X15	Shoulder Bolt 3/8"-16X7/8"	28	24072	Lifter Cable
3	23178Z	Idler Assembly - Cross Drive	29	30X20	Cotter Pin
4	23750	Spring - Cross Drive	30	23191Z	Cable Guide
5	24527	Limit Switch	31	23187	Nylon Pulley
6	26X211	Screw # 8X1" Type AB	32	9X13	Shoulder Bolt
7	15X88	Locknut 3/8"-16	33	20551	Jackshaft Housing
8	15X84Z	Locknut 3/8"-16	34	20062	Woodruff Key
9	23241	Engagement Link Support	35	20617	Blade Adapter
10	23240	Idler Support	37	21673Z	Washer
11	23177	Fixed Idler Assembly	38	23209	Blade
12	404059	Blade Housing	39	20663Z	Blade Washer
13	1X84Z	Hex Bolt 5/16"-18X3/4"	40	18X27	Lockwasher
14	2X53	Carriage Bolt 5/16"-18X3/4"	41	15X72	Hex Nut 1/4"-20
15	26X195	Screw 1/4"X1/2" Type AB	42	23257	Gauge Wheel
16	21953	Cable Guide	43	23258Z	Gauge Wheel Axle - Short
18	28X23	Push On Cap	44	23259Z	Gauge Wheel Axle - Long
19	23173Z	Deflector Rod	45	23260Z	Gauge Wheel Retainer
20	23224	Chute Deflector	46	20692	Cotter Hair Pin
21	21189	Torsion Spring	47	23278	R.H. Gauge Wheel Bracket
22	23790Z	Belt Guide - 11 hp.	48	23279	L.H. Gauge Wheel Bracket
23	23186Z	Roller Axle	49	2X58	Carriage Bolt 5/16"-18X2-1/2"
24	23203	Roller	50	24070	Skid
25	15X89Z	Hex Nut 1/4"-20	51	23782	Stop Clip
26	24009	Roller Support		40406T	Complete Blade Housing Assembly

MODEL 9-4297 WIRING DIAGRAM

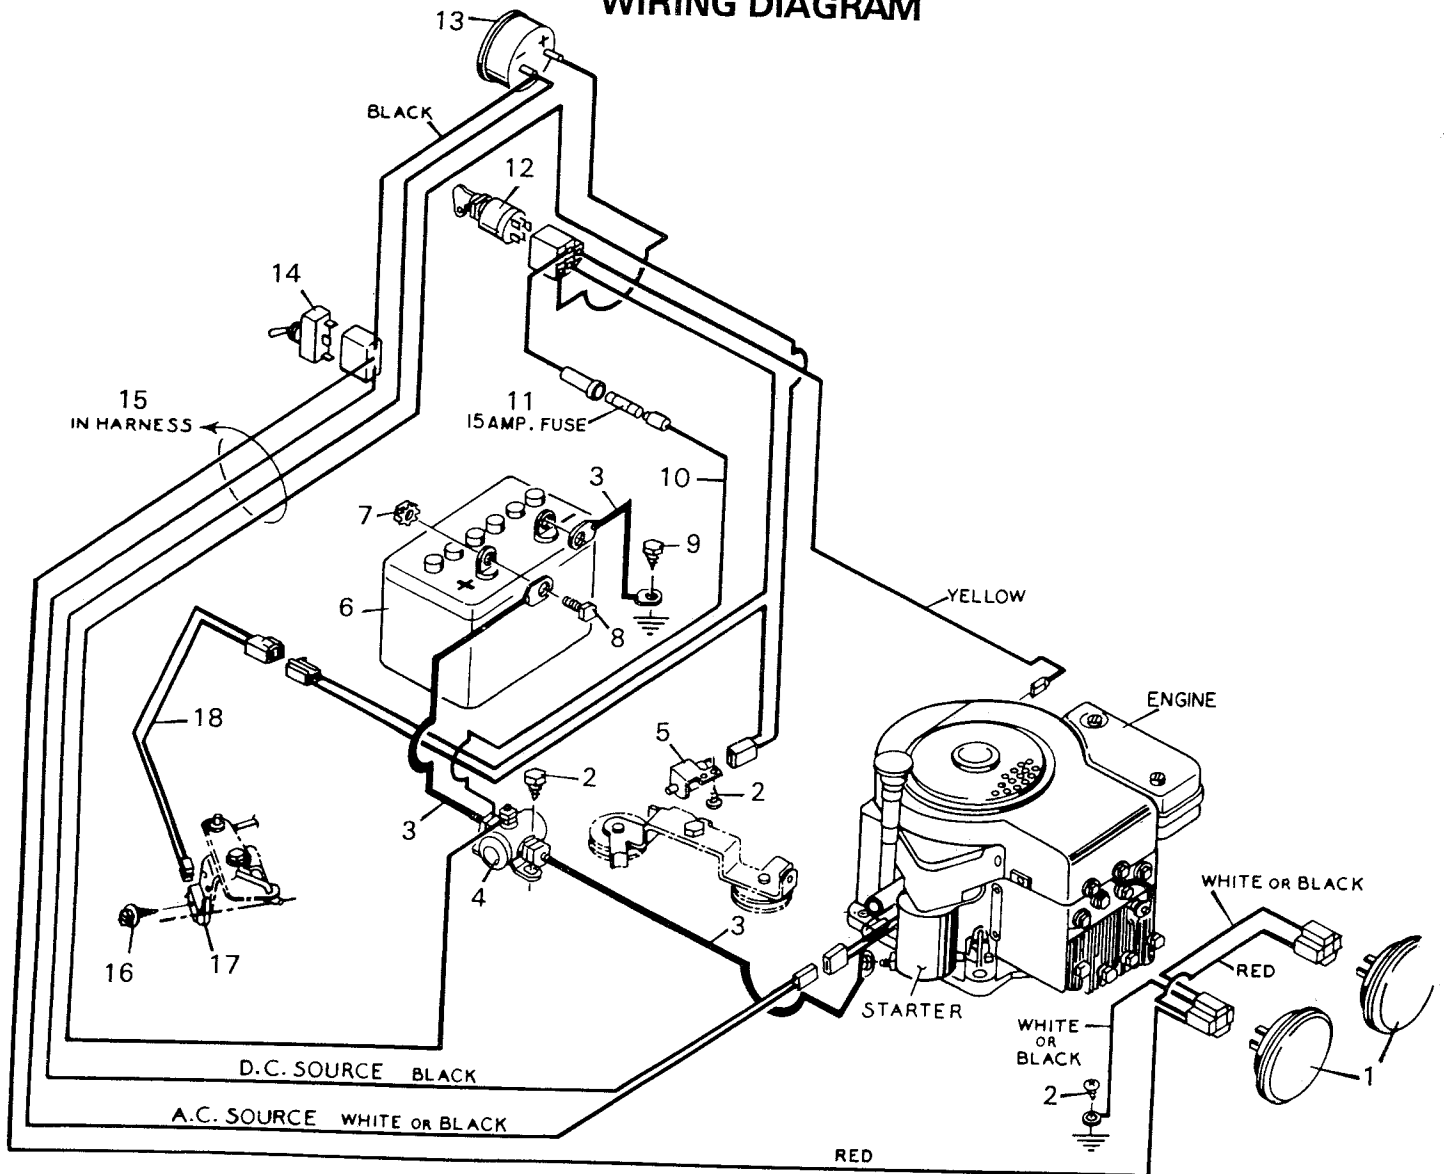

Key No.	Part No.	Description
1	20837	Seal Light Beam
2	26X186	Screw
3	21263	Battery Cable
4	21261	Solenoid
5	21549	Limit Switch - Clutch
6	21075	Battery
*	21079	Electrolyte - (Battery Acid)
7	15X66	Keps Nut 1/4"-20
8	1X38Z	Bolt 1/4"-20X5/8"
9	26X174	Screw
10	23834	Fuse Wire
11	23752	Fuse
12	21064PA	Switch & Key
13	21057PA	Ammeter Assembly
14	21686PA	Light Switch
15	23992	Wiring Harness
16	26X211	Screw # 10X1" Type AB
17	24527	Limit Switch
18	23983	Jumper Wire
*	21980	Wire Clamp
*	20729	Key Only

* Not Illustrated.