


MODEL 0-3697

BODY PARTS

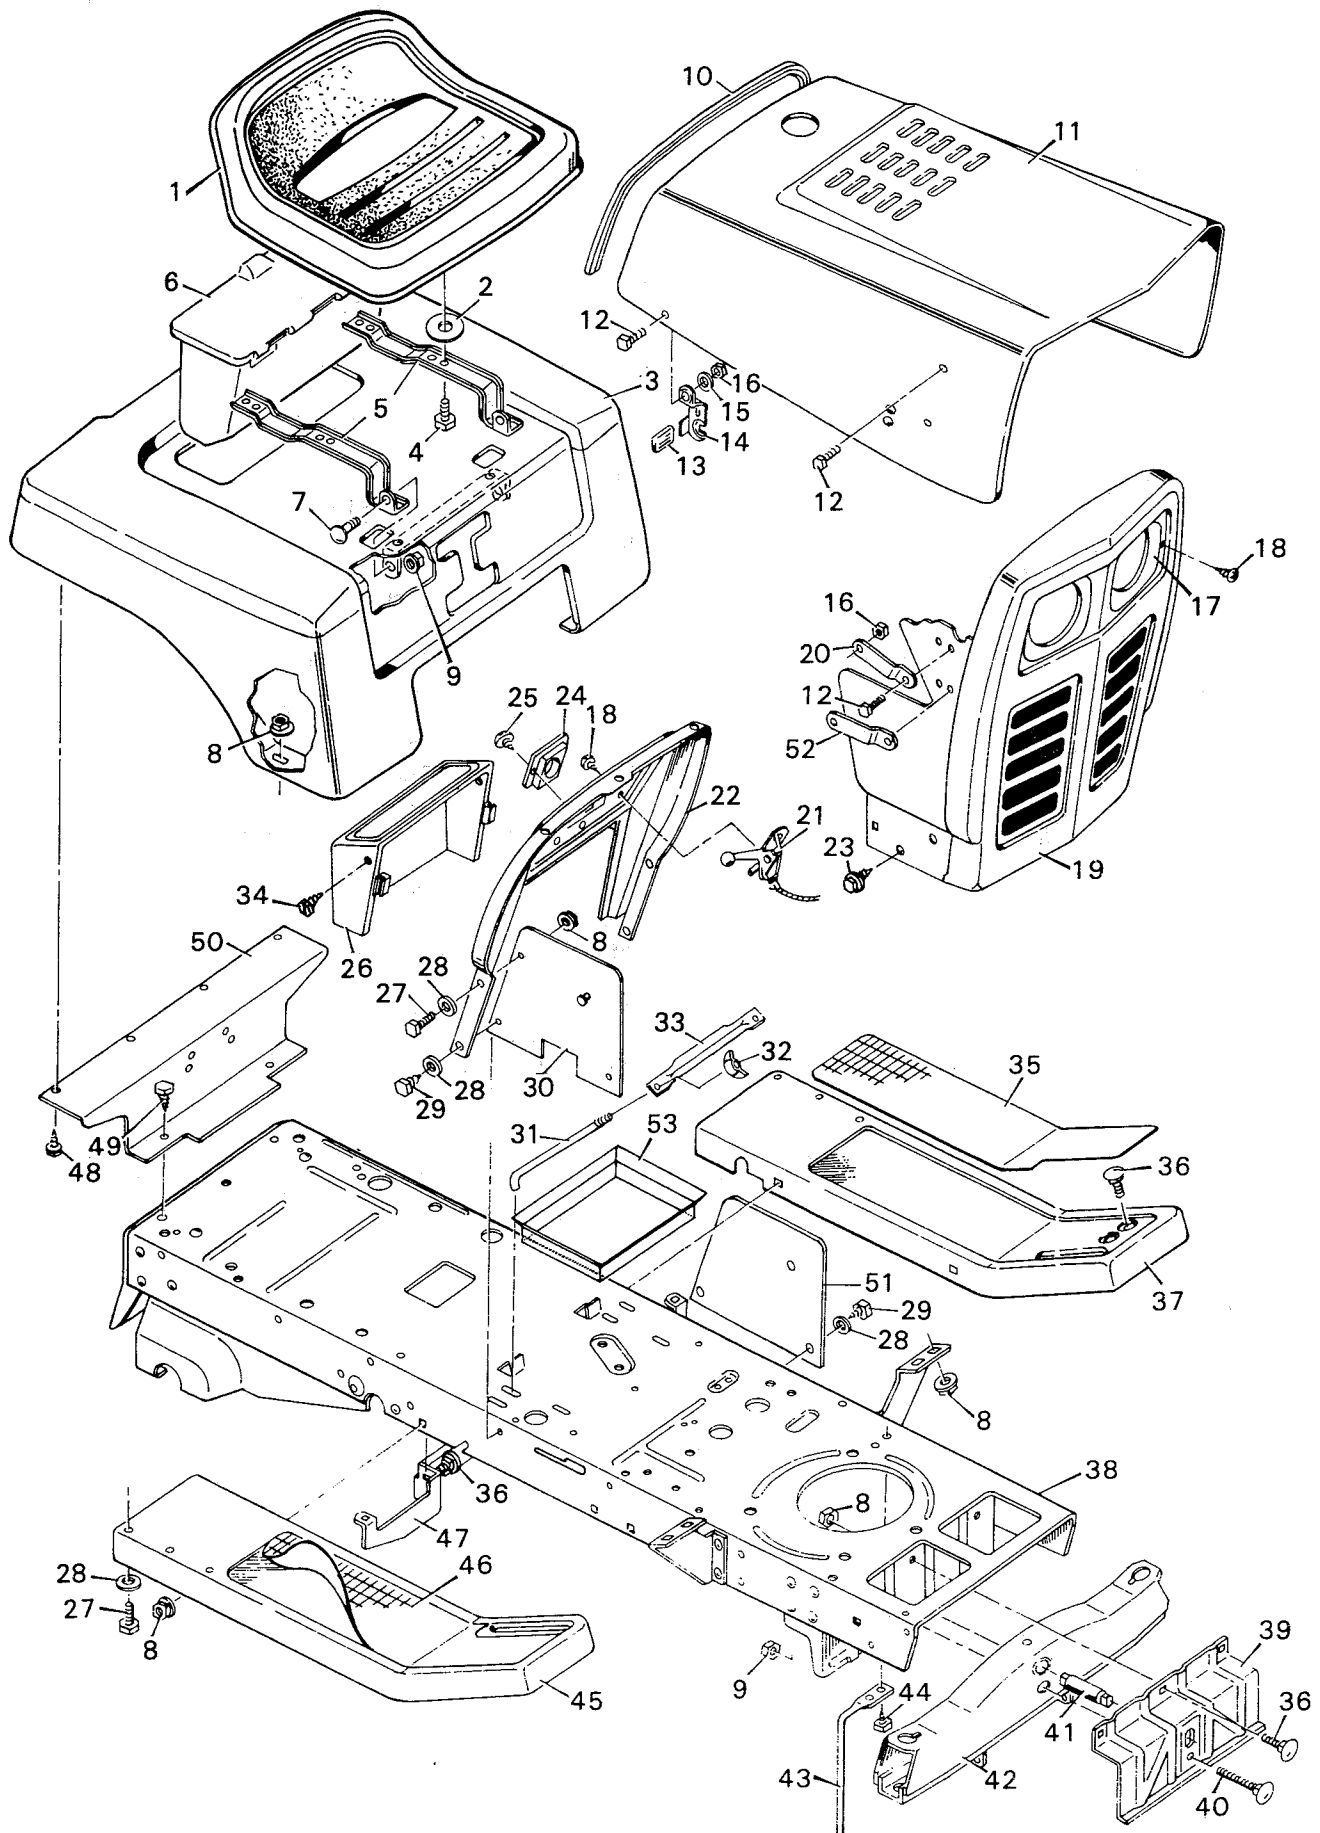


MODEL 0-3697

**BODY ASSEMBLY
PARTS LIST**

Key No.	Part No.	Description	Key No.	Part No.	Description
1	23884	Seat	29	26X197	Screw
2	20094Z	Washer	30	23292	Side Plate- R.H.
3	23338	Rear Shroud Assembly	31	21762Z	Battery Clamp Rod
4	1X84Z	Bolt 5/16"-18X1"	32	14X81	Wing Nut
5	23110Z	Seat Hinge	33	21761Z	Battery Clamp
6	21404	Tool Box	34	26X195	Screw
7	9X15	Shoulder Screw	35	21569	Rubber Mat - L.H.
8	15X79Z	Hex Locknut 5/16"-18	36	2X53	Carriage Bolt 5/16"-18X5/8"
9	15X84Z	Flange Locknut 3/8"-16	37	21933	Running Board L.H.
10	21765	Edge Trim	38	402043	Frame Assembly
11	23913	Hood Assembly	39	21534	Front Axle Hanger
12	4X24	Screw 1/4"-20X1/2"	40	2X60	Carriage Bolt 3/8"-16X3"
13	21434	Grip	41	21469	Pivot Pin
14	403040	Hood Latch - R.H.	42	21441	Front Axle Assembly
---	403041	Hood Latch - L.H.	43	23146Z	Belt Guide
15	17X17Z	Washer I.D. 13/64"	44	26X49	Screw
16	15X81	Hex Nut # 10-24	45	21932	Running Board - R.H.
17	23302C	Grill Insert	46	21568	Rubber Mat - R.H.
18	26X159	Screw # 8X3/8"	47	21547	Running Board Support Assembly
19	23307	Grill Assembly	48	26X185	Screw
20	23046	Pivot Bar	49	26X174	Screw
21	24011PA	Remote Control	50	21411	Rear Shroud Support
22	23970	Control Panel	51	24239	Side Plate - L.H.
23	26X202	Screw 3/8"X5/8"	52	23088	Pivot Bar
24	21707	Steering Post Bearing	53	24157	Battery Tray
25	26X186	Screw		23303C	Headlight Retainers (Not Illustrated)
26	23940	Battery Cover			
27	1X45Z	Bolt 5/16"-18X5/8"			
28	17X47Z	Washer I.D. 11/32"			

MODEL 0-3697

STEERING ASSEMBLY

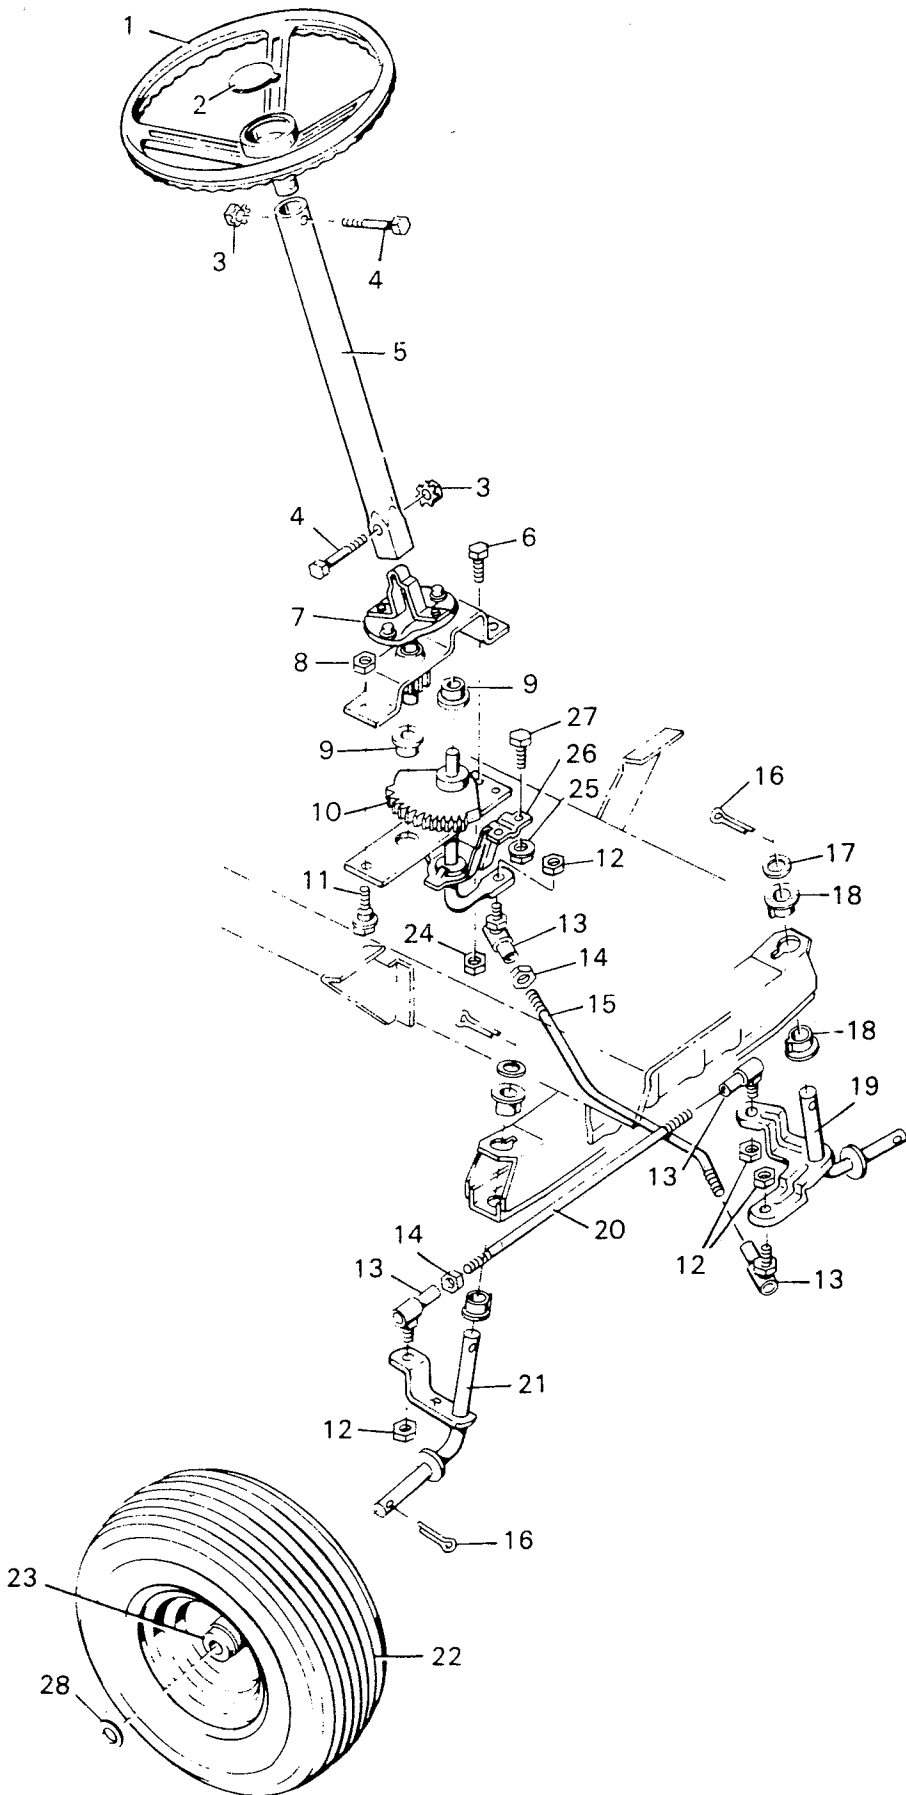


MODEL 0-3697

Key No.	Part No.	Description
1	21688	Steering Wheel
2	21303	Steering Wheel Cap
3	15X76	Keps Nut 5/16"-18
4	1X75	Bolt 5/16"-18X1-3/4"
5	21486C	Steering Post
6	1X45Z	Screw 5/16"-18X7/8"
7	21493	Steering Gear & Coupling Assembly
8	15X84Z	Locknut 3/8"-16
9	20587	Bearing
10	21692	Steering Arm Gear & Bracket Assembly
11	9X12	Shoulder Bolt
12	15X87Z	Locknut 3/8"-24
13	21031	Ball Joint
14	15X61Z	Hex Nut 3/8"-24
15	21482	Drag Link Rod
16	30X49	Cotter Pin 1-1/4"
17	17X83Z	Washer
18	23820	Spindle Bearings
19	24045	Spindle Assembly L.H.
20	21475	Tie Rod Assembly
21	24044	Spindle Assembly R.H.
22	21527	Wheel & Tire
	403000	Rim Only
	403001	Tire Only
	400162	Valve Stem & Cap
23	403010	Front Wheel Bearing
24	15X88Z	Locknut 5/16"-18
25	15X79Z	Flange Nuts 5/16"-18
26	21693	Steering Bracket
27	1X45Z	Bolt 5/16"-18X5/8"
28	17X115	Washer
	23273	Parts Bag Assembly
	21662	Hub Cap
	F-4907	Owners Manual

MODEL 0-3697

DRIVE ASSEMBLY

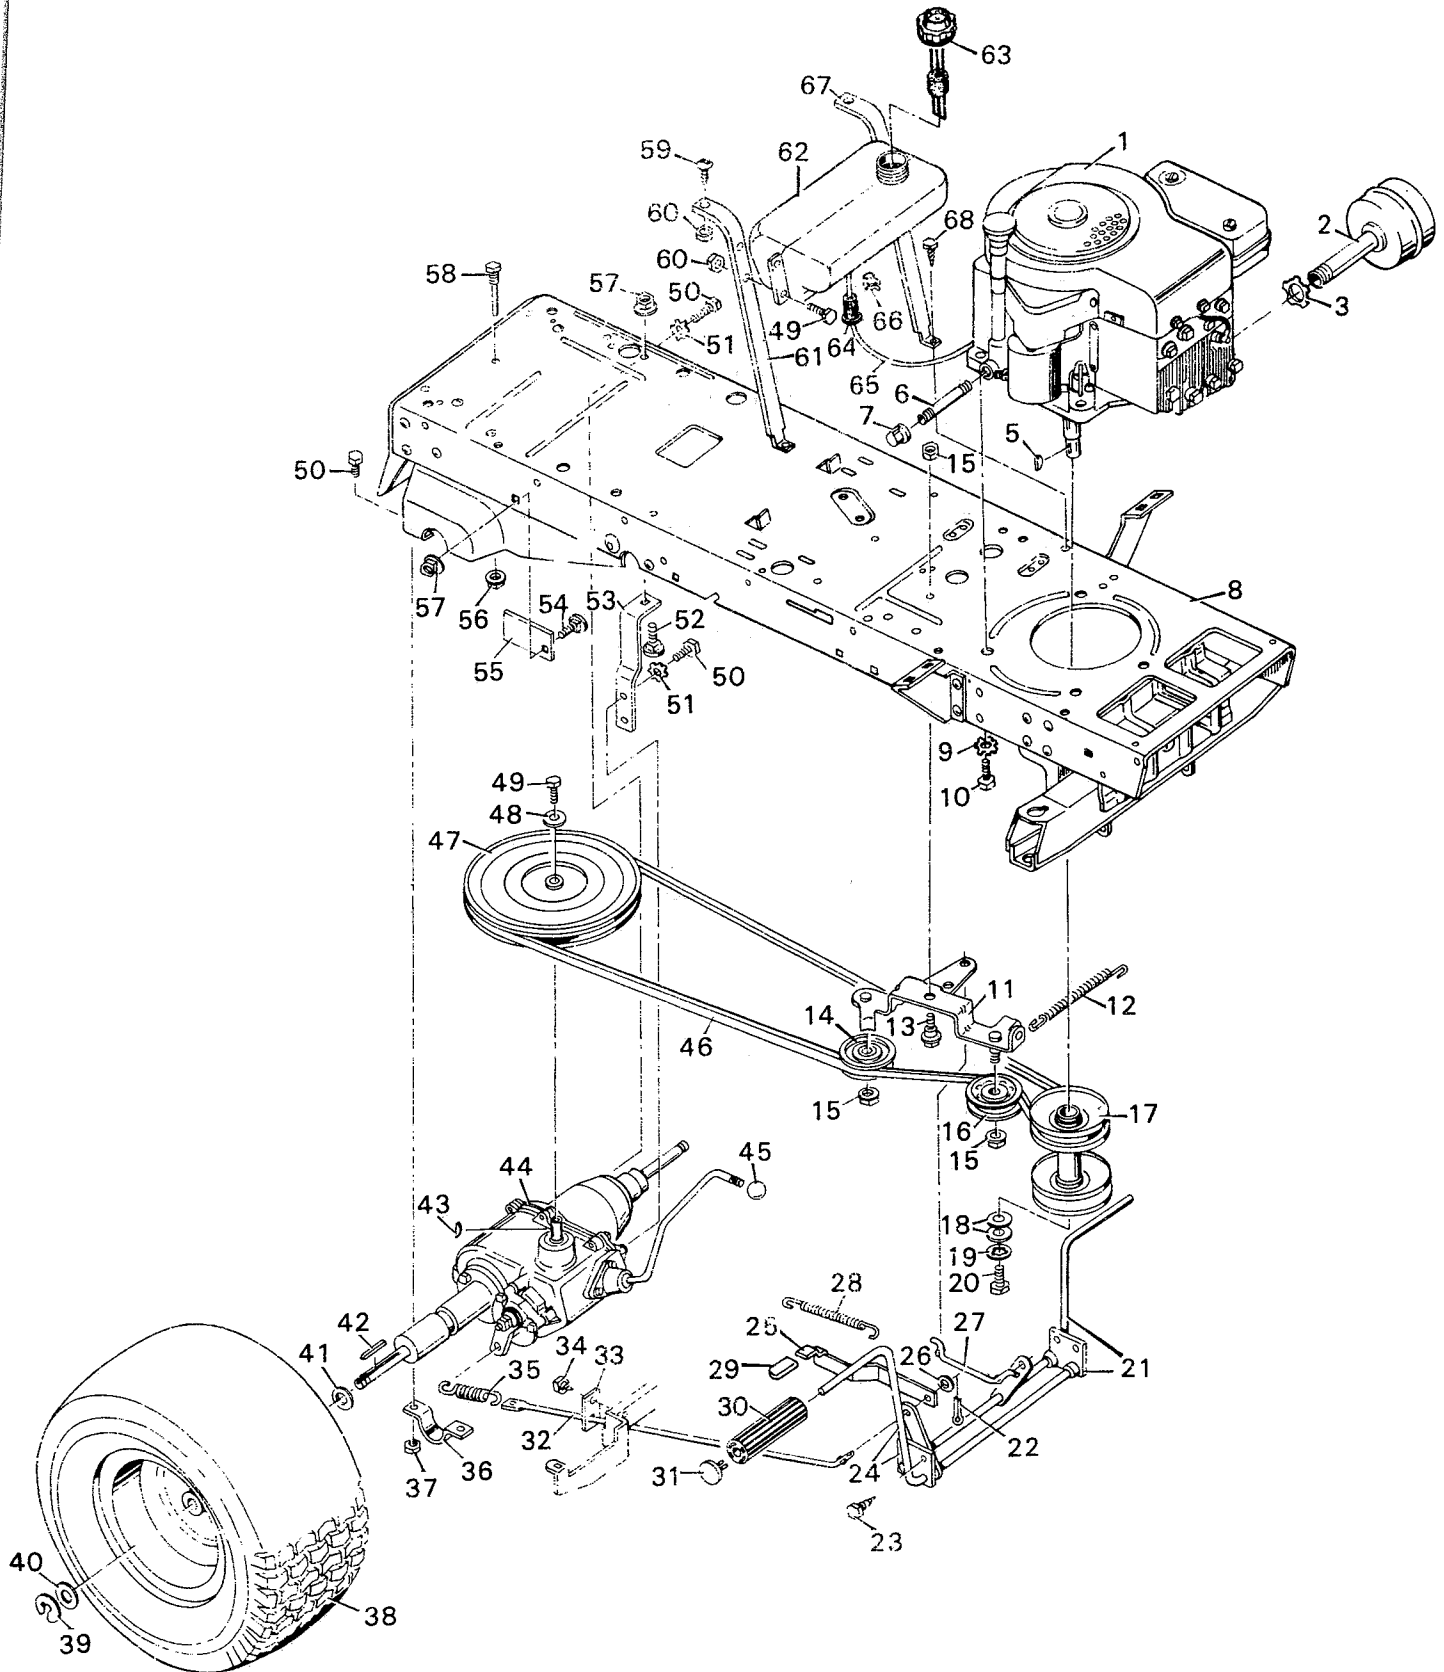

MODEL 0-3697

DRIVE ASSEMBLY


PARTS LIST

Key No.	Part No.	Description	Key No.	Part No.	Description
1	-----	Engine	37	15X88Z	Flange Locknut .31-18
2	23343	Muffler	38	21526	Wheel & Tire Assembly
3	21616	Pipe Locknut	----	403004	Wheel Only
5	20062	Woodruff Key # 6	----	403005	Tire Only
6	21652	Oil Drain Extension	----	400162	Valve Stem & Cap
7	21651	Oil Drain Cap	39	11X3	E-Ring
8	402043	Frame Assembly	40	17X115	Washer
9	19X8	Shakeproof Washer	41	21521	Transaxle Washer
10	20103	Engine Bolt	42	21553	Square Key
11	21428	Idler Bracket & Stud Assembly	43	21539	Woodruff Key # 61
12	23724	Drive Idler Spring	44	-----	Transaxle - 3-Speed#
13	9X12	Shoulder Bolt	45	20844	Shift Knob
14	20613	Clutch Idler Pulley	46	24176	Drive Belt
15	15X84Z	Flange Locknut 3/8"-16	47	21447	Input Pulley
16	21409	Clutch Idler Pulley	48	18X30	Spring Lockwasher
17	21415Z	Stack Pulley Assembly	49	1X38Z	Bolt 1/4"-20X5/8"
18	10851Z	Washer	50	1X84Z	Bolt
19	19X39	Shakeproof Washer	51	18X15	Lockwasher
20	1X20	Bolt	52	2X57	Carriage Bolt
21	21976	Clutch & Lever Assembly	53	21440Z	Transaxle Support Bracket
22	30X20	Cotter Pin	54	2X56	Carriage Bolt
23	26X49	Screw	55	21683	Belt Guide
24	21946	Brake Lever Assembly	56	15X79Z	Flange Nut
25	24202Z	Parking Brake Arm	57	15X84Z	Flange Nut
26	17X47Z	Washer	58	20619	Guide Screw
27	21681	Clutch Link Rod	59	2X67	Carriage Bolt
28	20682	Parking Brake Spring	60	15X89Z	Flange Locknut 1/4"-20
29	24235	Parking Brake Grip	61	23310	Gas Tank Support
30	21544	Clutch & Brake Pedal	62	23300	Gas Tank
31	21535	Push On Cap	63	23711	Gas Cap
32	21472Z	Brake Rod	64	23712	Filter
33	21678Z	Brake Rod Support	65	23715	Fuel Line
34	26X185	Screw	66	23713	Hose Clamp
35	21675	Tension Spring	67	23911	Gas Tank Support - L.H.
36	21473	Transaxle Clamp	68	26X197	Screw
				21268	Grommet (Not Illustrated)

Note: Complete illustration of transaxle shown on pages 82 and 83.

MODEL 0-3656
MODEL 0-3666
MODEL 0-3667
MODEL 0-3697

BLADE HOUSING

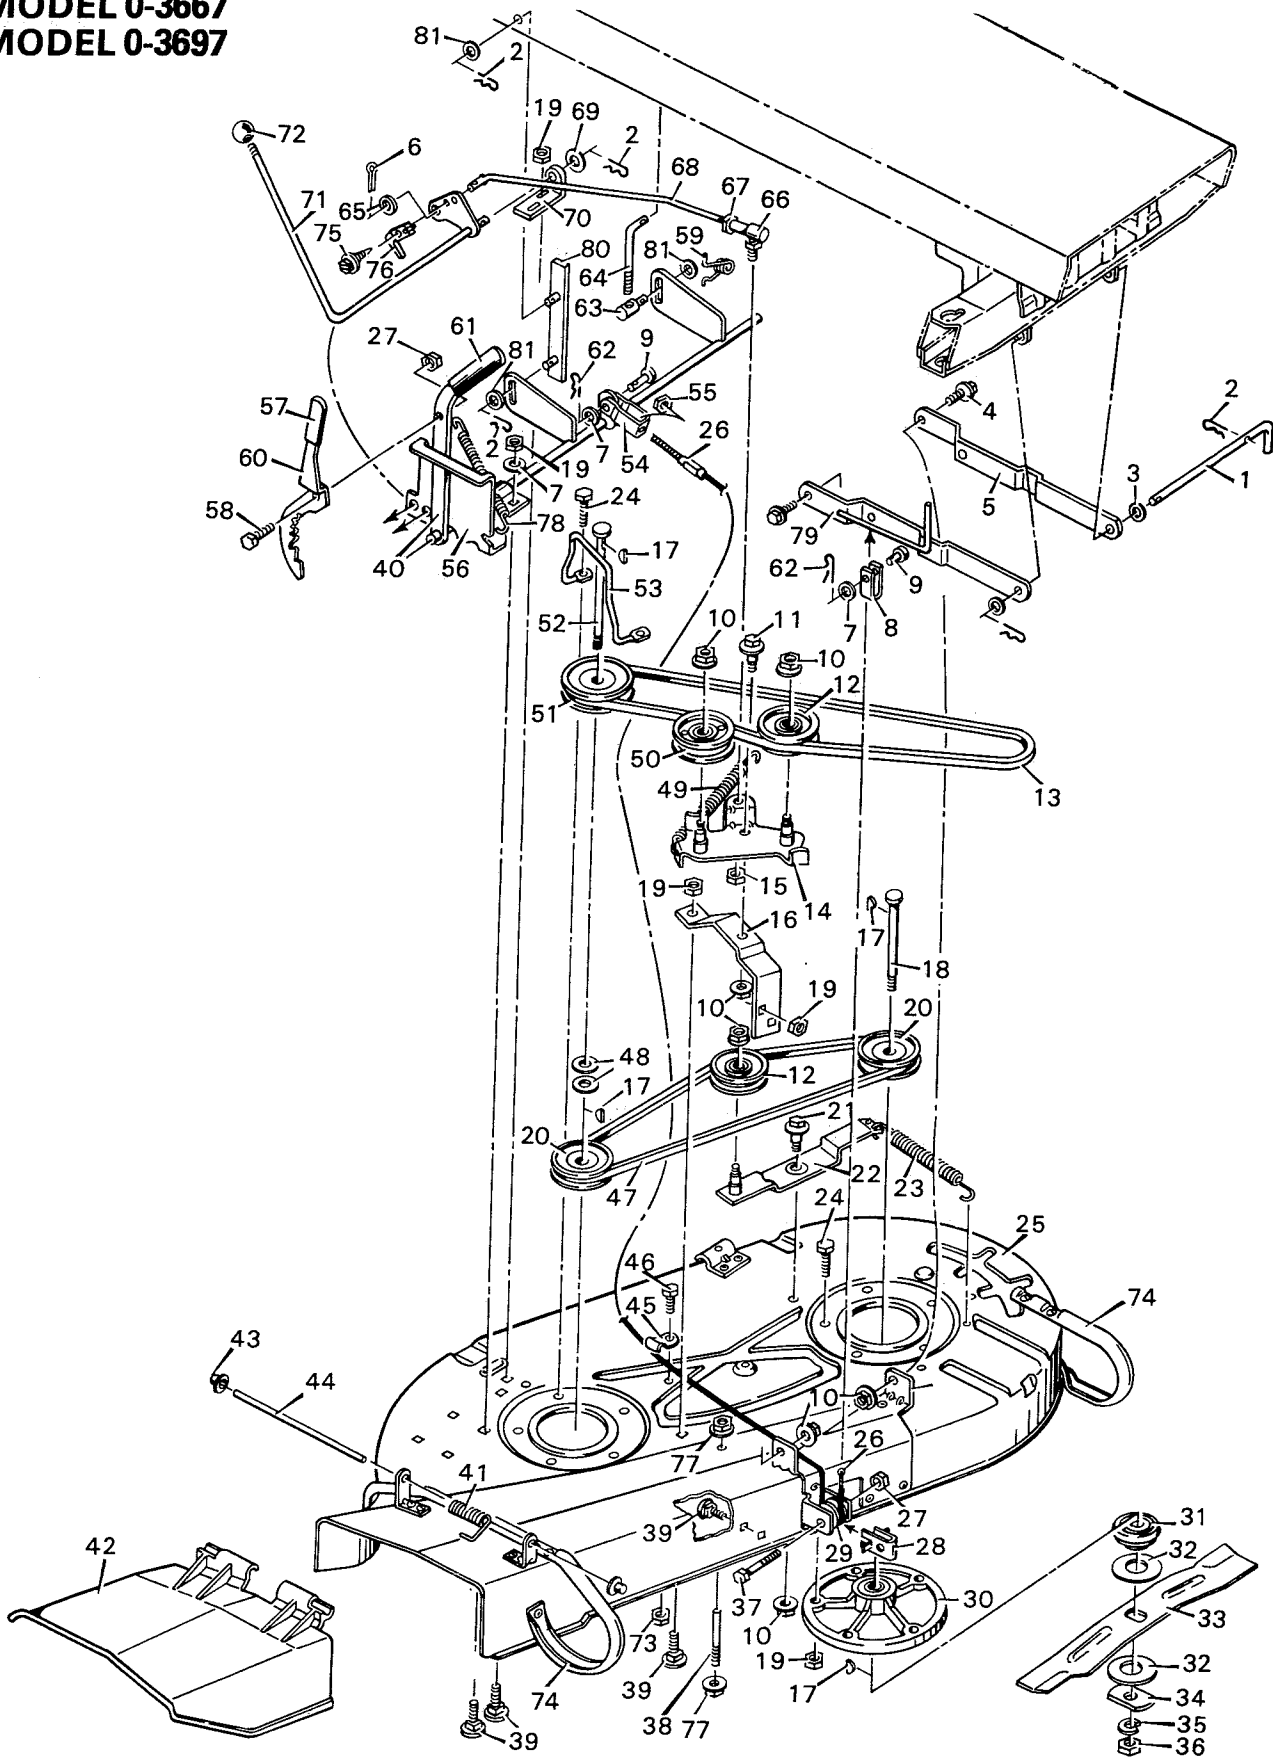


MODEL 0-3656
MODEL 0-3666
MODEL 0-3667
MODEL 0-3697

BLADE HOUSING**PARTS LIST**

Key No.	Part No.	Description	Key No.	Part No.	Description
1	21912Z	Pull Pin	42	21154	Chute Deflector
2	20692	Hair Pin	43	28X23	Push-On-Cap
3	17X57Z	Washer	44	21198Z	Deflector Rod
4	9X14Z	Shoulder Bolt	45	21953Z	Cable Guide
5	21911	Support Arm L.H.	46	1X38Z	Bolt 1/4"-20X5/8"
6	30X20	Cotter Pins	47	20557	Cross Drive Blet
7	17X47Z	Washer	48	17X87Z	Washers
8	24073Z	Clevis	49	24074	Idler Spring
9	29X93	Clevis Pin	50	21409	Idler Pulley
10	15X84Z	Flange Locknut 3/8"-16	51	21096	Jackshaft Pulley
11	9X12	Shoulder Bolt 3/8"-16X7/8"	52	21024	Jackshaft - Long
12	20613	Idler Pulley	53	21504Z	Belt Guide
13	21649	Blade Drive Belt	54	21915Z	Adjusting Clevis
14	21503	Blade Drive Idler Assembly	55	15X2	Hex Nut 5/16"-18
15	15X87Z	Locknut 3/8"-24	56	21500	Lifter Bracket
16	21496	Idler Support Bracket	57	20476	Lifter Latch Grip
17	20062	Woodruff Key # 6	58	6X46	Shoulder Screw
18	20616	Jackshaft - Short	59	23139	Torsion Spring
19	15X88Z	Flange Locknut 5/16"-18	60	21591Z	Lifter Latch
20	21022	Jackshaft Pulley	61	21249	Lifter Grip
21	9X15	Shoulder Bolt	62	20692	Hair Pin
22	21139Z	Twin Blade Idler Bracket Assembly	63	21920	Adjusting Nut
23	20682	Cross Drive Idler Spring	64	23704Z	Adjusting Rod
24	1X84Z	Bolt 5/16"-18X1"	65	17X53Z	Washer
25	21907	Blade Housing	66	21031	Ball Joint
26	21913	Lifter Cable	67	15X61Z	Hex Nut 3/8"-24
27	15X67	Hex Nut 1/4"-20	68	21517	Link Rod
28	21917Z	Cable Guide	69	17X67Z	Washer
29	21916	Nylon Pulley	70	20934	Scissors Bracket R.H.
30	20551	Jackshaft Housing Assembly	71	23915C	Blade Drive Lever Assembly
31	20617	Blade Adapter	72	20739	Lever Knob
32	21673Z	Washer	73	15X66	Hex Nut 1/4"-20
33	20930	Blade	74	404015	Skid Set
34	20663Z	Blade Washer	75	26X211	Screw # 10X1" Type AB
35	18X27	Lockwasher	76	24527	Limit Switch
36	15X72	Hex Nut 1/2"-20	77	15X79Z	Flange Nut
37	1X90	Bolt 1/4"-20X1-3/4"	78	20682	Lifter Latch Spring
38	23169	Belt Guide	79	23256	Support Arm Assembly R.H.
39	2X53	Carriage Bolt	80	23705Z	Hanger Bracket Assembly
40	21906	Lifter Assembly	81	17X124	Washer
41	21189	Torsion Spring		404036	Complete Blade Housing Assembly

**MODEL 0-3666
MODEL 0-3667
MODEL 0-3697
WIRING HARNESS**

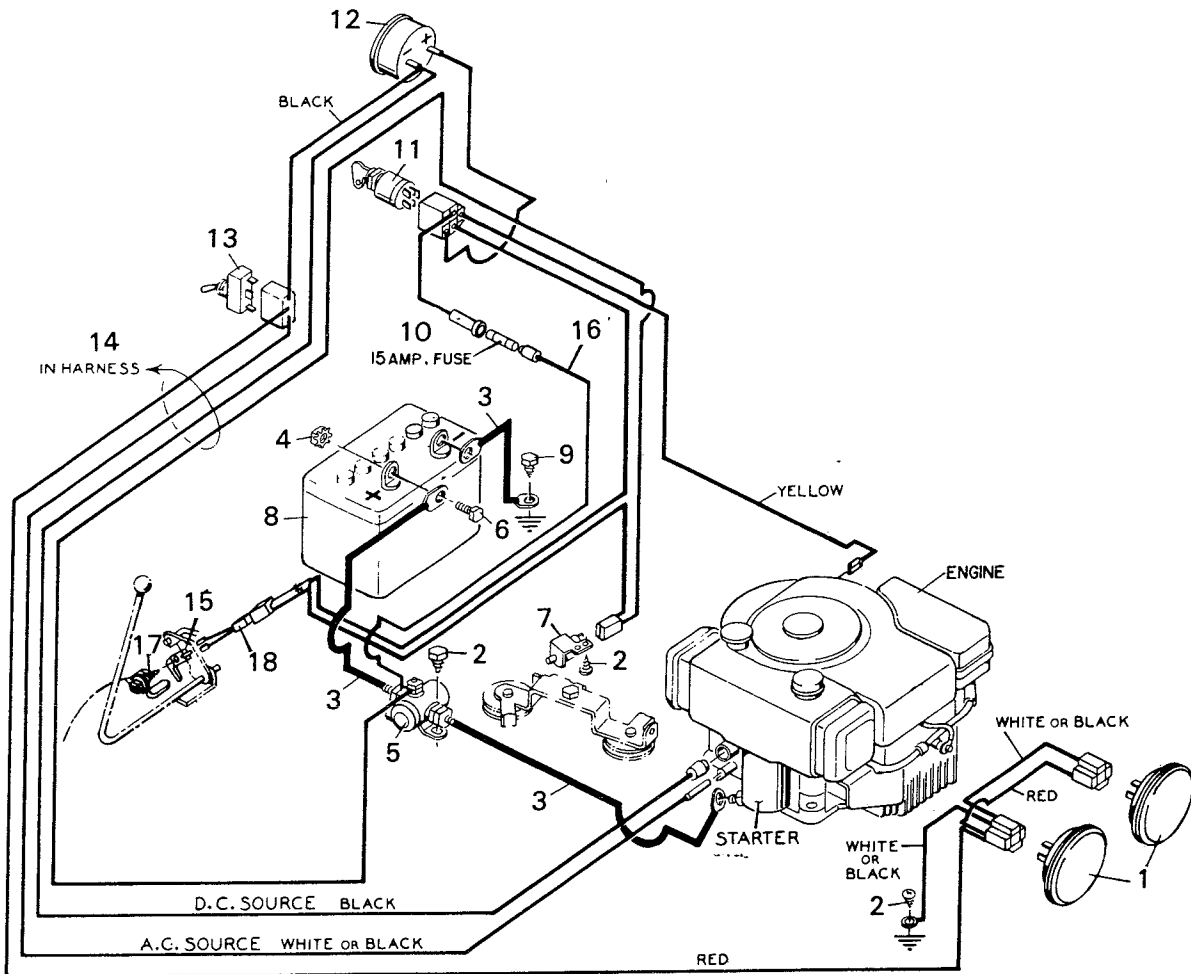

Key No.	Part No.	Description
1	20837	Seal Beam Light
2	26X185	Screw
3	24X9	Battery Cable
4	15X66	Keps Nut
5	21261	Solenoid
6	1X38Z	Bolt 1/4"-20
7	21549	Limit Switch - Clutch
8	21075	Battery
*	21079	Electrolyte
9	26X174	Screw
10	23752	Fuse 15 Amp.
11	21064PA	Switch & Key
12	21057PA	Ammeter Assembly
13	21686PA	Light Switch
14	23992	Wiring Harness
15	24527	Limit Switch - Blade Housing
16	23834	Fuse Wire
17	26X211	Screw
18	23984	Jumper Wire
	20729	Key Only

* Not Illustrated