


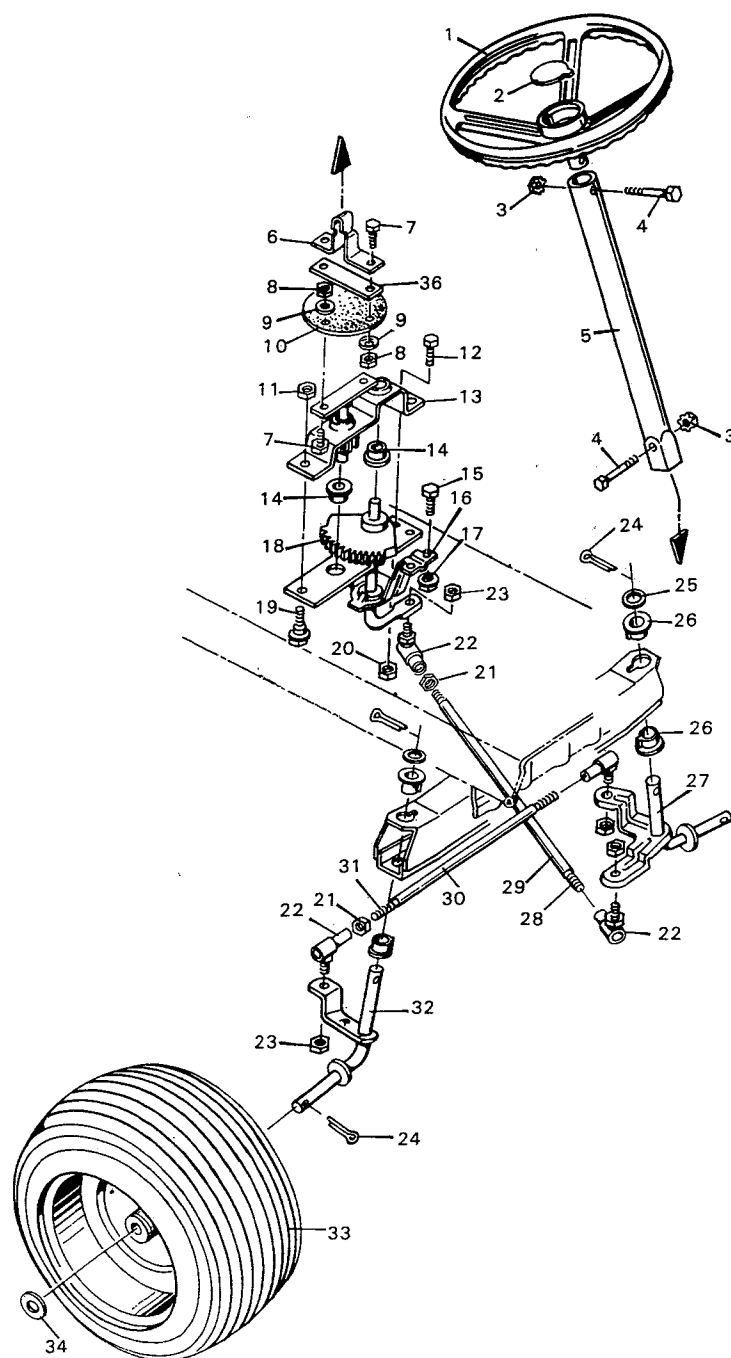


Key No.	Part No.	Description	Key No.	Part No.	Description
1	24084	Hood Assembly	32	26X186	Screw # 10X 1/2"
2	21765	Edge Trim	33	21707	Bearing - Steering Post
3	15X81	Hex Nut # 10-24	34	23302C	Grille Insert
4	17X17Z	Flat Washer I.D. .219	35	23303C	Headlight Retainer
5	21798Z	Hd Latch - R.H.	36	23307	Grille Assembly
----	21799Z	Hood Latch - L.H.	37	26X202	Hex Washer Screw 3/8"X5/8"
6	21434	Grip-Hood Latch	38	23046	Pivot Bar
7	4X21	Machine Screw # 10-24X5/8"	39	23088	Pivot Bar Assembly
8	407310	Battery Cover	40	23823	Running Board L.H.
9	23884	Seat	41	21710	Running Board Mat
10	26X214	Screw	42	402038	Frame Channel
11	1X84	Hex Bolt 5/16"-18X1"	43	21441	Front Axle Assembly
12	26X213	Screw	44	23829	Front Axle Hanger
13	1X38	Hex Bolt 1/4"-2X5/8"	45	2X53	Carriage Bolt 5/16"-18X 3/4
14	23026	Rear Insert	46	2X60	Carriage Bolt 3/8"-16X3"
15	23397	Top Panel	47	21469	Pivot Pin
16	15X66	Keps Nut 1/4"-20	48	15X84	Flange Locknut 3/8"-16
17	17X37Z	Washer	49	15X88	Flange Locknut 5/16"-18
18	4X67Z	Machine Screw # 10-24X 3/4"	50	24105	Running Board Support
19	24199	Fender R.H.	51	24253	Running Board Support & Assy.
20	17X47Z	Washer	52	23069	Reflector
21	26X197	Screw 5/16"X 3/4"	53	31X1	Hair Pin
22	1X45	Hex Bolt 5/16"-18X5/8"	54	23054	Drawbar
23	23398	Side Panel R.H.	55	24157	Battery Tray
24	24344	Side Plate - R.H.	56	14X81	Wing Nut
25	15X79Z	Flange Nut	57	21761Z	Battery Clamp
26	23006	Fender - L.H.	58	21762Z	Battery Clamp Rod
27	23399	Side Panel - L.H.	59	23293	Side Plate L.H.
28	24011PA	Throttle Control	60	21268	Grommet
29	20399	Knob - Throttle Control	61	23822	Running Board R.H.
30	23970	Control Panel	62	24321	Wiring Shield
31	26X159	Screw # 8X3/8"	63	2X64	Carriage Bolt
				F-5602	Owners Manual
				24151	Parts Bag Assembly

MODEL NO. 82-39001
STEERING ASSEMBLY


Key No.	Part No.	Description
1	21688	Steering Wheel
2	21303	Steering Wheel Cap
3	15X76	Locknut 5/16"-18
4	1X75	Bolt 5/16"-18X1 3/4"
5	21486C	Steering Post
6	21489	Steering Coupling-Upper
7	1X95	Hex Bolt 1/4"-10X7/8"
8	15X67	Locknut 1/4"-20
9	23039	Cup Washer
10	21532	Steering Disc
11	15X84	Locknut 3/8"-16
12	1X45	Hex Bolt 5/16"-18X5/8"
13	21492	Steering Gear Bracket Assembly
14	20587	Bearing
15	1X45	Hex Bolt 5/16"-18X5/8"
16	21693	Steering Bracket
17	15X79	Locknut 5/16"-18
18	21692	Steering Gear Assembly
19	9X12	Shoulder Bolt
20	15X88	Locknut 5/16"-18
21	15X61	Hex Nut 3/8"-24
22	21031	Ball Joint
23	15X87	Locknut 3/8"-24
24	30X49	Cotter Pin 3/32"X1 1/2"
25	17X83Z	Washer
26	23820	Spindle Bearing
27	23149	Spindle Assembly L.H.
28	21482	Drag Link Rd.
29	156X1	Sleeve
30	156X2	Sleeve
31	21475	Tie Rod
32	23148	Spindle Assembly R.H.
33	23400	Tire & Wheel Assembly
*	407225	Wheel Only
*	403058	Tire Only
*	24373	Valve Stem & Cap*
*	403056	Front Wheel Bearing*
34	17X83Z	Washer
35	400239	Grease Fitting
36	21490	Coupling Plate
*	24151	Parts Bag Assy.
*	F-5602	Owner's Manual
*	F-5780	Parts List


MODEL NO. 82-39001

DRIVE ASSEMBLY

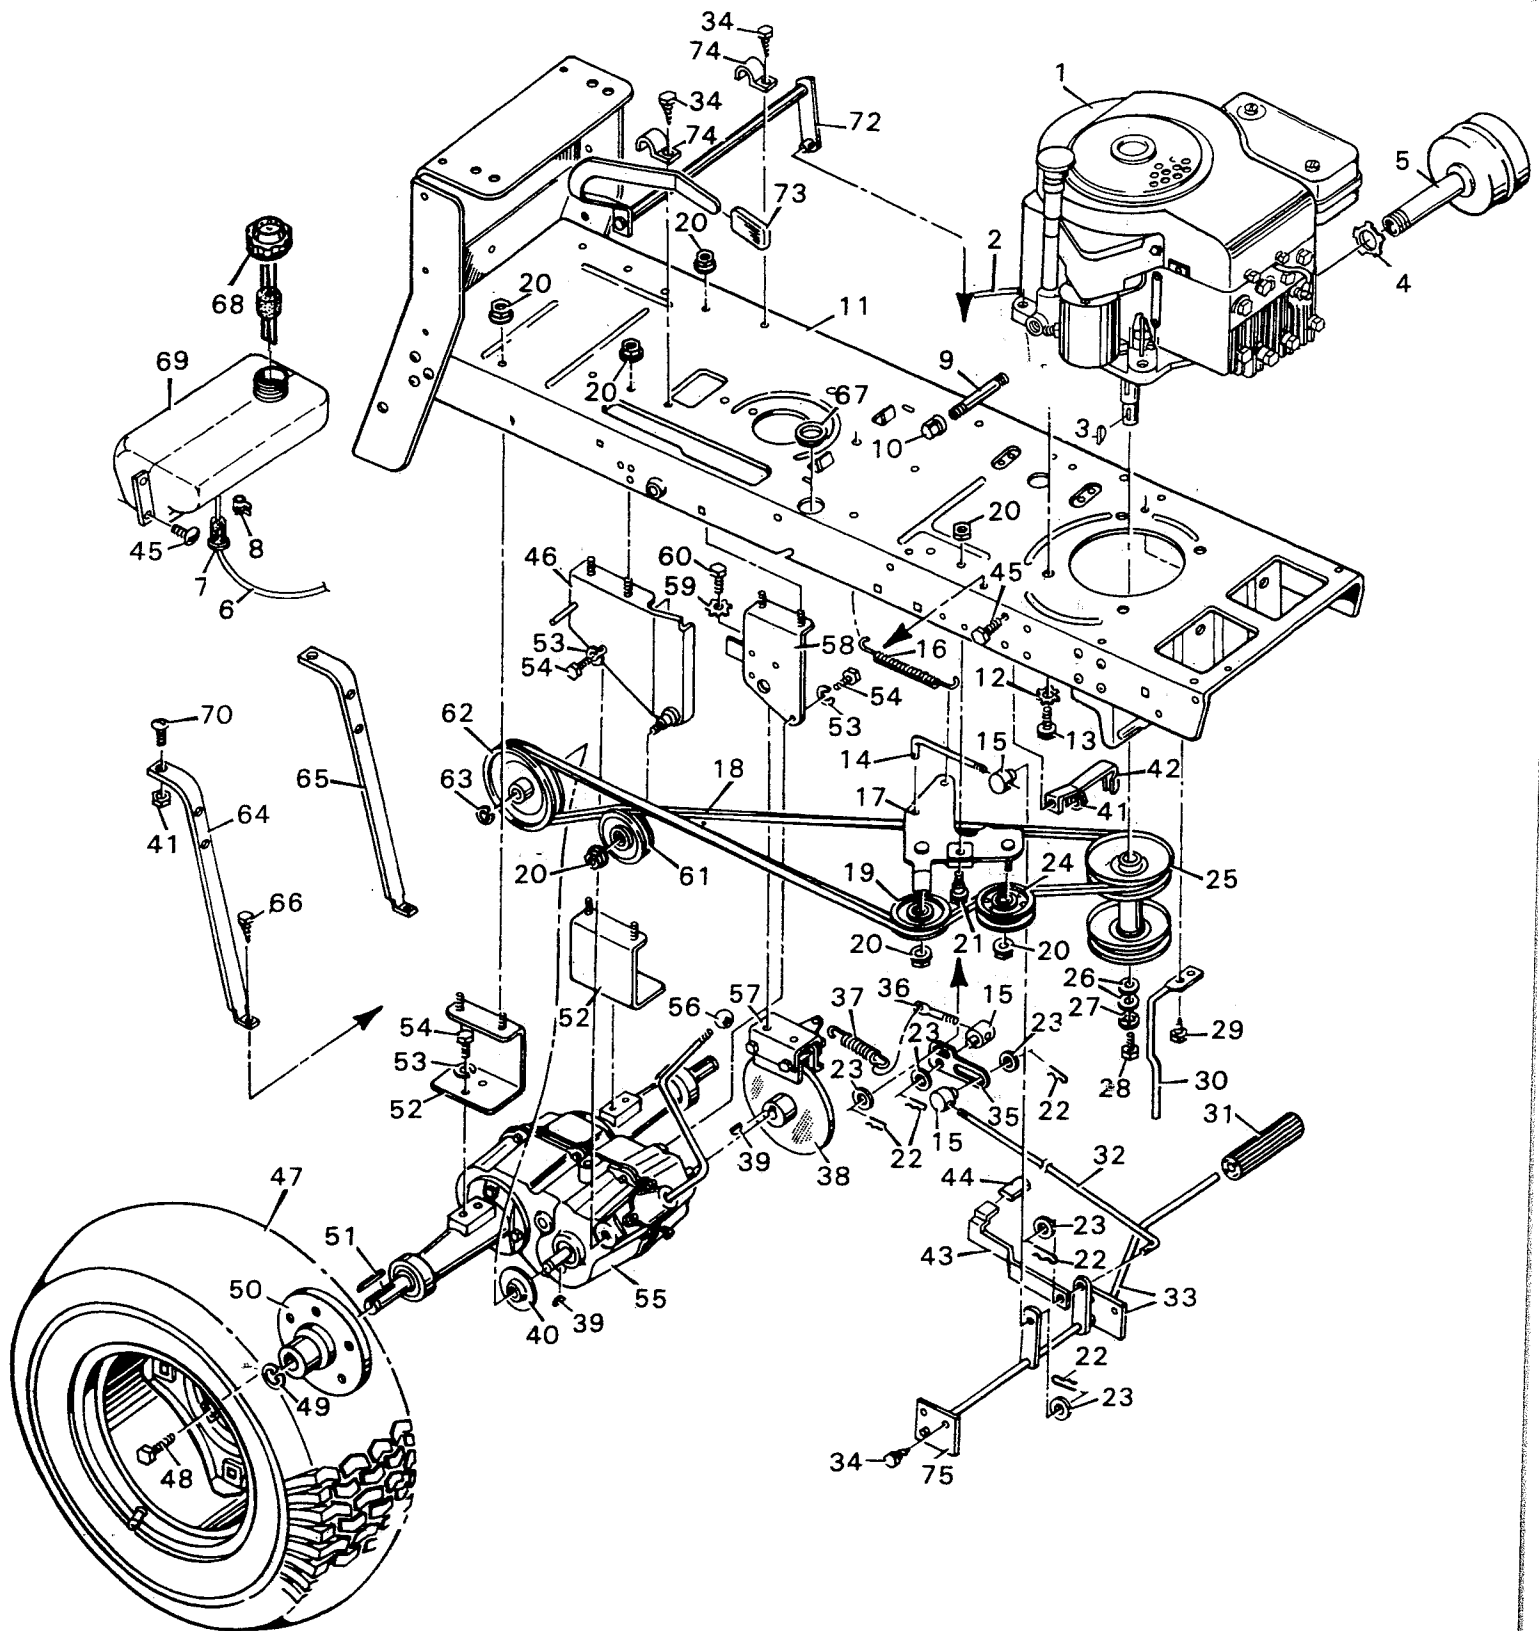

MODEL NO. 82-39001**DRIVE ASSEMBLY**

Key No.	Part No.	Description	Key No.	Part No.	Description
1	----	Engine 11 hp.†	40	23041Z	Extruded Washer
2	23715	Fuel Line 7.25"	41	15X66	Keps Nut ¼"-20
3	20062	Woodruff Key # 6	42	23826Z	Belt Guide
4	21616	Locknut	43	24245Z	Parking Brake Arm
5	23343	Muffler	44	24235	Grip - Parking Brake
7	24159	Filter	45	26X214	Screw
8	23713	Hose Clamp	46	24244	Idle Bracket Assembly
9	24066	Oil Drain Extension	47	23320	Tire & Wheel Assembly
10	21651	Oil Drain Cap		407228	Tire Only
11	402038	Frame Channel Assembly	*	407226	Wheel Only
12	19X8	Lockwasher I.D. .375	*	24373	Valve Stem and Cap
13	20103	Engine Mount Bolt	48	1X80	Hex Bolt 7/16"-20X1
14	21918	Clutch Rod	49	11X6	Retaining Ring-Type E
15	21920	Adjusting Nut	50	23020	Wheel Hub
16	23874	Drive Idler Spring	51	24039	¼" Square Key
17	24250	Idler Bracket	52	23005	Rear Transaxle Bracket
18	37X26	Drive Belt	53	18X31	Lockwasher
19	20613	Clutch Idler Pulley	54	1X85	Hex Bolt 3/8"-16X¾"
20	15X84	Flange Locknut .375-16	55	23990PA	Transaxle Peerless Model No. 2348
21	9X12	Shoulder Bolt	56	20844	Shift Lever Knob
22	20692	Hair Pin	57	23019	Disc Brake Unit* *
23	17X53Z	Washer	58	23023	Front Transaxle Bracket-L.H.
24	21409	Idler Pulley	59	19X6	External Lockwasher I.D. 312
25	23725Z	Stack Pulley	60	1X63	Hex Bolt
26	10851Z	Washer	61	23238	Backside Idler
27	19X39	Internal Lockwasher	62	23052	Pulley
28	1X20	Hex Bolt 3/8"-24X1"	63	11X5	Retaining Ring ¾" Shaft
29	26X49	Hex Screw	64	24334	Gas Tank Support-R.H.
30	23789Z	Belt Guide	65	24335	Gas Tank Support-L.H.
31	21544	Clutch and Brake Pedal	66	26X197	Hex Head Screw
32	23728	Brake Rod	67	21268	Grommet
33	24251	Clutch & Brake Lever Assem.	68	24064	Gas Cap
34	26X49	Screw	69	23300	Gas Tank
35	23727	Link Plate	70	2X67	Carriage Bolt
36	23735Z	Adjusting Rod	72	23732	Handle Assembly
37	165X40	Brake Spring	73	21249	Handle Grip
38	23013	Brake Disc & Hub Assembly	74	23734	Clamp
39	20697	Woodruff Key # 9	75	23358	Support Bracket

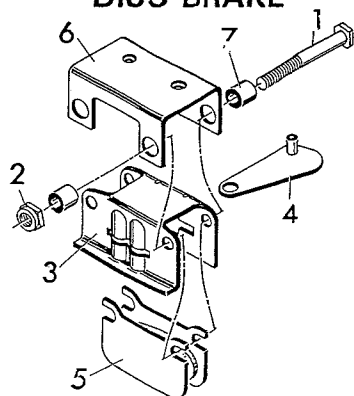DISC BRAKE

Key No.	Part No.	Description
1	402001	Bolt-Hex Head
2	402002	Locknut
3	402003	Bracket
4	402004	Lever Assembly
5	402008	Stator Assembly
6	402006	Bracket Assembly
7	402007	Spacer
1-7	23019	Caliper Brake Assembly

* Not Illustrated in Manual.


†NOTE: Your Engine Model, Type and Code Number is stamped on Blower Housing. Replacement parts may be obtained from your nearest Briggs & Stratton Service Center.

.NOTE: Transaxle parts available through Tecumseh Dealers Only.

Complete Transaxle, page 89-90.

**MODEL 2-24036
FOR 2-39001**

BLADE HOUSING

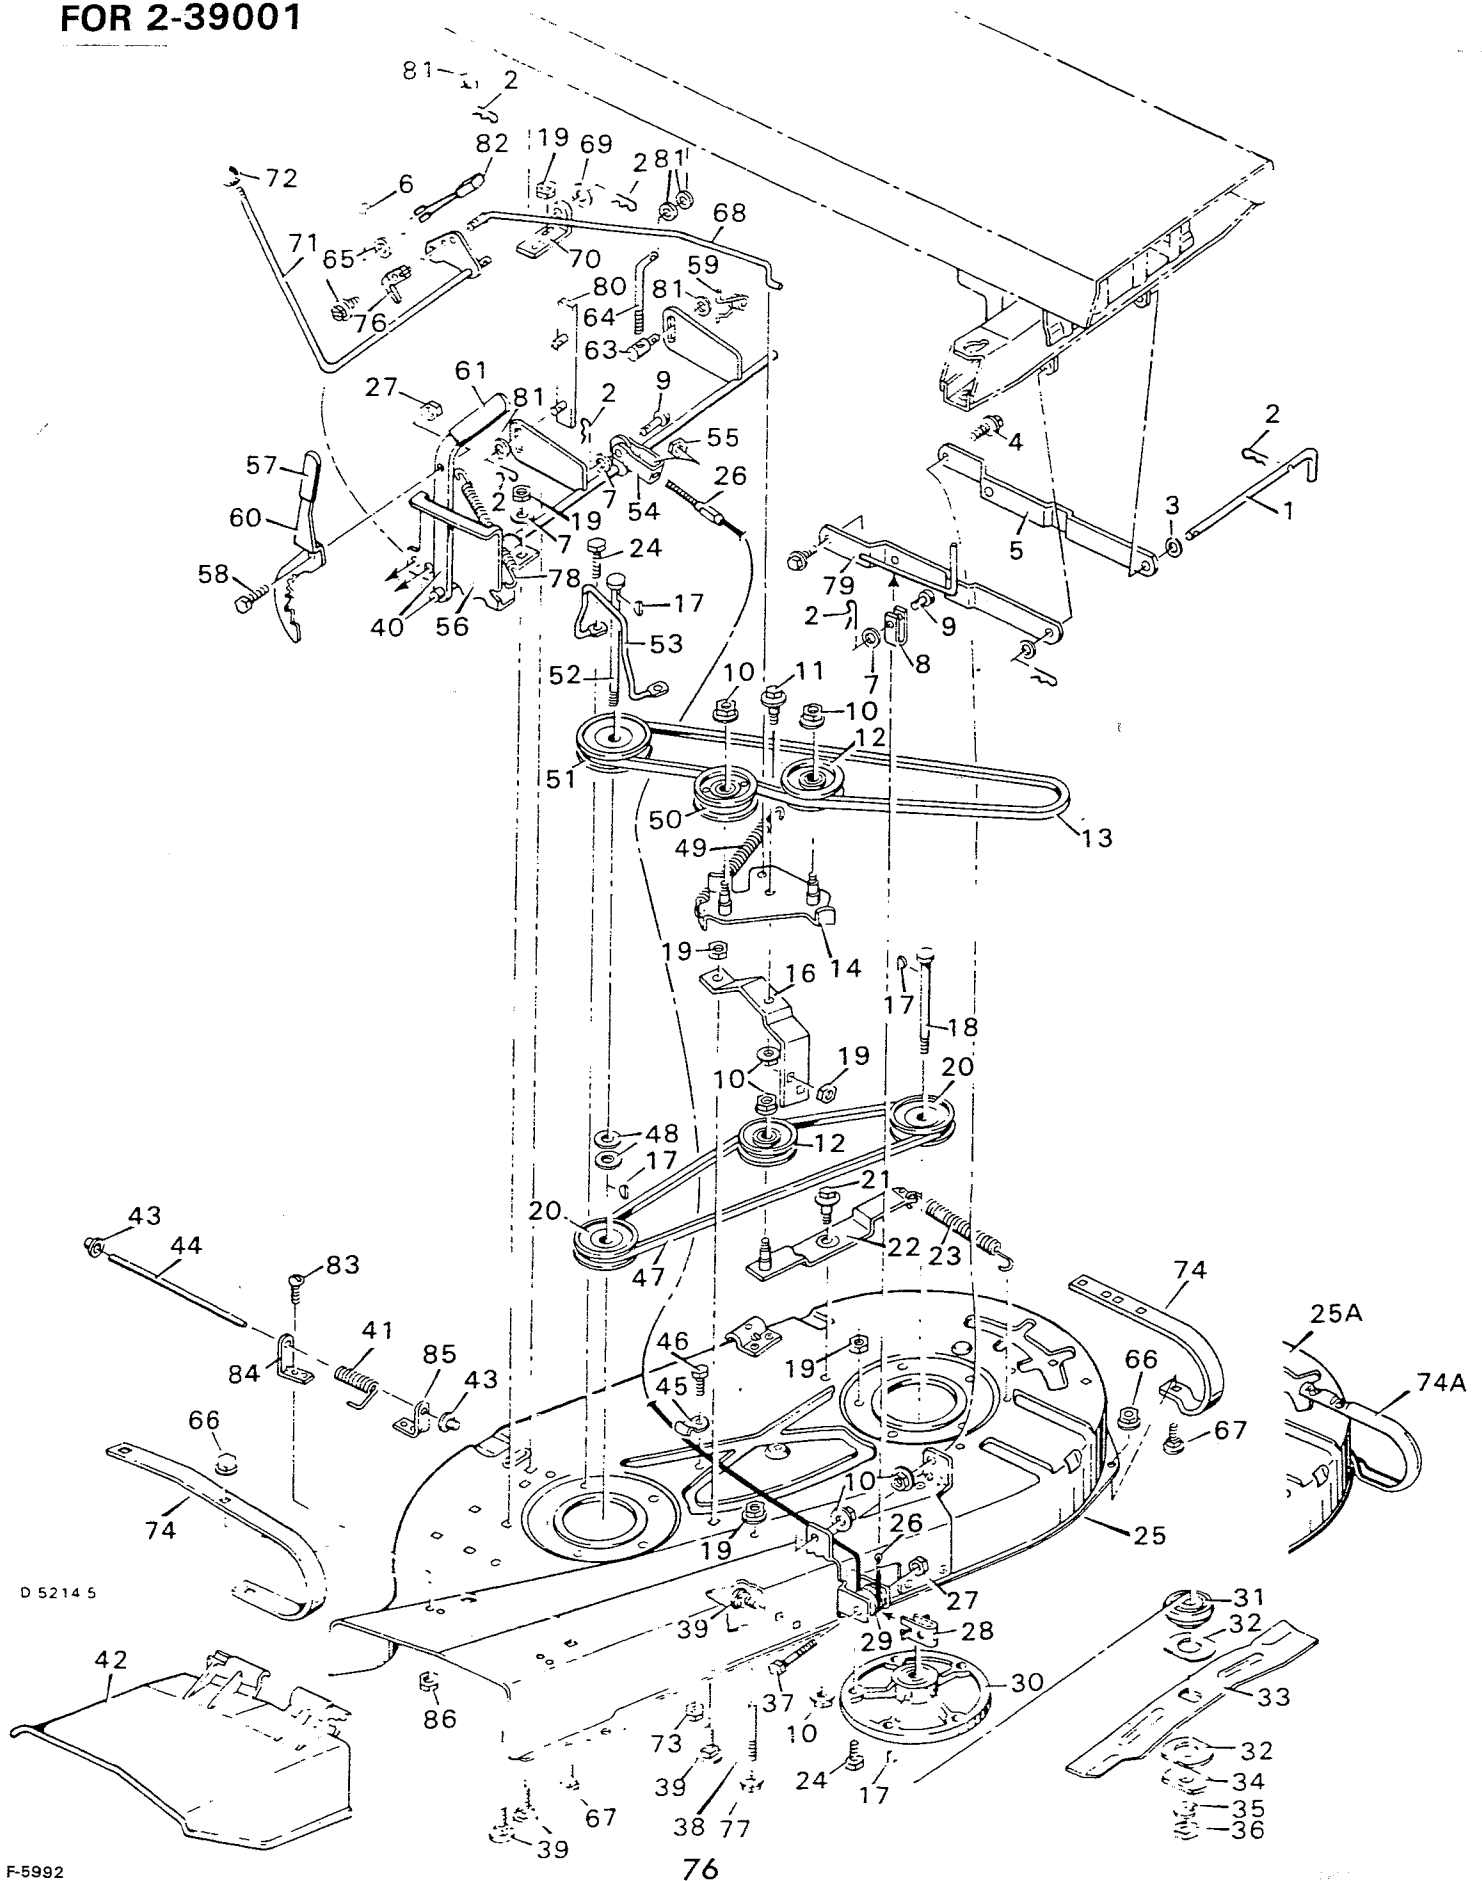

**MODEL 2-24036
FOR 2-39001**
BLADE HOUSING


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	21912Z	Pull Pin	44	21198Z	Deflector Rod
2	20692	Hair Pin	45	21953Z	Cable Guide
3	17X57Z	Washer	46	1X38	Bolt ¼"-20X5/8"
4	9X14Z	Shoulder Bolt	47	37X3	Cross Drive Belt
5	21911	Support Arm L.H.	48	17X87Z	Washers
6	30X20	Cotter Pins	49	165X24	Idler Spring
7	17X47Z	Washer	50	21409	Idler Pulley
8	24073Z	Clevis	51	23538	Jackshaft Pulley
9	29X93	Clevis Pin	52	21024	Jackshaft - Long
10	15X84	Flange Locknut 3/8"-16	53	23769Z	Belt Guide
11	9X12	Shoulder Bolt 3/8"-16X7/8"	54	21915Z	Adjusting Clevis
12	20613	Idler Pulley	55	15X2	Hex Nut 5/16"-18
13	37X24	Blade Drive Belt	56	21500	Lifter Bracket
14	24343	Blade Drive Idler Assembly	57	20476	Lifter Latch Grip
16	21496	Idler Support Bracket	58	6X46	Shoulder Screw
17	20062	Woodruff Key # 6	59	166X16	Torsion Spring
18	20616	Jackshaft - Short	60	21591Z	Lifter Latch
19	15X88	Flange Locknut 5/16"-18	61	21249	Lifter Grip
20	21022	Jackshaft Pulley	63	21920	Adjusting Nut
21	9X15Z	Shoulder Bolt	64	23704Z	Adjusting Rod
22	21139Z	Twin Blade Idler Bracket Assembly	65	17X53Z	Washer
23	165X2	Cross Drive Idler Spring	66	15X89	Flange Locknut ¼"-20
24	1X84	Bolt 5/16"-18X1"	67	2X39	Carriage Bolt
25	90388	Blade Housing*	68	24341Z	Clutch Rod
25A	21907	Blade Housing†	69	17X67Z	Washer
26	21913	Lifter Cable	70	20934	Scissors Bracket R.H.
27	15X67	Hex Nut ¼"-20	71	23915C	Blade Drive Lever Assembly
28	21917Z	Cable Guide	72	20739	Lever Knob
29	21916	Nylon Pulley	73	15X66	Hex Nut ¼"-20
30	24384	Jackshaft Housing Assembly	74	90392	Skid-R.H. (Flat Stock)
31	20617	Blade Adapter	--	90353	Skid-L.H. (Flat Stock)
32	21673Z	Washer	74A	404015	Skid Set (Curved Stock)
33	20930	Blade	75	26X211	Screw # 10X1 Type AB
34	20663Z	Blade Washer	76	24527	Limit Switch
35	18X27	Lockwasher	77	15X79	Flange Nut
36	15X72	Hex Nut ½"-20	78	165X2	Lifter Latch Spring
37	1X90	Bolt ¼"-20X1¾"	79	23256	Support Arm Assembly R.H.
38	23169	Belt Guide	80	23705Z	Hanger Bracket Assembly
39	2X53	Carriage Bolt	81	17X124	Washer
40	21906	Lifter Assembly	82	23984	Jumper Wire
41	166X4	Torsion Spring	83	4X68	Machine Screw
42	21154	Chute Deflector	84	21187	Rear Deflector Bracket
43	28X23	Push-On-Cap	85	21186	Front Deflector Bracket
			86	15X81	Locknut
				23086	Parts Bag Assy.
				F-5634	Owner's Manual

* Blade Housing includes Key No's: 16, 19, 25, 39, 40, 56, 66, 67, 70, 74, 84, 85.

†Blade Housing includes Key NO's: 16, 19, 25A, 39, 40, 56, 70, 74A, 84, 85.

MODEL NO. 82-39001

WIRING DIAGRAM

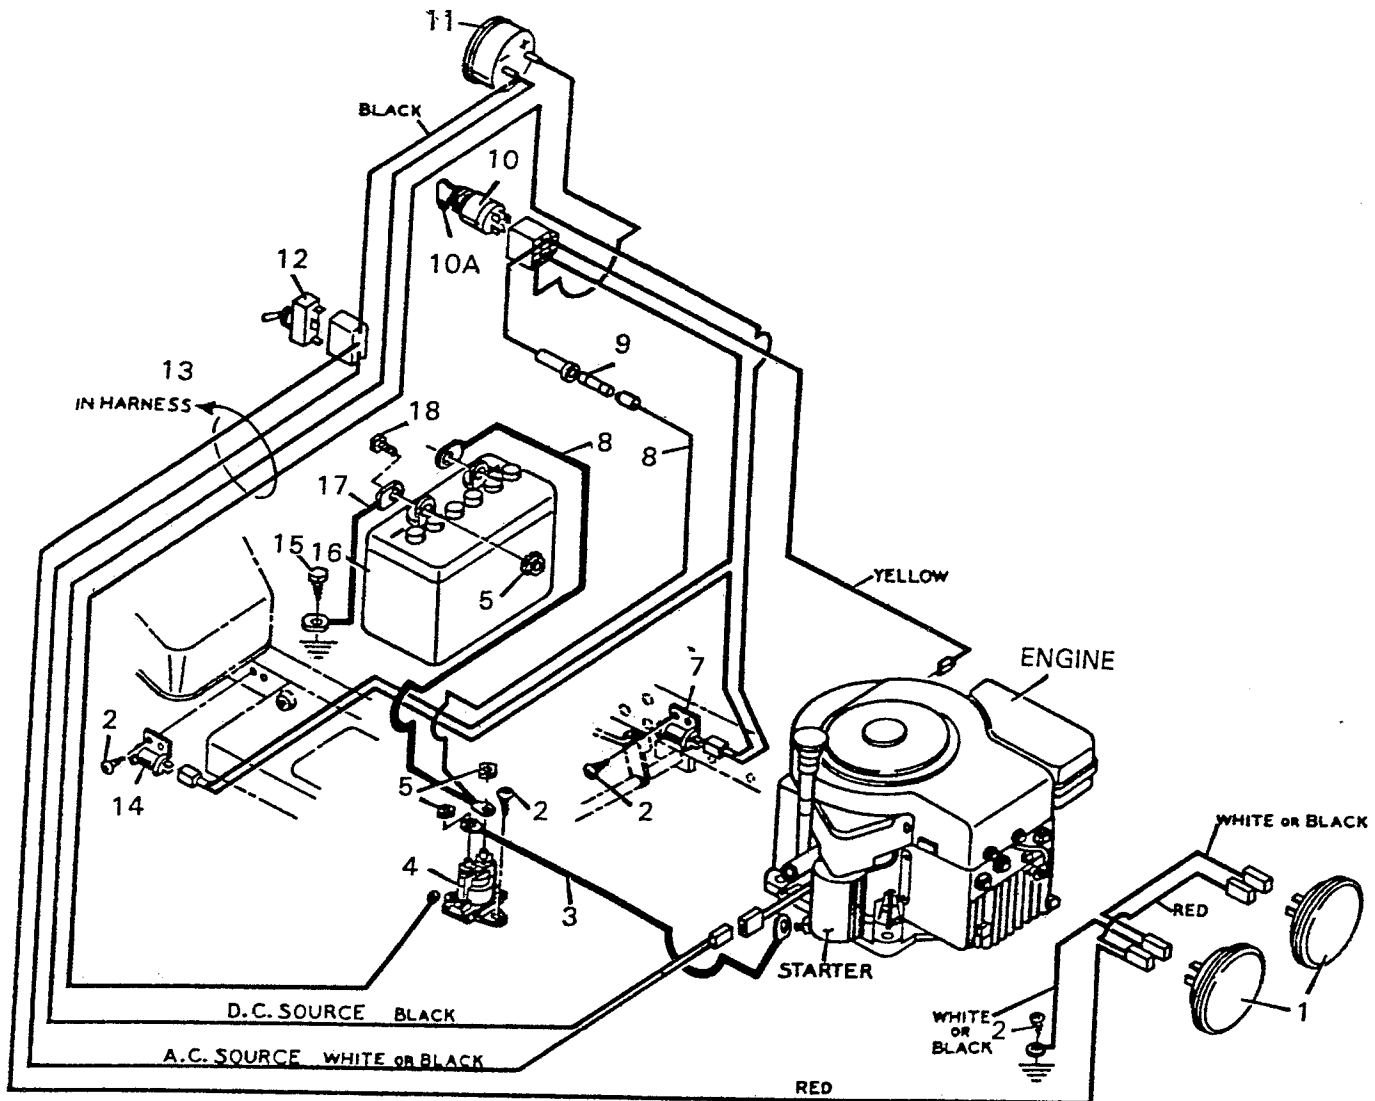

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	23757	Sealed Beam Lamp	11	21057PA	Ammeter Assembly
2	26X185	Screw	12	21686PA	Light Switch
3	24X12	Battery Cable - Red	13	24303	Wiring Harness
4	24285	Solenoid	14	23029	Limit (Dummy) Switch
5	15X66	Keps Nut 1/4"-20	15	26X49	Screw
7	24273	Limit Switch	16	90154	Battery
8	24X14	Battery Wire w/Fuse Wire	*	90171	Electrolyte (Battery Acid)
9	23752	Fuse - Slow Blowing	17	24X6	Battery Cable-Black
10	21064PA	Switch & Key	18	1X38	Hex Bolt 1/4"-20X5/8"
10A	20729	Key Only	*	21980	Wire Clamp
			*	F-5602	Owner's Manual

*Not Illustrated