

REAR BAGGER PARTS LIST

MODEL NO. 9-21951

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Engine *	----	48	Washer	17x137
2	Key, Woodruff	20062	49	Blade	22860HT
3	Sprocket	42489	50	Bolt, Hex	1x69
4	Pin, Spring	32x64	51	Plate, Rear	43247F200
5	Chain & Link	401015	52	Push On Cap	28x42
	Master Link	303476	53	Pin, Pivot	215x13Z
6	Guard, Pinion	42490E701	54	Screw	26x244
7	Screw	26x185	55	Deflector, Rear	43263
8	Bolt, Hex	1x38	56	Screw	26x245
9	Bolt, Shoulder	9x17	57	Door, Rear	43261E701
10	Bracket, Left Mounting	42481Z	58	Handle, Door	43256
11	Bracket, Right Mounting	42482Z	59	Spring, Torsion	166x31
12	Drive Arm, Right	42484Z	60	Latch	42004Z
13	Drive Arm, Left	42483Z	61	Spring, Torsion	166x30
14	Bracket, Bearing Retainer	42485Z	63	Screw	26x214
15	Bearing	20048	64	Cable Tie	43525
16	Washer	17x100Z	65	Handle, Lower	43189E701
17	Sprocket & Drive Shaft	42479Z	66	U Bolt	42896
18	Locknut	15x76	67	Locknut	15x66
19	Bolt, Hex	1x45	68	Rope Stop	42189
20	Bolt, Shoulder	9x1	69	Screw	26x234
21	Drive Pinion	20066	70	Bolt	3x105
22	Pin, Spring	32x64	71	Screw	26x220
23	Locknut, Flange	15x84	72	Spring, Cable	165x8
24	Ring, Retainer	11x8	73	Cable Only	404069
25	Spring	166x14	74	Deflector, Exhaust	43011Z
26	Spring	166x15	75	Screw	26x208
27	Bracket, Tie Rod	42476Z	76	Handle, Upper	43309E701
28	Lever, Wheel Connect	42486Z	77	Engine Stop Lever	43305
29	Locknut, Flange	15x88	78	Drive Control	42752
30	Bolt, Shoulder	9x8			
31	Pin, Spring	32x70			
32	Screw, Tapping	26x214	79	Throttle Control	43512
33	Bracket, Pulley	22973	80	Stop Cable	42941
34	Housing Assembly	70104	81	Bolt	3x147
35	Bracket, Right Handle	43192	82	Hex Nut	15x71
36	Bracket, Left Handle	43193	83	Contour Bolt	6x73
37	Locknut, Flange	15x79	84	Wing Bolt	14x83
38	Height Adjuster		85	Tube, Upper Support	43519
	Right Front or Left Rear	400275	86	Bag	43522
	Left Front or Right Rear	400276	87	Cover	43520
	Grip	43394		Parts 85 - 86 - 87	407088
39	Pin, Cotter Hair	31x5	88	Frame Assembly	43513
40	Clamp	42294	89	Washer	17x32Z
41	Screw	26x237		Parts Bag	43467
42	Hub Cap, Optional	20107		Instruction Book	F-89408
43	Wheel and Tire	20105			
44	Locknut, Flange	15x82			
45	Bolt, Engine Mount	25x6			
46	Washer	17x124			
47	Blade Adapter	42735			

* The engine model, type, and code numbers are on the engine. All parts to the engine are available from a Briggs & Stratton Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.