


**MODEL NO. 9-21981**  
**4 HP MAX**

**21" MOWER ILLUSTRATION**

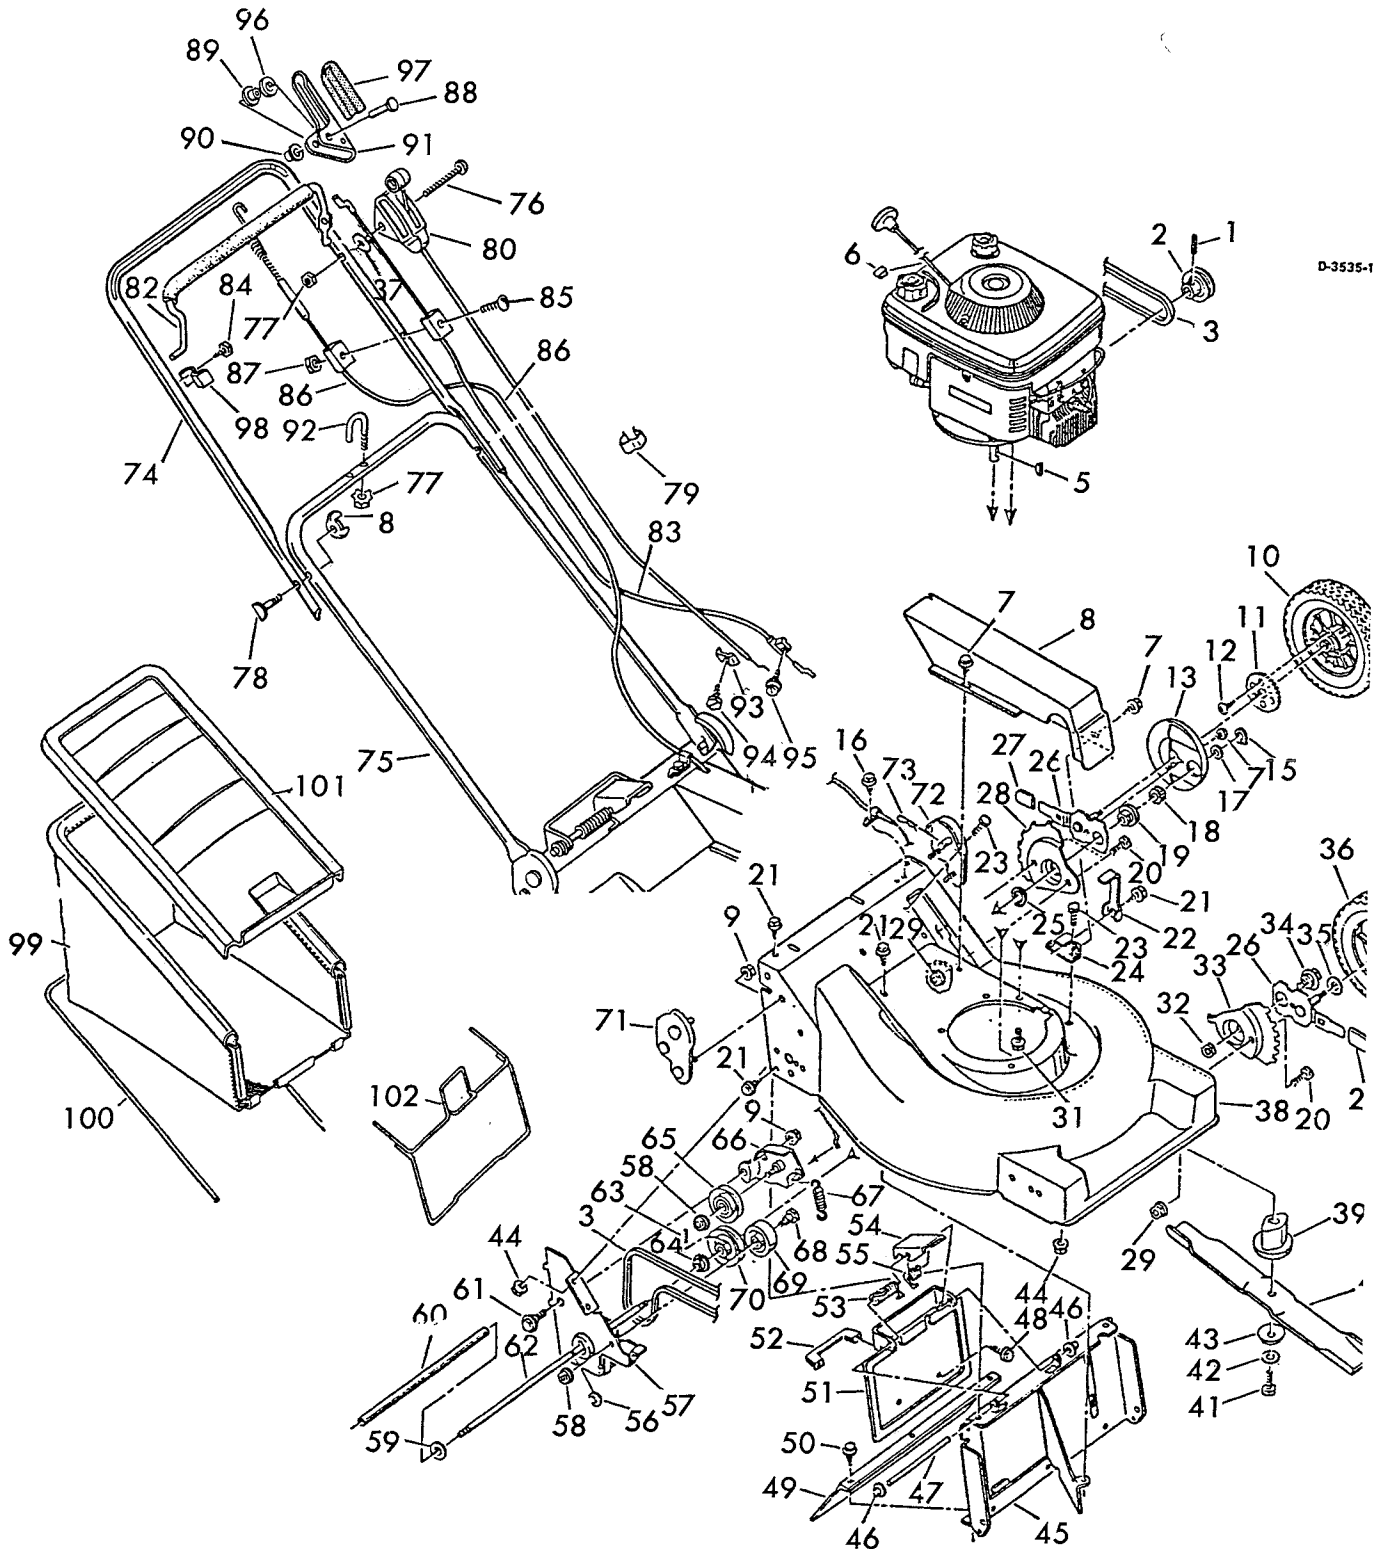

D-3535-1

## REAR BAGGER PARTS LIST

## MODEL NO. 9-21981

KEY NO.	DESCRIPTION	PART NO.	KEY NO.	DESCRIPTION	PART NO.
1	Pulley, Spring	32x64	53	Spring, Torsion	166x31
2	Pulley, Engine	42493	54	Latch	42004Z
3	Belt	37x49	55	Spring, Torsion	166x30
4	Engine*	----	56	Ring, Retaining	11x16
5	Key, Woodruff	20062	57	Bracket	42458E701
6	Stop, Rope	42189	58	Nut, Hex	15x88
7	Screw	26x245	59	Washer	17x152Z
8	Guard, Belt	42492	60	Cover, Axle	42464
9	Nut, Hex	15x84	61	Bolt	9x15
10	Wheel & Tire, Rear	42699	62	Axle, Drive	42453
11	Gear, Spur	42470	63	Screw, Set 1/4"-20x5/8"	400286
12	Screw	26x232	64	Bearing, Drive Axle	42849
13	Cover, Dust	42695	65	Pulley, Idler	42461
15	Ring, Retainer	11x15	66	Arm, Idler	42455Z
16	Screw	26x184	67	Spring	165x27
17	Washer	17x52Z	68	Bolt	9x35
18	Pinion Assembly	43238	69	Idler Assembly	42856
19	Bearing, Height Adjuster	42694	70	Pulley	42454
20	Bolt	1x85	71	Bracket, Right Handle	43192
21	Screw	26x214	72	Bracket, Left Handle	43193
22	Belt Guide, Upper	42494Z	73	Pin, Hair	31x5
23	Bolt	1x38	74	Handle, Upper	43310E701
24	Belt Guide, Lower	42497	75	Handle, Lower	43189E701
25	Ring, Retainer	11x14	76	Bolt	3x140
26	Arm, Height Adjuster	42757	77	Locknut	15x66
27	Grip	20065	78	Bolt, Contour Head	6x73
28	Plate, Left Rear Index	42693Z	79	Cable Tie	43525
	Plate, Right Rear Index	42692Z	80	Throttle Control	43512
29	Nut	15x68Z	81	Wing Nut	14x83
31	Bolt	25x6	82	Lever, Engine Stop	43306
32	Nut, Hex	15x84	83	Cable, Engine Stop	42941
33	Plate, Left Front Index	42753Z	84	Screw	26x220
	Plate, Right Front Index	42754Z	85	Screw #10-24x1 3/4"	3x150
34	Bolt	9x26	86	Cable, Drive	42875
35	Washer	17x102Z	87	Nut	15x102
36	Wheel & Tire, Front	42173	88	Pin, Pivot	43410
37	Washer	17x32Z	89	Spacer, Shoulder	43313
38	Housing Assembly	70105	90	Push On Cap	28x42
39	Adapter, Blade	42735	91	Lever, Drive	43045C
40	Blade	22860HT	92	U Bolt	42896Z
41	Bolt	1x69	93	Clamp, Throttle Cable	42294
42	Washer	17x124	94	Screw, Throttle Clamp	26x237
43	Washer, Belleville	17x137	95	Screw, Engine Stop Cable	26x234
44	Nut, Hex	15x82	96	Spacer	43314
45	Plate, Rear	43247F200	97	Grip	43010
46	Push On Cap	28x42	98	Stop, Lever	43044V701
47	Pin, Pivot	215x13Z	99	Cloth Bag	43522
48	Screw	26x244	100	Tube Upper Bag	43519
49	Deflector, Rear	43263	101	Cover, Plastic Top	43520
50	Screw	26x245	102	Frame	43513
51	Door, Rear	43261E701		Parts 99 - 102	407088
52	Handle, Door	43256		Instruction Book	F-89409
				Parts Bag	43468

\* The engine model, type, and code numbers are on the engine. All parts to the engine are available from a Briggs & Stratton Authorized Service Center. See "Engines, Gasoline" or "Gasoline Engines" in the yellow pages of the telephone directory.