
For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 $_{\rm Page\ 1\ of\ 8}$

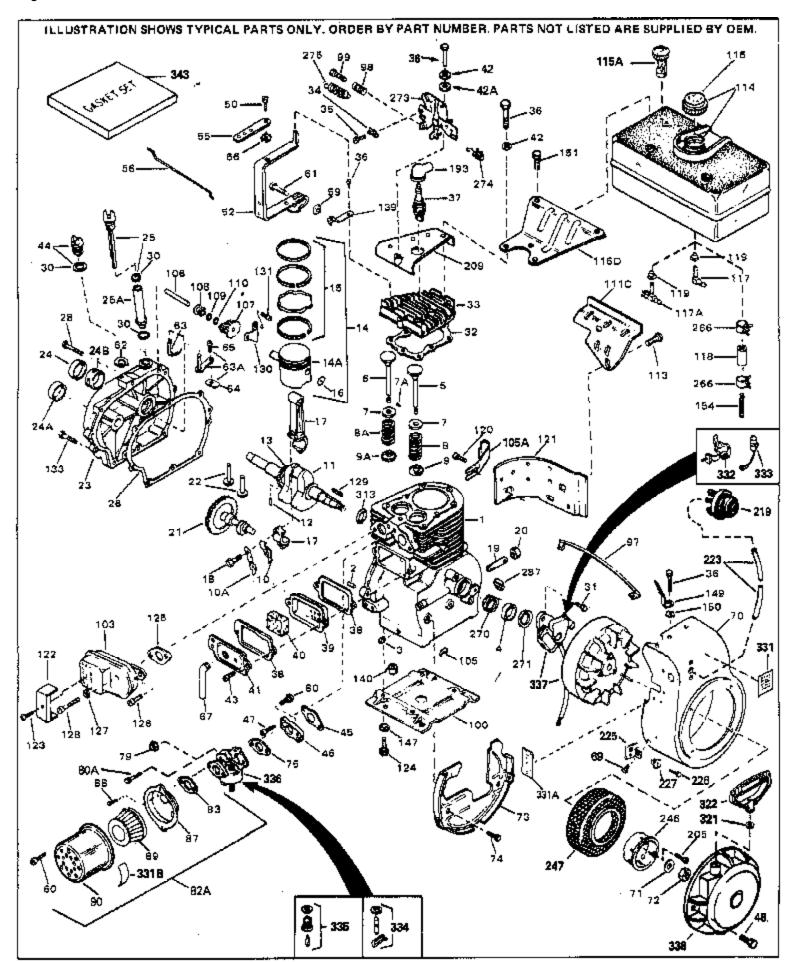

www.mymowerparts.com


Def #	Don't Ni wash ou	Description
		Description Outlinder (heal 2, 2, 4, 8, 76) (2, 2/4" Pere)
1	32586C	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652	Pin, Dowel
	27642 32630	Plug, Oil drain
	32783	Seal, Oil
	32784	Intake Valve (Std.) (Incl. 9) Intake Valve (1/32" OS) (Incl. 9)
	27878A	Exhaust Valve (Std.) (Incl. 9)
	27880A	Exhaust Valve (3td.) (Incl. 9) Exhaust Valve (1/32" OS) (Incl. 9)
	27882	Cap, Upper valve spring
	20810	Pin, Valve spring retainer (Use as re quired)
	27881	Spring, Valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	32581	Cap, Lower valve spring
	32590	Plate, Lock & Oil dipper (This plate may be replaced by
10/1	32000	34242 oil dipper but 650662C screw must be used.)
	34242	Dipper, Oil
	32587	Crankshaft (Incl. 12 & 13)
	29783	Crankshaft Gear Pin (Early production)
13	27884	Gear, Crankshaft (Used in early production) This gear is
		servicable onlywhen it is pinned to the crankshaft.
14A	32592B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518	Piston, Pin & Ring Set (.010" OS)
	34519	Piston, Pin & Ring Set (.020" OS)
	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	Ring Set (.010" OS)
	32597	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	32591C	Rod Assy., Connecting (Incl. 10 & 18)
	650662C	Screw, Connecting rod (2 each)
	32115	Camshaft (MCR)
	34034	Lifter, Valve
	31303B	Cover, Cylinder (Incl. 24, 106 & 279)
	31546	Bushing, Crankshaft (Use as required)
	28427	Seal, Oil Dinatick Oil (Incl. 20)
	31297 30684	Dipstick, Oil (Incl. 30) * Gasket, Cylinder cover
	650488	Screw, 1/4-20 x 1-1/4"
	29673	* Gasket, Oil filler
	650489	Screw, 1/4-20 x 5/8"
	32631A	* Gasket, Cylinder head
	30938A	Head, Cylinder
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Valve spring
	26073	Washer (Use as required)

	Part Number	Qty	Description
	650691		Washer, Flat (Use as required)
42A	650690		Washer, Belleville (Use as required)
43	650128		Screw, 10-24 x 1/2"
	27915A		* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
	30196		Screw, 5/16-18 x 3/4"
	29716		Screw, 1/4-28 x 7/16"
	650548		Screw, 8-32 x 5/16"
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
			•
	31710		Link, Throttle
	29216		Nut, Lock, 10-32
	650152		Screw, 8-32 x 3/8"
	29826		Screw, 10-32 x 3/4"
62	29642		Ring, Retaining
63	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y., Ref. no. 63A)
	30699C		Rod Assy., Governor (Incl. 64 & 65)
64	30700		Yoke, Governor
65	650494		Screw, 6-40 x 5/16"
66	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		
			Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
	8116		Nut, Hex
73	29536		Blower Housing Baffle (without electric starter knock-out)
			(Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use
13	30230A		as required) (Point Ignition)
			as required) (Form Ignition)
74	650561		Screw, 1/4-20 x 5/8"
75	31688A		* Gasket, Carburetor
	29752		Nut & Lockwasher Assy., 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
02A	730104		
			(Use as required)
83	27272A		* Gasket, Air cleaner
	31691		Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
O/	01001		early production only.
			carry production only.
88	28820		Screw, 10-32 x 1/2"
89	30727		Element, Air cleaner
	31715		Body, Air cleaner
	28569		Spring, Compression
	29500		Screw, 8-32 x 3/4"
	29538		
			Base, Engine mounting
	32401		Muffler
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
108	30588A		Spool, Governor
109	30590A		Washer, Flat
	29193		Ring, Retaining
	650561		Screw, 1/4-20 x 5/8"
	33350		Fuel Tank (Incl. 115 & 117A)
	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
113	11/11/11/11/11/11/11/11/11/11/11/11/11/		

		Qty Description
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
117 118 118 119 120 121 124 125 126 127 128 129 130 131 133 149 150 193 205 209 246 247 266 270 273 274 275 287 331B 331 331A 332 333	35355 33395 29774 30705 30962 33679 650128 30622A 650542 27930A 30196 26073 650694A 32589 31843A 650836 650493 30747 650890 610118 650561 30939A 32125 590417 26460 31461 31711B 610973 34043 27275 34246 31752 550223 34346 30547A 30548B 631021	Fuel Cap (Use as required) Fitting, Fuel strainer & elbow (Incl. 119) Fuel Line (Braided 8-1/4" 21 cm) (Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Bushing, Fuel fitting Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Gasket, Exhaust Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Lockwasher Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Copntrol Bracket (Incl. 98, 99 & 274) Terminal Ass'y. (As req. on late prod uction) Spring, Control lever Clip, Hi-tension wire (Use as required) Decal, Air cleaner Decal, Name Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy.
336	631453	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983

Page 5 of 8

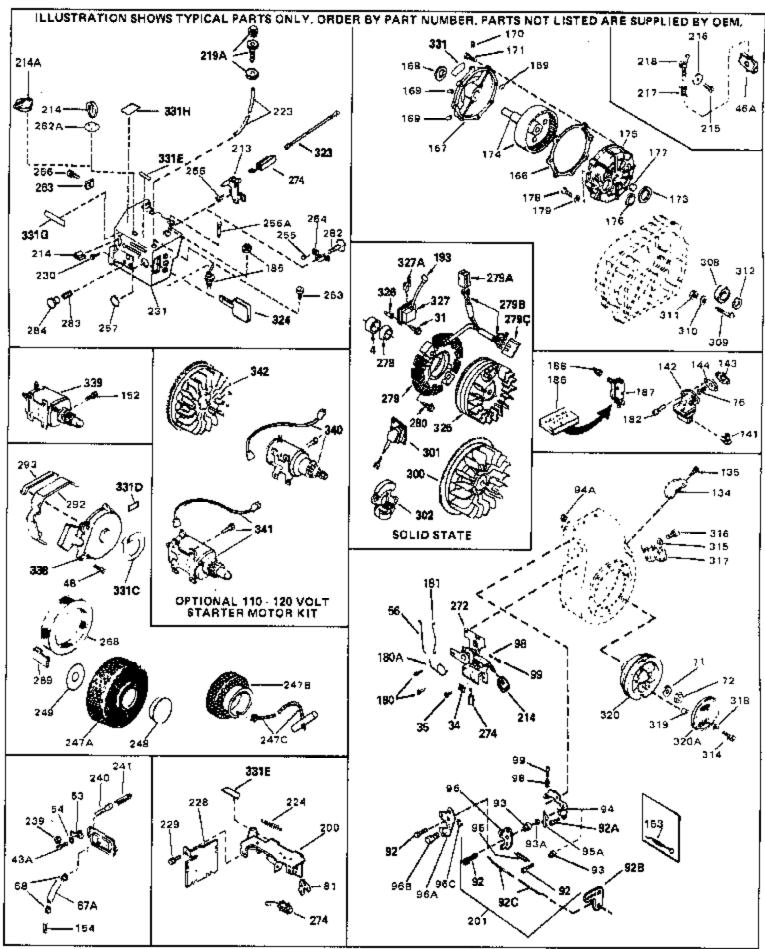


For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983 $_{\rm Page~6~of~8}$ Engine Parts List #2

Ref #	Part Number Qty	Description
31	650489	Screw, 1/4-20 x 5/8"
34	27793	Clip, Conduit (Use as required)
35	28942	Screw, 10-32 x 3/8" (Use as required)
43A	650128	Screw, 10-24 x 1/2"
48	29716	Screw, 1/4-28 x 7/16"
56	31710	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	610118	Cover, Spark plug (Use as required)
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	550223	Decal, Name
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

For Discount Tecumseh Engine Parts Call 606-678-9623 or 606-561-4983

Page 7 of 8

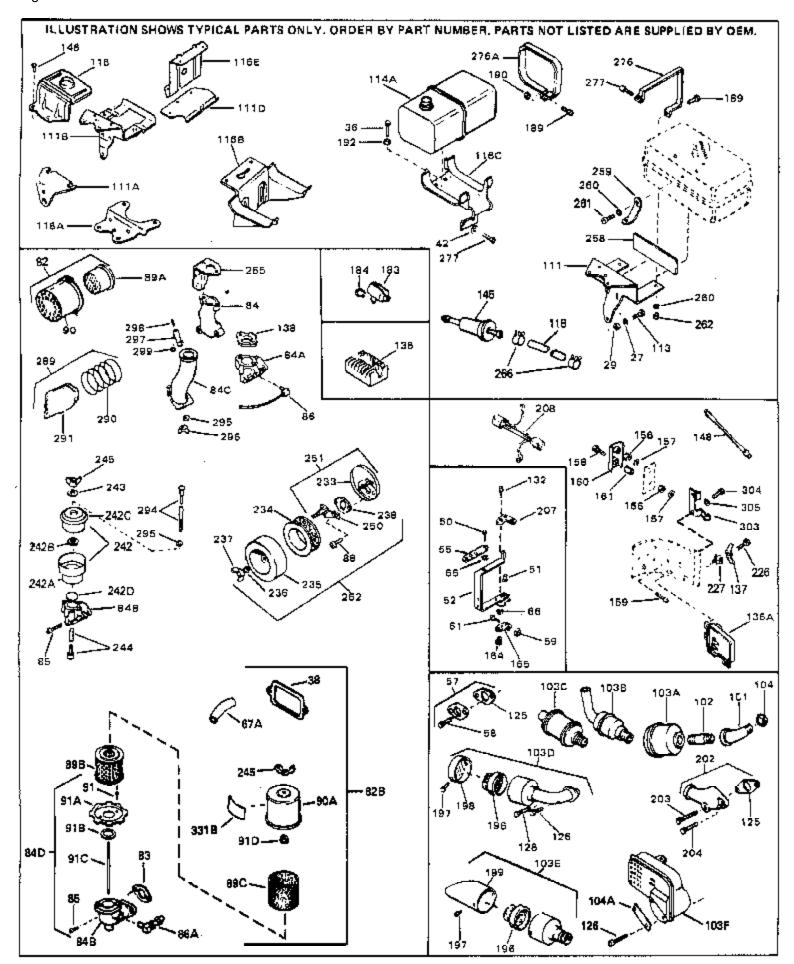

www.mymowerparts.com

		Qty Description
	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
38	27896A	* Gasket, Breather cover
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
50	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used in early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
57	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196	Screw, 5/16-18 x 3/4" (Use as require d)
59	29216	Nut, Lock, 10-32
61	29826	Screw, 10-32 x 3/4"
66	29918	Lockwasher, #8 E.T.
	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
83	27272A	* Gasket, Air cleaner
	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
040	34019	in 730561 assembly only)
		• • • • • • • • • • • • • • • • • • • •
	28820	Screw, 10-32 x 1/2"
	31715	Body, Air cleaner
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	33353	Bracket, Lower fuel tank
	650561	Screw, 1/4-20 x 5/8"
	33352A	Plate, Upper fuel tank mounting
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A	Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	792020	Screw, 1/4-20 x 2-1/4"
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
	26460	Clamp, Fuel line
331B	31752	Decal, Air cleaner